Assembly Instruction Sheet #IS-GLD8408WT For Style GLD8408WT

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (1) A19 Medium Base Bulb 100W Maximum.

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.


Fixture can only be mounted in the direction indicated on page 2.

△ Warnings and Cautions


Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

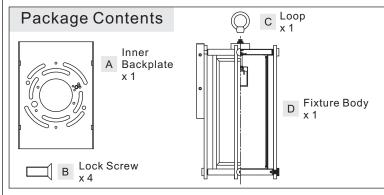

STEP 1 – Assemble the Loop to the Fixture Body A. Thread the Loop (C) onto the nipple on the top of the Fixture Body (D). Hand tighten until snug.

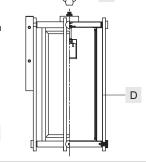

С


STEP 2 - Install Inner Backplate and Fixture Body

A. Pass the supply wires and ground wire through Inner Backplate (A).
Attach Inner Backplate (A) to Outlet Box with the head of Green
Ground Screw facing you. Secure it with Outlet Box Screws (not
included). Tighten until snug.
Outlet Box Screw

Figure 1


B. Go to Step 3 for wire connections and follow the directions. Return to Step C in this step when complete with Step 3.

C. Attach backplate and Fixture
Body (D) over Inner Backplate (A)
and secure with Lock Screws (B).
Tighten until snug with
screwdrivers.
Outlet Box

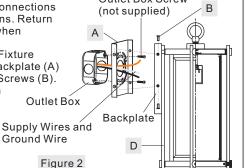

STEP 3 - Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

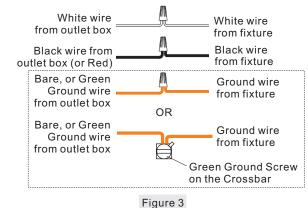


STEP 4 - Install the Bulb and Apply Silicone Sealer

A. Insert the bulb onto socket and screw snugly into place.

B. Make sure the exterior wall surface and fixture backplate are free of dirt before applying caulk.
Using exterior grade caulk, caulk over top of backplate and down both sides. Do not caulk the bottom of the fixture backplate to ensure proper moisture drainage.

Your fixture is now assembled and ready to use. Enjoy!

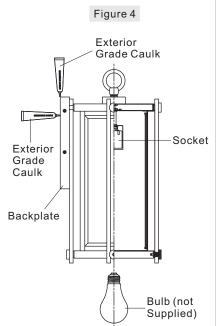

Thank you for purchasing a Quoizel product. Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184 or visit us on-line at www.quoizel.com

© 2016 Quoizel Inc.

Released Date: 2016-11-09

