

Assembly:

To install, you will need the following:

- Level, pencil and tape measure
- Phillips head screw driver and a standard or flat head screwdriver
- Hammer
- Electric drill and 5/16 drill bit



Photo A - Fully Assembled

Parts:

- Main unit (See Photo – A)
- Pan hooks, PR-41208 (See Photo –B)
- Package of 2 wall brackets and flat bar. (See Photo – C)
- Package of 4 wall screws and 4 plastic anchors and plastic key (See Photo – D)

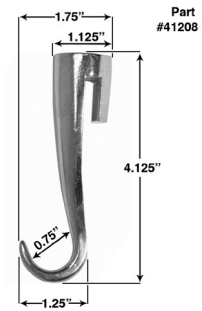


Photo B - Pan Hooks

Please consult with your local hardware store if you have any questions or concerns about the construction of your walls or ceilings. They can assist you in selecting the proper hardware and procedures. The generic hardware provided will work for most drywall applications. **NOTE:** these units are handmade, slight variations can exist, always measure twice before drilling.

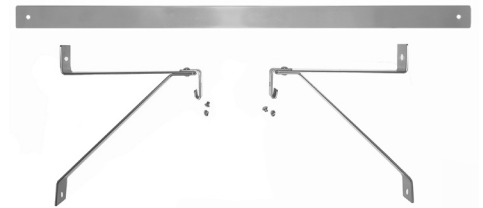


Photo C - Pan Hooks

Mounting Directions:

Undo the front facing screw on each bracket, (photo, E) insert flat bar and replace screws. Note it may be necessary to use the flat head screwdriver to hold back of screws while the Phillips screwdriver is used on the front to tighten or loosen. Then with rough frame work constructed use as a guide for installation. Measure carefully where you want to mount the rack on the wall use a pencil to mark where the screws attach to the wall.



Photo D - Wall screws, plastic anchors and plastic key

Remove the unit and drill holes using a 5/16” drill bit. When possible mount to a wall stud. Supplied anchors have a pull rating of 20 lbs. or more each and a shear rating of 50 lbs. each.

Insert the anchors into the drilled holes. They may need to be tapped in gently with a hammer. Use the supplied key to expand the anchor behind drywall. (See Photos F to J on next page for proper and improper anchor install). Use supplied screws to attach.

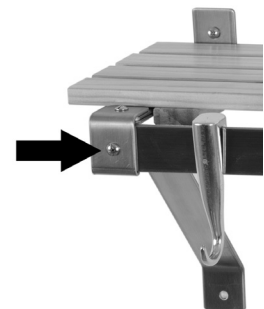


Photo E - Front facing screw

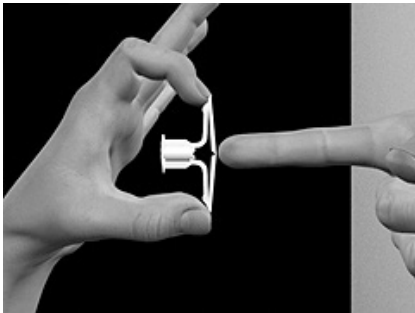


Photo F - Drill 5/16" diameter (8mm) hole. Fold anchor in middle.

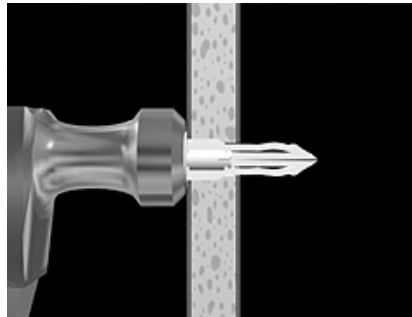


Photo G - Insert anchor in hole and tap flush with wall.

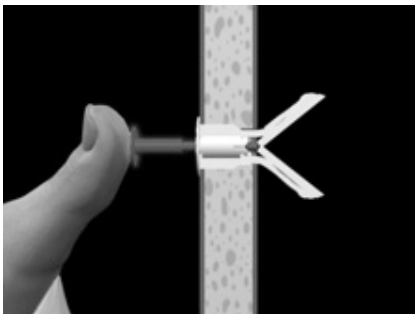


Photo H - Insert key to pop anchor open & lock behind hollow wall (not necessary for thick or solid walls). Do not force or hammer key.

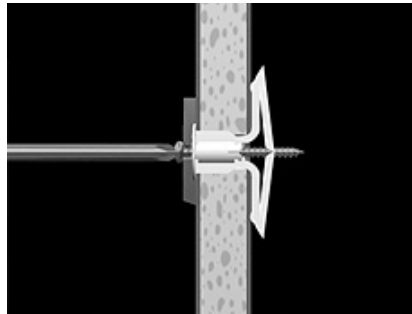


Photo I - Place item over anchor. Insert screw and tighten until screw is flush with fixture. Then, stop. The anchors also wedge securely in thick or solid walls, or in wood studs behind drywall.

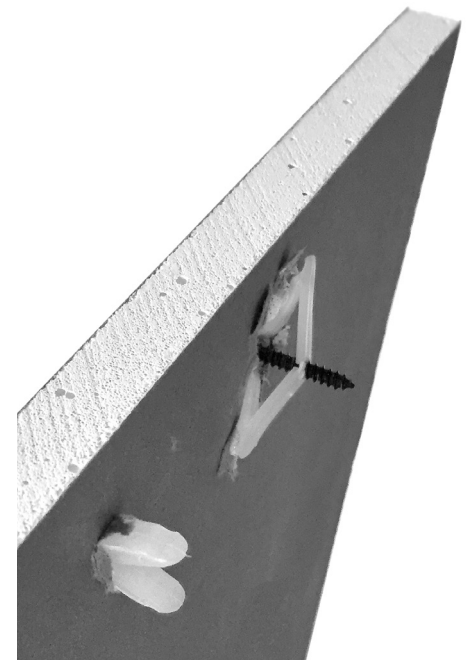


Photo J - correct (top) and incorrect (bottom).

Questions - Comments
Damaged - Defective - Missing Parts

Contact us first, we will respond within 24 hours or less. Please provide our part number, your order number, place of purchase, address and any other info so we may address your concerns promptly.

info@prhousewares.com or www.prhousewares.com

Thank you!

Returns are only accepted when returned in new condition and only with an RMA from the seller.

Returns to: 501 I South Reino Rd. Ste 152. Newbury Park, CA 91320