


Model: TGB48

(1) Seat (1) Back

Step 1 Attach sideframes to seat using (4) 1¾" chair bolts DO NOT TIGHTEN!!

- Step 2
- Attach back to sideframes using (2) 1¾" chair bolts into the tube on top and (4) 2½" screws on bottom
- Attach center of the back to the seat using (1) 21/2" screw

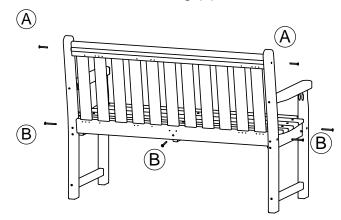



TOOLS NEEDED


(2) Sideframes

(1) Hardware pack



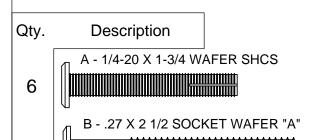



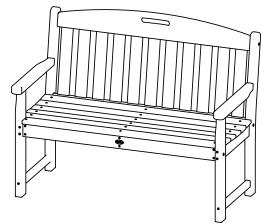

5