




FVN5082 & FVN5084
CODA
INSTALLATION GUIDE



Medicine Cabinet
 (Optional)

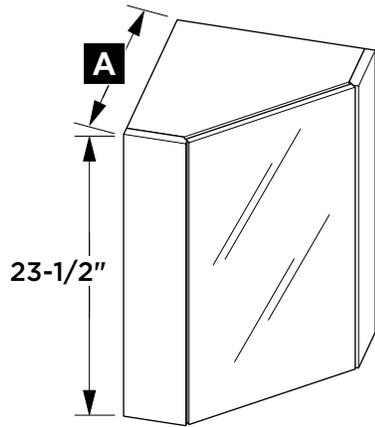


FVN5082




FVN5084

Model	Medicine Cabinet A	Vanity Width B
FVN5082	14"	14"
FVN5084	14"	18"

Vanity Front

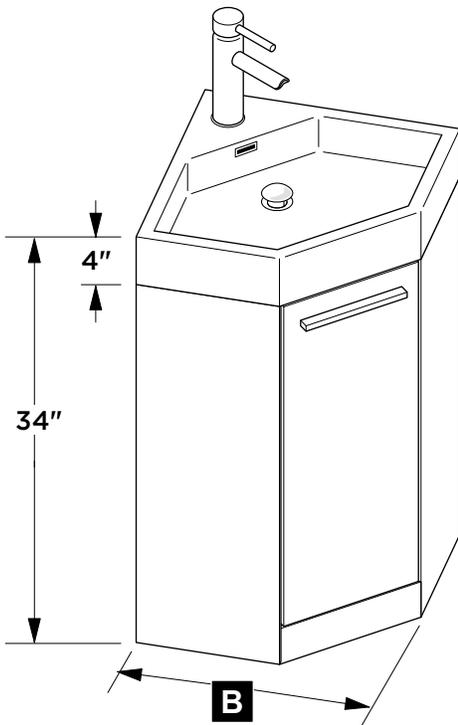




Vanity Back

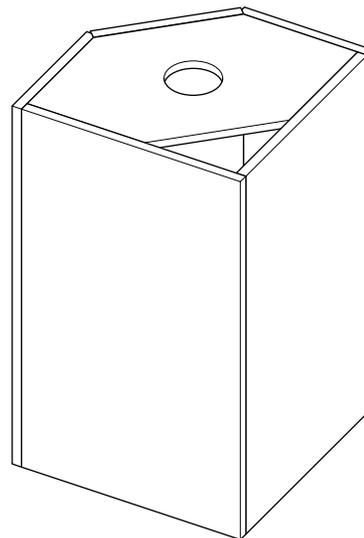

TOOLS FOR ASSEMBLY




PARTS

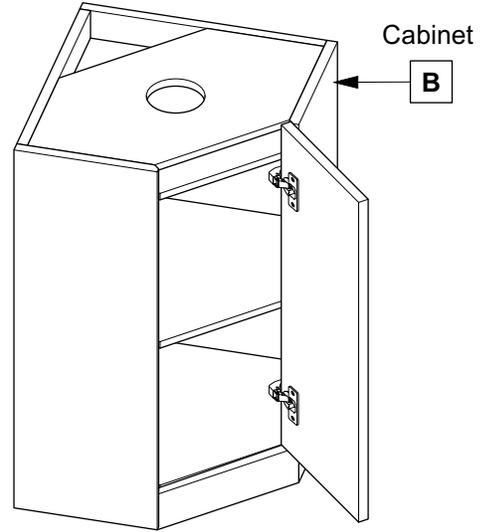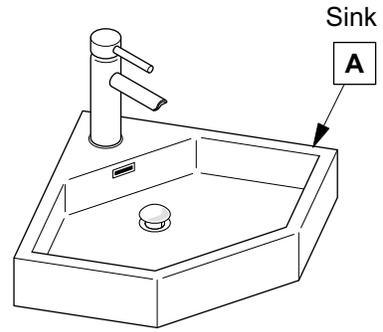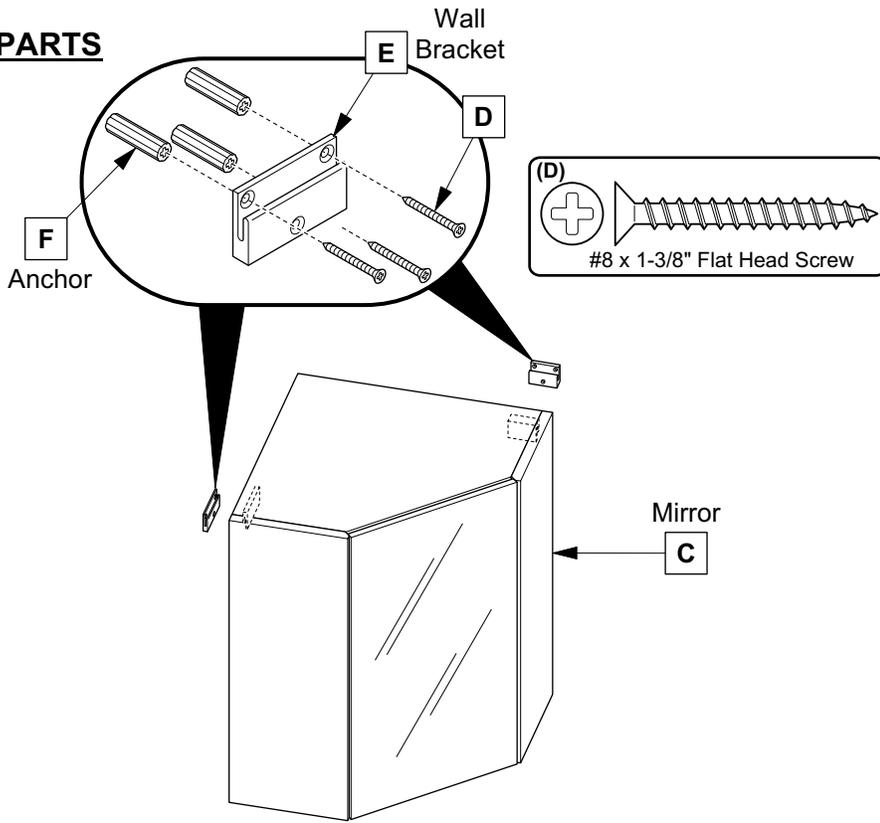


1 Install cabinet (C)

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

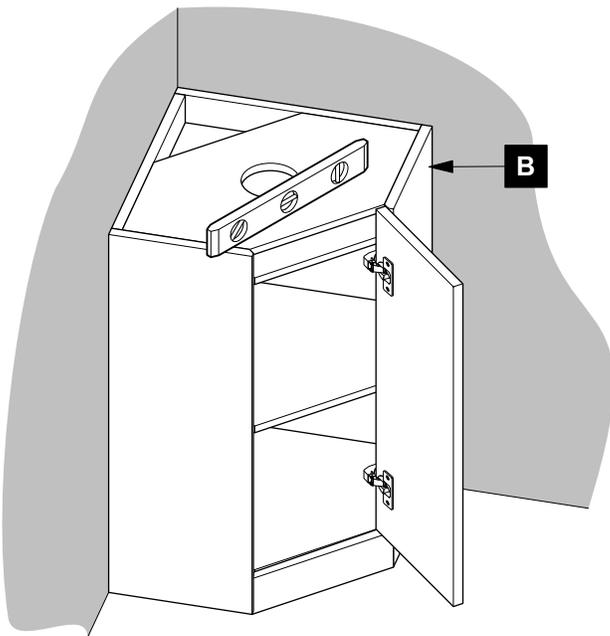

2 Apply silicone and install sink (B)

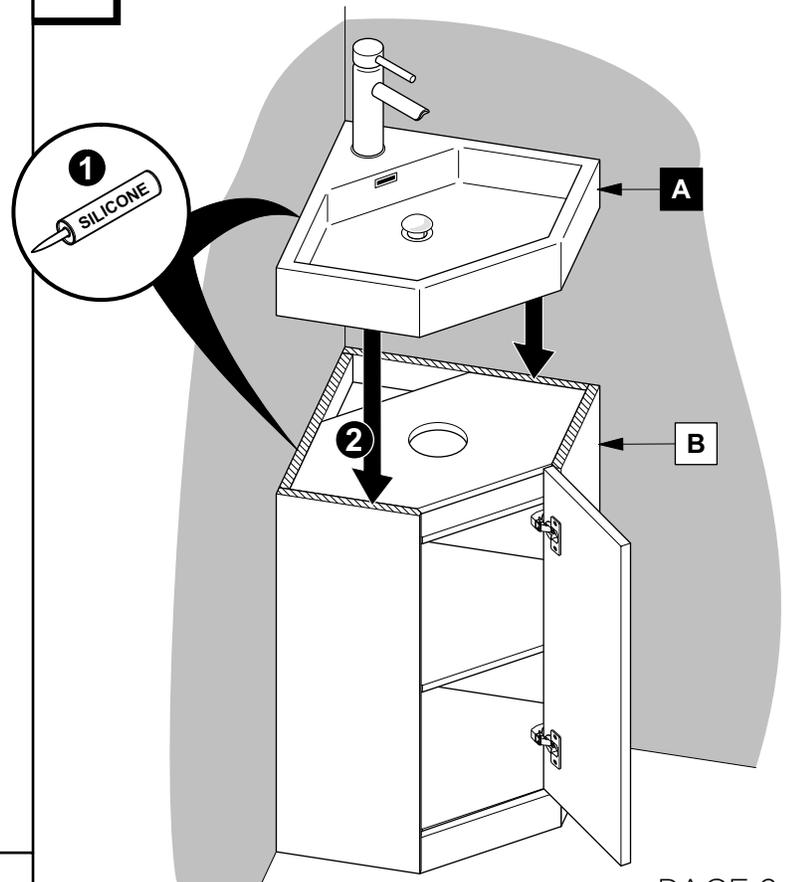

3

Install brackets (E)

4

Install medicine cabinet (C)

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

