
ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0052 / P0054

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements. 2. READ AND SAVE THESE INSTRUCTIONS.

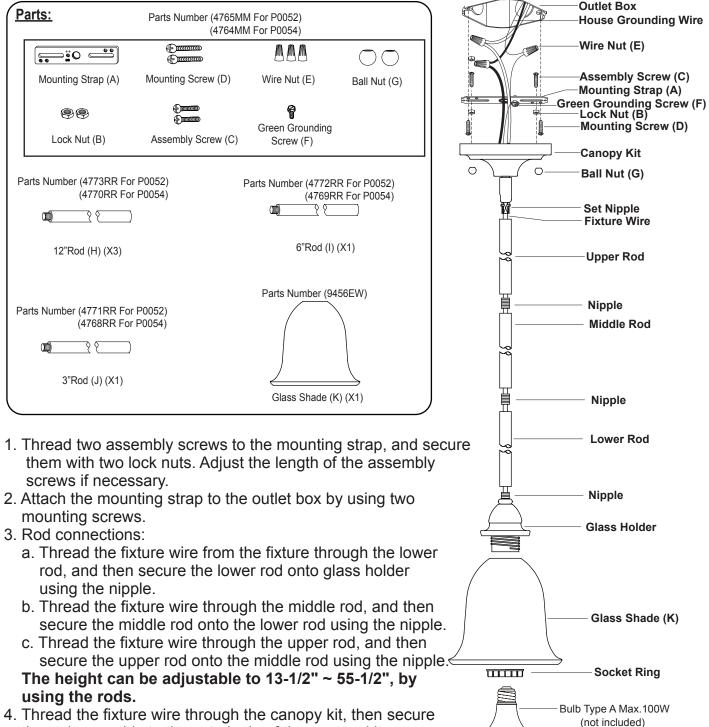



VAXCEL

130625

- the rod assembly to the set nipple of the canopy kit.
- 5. Pull out the outlet wires and the house grounding wire from the outlet box. Make wire connections using the wire nuts:
 - ---The black wire from fixture to the black wire from power source.
 - ---The white wire from fixture to the white wire from power source.

- ---Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with the wire nut.
- Carefully put the wires back into the outlet box.
- 6. Attach the canopy to the mounting strap by inserting the assembly screws, and secure it with two ball nuts.
- 7. Attach the glass shade to the glass holder, then secure it with the socket ring.
- 8. Install a bulb (not included). See relamping label at socket area or packaging for maximum allowed wattage.
- 9. Turn on the power at the main fuse or circuit breaker box.
- 10. Angled mounting recommended for a vaulted or angled ceiling. (See Fig. 1)

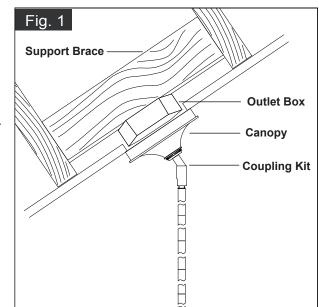

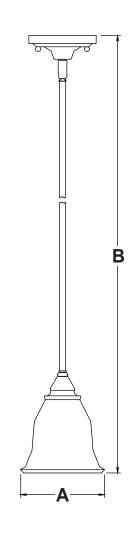

A: 6"

```
B: 13-1/2" ~ 55-1/2"
```

