
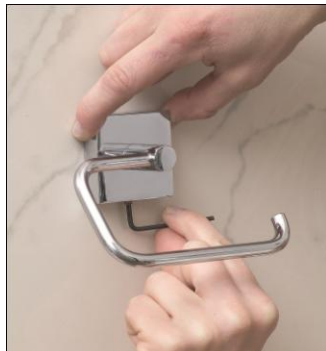


# Bath Accessory Installation

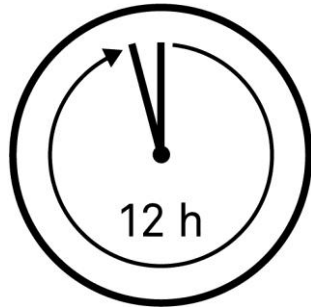

- **Step 1** - Clean surface using a clean dry cloth or use rubbing alcohol to remove any residue (wax, grease, solvents). Allow to dry one hour. **Caution!** DO NOT use any household cleaners as they can leave a residue.
- **Step 2** - Locate position desired and mark. Remove protective paper from foam securing ring and apply firm pressure for 4 seconds. Avoid mounting adapter over grout lines.
- **Step 3** – Use the red key end to puncture the adhesive tube. Slide tube end into slot in red key and turn the key until firm.
- **Step 4** – Insert tube end into one hole of the adapter. Turn the red key forcing the adhesive into the adapter base until the white adhesive beads up out of the other hole. **Caution!** DO NOT apply any pressure or disturb the adapter once the adhesive has been inserted.
- **Step 5** – Allow adapter to cure (harden) for 12 hours undisturbed. Remove any excess adhesive once dry. **Caution!** Allow 24 hours for Grab Bars
- **Step 6** – Mount your accessory using the tool provided and enjoy!

 no drilling required.

Note: Surface must be able to bear load of accessory. Not intended for use on Polyethylene (PE) Polypropylene (PP), Polytetrafluoroethylene (PTE, Teflon) as they do not allow for proper adhesion