


New


VELUX®

Skylights

Instant light shaft

Ready-made skylight liner for easy and airtight completion
on deck mounted skylights (*Model ZZZ 234*)

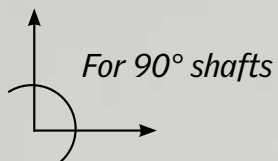

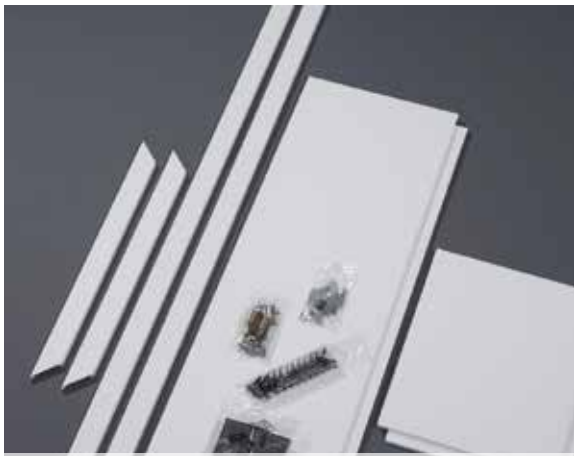

1. Prefabricated light shaft assembly kit.



2. Assemble moulding.



3. Install mounting clips to skylight drywall groove.



4. Measure and cut panels to proper depth and join to moulding.



5. Align assembled light shaft to mounting clips and click to install.

- No drywall, spackling, sanding and painting needed
- Works on all "box" type light shafts (Not flared)
- 16" Standard Depth (trim to actual on site)
- All others pieces are pre-cut to size to be site assembled
- 4" minimum spacing required around all sides if multiple skylights are installed

Must provide skylight size code when ordering.

Example order code: ZZZ 234 M02