



Utilitech & UT Design® and Grounded in Quality® are registered trademarks of LF, LLC. All rights reserved.

<u>BRAND/MANUFACTURER</u>	<u>COMPATIBLE</u>
UTILITECH	#0409545
	#0409544
JUNO	IC22
	IC22R
HALO	H7ICT
	H7ICAT
	HTRICT
	H7RICAT

Trim Installation Instructions


ITEM NUMBER

#0409542

IMPORTANT SAFETY INSTRUCTIONS

MOUNTING

1. Turn power off.
2. In housing, loosen wing nut and adjust height of socket plate as required.
3. Position trim in place.
4. Place coil springs into the slots holes inside the housing.
5. Using a pencil or other similar device (not included), push springs up into key slot holes.

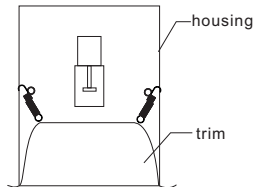

NOTE: SAVE THESE INSTRUCTIONS

Printed in China



Utilitech & UT Design® y Grounded in Quality®
son marcas registradas de LF, LLC.
Todos los derechos reservados.

<u>MARCA/FABRICANTE</u>	<u>COMPATIBLE</u>
UTILITECH	#0409545 #0409544
JUNO	IC22 IC22R
HALO	H7ICT H7ICAT HTRICT H7RICAT


Instrucciones para la instalación de los rebordes

NÚMERO DE ARTÍCULO

#0409542

INSTRUCCIONES IMPORTANTES DE SEGURIDAD PARA EL MONTAJE

1. Desconecte la alimentación
2. En la carcasa, afloje la tuerca mariposa y ajuste la altura de la placa del portalámpara según sea necesario.
3. Coloque el reborde en su lugar.
4. Coloque los resortes espirales en los orificios en forma de cerradura dentro de la carcasa.
5. Con un lápiz u otro artículo similar (no se incluye), introduzca a presión los resortes dentro de los orificios en forma de cerradura.

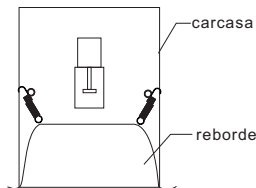

NOTA: GUARDE ESTAS INSTRUCCIONES

Impreso en China