



ONDURA® CORRUGATED ASPHALT ROOFING SHEETS

QUICK START REFERENCE GUIDE


PREPARING FOR YOUR PROJECT

ONDURA® is designed to be installed on solid decking a minimum of 7/16" OSB and at a pitch of at least 3:12 (see below). For additional protection underlayment and drip edge is suggested to prevent water infiltration.

Always refer to local building codes before starting any project.

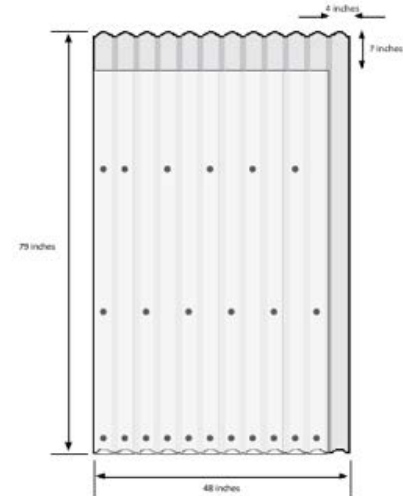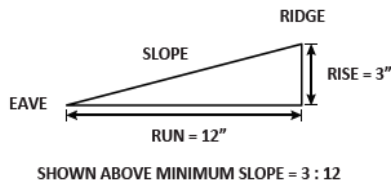

TOOLS REQUIRED FOR INSTALLATION

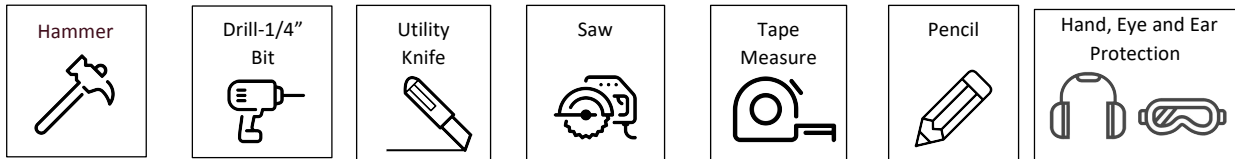


ESTIMATING MATERIAL



Ondura Sheet
22 SQ FT of coverage per sheet



Nails or Screws
23 per sheet (33 for improved wind performance)
19 per ridge cap




Ondura Strips
Each pack covers 14.66" of eave and ridge



Ridge/Hip Caps
Each cap covers 36" of Ridge or Hip





Vertical Cutting

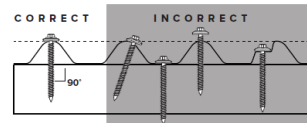


Fastening


INSTALLING YOUR PROJECT

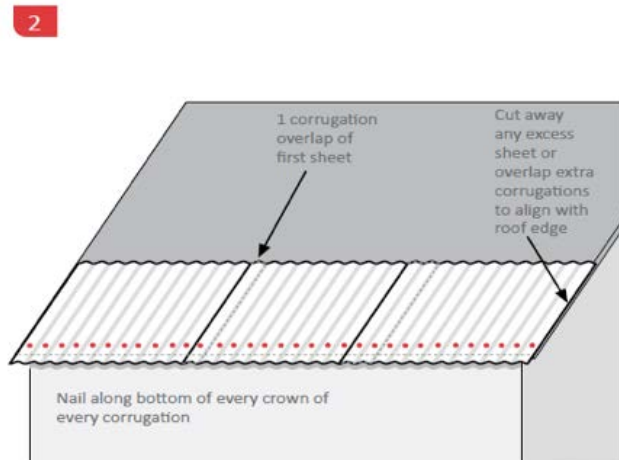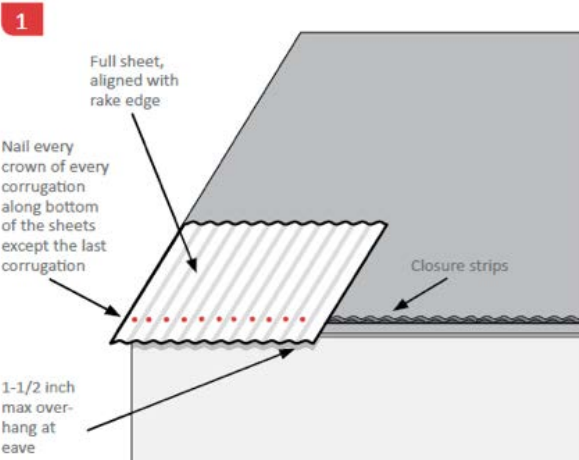


INSTALLING YOUR PROJECT

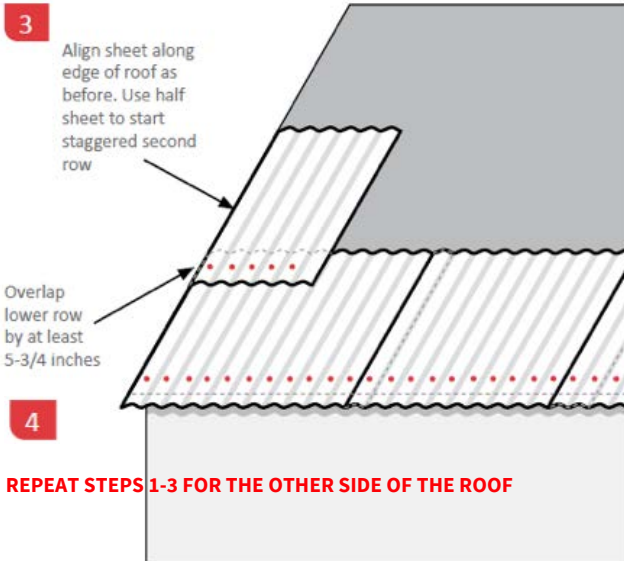

REPEAT STEPS 1-3 FOR THE OTHER SIDE OF THE ROOF

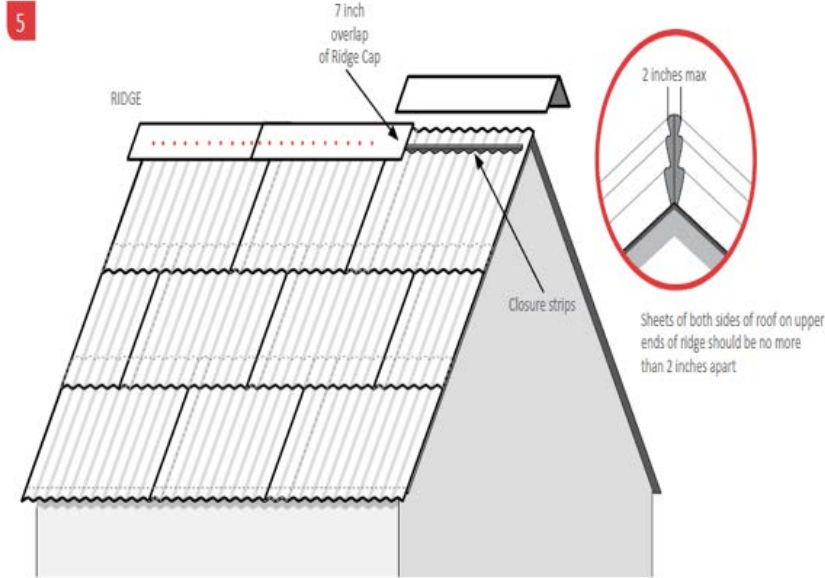

6 RIDGE CAP WEATHER GUARD

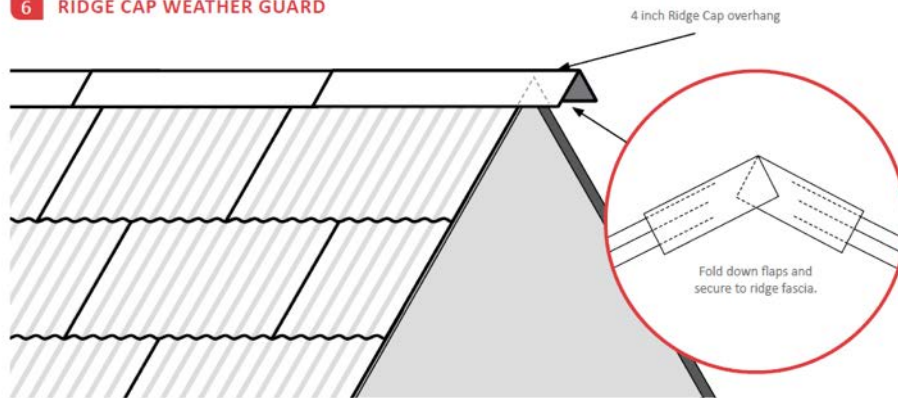

HINT: In temps below 55 F, warm the ridge cap up before folding

ACCESSORIES MAPPING GUIDE



For additional installation details and more advanced applications please download the comprehensive installation guide at www.ondura-usa.com or for additional help contact our US based customer service department at 1.800.777.7663

Onduline North America, Inc. phone: 1.800.777.7663
 4900 Ondura Drive web: www.ondura-usa.com
 Fredericksburg, VA 22407