



PATIO STONES | ALAMEDA® STONE

Alameda®
PATIO STONE

INSTALLATION



1. Mark & Dig

Excavate the installation area to approximately 6 in. larger on all sides than the actual finished size.



2. Base & Compact

Install patio base to a compacted finished thickness of 4 in. for patios and walkways.



3. Base Preparation

Lay a 1 in. outside diameter pipe on base. Spread 1 in. of sand over compacted base. Level the sand by dragging a 2 in. x 4 in. board over pipe.



4. Lay Stones

Lay patio stones in the desired pattern. If the desired pattern requires cutting, the patio stones can be cut with a wet saw.



5. Sand & Finish


Spread polymeric sand on the installation and sweep into joints, according to manufacturer's instructions. Sweep off any loose sand from project surface.



6. Edge Restraint*

Install patio restraint edging and spikes around the entire project, according to the manufacturer's instruction.

* If an irregular edge is desired: Use a small section of plastic edging, with an opening to fit a steel spike, to hold the patio stone in place. In most situations, one spike per stone would be required.

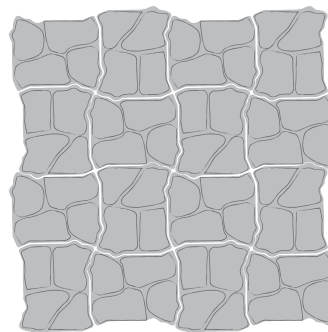

Laying Pattern



Keystone Retaining Wall Systems LLC • A Contech Company
4444 West 78th Street • Minneapolis, MN 55435
(952) 897-1040 • www.keystonewalls.com

©2017 Keystone Retaining Wall Systems LLC

