



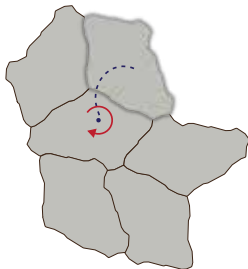


PATIO STONES | CANYON STONE®

Keystone CANYON STONE®

LAYING PATTERN

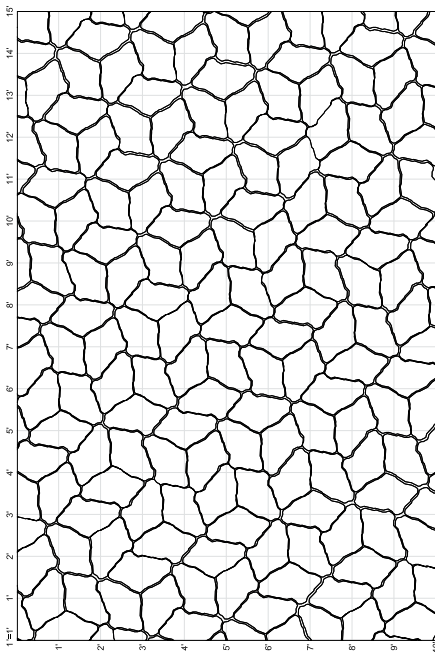

1. **Mark & Dig.** Excavate the installation area to approximately 6 in. larger on all sides than the actual finished size.
2. **Base & Compact.** Install patio base to a compacted finished thickness of 4 in. for patios and walkways.
3. **Base Preparation.** Lay a 1 in. outside diameter pipe on base. Spread 1 in. of sand over compacted base. Level the sand by dragging a 2 in. x 4 in. board over pipe.

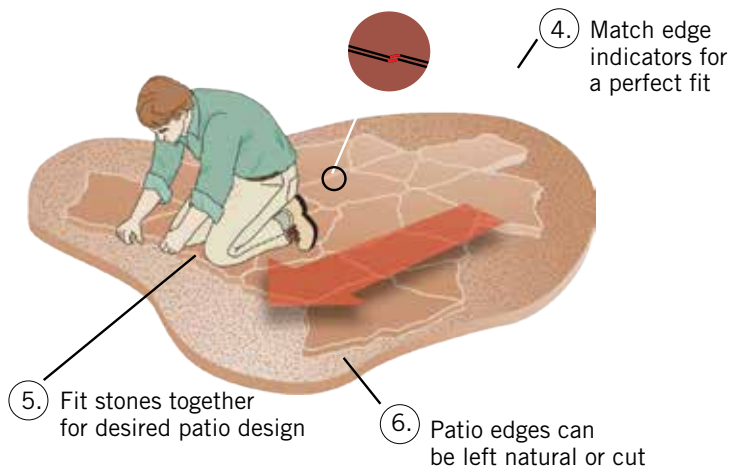

Cutting Tips:

To create a straight line, rough cut with a chisel or for a finer cut, use a circular saw and masonry blade. To chisel, score each side about 1/2" deep. Place the patio stone on a flat surface with the scrap piece hanging over a straight edge and tap the scrap piece gently with a hammer to remove it. Be sure to wear proper eye protection when splitting or cutting masonry units.



Keystone Retaining Wall Systems LLC • A Contech Company
4444 West 78th Street • Minneapolis, MN 55435
(952) 897-1040 • www.keystonewalls.com

©2017 Keystone Retaining Wall Systems LLC

