

Instructions for Installing SCR Cabinet

Parts Included:
SCR Cabinet


Tools Needed:
1x2 or 1x3 Wood Strips
Nails or Screws for Attachment

STEP 1

Follow instructions sent with standard cabinets for preparing and marking the walls for cabinet installation. Install all wall cabinets before installing the SCR corner cabinet.

STEP 2

Installation of a SCR cabinet requires a countertop support attached to the wall. Apply a 1x2 or 1x3 wood strip to the wall at the predetermined reference line for base cabinets. Apply the wood strip to both corner walls at right angles. They should be screwed or nailed to the wall studs to provide adequate support for your new countertop.

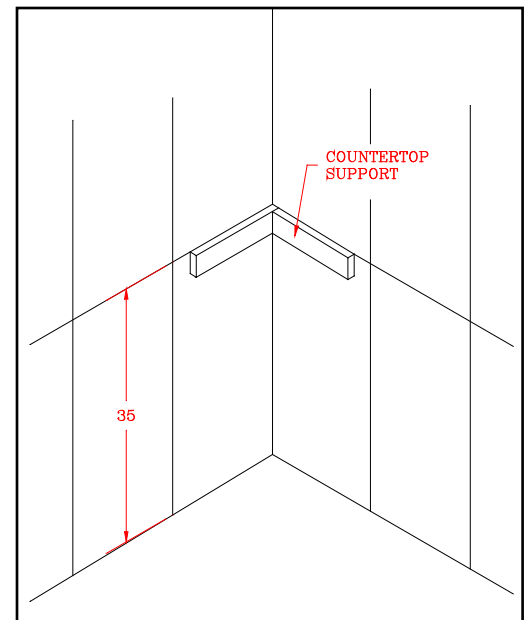

STEP 3

After attaching the countertop support to the wall, place the SCR cabinet and the adjoining cabinets into position. Use the standard cabinet installation instructions for properly installing these cabinets.

Note: It is recommended that you fasten at least one base cabinet in both directions to the SCR cabinet.

If there is a gap between the cabinet face frame and the countertop, it is recommended that you fasten the face frame to the countertop.

