

# SCR Cabinet Installation Instructions

## Parts Included:

- SCR Cabinet

## Materials Needed

- 1x2 or 1x3 Wood Strips
- Nails or Screws for Attachment

## Before starting the installation

These instructions are intended as supplemental reference for those who have the appropriate skills and experience to safely and successfully install cabinetry, including familiarity with basic carpentry principles and safe and proper tool use. Wall framing and construction can vary greatly, and these instructions may not describe all construction methods. Also, there may be electric, plumbing, gas lines or other utilities behind the wall, for which contact must be avoided during installation. If for any reason after reading these instructions you do not feel confident in the ability to safely and successfully install this cabinetry, please contact a licensed contractor for installation. MasterBrand Cabinets is not responsible for improper installation or property damage.


**WARNING:** *Electric, plumbing, gas lines and other utilities, are frequently installed or embedded behind walls where cabinets are being installed. Before drilling any holes or driving any screws, be sure you will not be making contact with any of these utilities. Failure to follow these instructions may result in property damage and serious or fatal injury. If you do not feel confident in your ability to ensure that you will not make contact with utilities behind a wall during installation, please contact a licensed contractor to install the cabinets.*

## Step 1: Inspection and Preparation

Follow Wall and Base Cabinet Instructions for cabinet inspection and preparing and marking the walls for cabinet installation. Install all wall cabinets before installing the SCR corner cabinet.

## Step 2: Install Countertop Support

Installation of a SCR cabinet requires a countertop support attached to the wall. Apply a 1x2 or 1x3 wood strip to the wall at the predetermined reference line for base cabinets. Apply the wood strip to both corner walls at right angles. They should be screwed or nailed to the wall studs to provide adequate support for your new countertop.

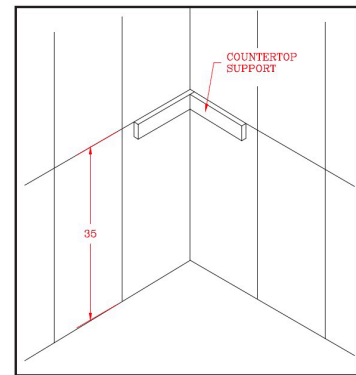

## Step 3: Cabinet Installation

After attaching the countertop support to the wall, place the SCR cabinet and the adjoining cabinets into position. Use the standard wall and base cabinet installation instructions for properly installing these cabinets.

**NOTE:** *It is recommended that you fasten at least one base cabinet in both directions to the SCR cabinet. If there is a gap between the cabinet face frame and the countertop, it is recommended that you fasten the face frame to the countertop.*

