CounterBalance[®] CounterPlate Plus



CCH-CBPP


Installation Instructions


The CounterPlate Plus is designed to attach to half walls or pony walls, supporting overhangs on breakfast bar style countertops. It has a 4 inch flange on the back of the bracket. The rear flange provides extra support in applications where additional support is desired.

CounterBalance CounterPlate Plus Installation

- 1) Place plate where support is needed and trace shape onto stud wall. Add 1/4" below the rear flange of the bracket and scribe a line.
- 2) Using the router with 1/4" bit, router out traced shape on the top and rear of the stud wall. (you may need to cut out a section of drywall from the rear side of the wall to complete this.)
- 3) Place plate into routered area and mark holes for drilling, remove plate.
- 4) Drill pilot holes and place plate back into position and attach with the provided screws.
- 5) Conceal the rear flange of the bracket with back-splash or repair drywall.
- 6) Repeat steps as necessary for additional plates.
- 7) Apply a silicone sealant to the top of the brackets to secure them to the underside of the counter surface and set countertop into position. Rated up to 500 lbs.

Supports should be spaced no more than 16" to 20" apart for optimum performance

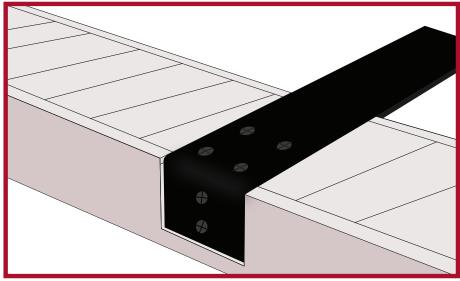

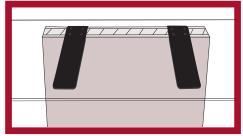

Check out our installation videos: youtube.com/user/ShopCB

Counter Top Setting Instructions



NEVER set tops directly on plate or bracket at an angle when setting tops.

ALWAYS set tops from opposite side of stud wall or from front of cabinet.





Order online at counterbalanceshop.com or call 1.800.220.1966

These are general guidelines for installation methods, and may not apply to your application. Always consult a qualified contractor and follow their recommendations for proper installation. Chemical Concepts 410 Pike Road Huntingdon Valley, PA 19006