



EDGERS | ALAMEDA® EDGER

Alameda
EDGER

INSTALLATION




Mark & Dig

Mark an outline of your project. Then dig a shallow trench 3" deep by 6" wide to receive the edging unit.



Place & Level

Place units in the trench.

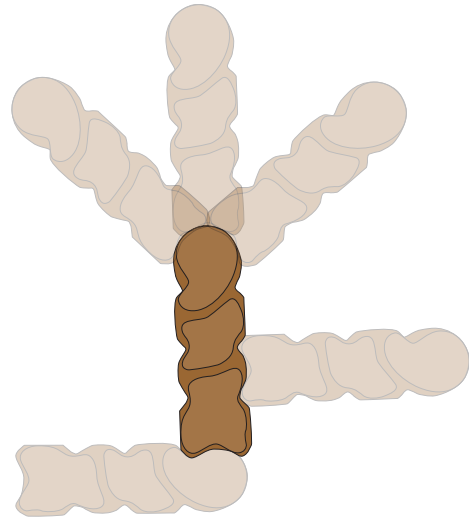

180° Rotation

Lock the ball from one unit into the socket of the next to achieve any angle up to 180°. Curves, radii and corners are a snap!

Use this chart to estimate the number of units you will need.

	Linear Project Length									
	5'	10'	15'	20'	25'	30'	35'	40'	45'	50'
Units	5	10	15	20	25	30	35	40	45	50



Keystone Retaining Wall Systems LLC • A Contech Company
4444 West 78th Street • Minneapolis, MN 55435
(952) 897-1040 • www.keystonewalls.com

©2017 Keystone Retaining Wall Systems LLC

