




EDGERS | GEOMETRIC EDGER

INSTALLATION




Mark & Dig

Mark an outline of your project. Then dig a shallow trench 3" deep by 6" wide to receive the edging unit.

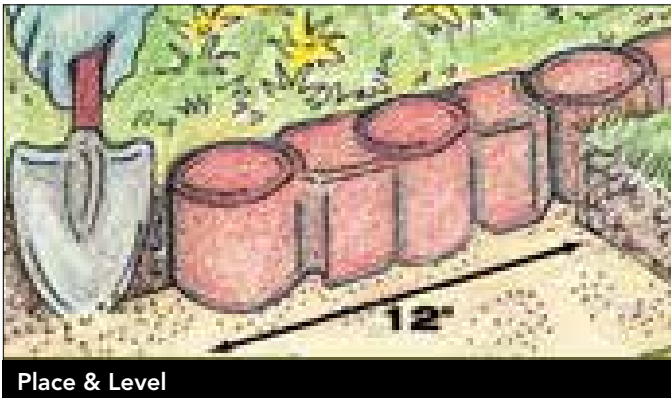

Place & Level

Place units in the trench, over landscape fabric.

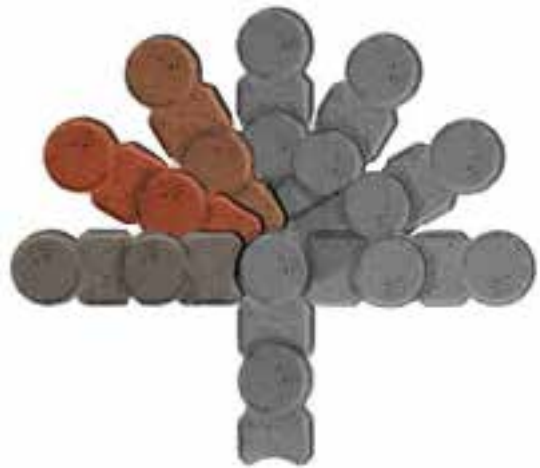

180° Rotation

Lock the ball from one unit into the socket of the next to achieve any angle up to 180°. Curves, radii and corners are a snap!

Use this chart to estimate the number of units you will need.

	Linear Project Length									
	5'	10'	15'	20'	25'	30'	35'	40'	45'	50'
Units	5	10	15	20	25	30	35	40	45	50

