




SIMPLE AND QUICK CHAIN LINK

FENCE SCREEN INSTALLATION

1 ROLL OUT THE FENCE SCREEN


Lay out your fence screen panel(s) in front of the fence you are planning to install onto. The fence screen is sized to be installed on the flat side of a chain link fence.

Note: Initially, the panel may appear shorter than the fence area as there may be wrinkles in the fabric which will be removed during installation for a clean fit.

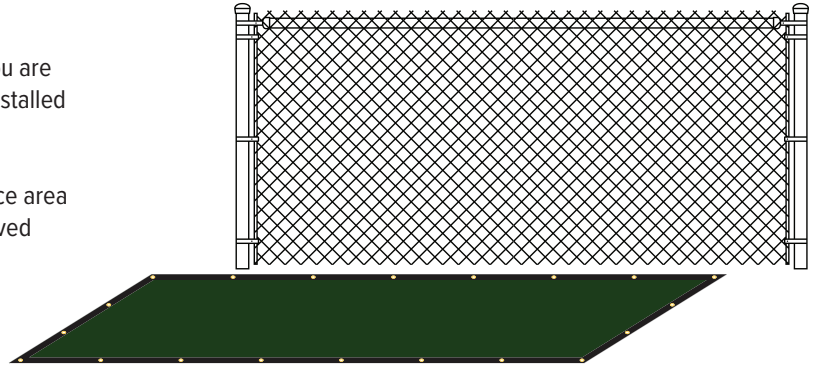

2 ATTACH THE TOP CORNER


For the best appearance, we recommend that you hang the screen with the smooth side of the grommets facing out, hem against the fence. Line up a corner of the fence screen panel one diamond down from the top of the fence line. Using a Fence Fastener or steel hog ring, attach to the fence top rail through the top corner grommet.

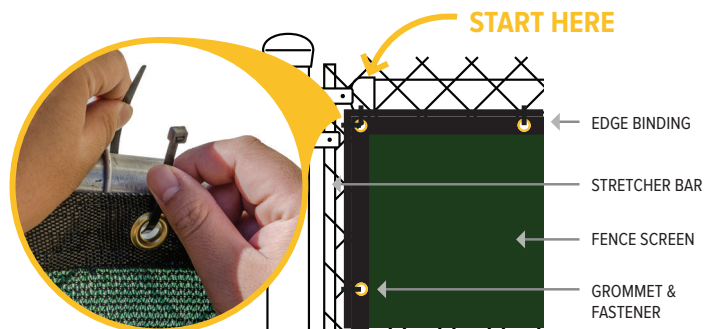

3 WORK ACROSS TOP

Work your way across the top, pulling hand tight and attaching fasteners through each grommets as you go. By working across evenly and pulling hand tight each time, the material will stretch to its full, correct size, and ensure a wrinkle-free fit.

Note: Do not fasten one screen to the next (one attachment accessory per grommet). Do not over tighten.

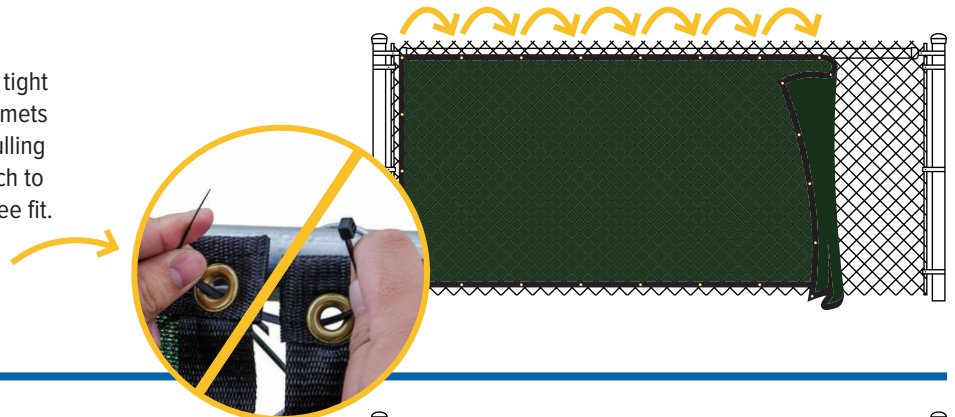

4 WORK ACROSS SIDE THEN BOTTOM

Work your way down the sides of the screen and across the bottom, pulling the screen hand tight and attaching with fasteners at each grommet.

Helpful Tips: making sure the installation is hand tight and wrinkle-free will avoid excess flapping of the material, and helps extend the life of the product and provide the best appearance.

Maintenance: Occasional cleaning of excess dust and debris can be achieved using plain water.



WATCH THE INSTALLATION VIDEO: youtu.be/ZldgPkCoUME