

**FA982900TX**

**Townsend Fireplace Curio**

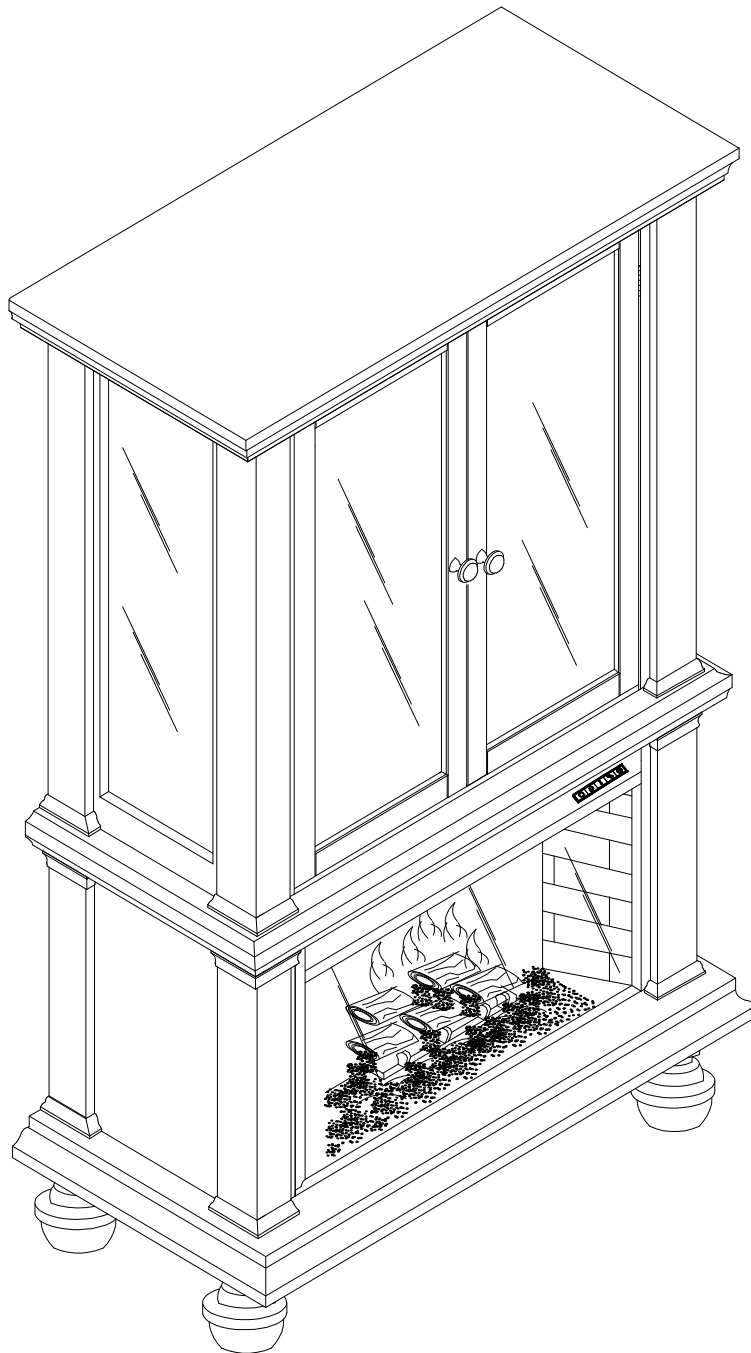
**-Espresso**

**Assembly Instructions**



**Southern**  
ENTERPRISES







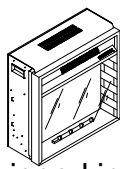
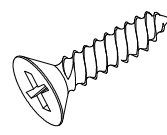
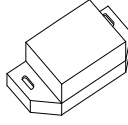

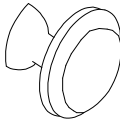
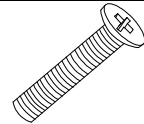


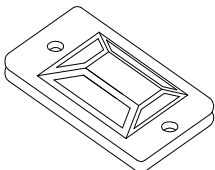

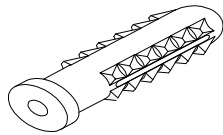
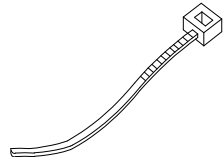
For assistance with assembly, contact:  
Southern Enterprises Inc.  
Customer Service 1-800-633-5096  
service@seidal.com  
www.seidal.com

















# Townsend Fireplace Curio

## Parts List

Please check packaging for all parts and hardware before discarding. Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated. Call customer service if hardware is missing. Before beginning assembly, carefully study the diagrams below and sort your hardware according to the pictures. Using the incorrect hardware will cause damage.
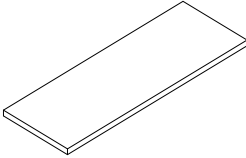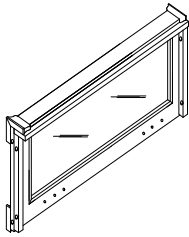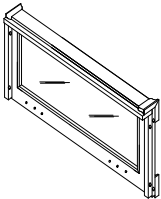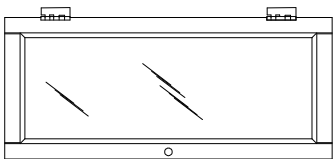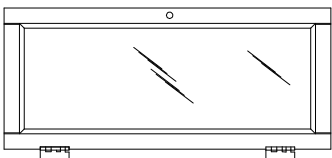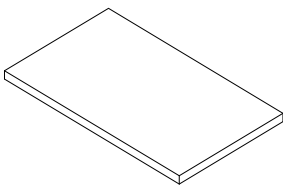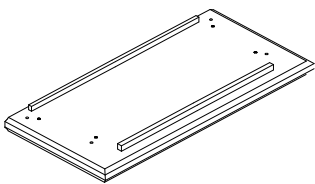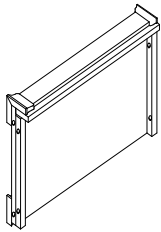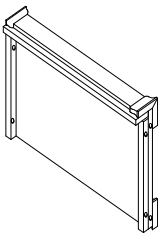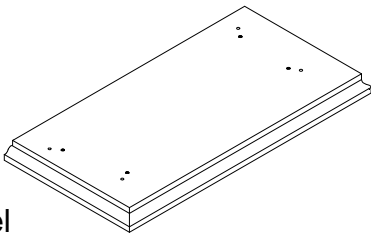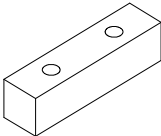
|  |  |
|--|--|
| <b>A</b><br><br>Wood Dowel<br>(Ø5/16"*1-3/16"L)<br>Quantity of 16           | <b>B</b><br><br>Bolt<br>(Ø1/4 "1-1/8"L)<br>Quantity of 16             |
| <b>C</b><br><br>Flat Washer<br>Quantity of 16                               | <b>D</b><br><br>Shelf Pin<br>Quantity of 8                            |
| <b>E</b><br><br>Round Head Screw<br>(Φ3mm*12mmL)<br>Quantity of 22          | <b>F</b><br><br>Flat Head Screw<br>(Φ3mm*12mmL)<br>Quantity of 12     |
| <b>G</b><br><br>Firebox<br>(shipped in a separate carton)<br>Quantity of 1 | <b>H</b><br><br>Flat Head Screw<br>(Φ5/16"*7/8"L)<br>Quantity of 2   |
| <b>I</b><br><br>Magnet Door Lock<br>Quantity of 1                         | <b>J</b><br><br>Round Head Screw<br>(Φ3mm*13.5mmL)<br>Quantity of 2 |
| <b>K</b><br><br>Nob<br>(Φ1-3/16"*1"L)<br>Quantity of 2                    | <b>L</b><br><br>Pan Head Bolt<br>(Φ5/32"*1"L)<br>Quantity of 2      |
| <b>M</b><br><br>Plastic Cover<br>Quantity of 4                            | <b>N</b><br><br>Screw<br>(Φ7*5/8"L)<br>Quantity of 4                |
| <b>O</b><br><br>Bracket<br>Quantity of 4                                  | <b>P</b><br><br>Long Screw<br>Quantity of 4                         |
| <b>Q</b><br><br>Wall Anchor<br>Quantity of 4                              | <b>R</b><br><br>Plastic Strap<br>Quantity of 2                       |

|   |  |
|---|--|
| <b>(1)</b><br><br>Top Panel<br>Quantity of 1   | <b>(2L)</b><br><br>Left Upper Frame<br>Quantity of 1       |
| <b>(2R)</b><br><br>Right Upper Frame<br>Quantity of 1  | <b>(3)</b><br><br>Left Door<br>Quantity of 1               |
| <b>(4)</b><br><br>Right Door<br>Quantity of 1  | <b>(5)</b><br><br>Adjustable Shelf Panel<br>Quantity of 2 |
| <b>(6)</b><br><br>Middle Shelf Panel<br>Quantity of 1   | <b>(7L)</b><br><br>Left Lower Frame<br>Quantity of 1     |
| <b>(7R)</b><br><br>Right Lower Frame<br>Quantity of 1  | <b>(8)</b><br><br>Bottom Panel<br>Quantity of 1         |
| <b>(9)</b><br><br>Leg<br>Quantity of 4   | <b>(10)</b><br><br>Back Panel<br>Quantity of 1          |
| <b>(11)</b><br><br>Wood Holder<br>Quantity of 1  |  |
| <b>Care and Cleaning Instructions:</b><br>Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects. | Call Customer Service at 1-800-633-5096 for assistance, questions or parts.  |
| <b>Assembly Tool Required</b><br><b>No.2 Phillips Screwdriver</b><br><b>(Not Included)</b>  |    |

# Townsend Fireplace Curio

## Assembly Instructions

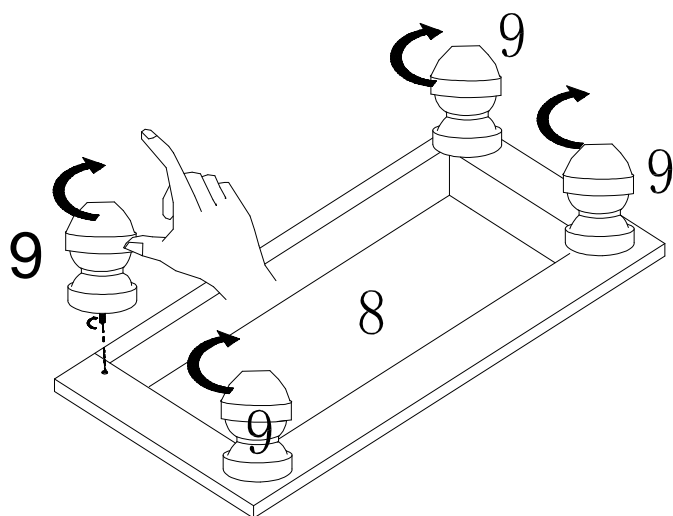


Figure 1

Attach 4pcs legs (9) to bottom panel (8) by rotating the legs (9) clockwise tightly with hand.

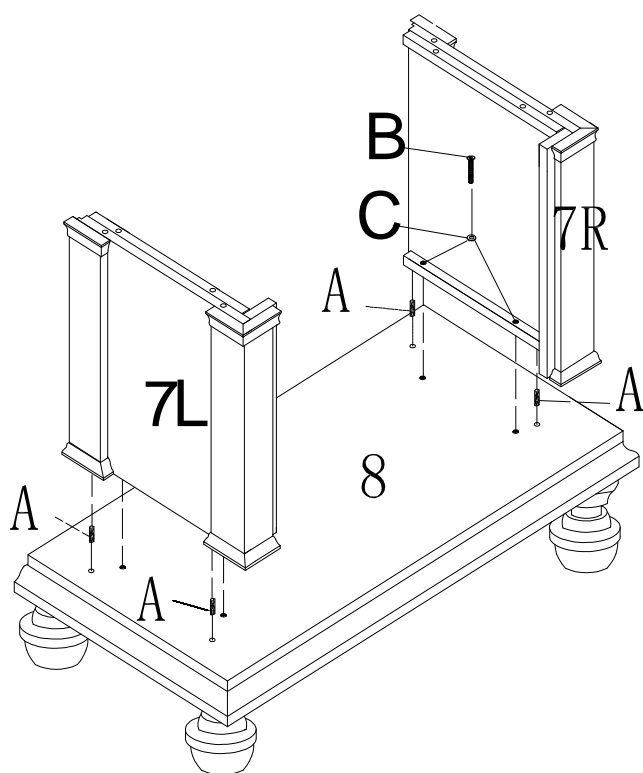


Figure 2


Attach left lower frame (7L) and right downside frame (7R) to bottom panel (8) by inserting 4pcs wood dowels (A).

Use 4pcs bolts (B) through 4pcs flat washers (C) to connect lower frames (7L and 7R) to bottom panel (8).

Tighten bolts (B) with Phillips screwdriver.

# Townsend Fireplace Curio

## Assembly Instructions

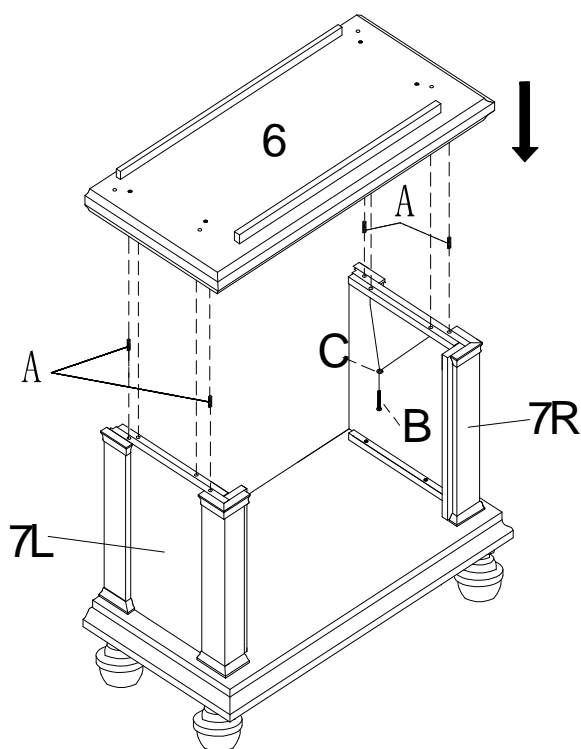


**Figure 3**

Attach middle shelf panel (6) to lower frames (7L and 7R) by inserting 4pcs wood dowels (A).

Use 4pcs bolts (B) through 4pcs flat washers (C) to connect middle shelf panel (6) to lower frames (7L and 7R).

Tighten bolts (B) with Phillips screwdriver.

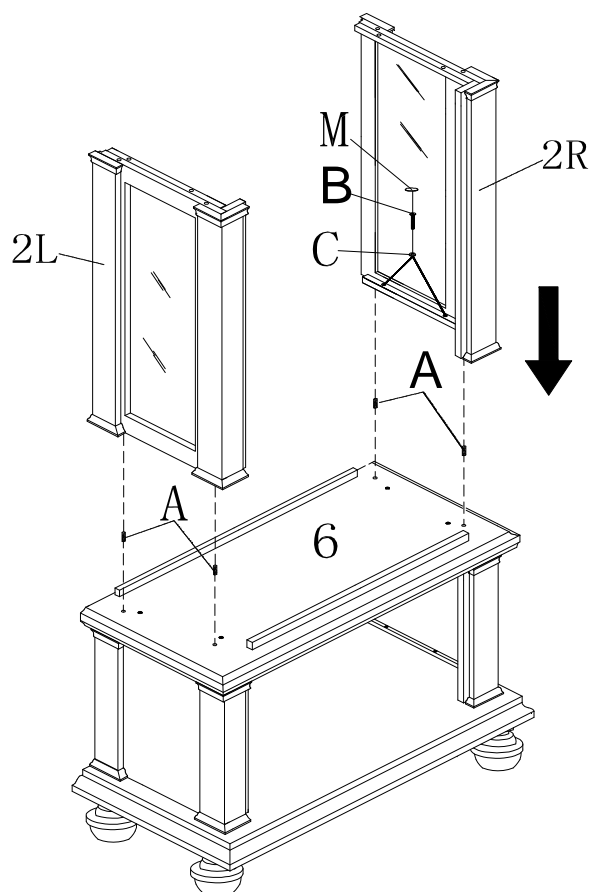

**Figure 4**

Attach left upper frame (2L) and right upper frame (2R) to the middle shelf panel (6) by inserting 4pcs wood dowels (A).


Use 4pcs bolts (B) through 4pcs flat washers (C) to connect upper frames (2L) and (2R) to the middle shelf panel (6).

Tighten bolts (B) with Phillips screwdriver.

Cover bolt holes with plastic covers (M).


# Townsend Fireplace Curio

## Assembly Instructions

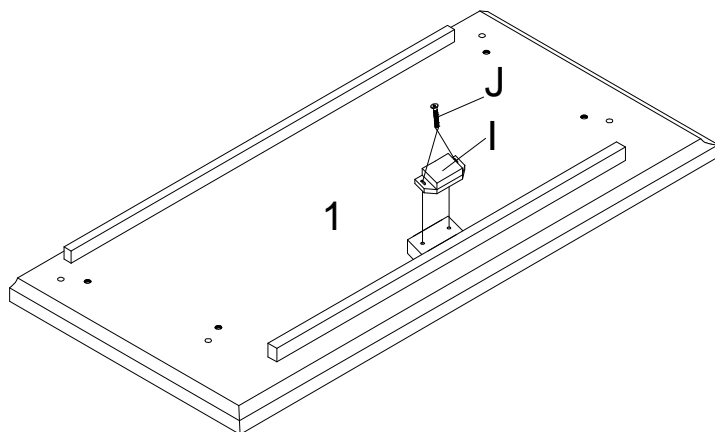

**Figure 5**

Turn the top panel (1) over and use 2pcs round head screws (J) to connect magnet (I) to top panel (1) with Phillips screwdriver.

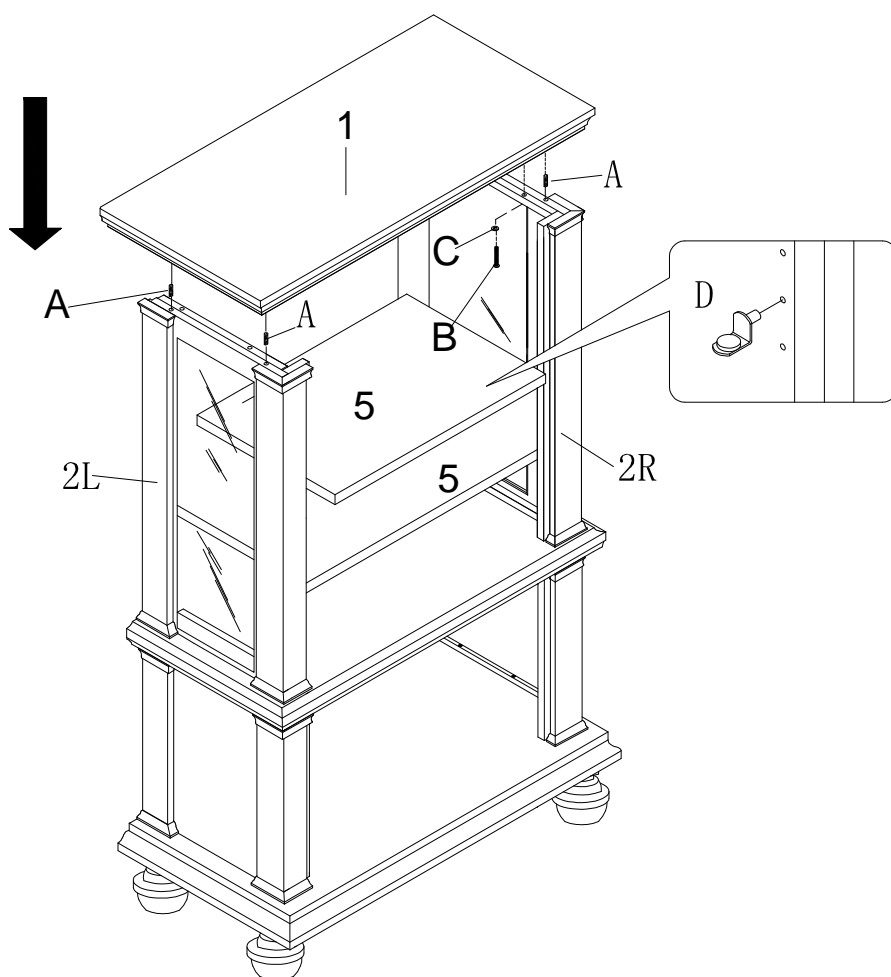


**Figure 6**

Attach top panel (1) to the upper frames (2L) and (2R) by inserting 4pcs wood dowels (A).

Use 4pcs bolts (B) through 4pcs flat washers (C) to connect the top panel (1) to upper frames (2L) and (2R).


Tighten bolts (B) with Phillips screwdriver.

Insert shelf pins (D) into corresponding holes on upper frames (2L) and (2R), then, place the two adjustable shelf panels (5) on them as shown.

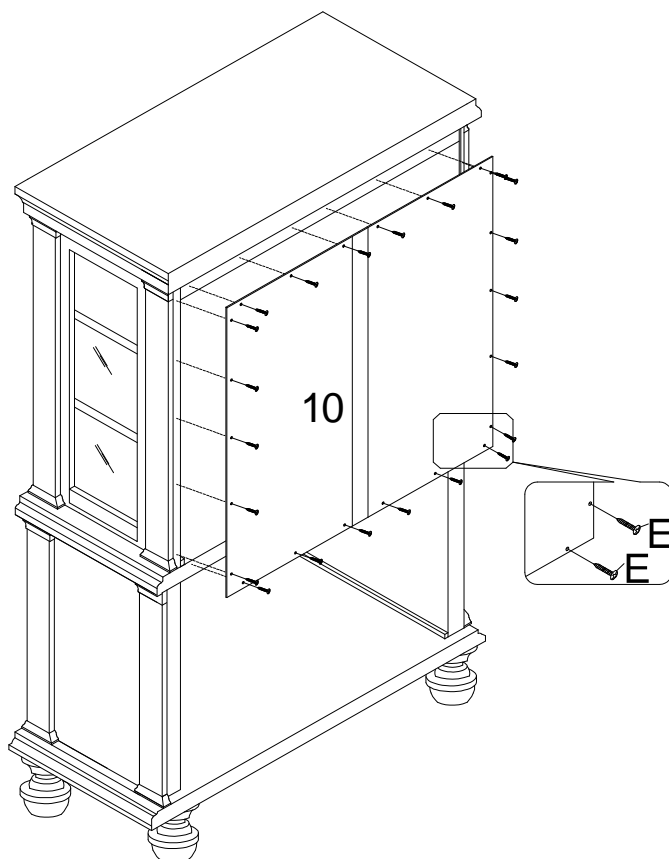


**Figure 7**

Attach the back panel (10) onto the back of the unit by using 22pcs screws (E).

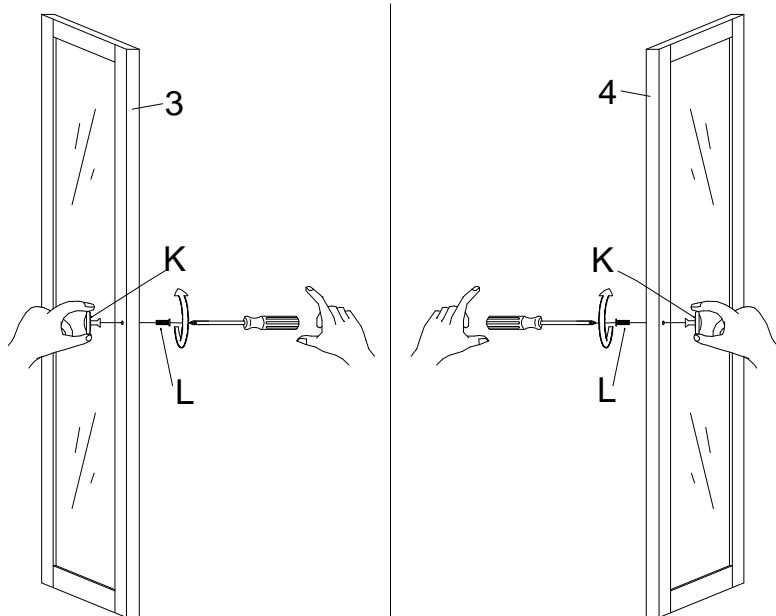


**Figure 8**

Use 2pcs pan head bolts (L) to connect knobs (K) to door panels (3) and (4) with Phillips screwdriver as shown.

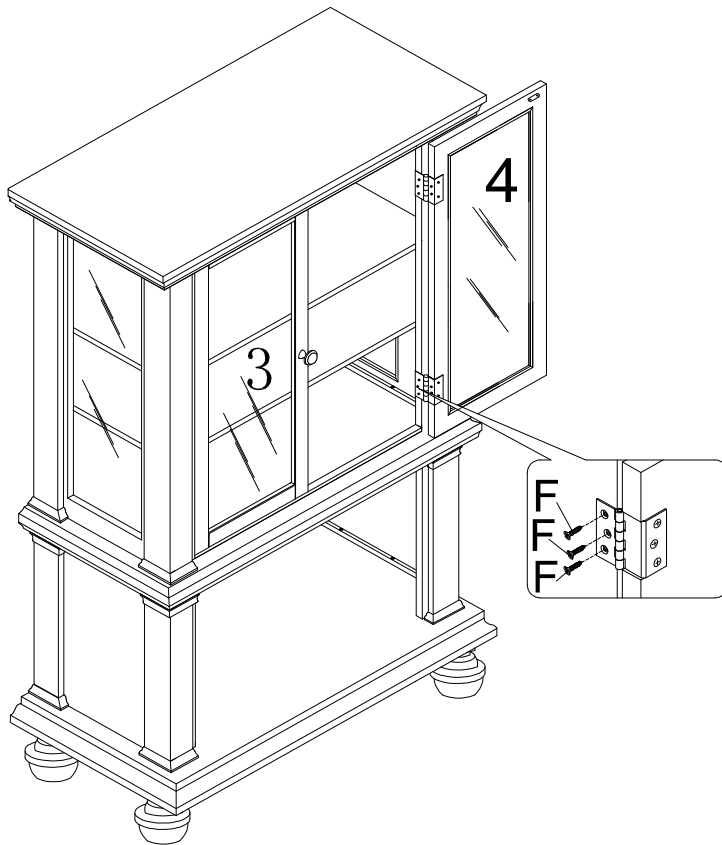

**Figure 9**

Use 12pcs screws (F) to connect door panels (3) and (4) to assembled unit with Phillips screwdriver.

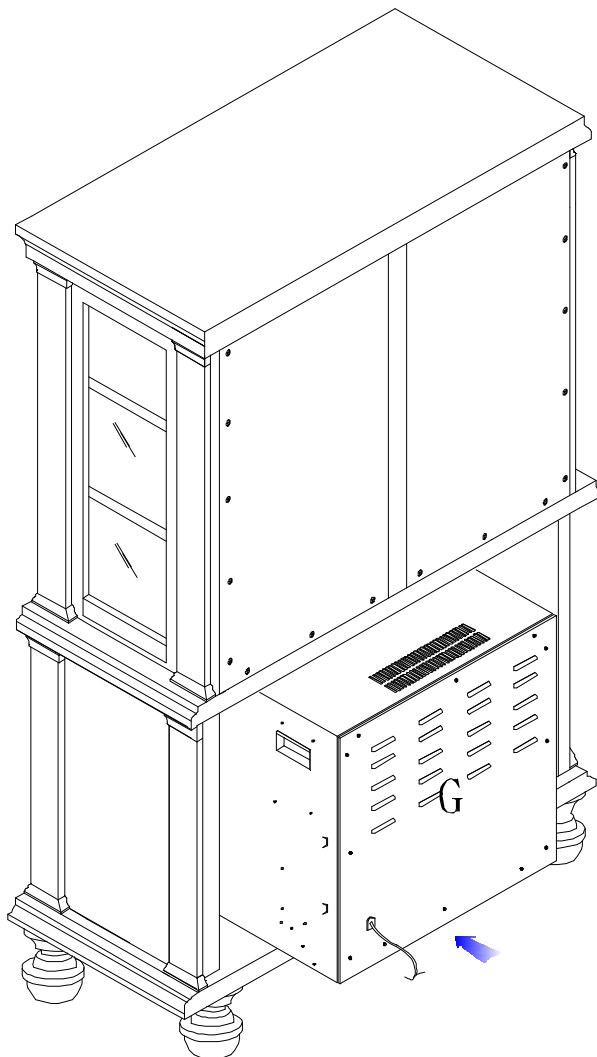


**Figure 10**

Place firebox (G) into the back of the unit.




# Townsend Fireplace Curio

## Assembly Instructions

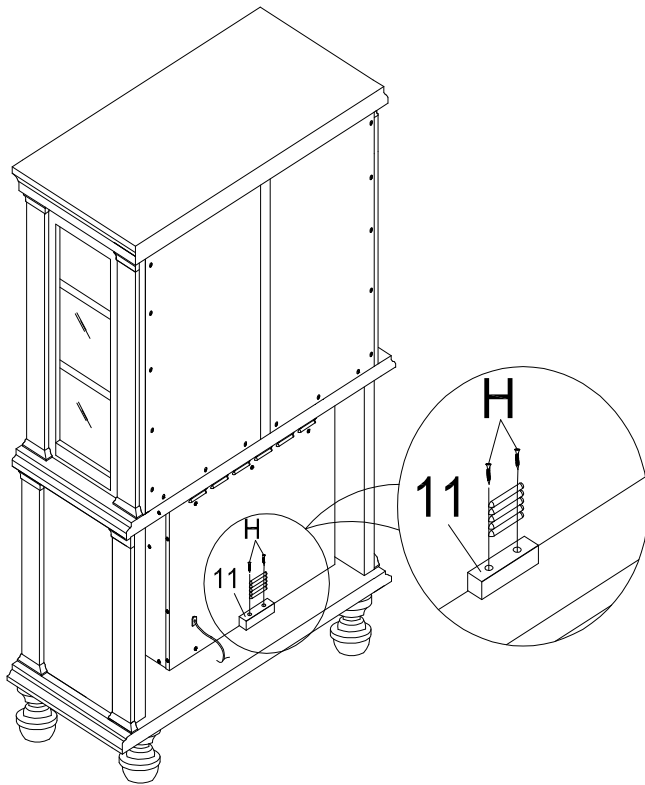

**Figure 11**

Attach wood holder (11) by inserting 2pcs flat head screws (H) into corresponding holes and tighten with Phillips screwdriver.

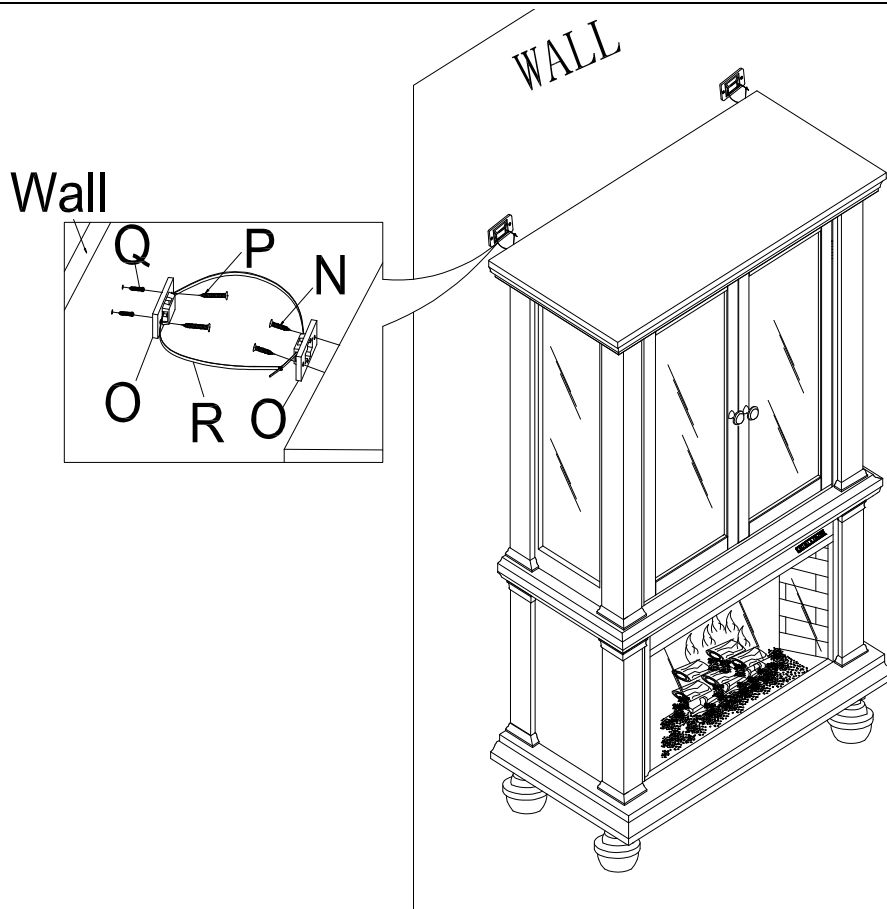

**Figure 12**

Use screws (N) to connect brackets (O) to the back of the top panel (1) as shown. Tighten screws (N) with Phillips screwdriver.

Drill 1/4 inch pilot holes in near proximity of the brackets (L) attached to the top panel then tap the plastic anchor (Q) into wall.

Use screws (P) to connect brackets (O) to plastic anchors (Q) on wall. Tighten screws (P) with Phillips screwdriver.

Move this item closed to the fastened wall brackets (O) and tie in both brackets (O) with plastic straps (R) as shown in diagram.

Now you can enjoy your new fireplace.

## Parts Replacement Form

### Customer Information

Name \_\_\_\_\_

Address \_\_\_\_\_

City/State/Zip Code \_\_\_\_\_

Phone Number \_\_\_\_\_

Please indicate where you purchased this item: Store/Website/Catalog

\_\_\_\_\_

Please indicate color/size/style number:

\_\_\_\_\_

| Style No<br>Needed | Parts Letter | Parts Description | Quantity |
|--------------------|--------------|-------------------|----------|
|--------------------|--------------|-------------------|----------|

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Please examine this product carefully upon immediate receipt. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues or email us at [service@seidal.com](mailto:service@seidal.com). Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



**Southern**  
ENTERPRISES

Customer Service 1-800-633-5096  
[service@seidal.com](mailto:service@seidal.com)  
Southern Enterprises, Inc.  
600 Freeport Parkway, Suite 200  
Coppell, Texas 75019