

- Step 1.** Predrill two holes in floor of wall cabinet, centered, one towards the front and one towards the rear
- Step 2.** Center unit on cabinet floor, align front edge to inside edge of face frame (see fig. 1).
- Step 3.** Screw from underside of cabinet into block of wood (see fig.2). *Screws not provided.*
- Step 4.** Attach door to unit. **Note:** utilize the adjustable door mounting brackets to ensure mounting in thick portion of cabinet door (see fig. 3).



fig. 1



Screw from
underside of
cabinet.

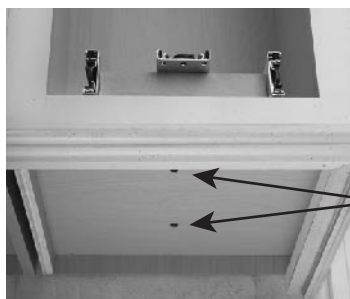


fig. 2

Thick portion of door.



fig. 3

NOTE: The extra set of chrome rails (included) are for use in a 36" or 42" height wall cabinet for additional shelf space. Holes are predrilled.