

SMARTCORE® *Ultra*


Molding Profiles

Each piece of coordinating Smartcore® molding is 94" long and composed of a waterproof core wrapped in vinyl. The molding can be cut to desired length using a fine-toothed finishing saw blade.

When installing, we recommend using Loctite PL 3X Premium Construction Adhesive (or equivalent). Scuff the underside of the part to receive adhesive with sandpaper and apply in "S" pattern. Use weight to apply pressure until fully cured (usually

48 hours). An alternative method is to use double-sided molding tape such as Hilway Direct Molding Tape. If you choose to use nails (not recommended), carefully pre-drill pilot holes for the nails.


T-MOLDING



This t-shaped transition piece covers the narrow gap in a doorway between two adjacent floors that are on the same level.

Cut T-molding and Track to same desired length. Secure Track to floor with glue, molding tape or nails and press or tap T-molding into Track to desired depth using rubber mallet.


REDUCER



This is used to transition from a higher-profile (or thickness) floor to a lower-profile floor.

Cut Reducer and Track to same desired length. Secure Track to floor with glue, molding tape or nails and press or tap Reducer into Track to desired depth using rubber mallet.


STAIR CAP

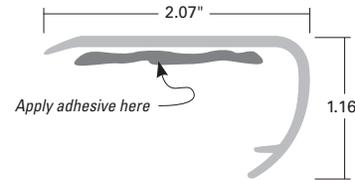

Used when installing Smartcore® on stairs, providing the finishing touch to the front stair edge.

Measure and cut to fit. Affix molding using adhesive, being sure to follow adhesive manufacturer's instructions completely.


BABY THRESHOLD

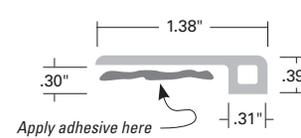

Used to transition from hard surface floors to floors of a different height level or thickness.

Measure and cut to fit. Affix molding using adhesive, being sure to follow adhesive manufacturer's instructions completely.

QUARTER ROUND

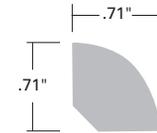

Used to create finishing touch between floor and baseboards.

Measure and cut to fit. Affix molding using glue, molding tape or nails. When using adhesive, be sure to follow manufacturer's instructions completely.

Product Item #	Description	T-Mold Stock/SOE Item #	T-Mold Model #	Reducer Stock/SOE Item #	Reducer Model #	Stair Cap Stock/SOE Item #	Stair Cap Model #	Threshold SOS Item #	Threshold Model #	Qtr Rd SOS Item #	Qtr Rd Model #
813595	Lexington Oak	874720	TM50SLVF601	874722	R50SLVF601	874721	SC50SLVF601	855995	TH50SLVF601	856019	QR50SLVF601
813594	Woodford Oak	874717	TM50SLVF602	874719	R50SLVF602	874718	SC50SLVF602	855996	TH50SLVF602	856020	QR50SLVF602
813596	Blue Ridge Pine	874723	TM50SLVF603	874725	R50SLVF603	874724	SC50SLVF603	855997	TH50SLVF603	856021	QR50SLVF603
1035195	Brunswick Maple	1053470	TM50SLVF604	1053472	R50SLVF604	1053471	SC50SLVF604	855998	TH50SLVF604	856022	QR50SLVF604
1035196	Savannah Oak	1053473	TM50SLVF605	1053475	R50SLVF605	1053474	SC50SLVF605	855999	TH50SLVF605	856023	QR50SLVF605
784528	Tivoli Travertine	1053476	TM50SLVF1202	1053478	R50SLVF1202	1053477	SC50SLVF1202	856000	TH50SLVF1202	1028240	QR50SLVF1202
960344	Midnight Slate	1053818	70TM37405X	1053816	70R37405X	1053817	70ST37405X	1053814	70BT37405X	1053815	70QR37405XH
1035187	Columbia Oak	1055631	02W5900606	1055615	01W6700606	1055623	01W9200606	1053798	01W1600606	1053806	01W4200606
1035188	Huntington Oak	1055632	02W5900607	1055616	01W6700607	1055624	01W9200607	1053799	01W1600607	1053807	01W4200607
1035189	Norfolk Pine	1055633	02W5900608	1055617	01W6700608	1055625	01W9200608	1053800	01W1600608	1053808	01W4200608
1035190	Richmond Oak	1055634	02W5900609	1055618	01W6700609	1055626	01W9200609	1053801	01W1600609	1053809	01W4200609
1035191	Siena Stone	1055635	02W5901204	1055619	01W6701204	1055627	01W9201204	1053802	01W1601204	1053810	01W4201204
1035192	Florence Travertine	1055636	02W5901205	1055620	01W6701205	1055628	01W9201205	1053803	01W1601205	1053811	01W4201205
1035193	Venice Stone	1055637	02W5901206	1055621	01W6701206	1055629	01W9201206	1053804	01W1601206	1053812	01W4201206
1035194	Lucca Stone	1055638	02W5901207	1055622	01W6701207	1055630	01W9201207	1053805	01W1601207	1053813	01W4201207