

INSTALLATION INSTRUCTIONS

Parts Included

Cabinet

- 8 Screws ▪ 4 Plastic Anchors ▪ 2 Support Brackets ▪ 4 Plastic Anchors ▪ Knob for Drawer

Basin

- 2 Screws ▪ 2 Nuts with washers

Tools Needed


- Wrench • Drill • 8mm & 10mm Drill Bits • Level • Pencil • Silicone Adhesive ▪
▪ Masking Tape ▪

Suggested Extra Parts Needed

- Marina Brackets ▪

(Marina Brackets are only needed for larger basin (LH83F).
Smaller basin (LH63F) can be installed using screws and nuts only.)

***Be sure to re-inforce wall before installation. We recommend a 2"x12" securely fastened to wall studs at the desired height for your installation.**

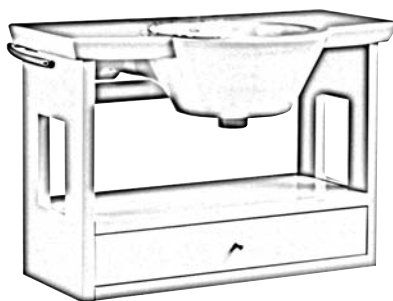

Vanity Installation

1. Assemble cabinet as shown, using screws supplied.
2. Remove basin. Mark wall for wall supports.
3. Drill holes, where marked on wall, **through the 2"x12" re-inforced wall.**
4. Insert plastic anchors into wall and screw supports to wall using screws provided.
5. Place cabinet against wall. Use level to ensure that cabinet is level. Mark wall for screws. Remove cabinet from wall and drill holes where marked.
6. Insert plastic anchors in holes just drilled.
7. If you have purchased the Marina towel bar, attach it to the side of the cabinet now.
8. Place cabinet under basin and secure to wall supports.

