

## INSTALLATION

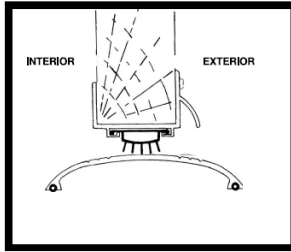


Illustration shows an installed saddle threshold. An aluminum and vinyl door bottom (not included) is shown attached to the door. A door bottom or door sweep is required when using a saddle threshold if a weatherproof seal is desired.

### To Replace an Existing Threshold


1. Use old threshold as a template to mark ends of new threshold for cutting.
2. Trim ends of threshold with a hacksaw and install.

### For New Door Installation:


1. Measure door opening between jambs at floor level. Cut threshold to this length.
2. *Wood Door Jambs* – trim door stop to rest directly on installed threshold.  
*Metal Door Jambs* – trim threshold to fit around door stop.
3. Install threshold with enclosed fasteners.
4. Adjust door bottom or door sweep to make a weatherproof seal.

### Installation on Concrete Floors:


When installing this threshold on a concrete floor use lead or plastic anchors.



### Tools Required: Herramientas Requeridas:



## INSTALACIÓN

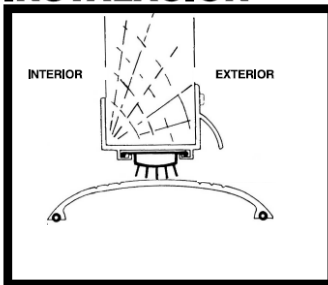

Ilustraciones demuestran el sardinel tipo montura instalado. Una base para puerta de aluminio y vinilo (no incluido) se demuestran pegado a la puerta. La base para puerta o barredora son necesarias cuando se usa un sardinel tipo montura si se desea un sellado a prueba del clima.

### Para Reemplazar un Sardinel Existente:

1. Use el sardinel viejo como patron para marcar los extremos del nuevo sardinel para cortar.
2. Recorte cada extremo del nuevo sardinel con una segueta y instale.

### Para la Instalación de una Puerta Nueva:

1. Mida la abertura de la puerta entre las jambas a nivel del piso. Corte el sardinel a este largo.
2. *Jambas para puertas de madera* – recorte la contra-puerta para que quede directamente sobre el sardinel instalado.  
*Jambas para puertas de metal* – recorte el sardinel para fijarlo alrededor del tope de la puerta.
3. Instale el sardinel con los sujetadores incluidos.
4. Ajuste la base para puerta o guardapolvo para obtener un sello a prueba del clima.

### Instalación en Pisos de Concreto:

Cuando instale este sardinel a un piso de concreto, use anclajes de plomo o plástico.

