


Installation Procedure for MODEL DIT SELF-RIMMING DROP-IN LAUNDRY TUB

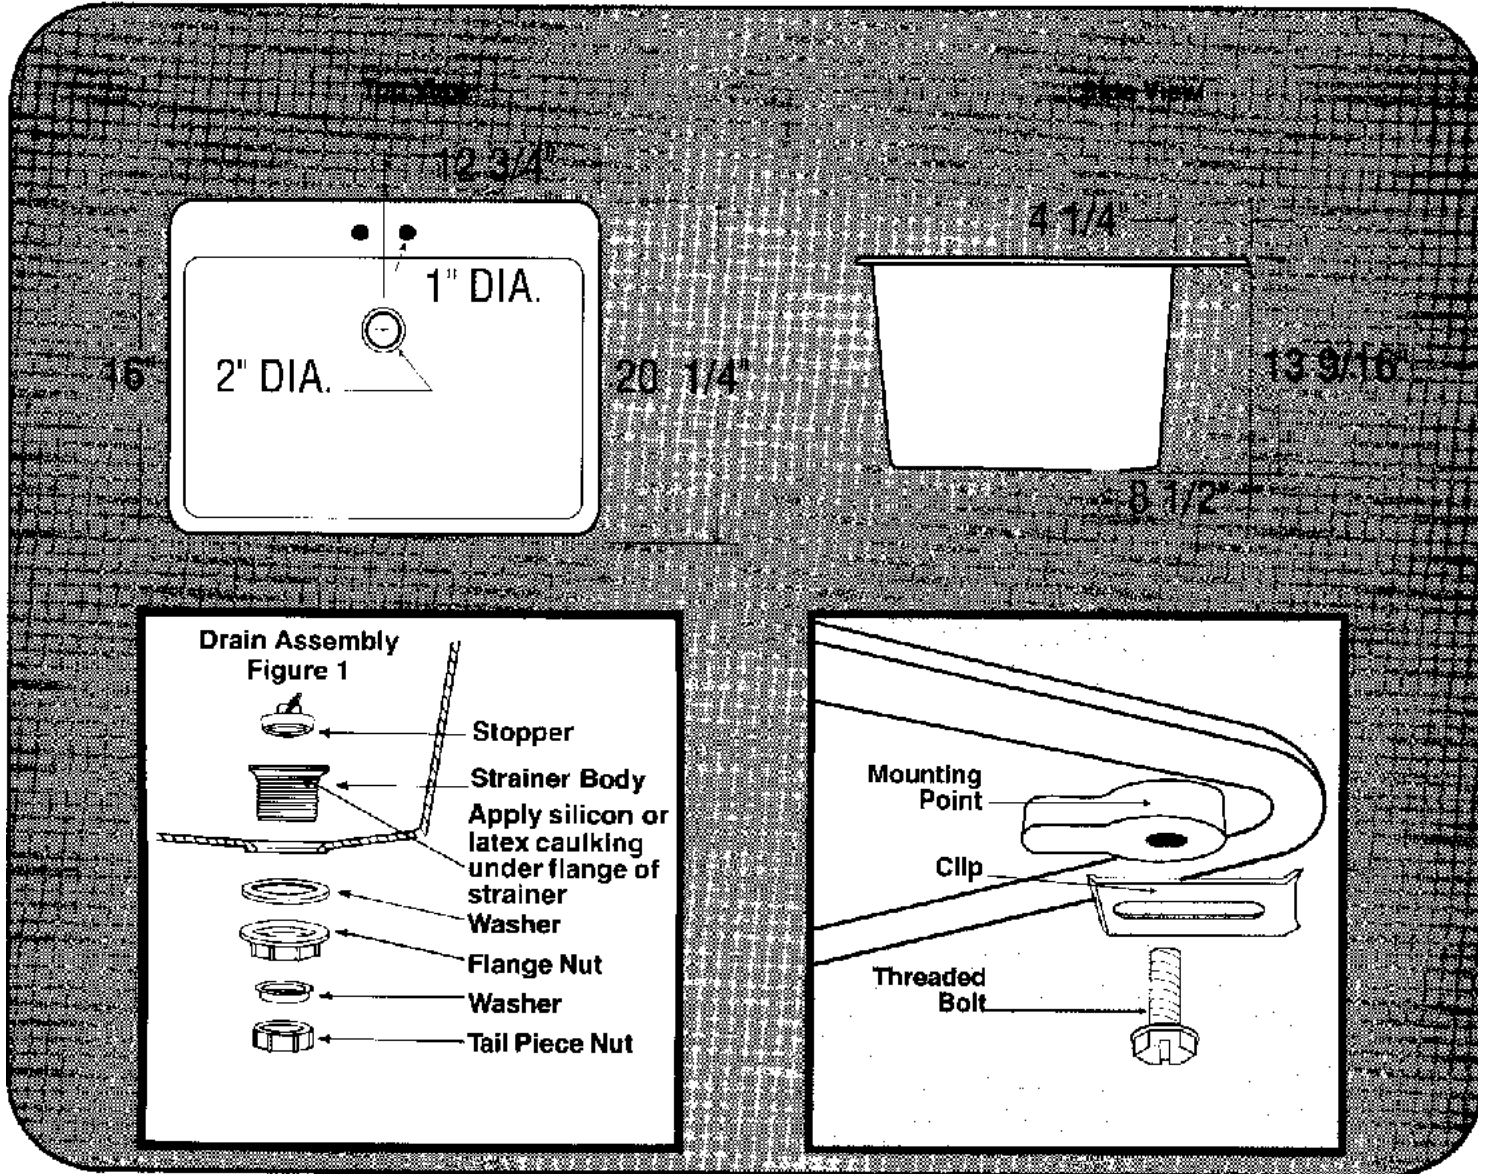

Read ALL instructions carefully BEFORE starting your installation SELF RIMMING LAUNDRY TUB — CAPACITY 20 GALLONS

1. Measure and cut counter hole for tub insertion... 23 3/8" wide x 20 5/8" long. Test fit tub. File any areas which require widening.
 2. After test fitting tub remove from counter hole and install faucet (not included) and drain assembly (see Figure 1).
- Helpful hint... for easy installation of final supply line connections, it is suggested that, if possible, plumbing connection to faucet be made at this point. Plumbing connections to hot and cold supply line can then be made after drop-in tub is secured to counter top.
3. Caulk along edge of 23 3/8" x 20 5/8" counter hole with 1/8" bead of silicone or latex caulk (not included).
 4. Set sink into place and assemble bracket, washer, and nut attachments (see Figure 2). Alternating from one to another, tighten mounting bracket assembly nuts.
 5. Some caulking residue may flow from under tub flange. This residue can be wiped clean following instructions on silicone or latex caulking tube.
 6. Attach drain waste and faucet plumbing as desired.

