

Summer Haven Arbor

PLEASE READ THROUGH BEFORE STARTING ASSEMBLY

CHECK THE BOX FOR THESE CONTENTS

- ① Right side panel (1)
- ② Left side panel (1)
- ③ Bench (1)
- ④ Back panel (1)
- ⑤ Gable (2)
- ⑥ Top panel (2)

HARDWARE

- A. 3" Screws (4)
- B. 2 1/2" Screws (8)
- C. 2" Screws (16)
- D. 3/8" Dowels (4)


TOOLS YOU WILL NEED

- Phillips screwdriver

HANDY TO HAVE

- Power screwdriver
- Step ladder
- Quick clamps (2)
- Wood glue

ASSEMBLED ARBOR

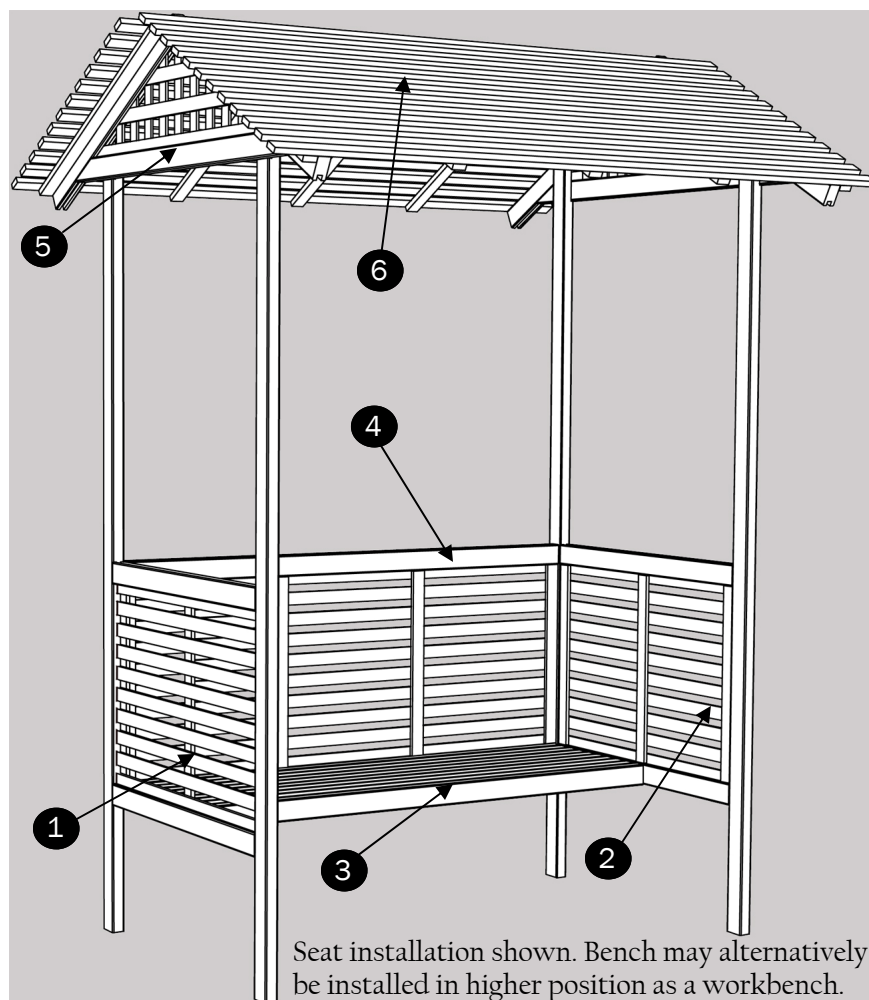

PRELIMINARIES

IF YOU PLAN TO PAINT:

If you wish to change the stain color or paint your arbor, we recommend that you do so before assembly, it will make the job easier. Be careful not to cover up guide marks on gables.


WORK AREA

Select an area close to where the arbor will be finally placed. The area should be relatively flat and open, at least 10'x20'.

CONNECT BACK TO SIDE PANELS

1. Insert 3/8" dowels (D) in four locations of back panel, see Diagrams 1 & 2. *Tip: We recommend placing a drop of wood glue in each dowel hole prior to placing the dowel.*
2. Attach the back panel to each side panel by inserting the installed dowels (D) into the holes in each post as shown in Diagram 2.
3. Secure side panels to back panel using 3" screws (A) in predrilled holes as shown in Diagram 2.

Diagram 1

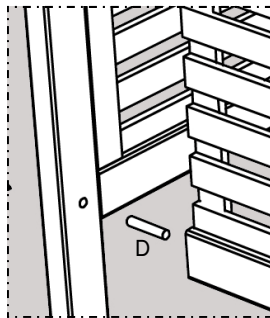

Note: Notches on post tops must face outward.

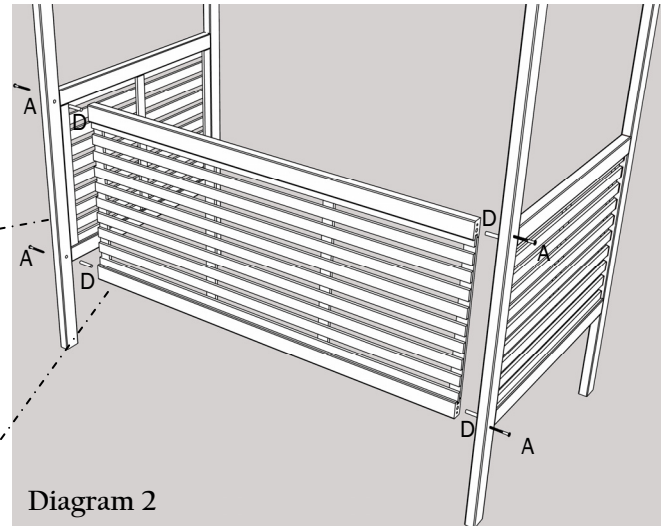


Diagram 2


CONNECT BENCH TO ARBOR

1. Carefully lay arbor on backside.
2. Align the bench with the bottom rail of either side panel.

Tip: If a workbench is desired in place of a seat, align bench instead with top rail of side panel.

3. Use clamps if available to hold bench in place.
4. Fasten end of bench to side panel with 2 1/2" (B) screws in each of the three pre-drilled holes as in Diagram 3.
5. Repeat step 4 for the other end of bench and for the two pre-drilled holes in the rear of bench.
6. Remove clamps and carefully return arbor to upright position.


Diagram 3

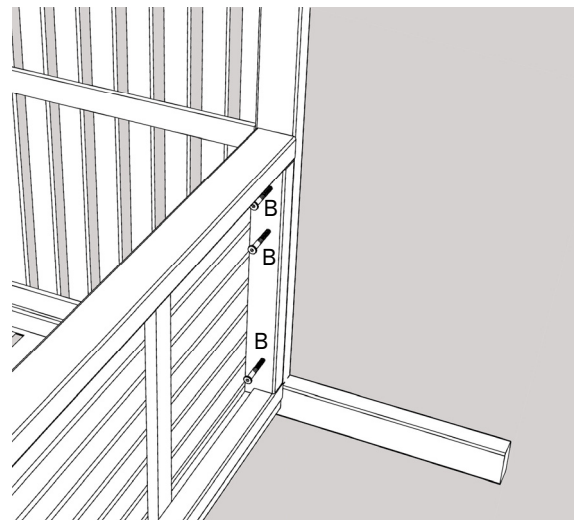

ATTACH GABLE TO SIDE PANEL

1. Align guide marks on the inside of one gable with top of side panel posts as shown in Diagram 4.
2. Position gable on outside of posts and rest upon the notch in each post top. Clamp in place if clamps are available.
3. Fasten with four 2" screws (C) through pre-drilled holes in posts and into gable frame as shown.
4. Repeat steps 1 through 3 for second gable and side panel. Remove clamps when done.

Diagram 4

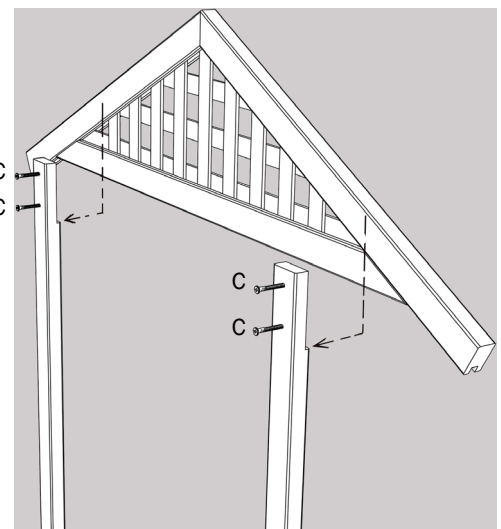

TOP PANEL ASSEMBLY

Note: Align top panel with pencil marks on edge of gable.

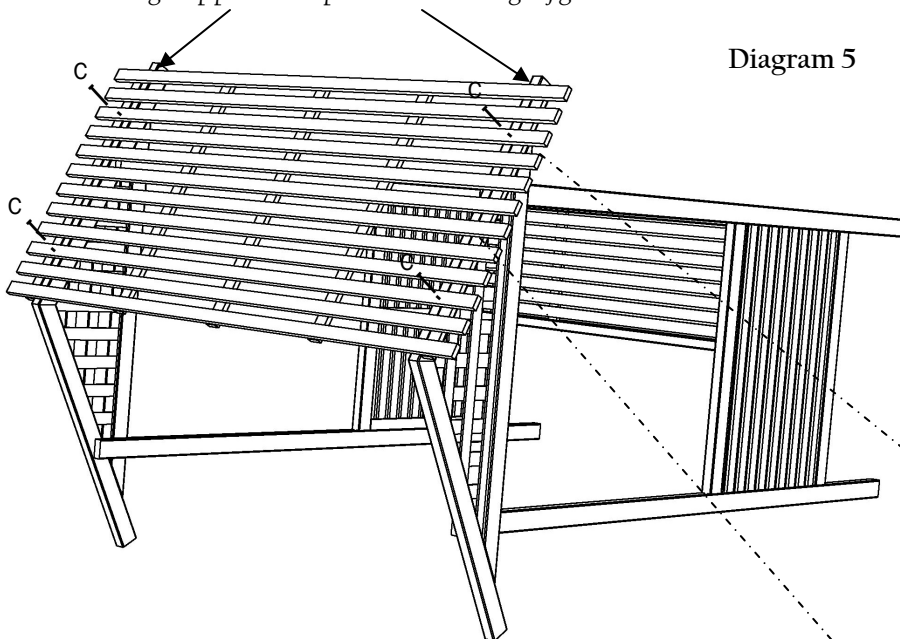


Diagram 5

1. Carefully lay arbor on front side.
2. Position one top panel on gables so that it is aligned with pencil marks on edges of gable frames, as in Diagram 5. Note that end pieces of lath (on short sides of top panel) sit on the outside of the gable frames as shown in Diagram 6. Clamp in place if clamps are available.
3. Fasten top panel to gable top using four 2" screws (C) through pre-drilled holes, as in Diagram 5. Remove clamps.

Diagram 6


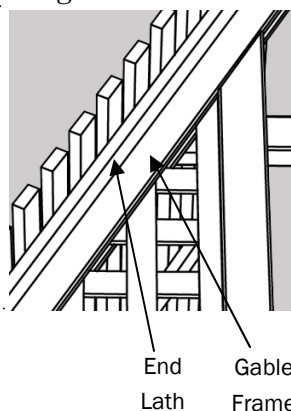


Diagram 7

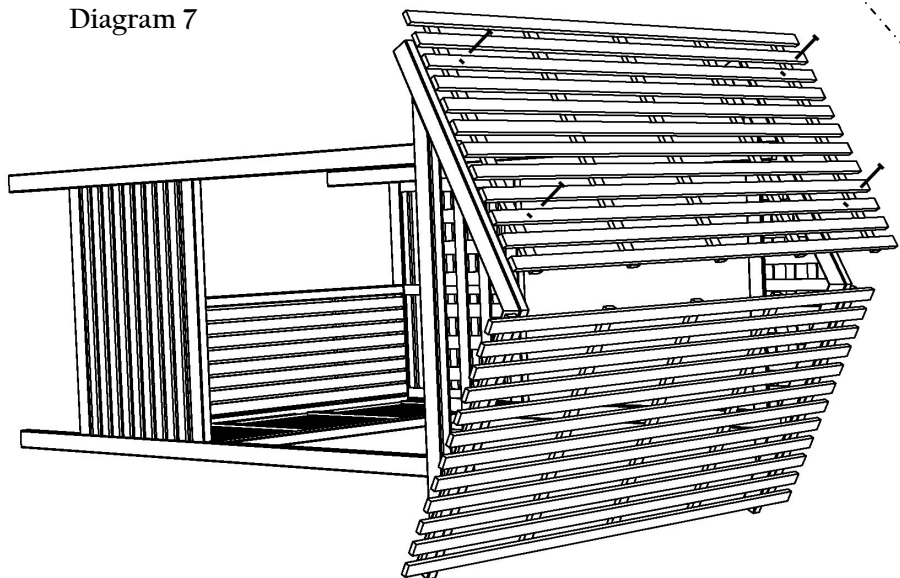

4. Carefully turn arbor so that backside faces the ground.
5. Repeat steps 2 & 3 for second top panel as shown in Diagram 7.
6. Return arbor to upright position.

ANCHORING THE ARBOR

Securing the arbor is recommended. This arbor may be secured using a variety of techniques including:

1. Permanent anchoring with concrete.
2. Anchoring with gravel or sand.
3. Anchoring directly into ground.
4. Attaching to an existing structure (a deck or wall for example).

If following options 1, 2 or 3 anchoring stakes can be found in the lawn & garden or building products departments.

Use caution when moving the arbor to its final placement. Two people are required to lift or move the arbor; always use caution.

Page intentionally left blank

Esta página está intencionalmente en blanco.

Nota: Alinee el panel superior con las marcas de lápiz en el borde del gablete.

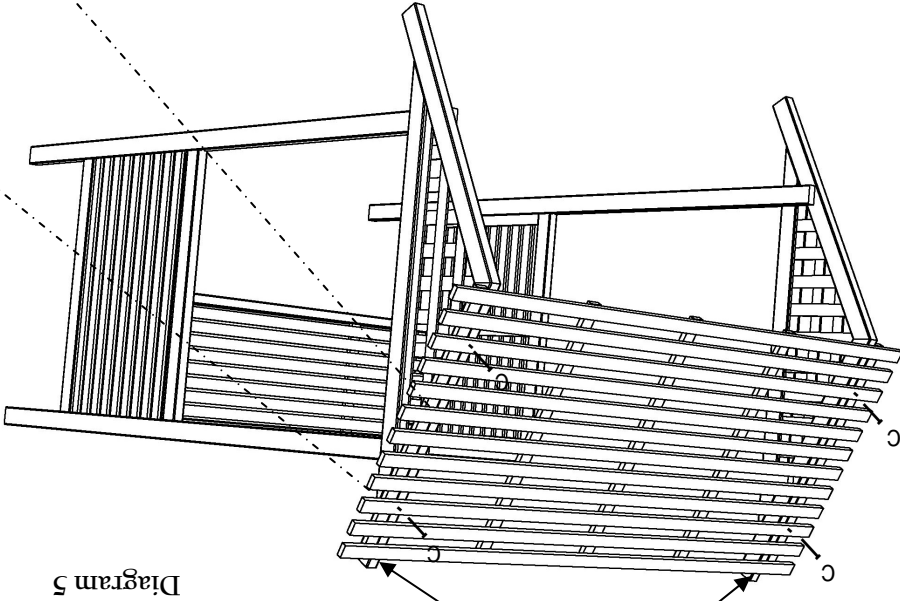


Diagram 5

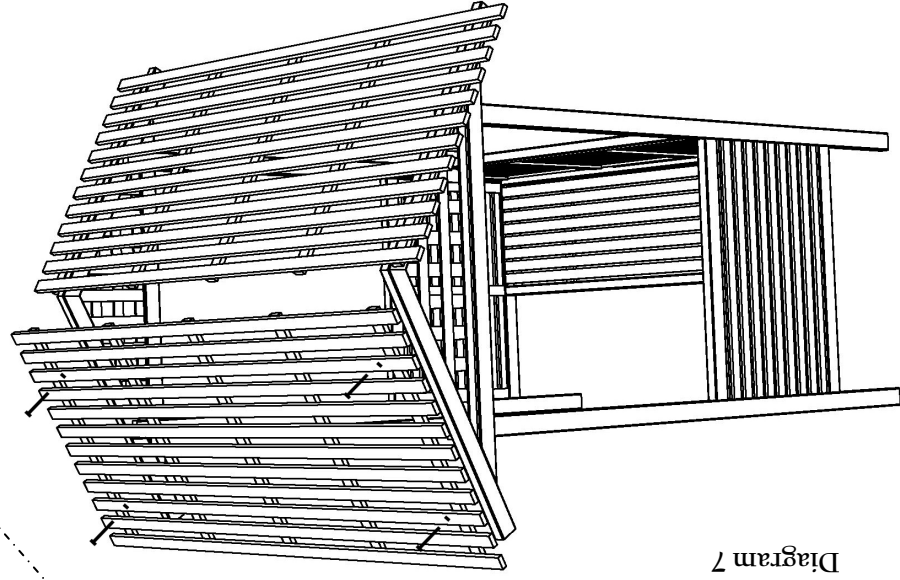


Diagram 7

1. Coloque con cuidado la pérgola sobre el lado frontal.

2. Coloque un panel superior en los gables de forma que quede alineado con las marcas de lápiz en los bordes de los marcos de los gabletes, como se muestra en el diagrama 5. Tenga presente que las piezas de los extremos del listón (en los lados cortos del panel superior) deben reposar sobre el exterior de los marcos de los gabletes, como se muestra en el diagrama 6. Ajuste en su lugar si cuenta con abrazaderas.

3. Fije el panel superior a la parte superior del gablete con cuatro tornillos de 2" (C) por los orificios pre-taladrados, como se muestra en el diagrama 5. Retire las abrazaderas.

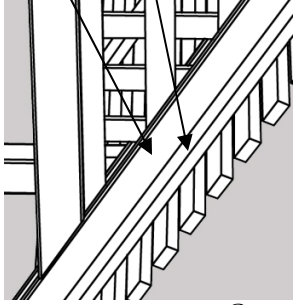


Diagram 6

4. Con mucho cuidado gire la pérgola de modo que el lado posterior dé al suelo. Repita los pasos 2 y 3 para el segundo panel superior, como se muestra en el diagrama 7.

6. Vuelva a colocar la pérgola en posición vertical.

Se recomienda sujetar la pérgola. Esta pérgola se puede sujetar usando diferentes técnicas, las que incluyen:

1. Sujeción permanente con concreto.
2. Anclaje con grava o arena.
3. Anclaje directo al suelo.
4. Fijación a una estructura existente (una terraza o pared por ejemplo).

Si elige por la opción 1, 2 o 3, puede encontrar estacas de anclaje en el departamento de césped y jardín o en el de productos de construcción.

Tenga cuidado cuando desplace la pérgola a su ubicación final. Se necesitan dos personas para levantar o desplazar la pérgola; siempre tenga cuidado.

SUJECIÓN DE LA PÉRGOLA

CONECTE LA PARTE POSTERIOR A LOS PANELES LATERALES

-

Garden Architecture es un departamento de LWO Corporation / PO box 17125 / Portland, Oregon / 97217
Servicio de atención al cliente 1-800-459-8718 / Fax 1-888-283-7661 / Correo electrónico: info@lwocorp.com / Sitio en Internet www.lwocorp.com

ÁREA DE TRABAJO
Seleccione un área cercana a donde colocará la pérgola. Dicha área debe ser relativamente plana, abierta y de al menos 3,05 m x 6,1 m.

SI PLANEA PINTAR:
Si desea cambiar el color del tinte o pintar su pérgola, le recomendamos que lo haga antes de ensamblarla, ya que esto facilitará el trabajo. Tenga cuidado de no cubrir las marcas guía en los gabletes.

ETAPAS PREVIAS

- HERRAMIENTAS NECESARIAS**
- Destornillador Phillips
- HERRAMIENTAS ÚTILES**
 - Destornillador eléctrico
 - Escalera de tijera
 - Abrazaderas rápidas (2)
 - Adhesivo para madera
- Diagrama de la pérgola ensamblada. Se muestran las partes numeradas: 1. Panel lateral derecho, 2. Panel lateral izquierdo, 3. Banco, 4. Panel posterior, 5. Gablete, 6. Panel superior. El diagrama ilustra la estructura completa con los paneles laterales, el banco, el panel posterior y el gablete, todo sobre el panel superior.
- PÉRGOLA ENSAMBLADA
- Aditamentos:**

 - 1. Panel lateral derecho (1)
 - 2. Panel lateral izquierdo (1)
 - 3. Banco (1)
 - 4. Panel posterior (1)
 - 5. Gablete (2)
 - 6. Panel superior (2)

A. Tornillos de 3" (4)

B. Tornillos de 2 1/2" (8)

C. Tornillos de 2" (16)

D. Tarugos de 3/8" (4)
- VERIFIQUE EL CONTENIDO EN LA CAJA
- **GARDEN**
ARCHITECTURE

INSTRUCCIONES DE ENSAMBLAJE

Pérgola de verano Haven

LEA LAS INSTRUCCIONES COMPLETAMENTE ANTES DE COMENZAR A ENSAMBLAR

SH