


# WYNDHAM


- Prior to installation please check received items against the "Packing List".
  Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.

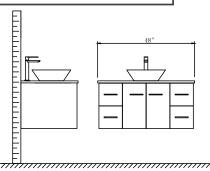


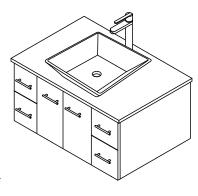


### PACKING LIST










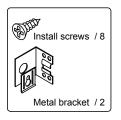



### INSTALLATION AND ADJUSTMENT OF HINGES











# REQUIRED TOOLS NOT IN BOX















Tape Measure

Pencil


Electric Drill Phillips Screwdriver


Adjustable Wrench

Spirit Level


Silicone sealant


## INSTALLATION INSTRUCTIONS




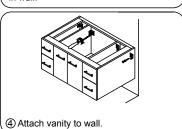



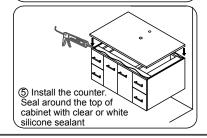

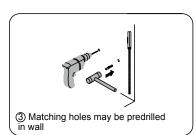

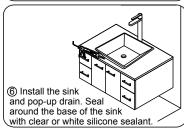

WC-WHEOO9-48 Overmount Installation Guide