


RISE AND SHINE™ TOILET SEAT

MODELS 5322.011, 5324.019

Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly—please read these instructions carefully before you begin.


Toilet Seat

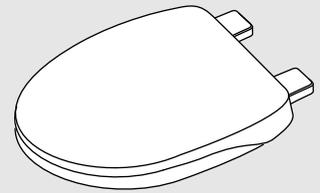

Pat. Pending
Complies with ANSI Z124.5


760028-100 Rev. A

1

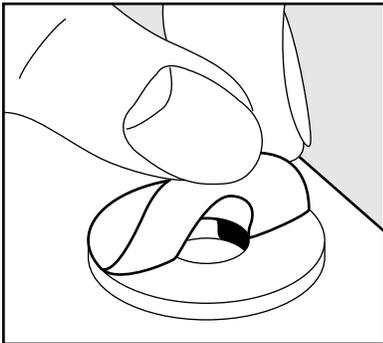


Remove the paper backing from one side of the washer.

2

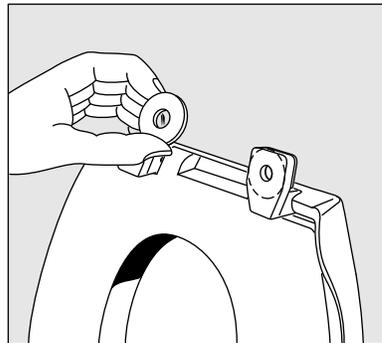


Attach washer to bottom of hinge. Remove paper backing.

3

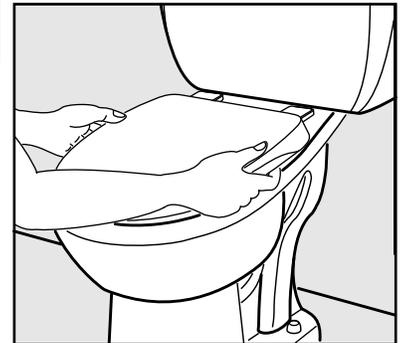


Place seat on bowl while carefully aligning seat with bowl.

4

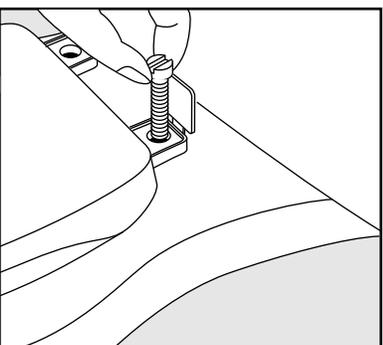


Insert bolts in hinges.

5

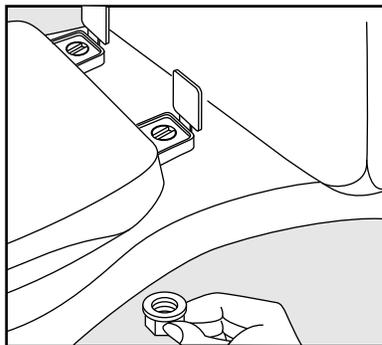


Attach the nut from below.

6

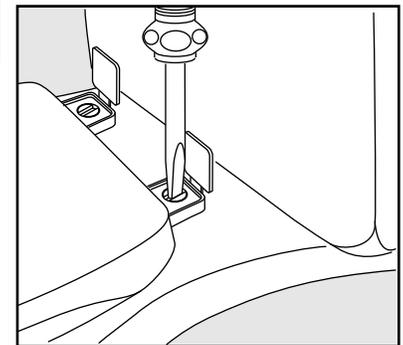

Use a screwdriver to tighten bolt.

7

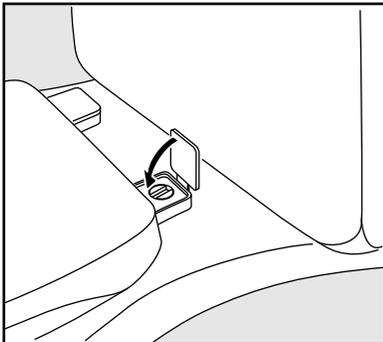

Close the hinge covers.

8

After installation, check the tightness of the bolts to ensure a tight fit.