

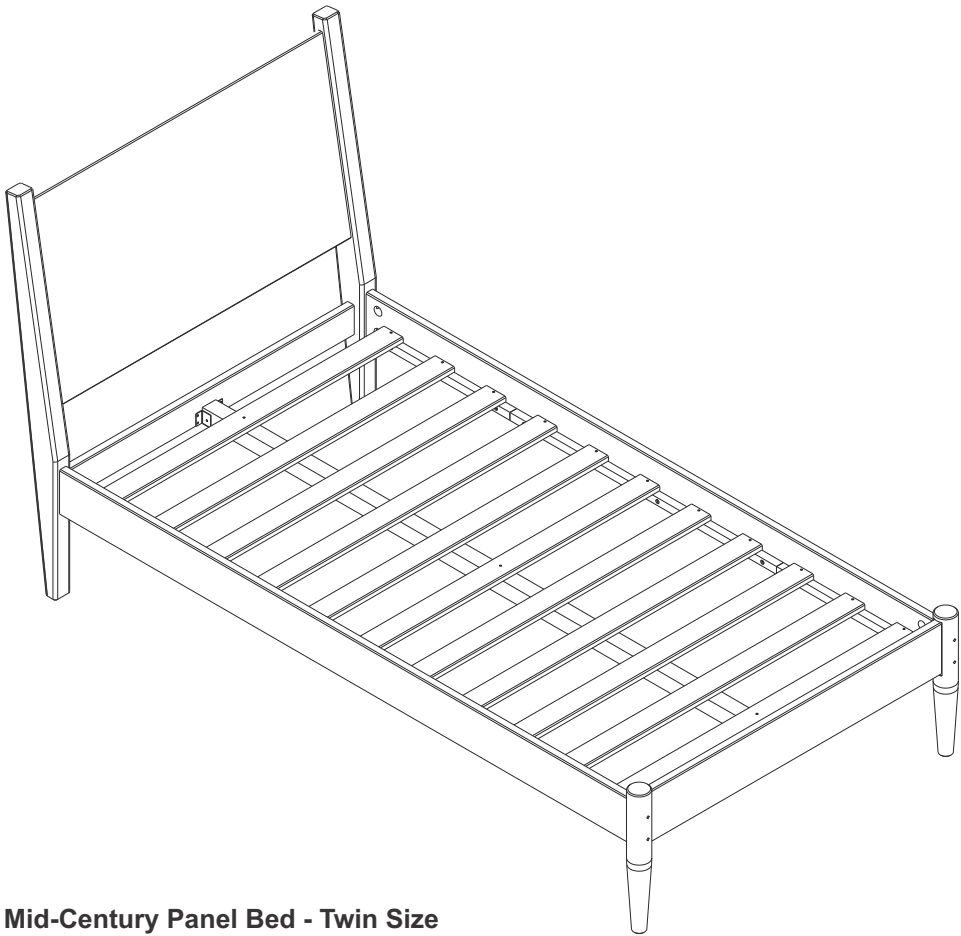
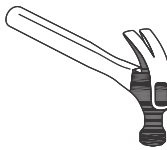


ASSEMBLY INSTRUCTIONS

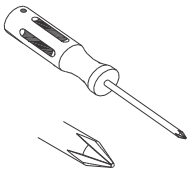


Mid-Century Panel Bed - Twin Size

01:00 Hs

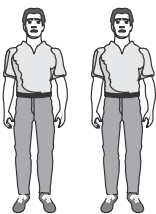

HARDWARE INCLUDED




A - 10,0x50 Wood Dowel
Qty. 20



B - 4,0x40 Screw
Qty. 16




C - 3,5x16 Screw
Qty. 12




D - 3,5x30 Screw
Qty. 25




E -Screw Nut
Qty. 08




F - Allen Key
Qty. 01



H - 1/4x100 Screw
Qty. 08



**J - Bed Frame
Separator 104mm**
Qty. 02

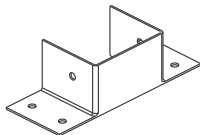


K -Support Bar
Qty. 02




**L - Wood Hole
Cover - Qty. 04**

PARTS INCLUDED

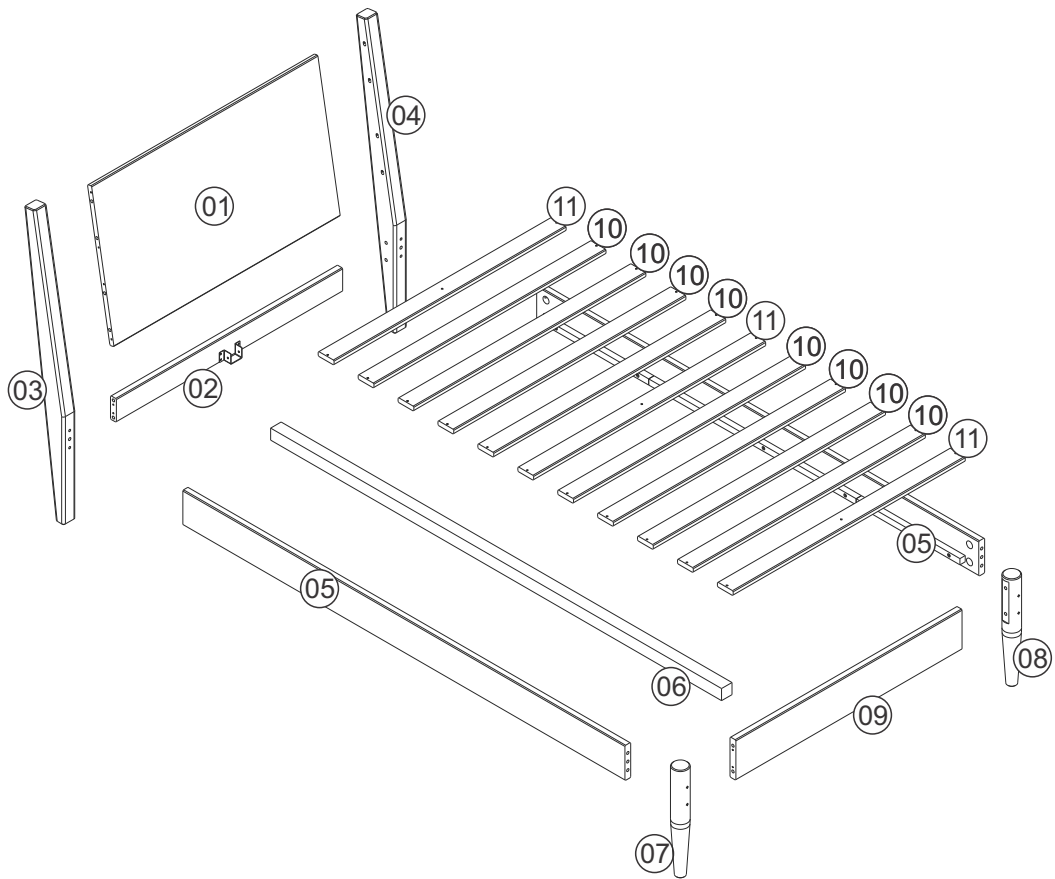


STEP 1

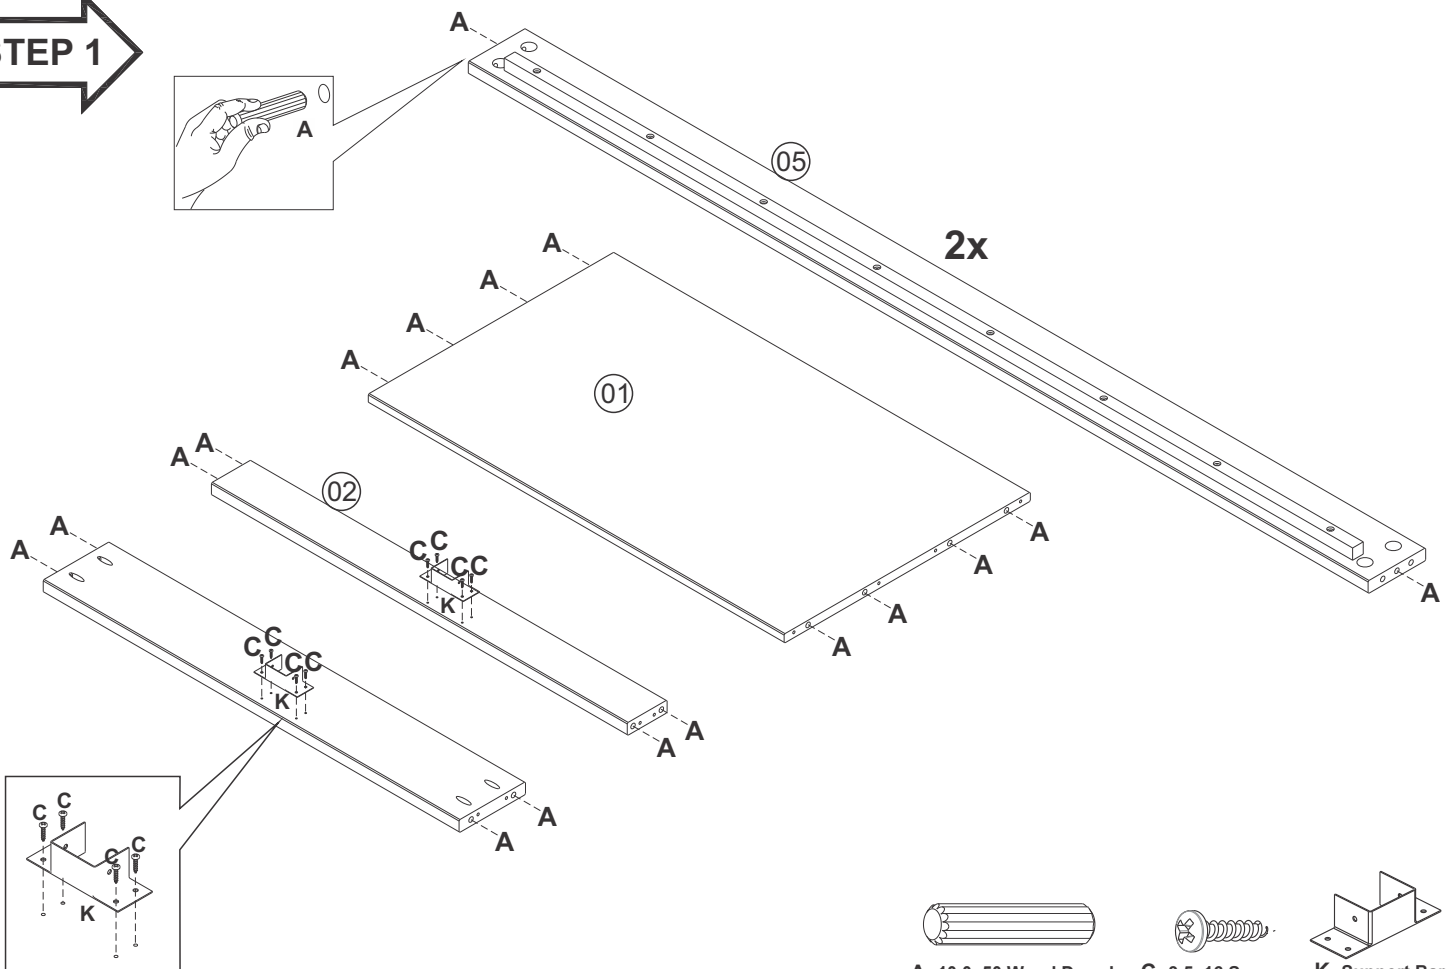

A -10,0x50 Wood Dowel
Qty. 20



C -3,5x16 Screw
Qty. 8



K -Support Bar
Qty. 02

STEP 2



B -4,0x40 Screw
Qty. 16


STEP 3



H -1/4x100 Screw
Qty. 04




E -Screw Nut
Qty. 04




F -Allen Key
Qty. 01


STEP 4

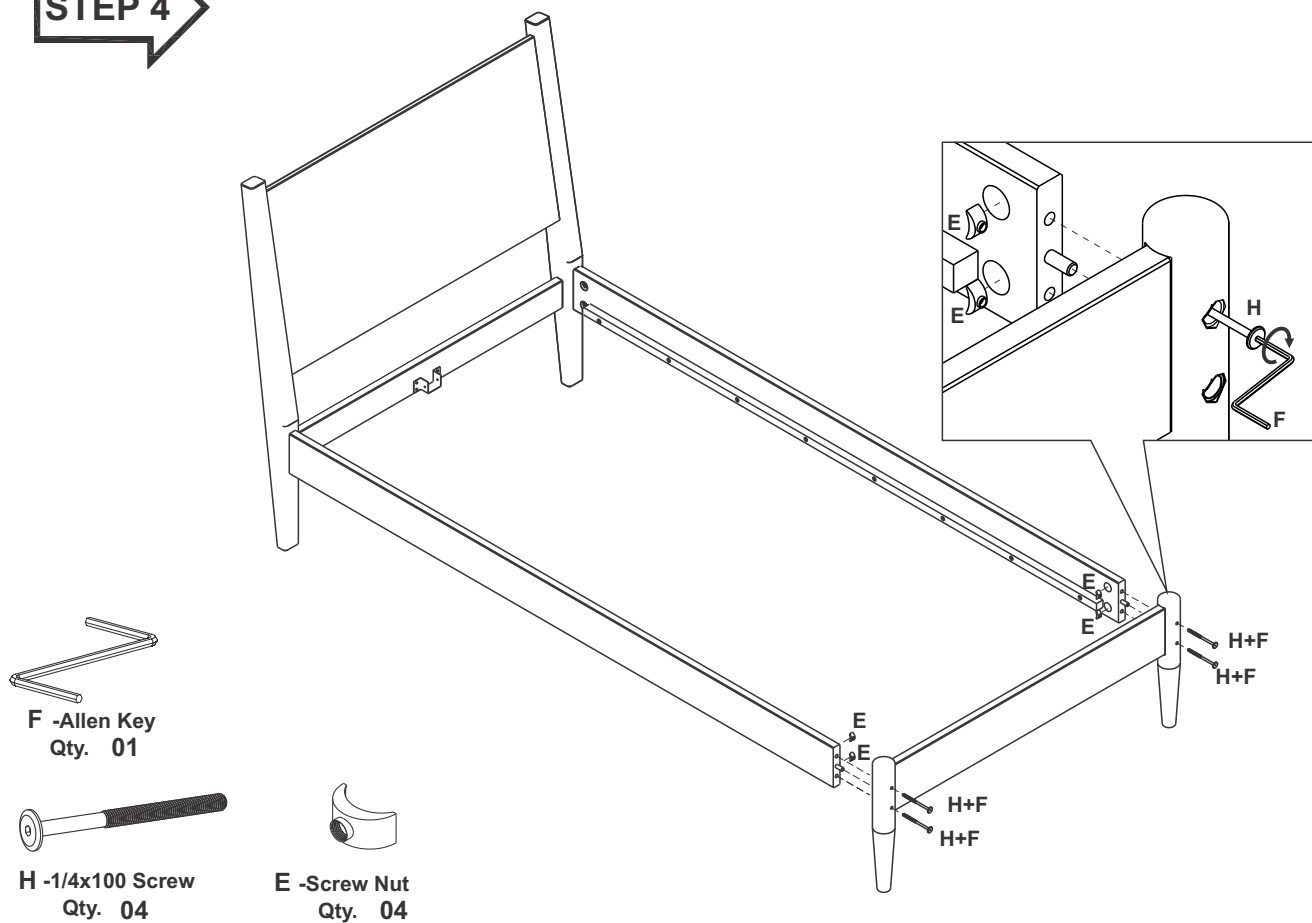


STEP 5

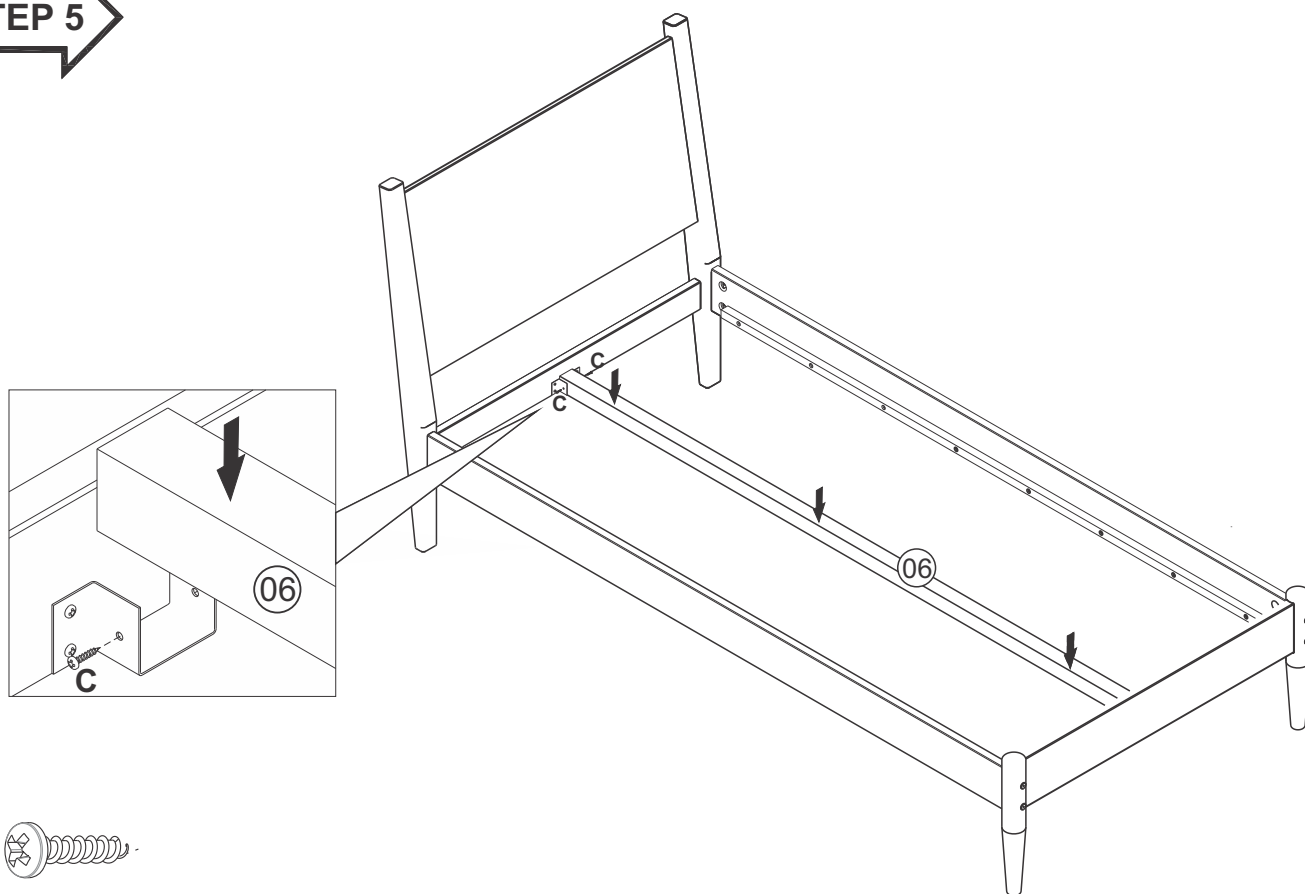

STEP 6

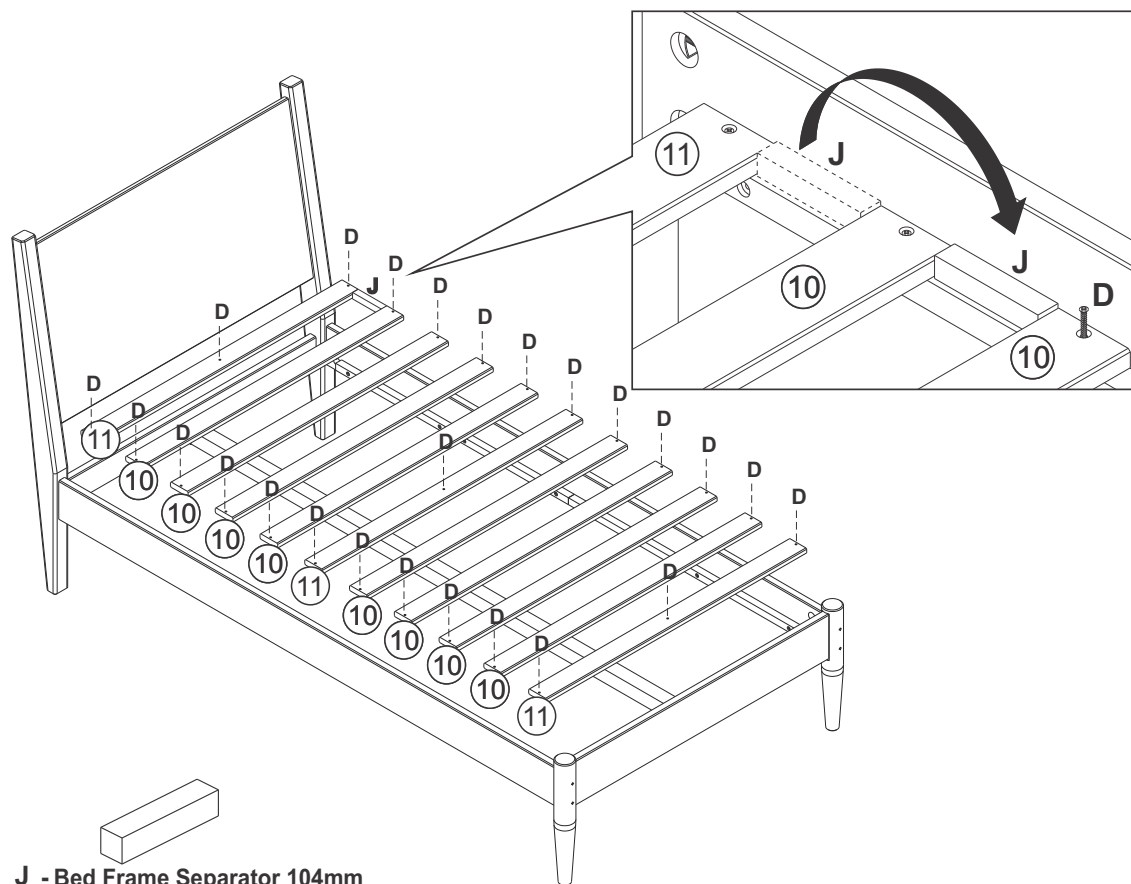


D -3,5x30 Screw
Qty. 25



J - Bed Frame Separator 104mm
Qty. 02

STEP 7

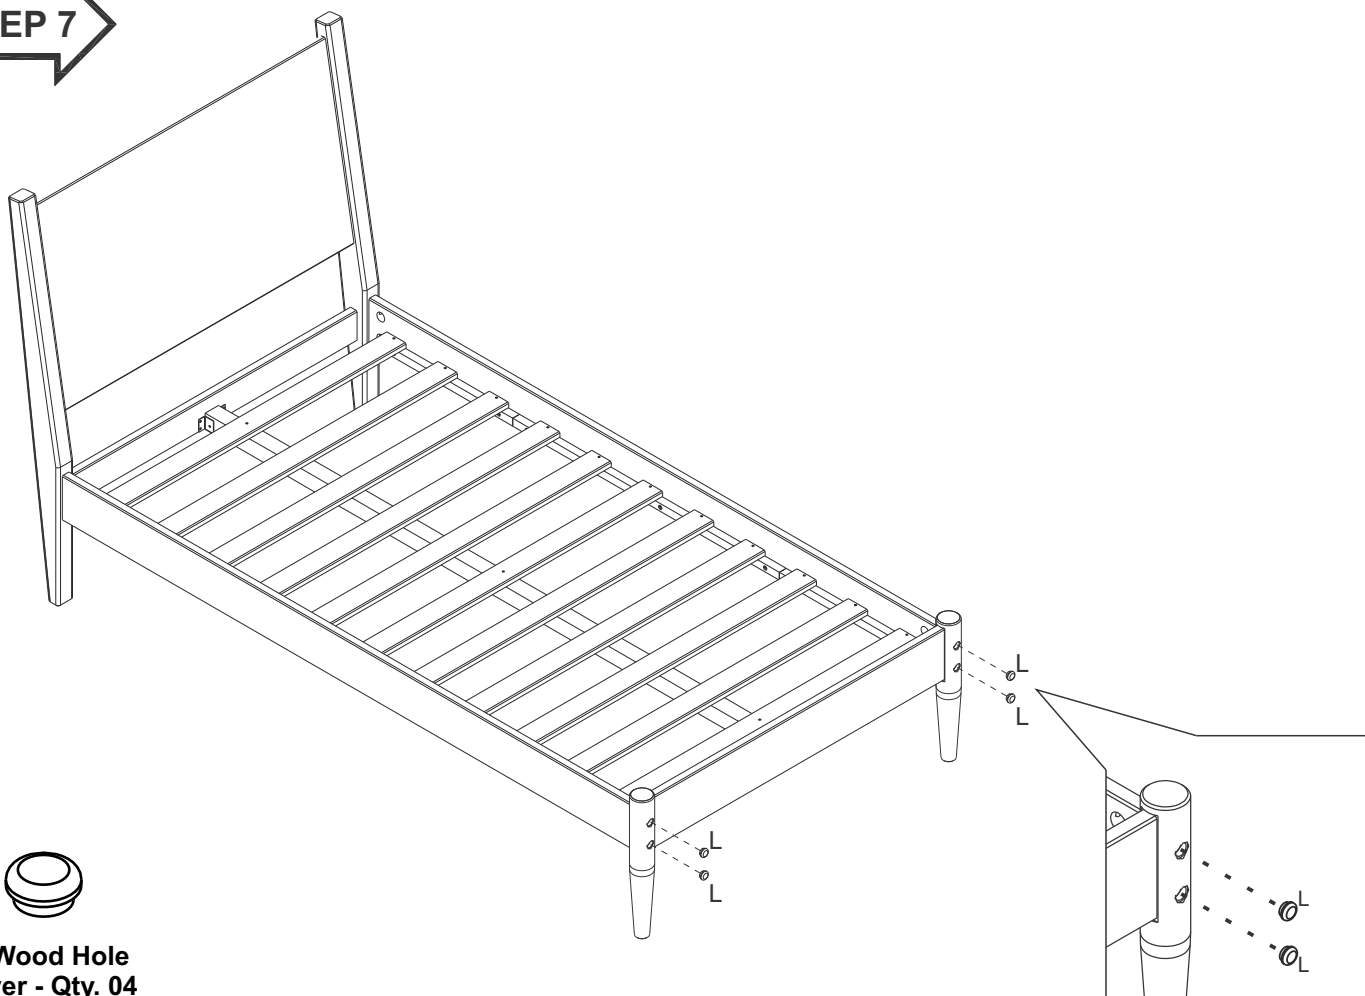

L - Wood Hole
Cover - Qty. 04