

DA0680

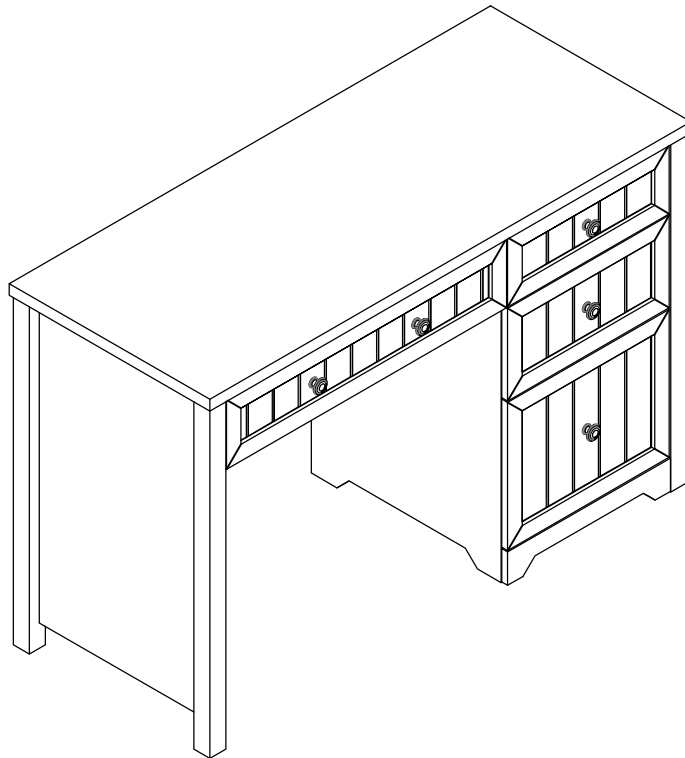


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

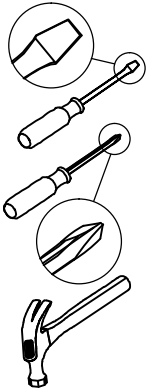

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

Not actual size

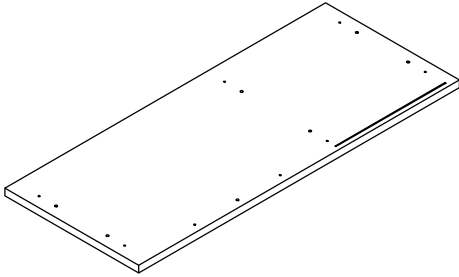


①

DESK TOP

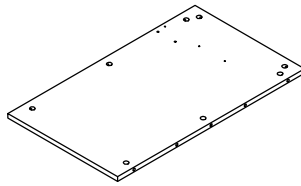


②

LEFT SIDE PANEL

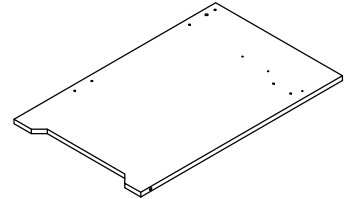


③

PARTITION PANEL

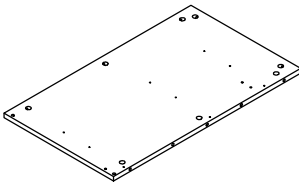


④

RIGHT SIDE PANEL

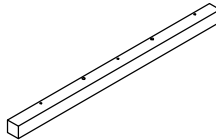


⑤

LEG

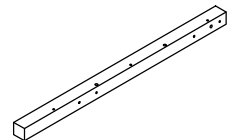


⑥

LEG

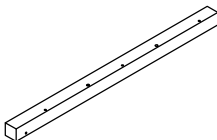


⑦

LEG

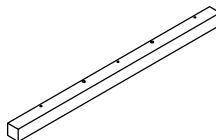

⑧

LEG

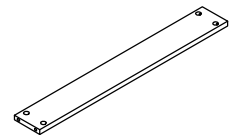


⑨

FRONT SLAT
Qty:2


Board Identification

Not actual size

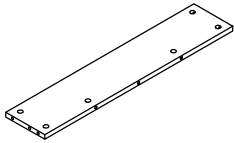


⑩

BACK SLAT




⑪

FRONT SLAT




⑫

BOTTOM FRONT RAIL




⑬

FRONT SLAT




⑭

BACK SLAT

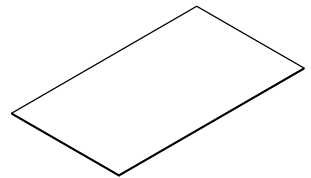


⑮

BACK PANEL

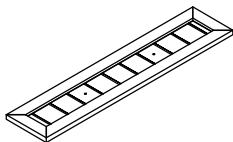


⑯

DRAWER FRONT PANEL



⑰

DRAWER FRONT PANEL




⑱

DRAWER FRONT PANEL


Board Identification

Not actual size

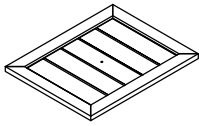


19

DRAWER FRONT PANEL




20

DRAWER LEFT SIDE PANEL
Qty:2




21

DRAWER RIGHT SIDE PANEL
Qty:2




22

DRAWER LEFT SIDE PANEL




23

DRAWER RIGHT SIDE PANEL




24

DRAWER LEFT SIDE PANEL




25

DRAWER RIGHT SIDE PANEL

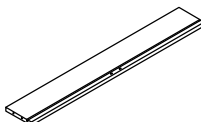

26

DRAWER BACK PANEL




27

DRAWER BACK PANEL


Board Identification

Not actual size




28

DRAWER BACK PANEL




29

DRAWER BACK PANEL




30

DRAWER BOTTOM SLAT

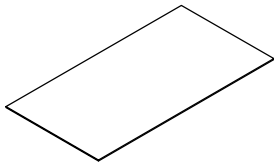

31

DRAWER BOTTOM PANEL




32











DRAWER BOTTOM PANEL
Qty:3

Board Identification

Not actual size

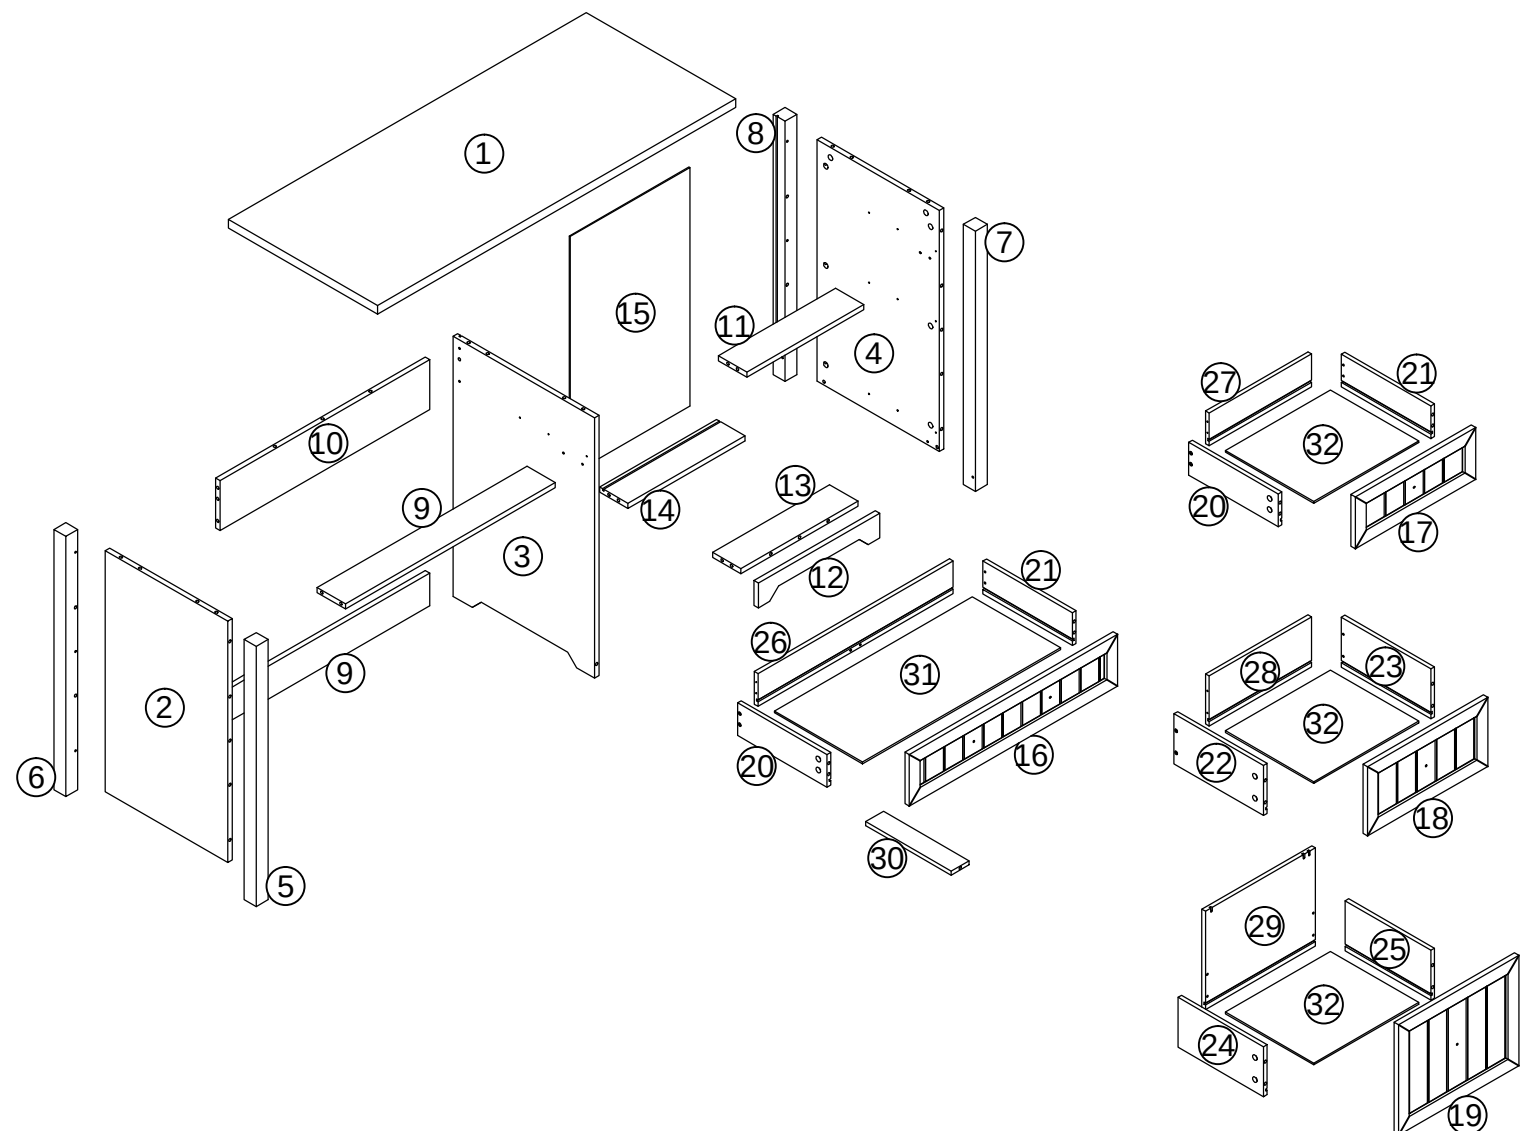


Part List

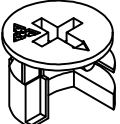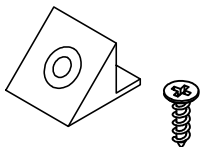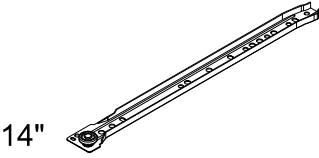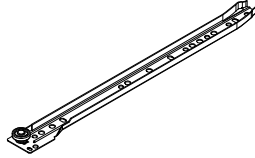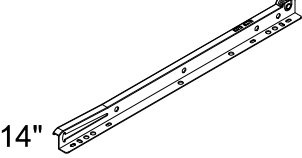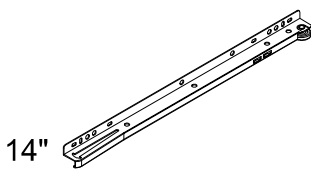 Ø15X9mm (A) X60 CAM LOCK spare: 3	 ø6.5X35mm (B) X60 CAM BOLT spare: 3	 ø8X30mm (C) X23 WOOD DOWEL spare: 2	 ø4X35mm (D) X18 SCREW spare: 2
 Ø3.5X14mm (E) X48 SCREW spare: 5	 Ø5x346 (F) X1set SCREW spare: 1	 (G) X6 SCREW spare: 1	 (H) X5 HANDLE
 Ø4X6mm (I) X5 SCREW spare: 1	 14" J-CL X4 LEFT CABINET MEMBER	 14" J-CR X4 RIGHT CABINET MEMBER	 14" J-DL X4 LEFT DRAWER RUNNER
 14" J-DR X4 RIGHT DRAWER RUNNER	 38x38 (K) X4 PERFECT spare: 1	 Ø20mm (L) X20 SCAM LOCK COVER spare: 1	



Part List

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

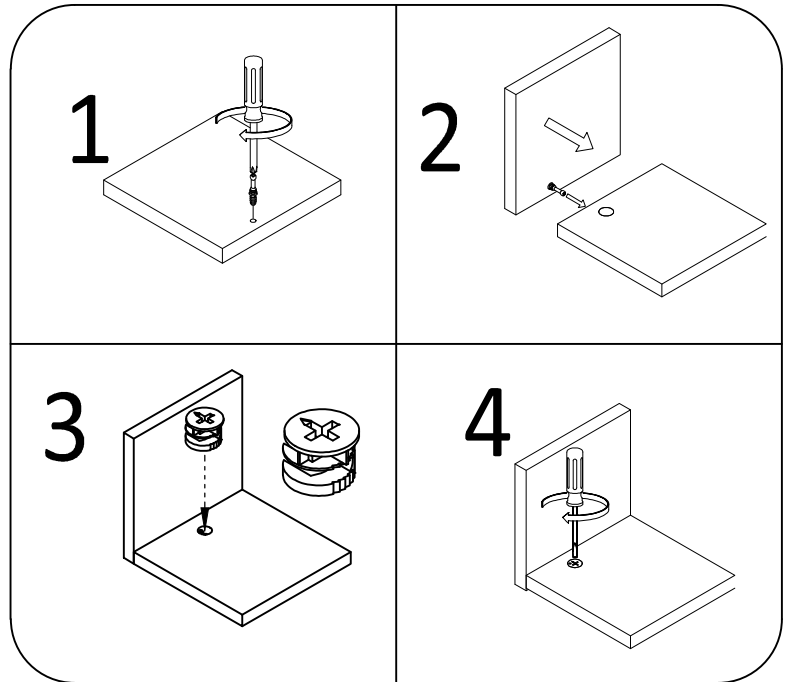



STEP1

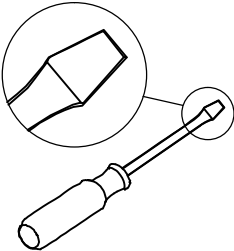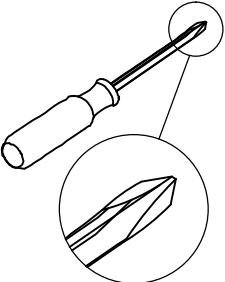



	
Ø15X9mm	
(A)	X5

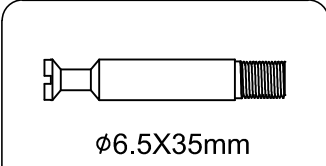	
Ø6.5X35mm	
(B)	X5


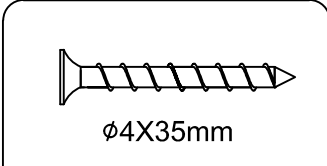
	
Ø4X35mm	
(D)	X6


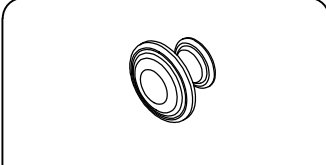
	
(H)	X2


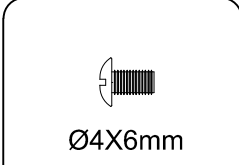
	
Ø4X6mm	
(I)	X2

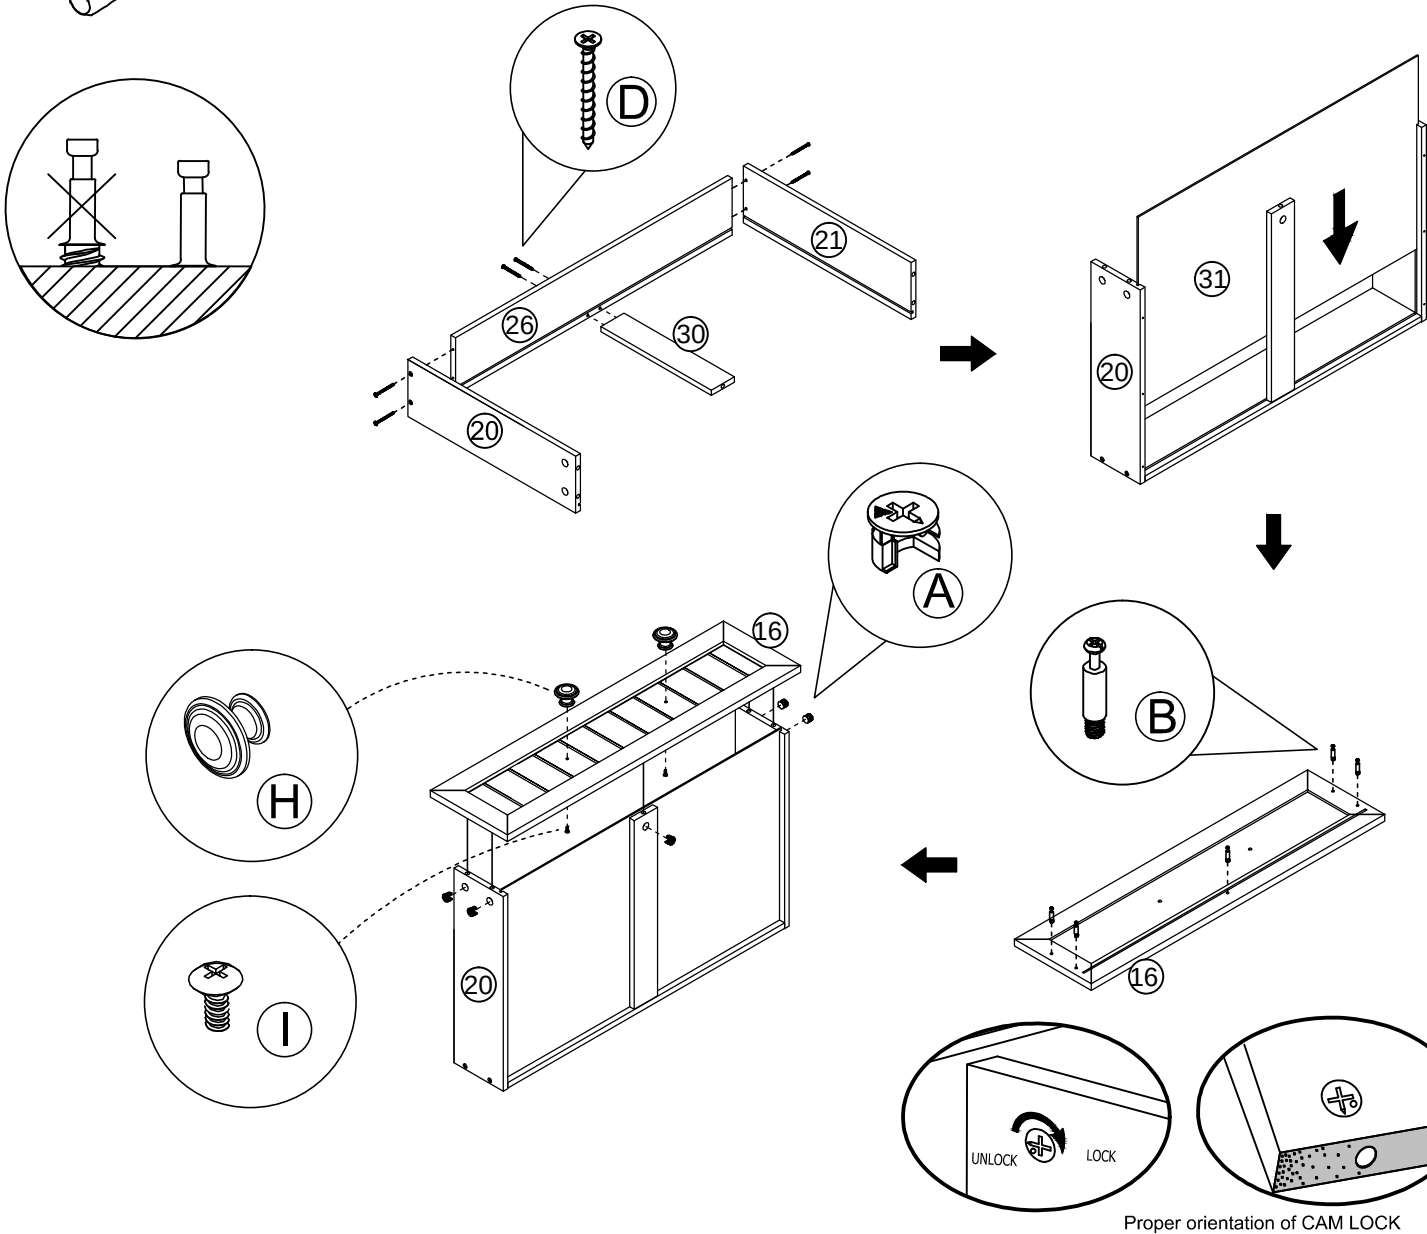


STEP2

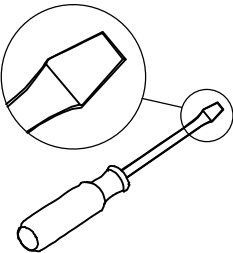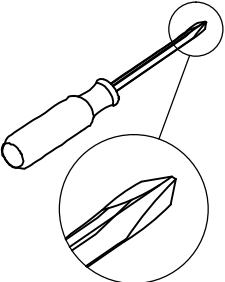

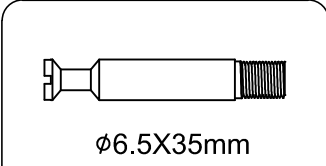
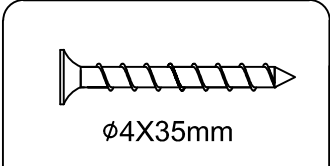
					
Ø15X9mm		ø6.5X35mm		ø4X35mm	
(A)	X4	(B)	X4	(D)	X4

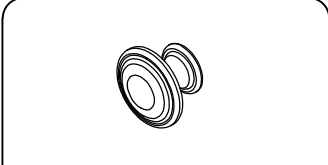
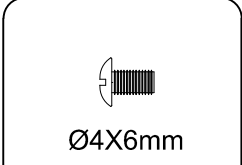
			
(H)		X1	
(I)		X1	

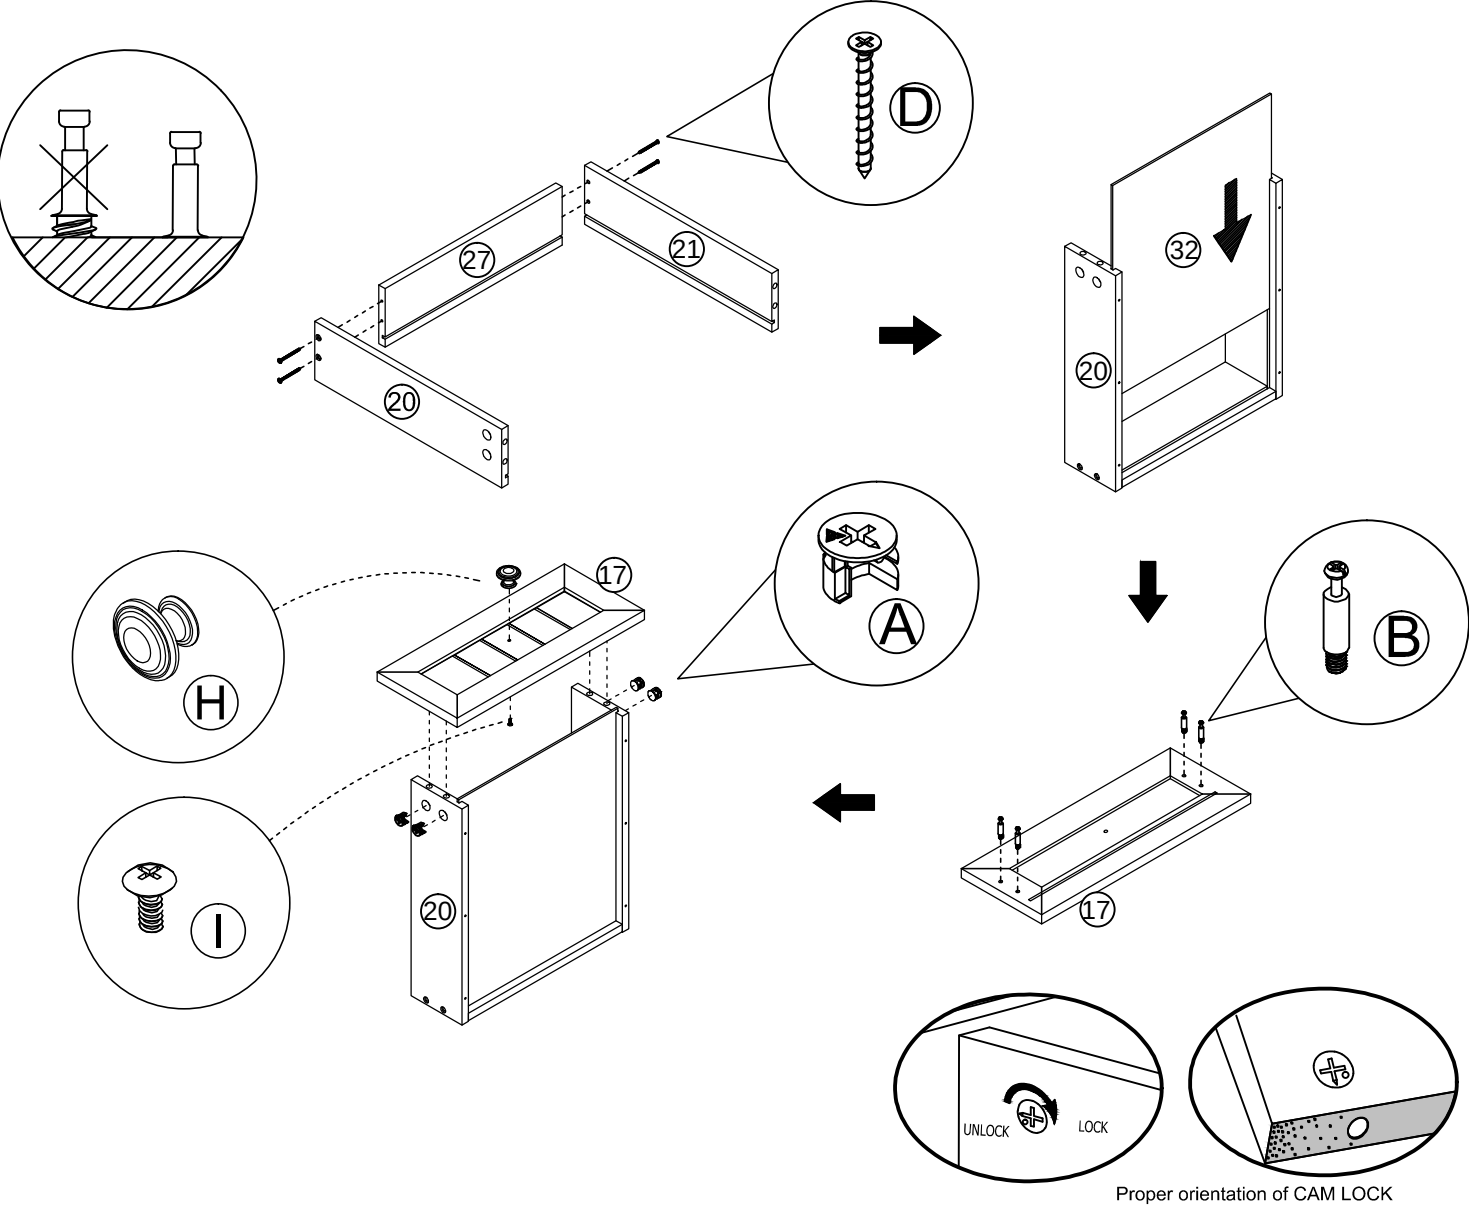


Proper orientation of CAM LOCK


STEP3

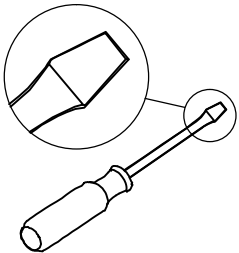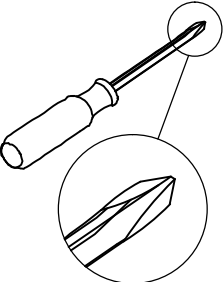



 Ø15X9mm	(A) X4
 ø6.5X35mm	(B) X4
 ø4X35mm	(D) X4
	(H) X1
 Ø4X6mm	(I) X1

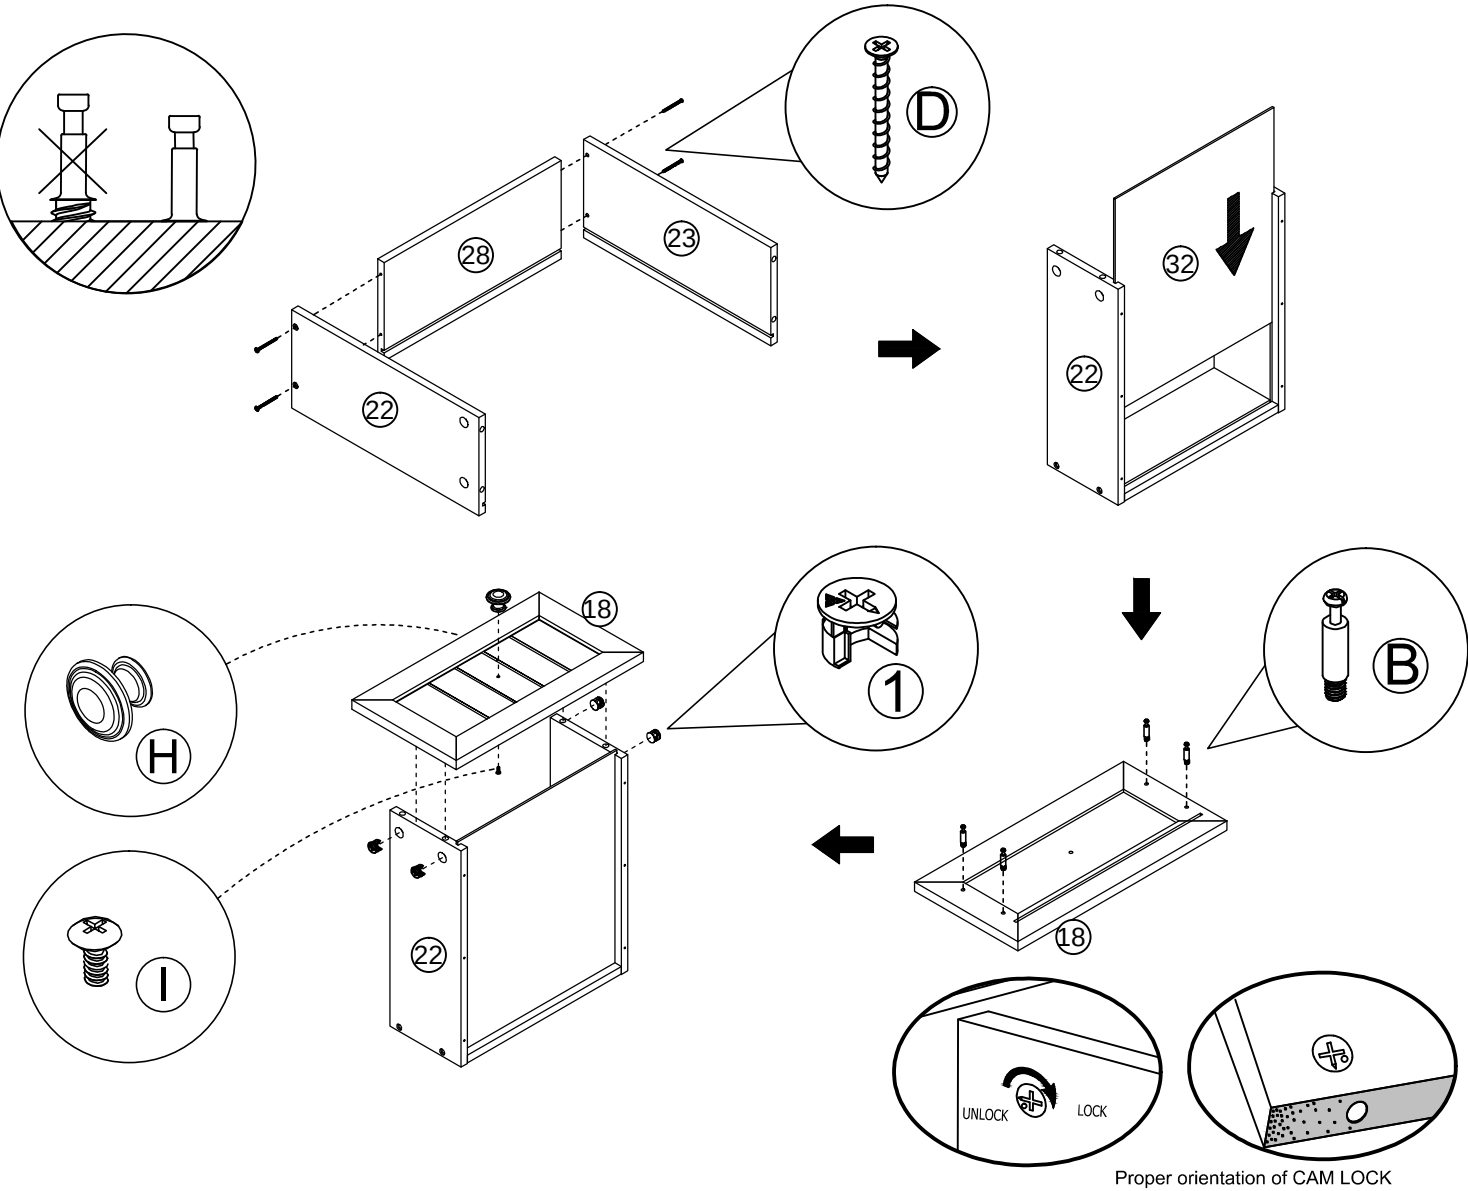



STEP5

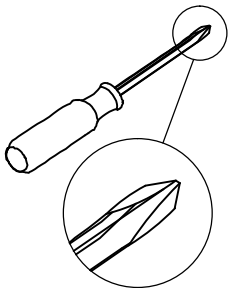


 Ø3.5X14mm	
(E)	X12

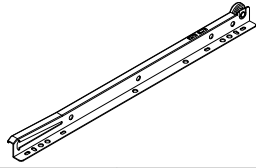
 14"	
J-DL	X2

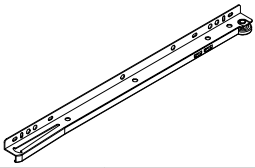
 14"	
J-DR	X2

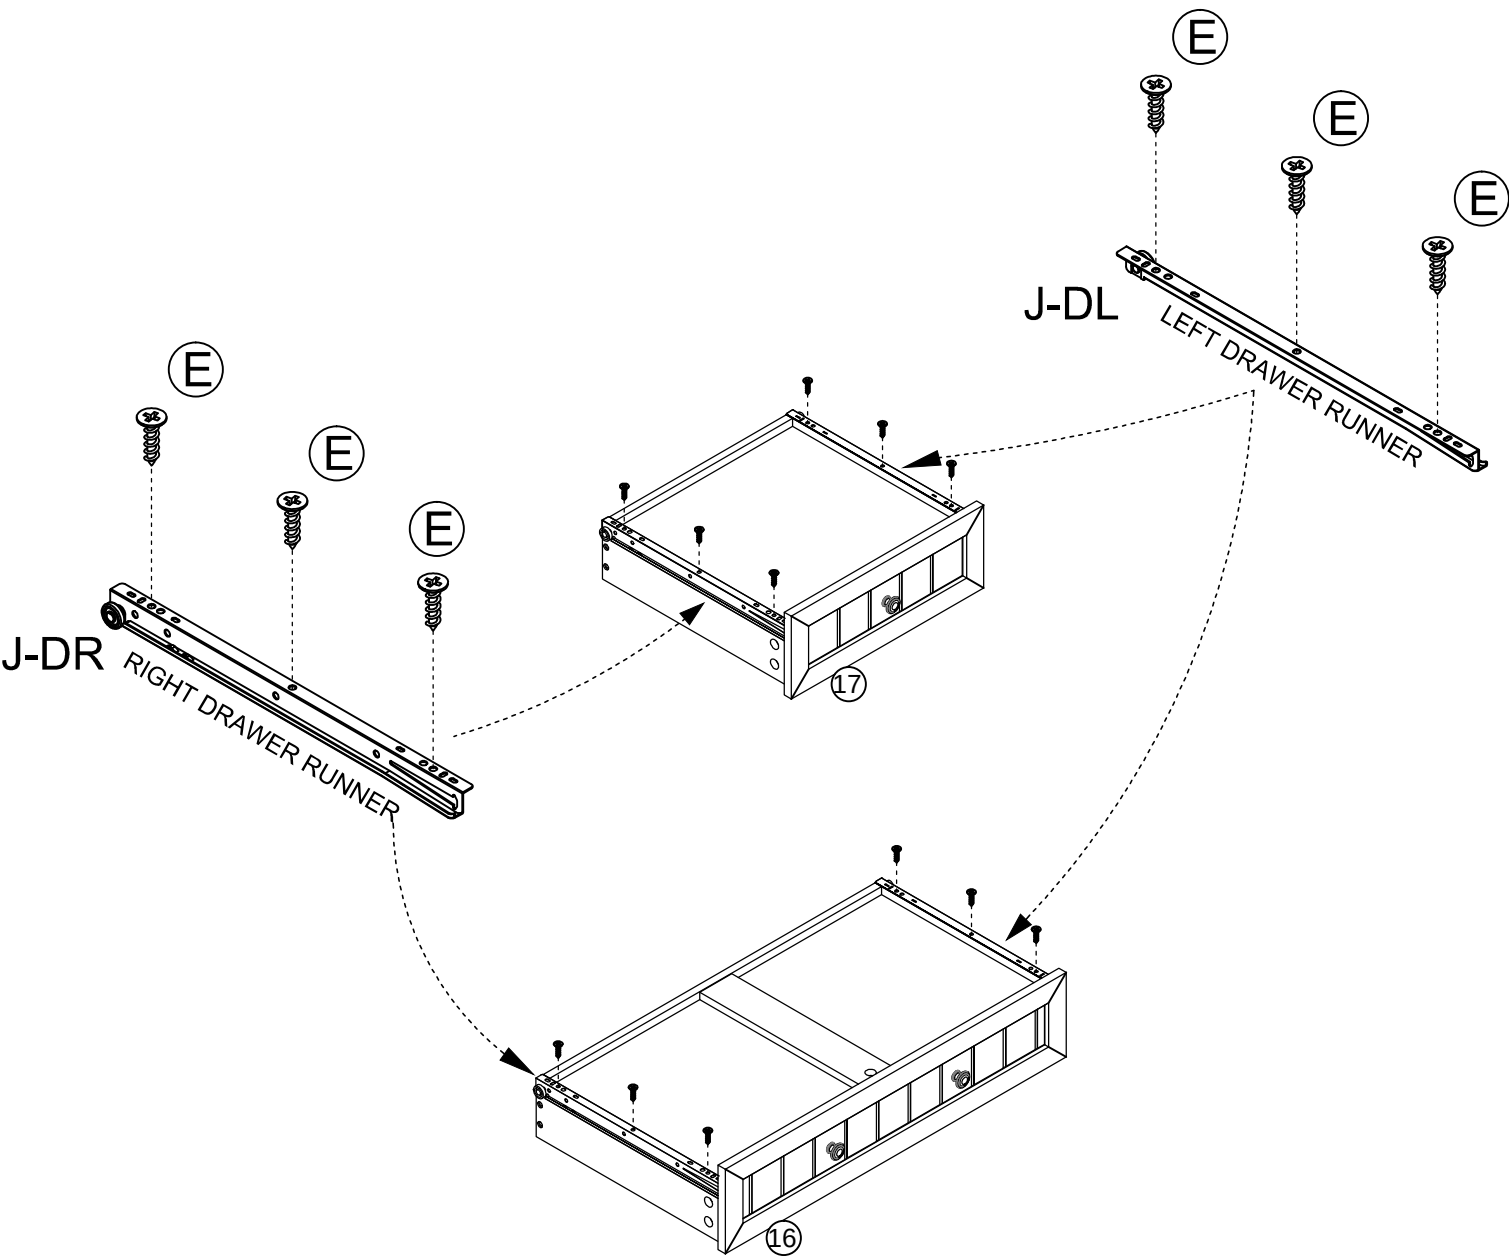



STEP6

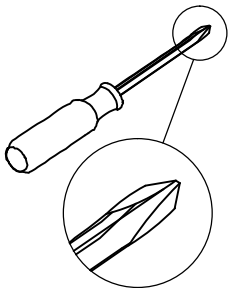













 Ø3.5X14mm	
(E)	X12

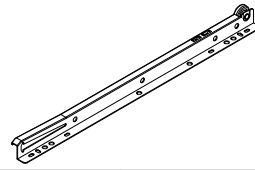 14"	
J-DL	X2









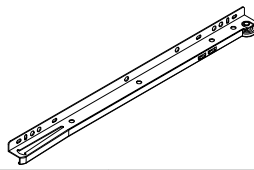
 14"	
J-DR	X2

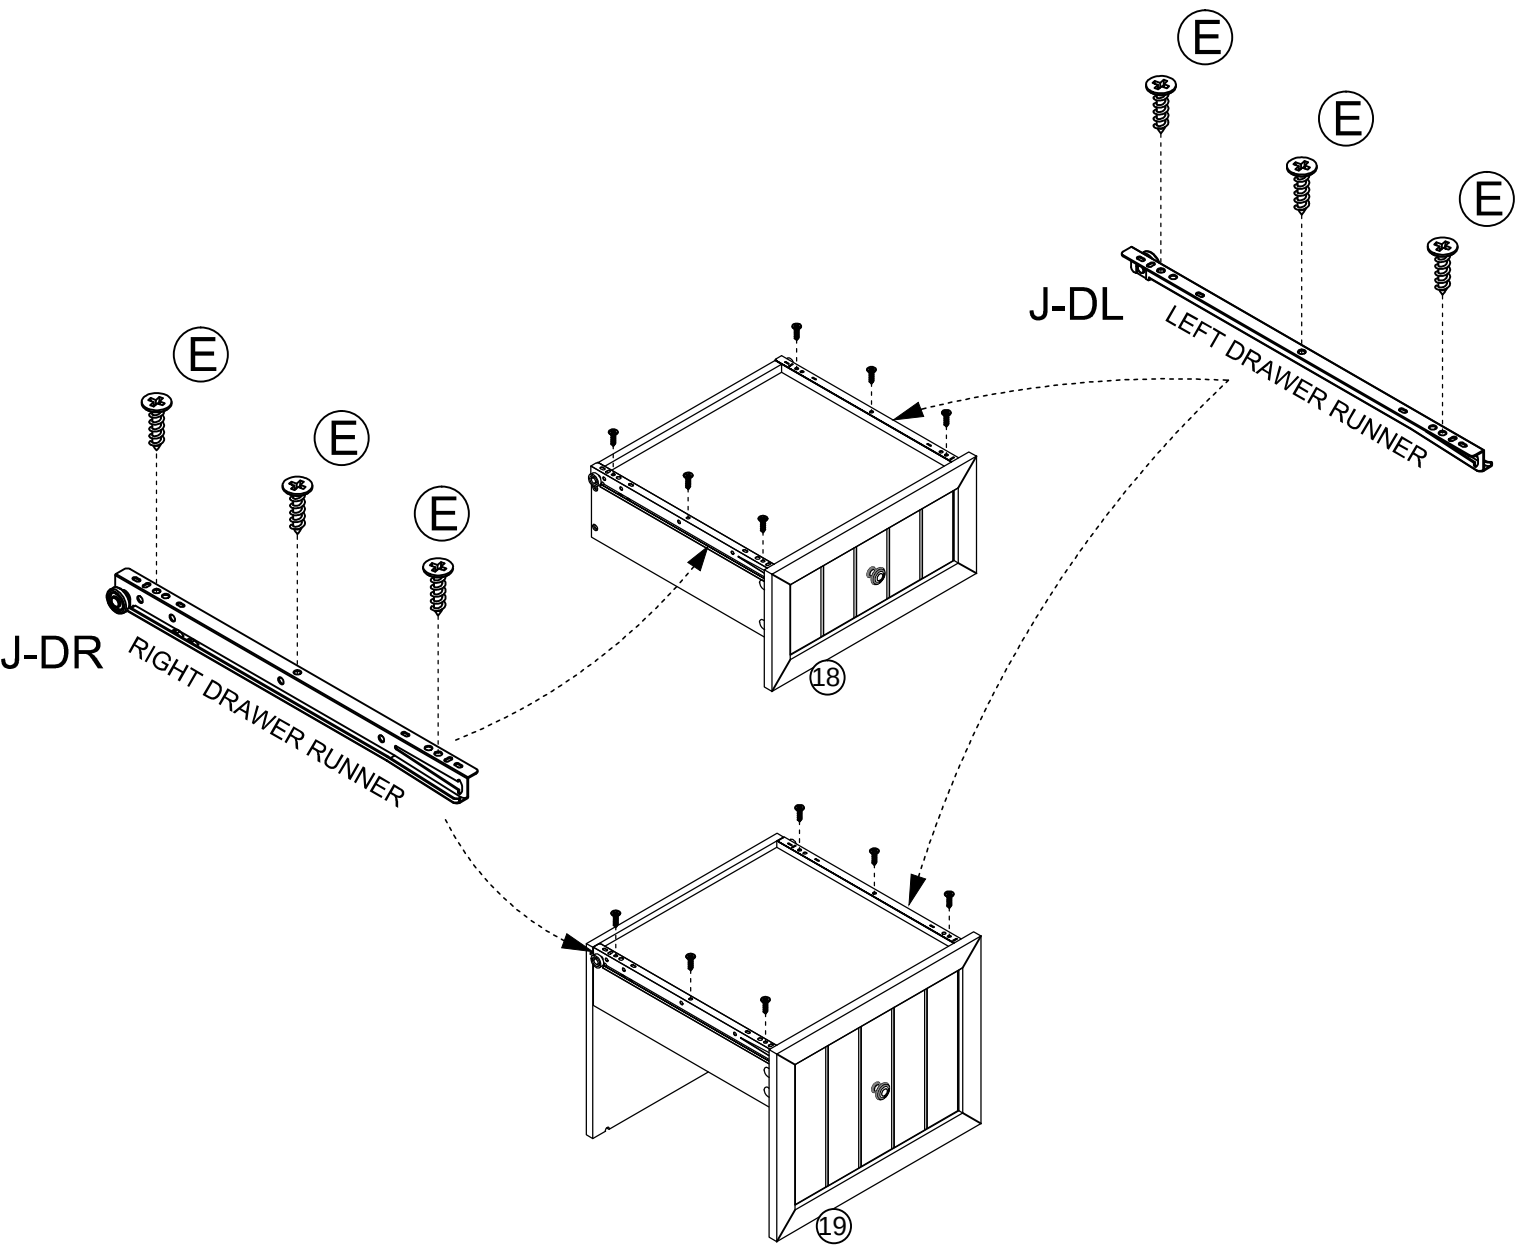

STEP7

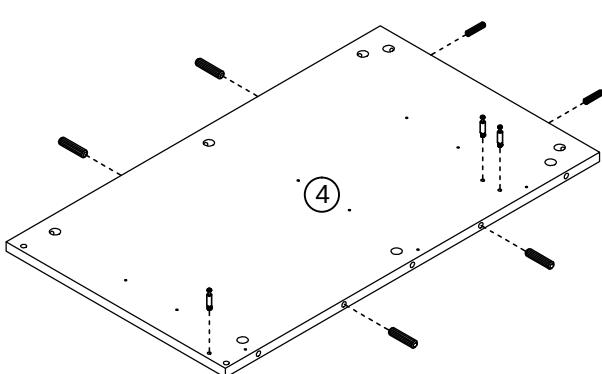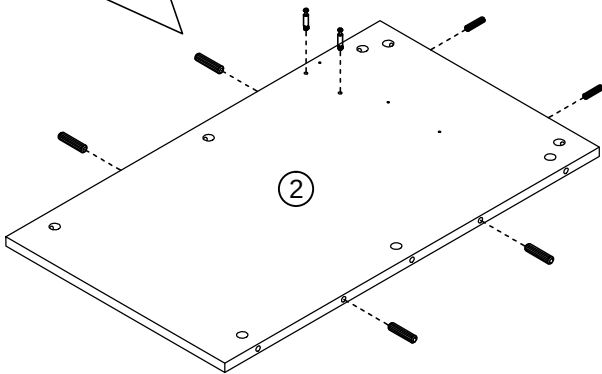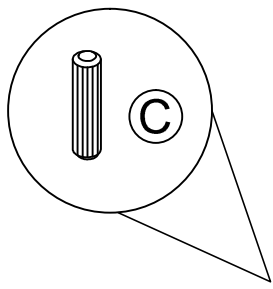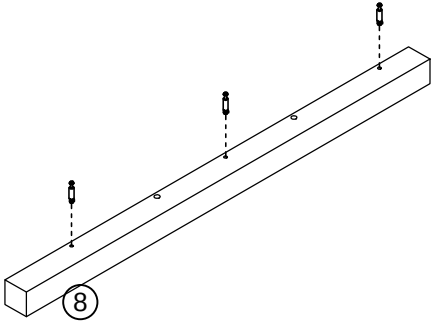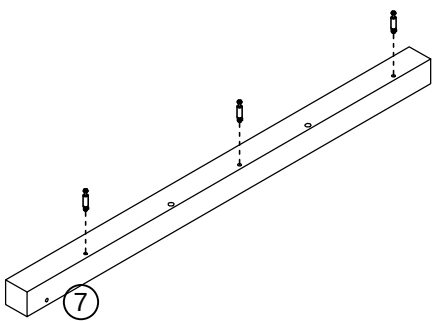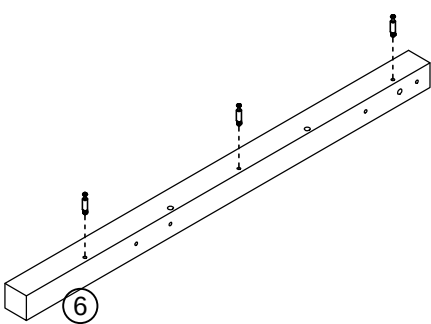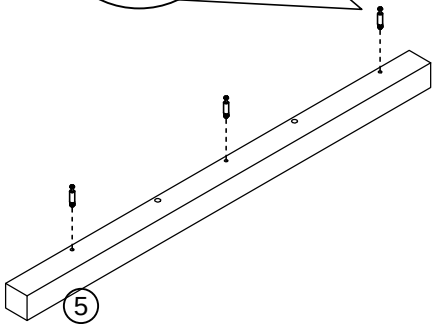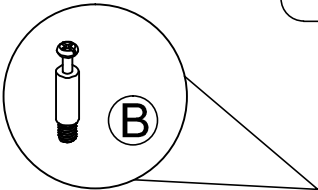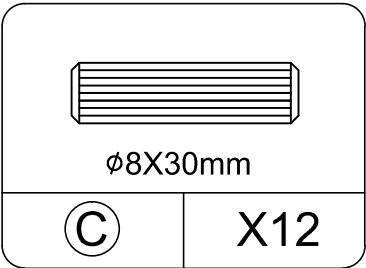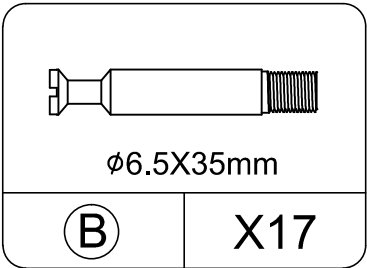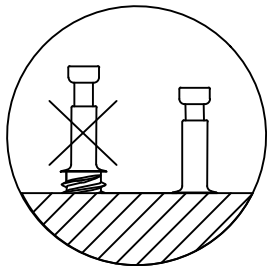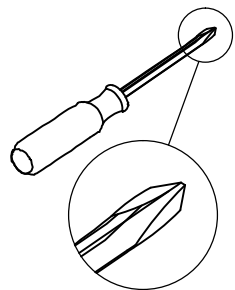


STEP8

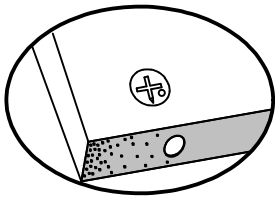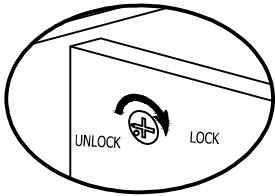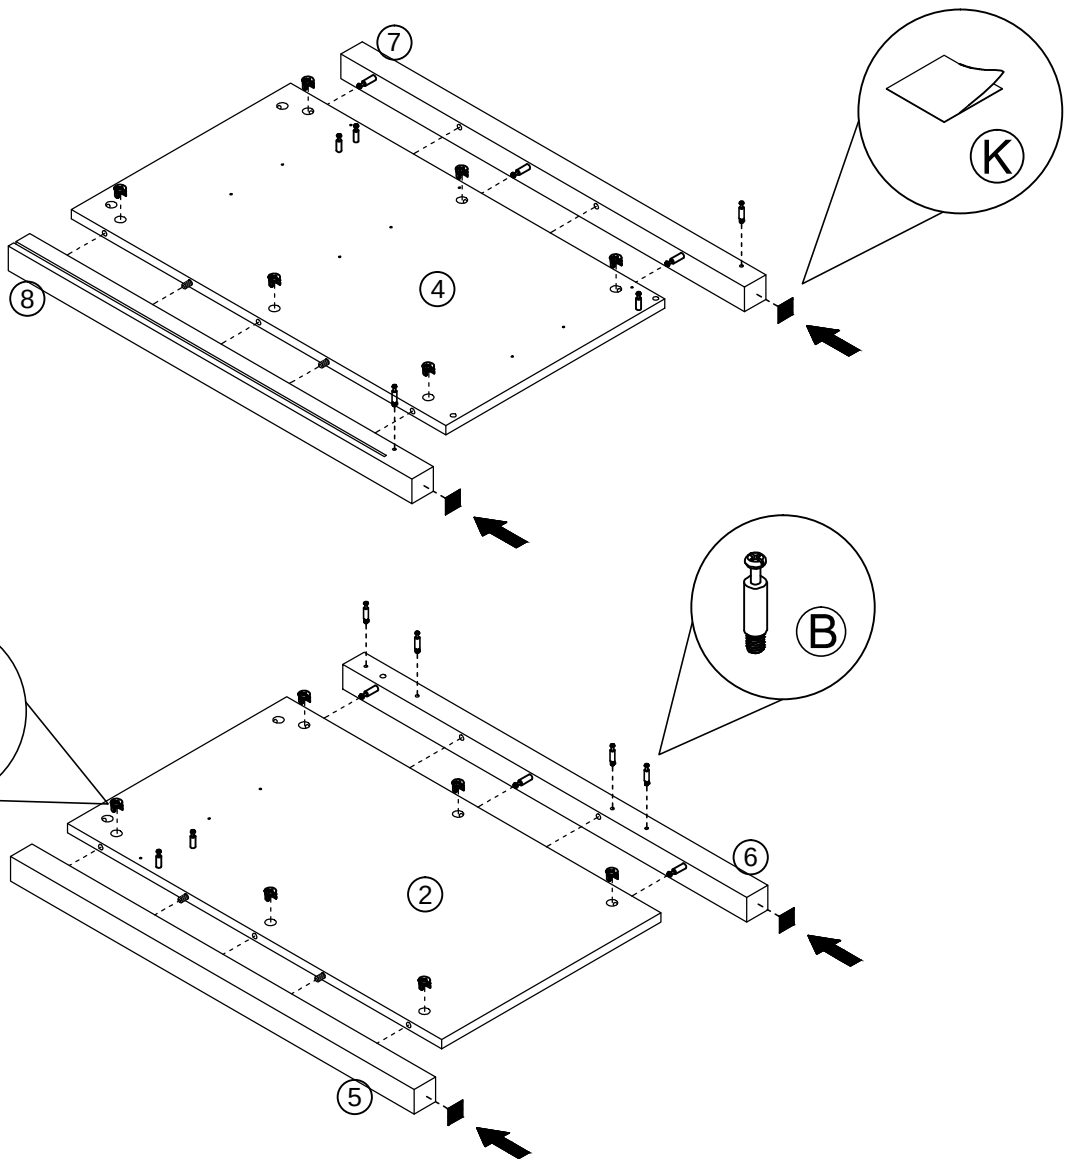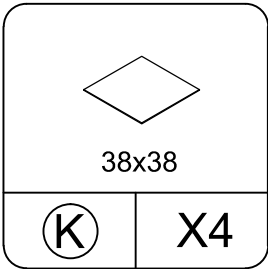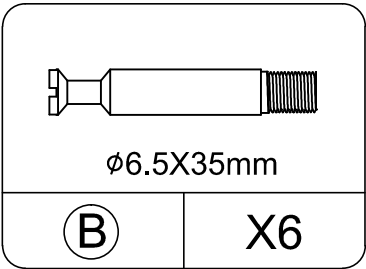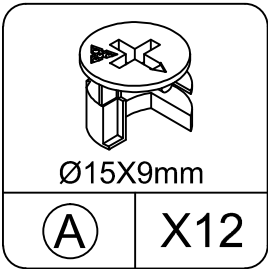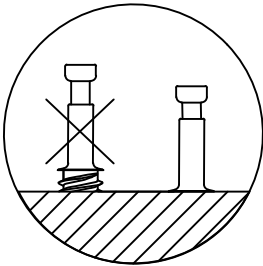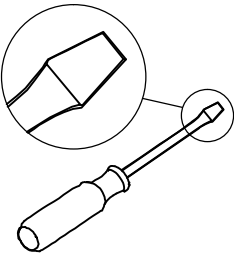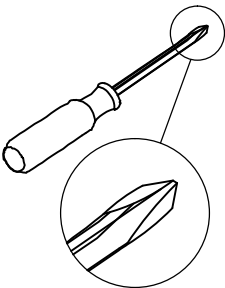


Proper orientation of CAM LOCK

STEP9

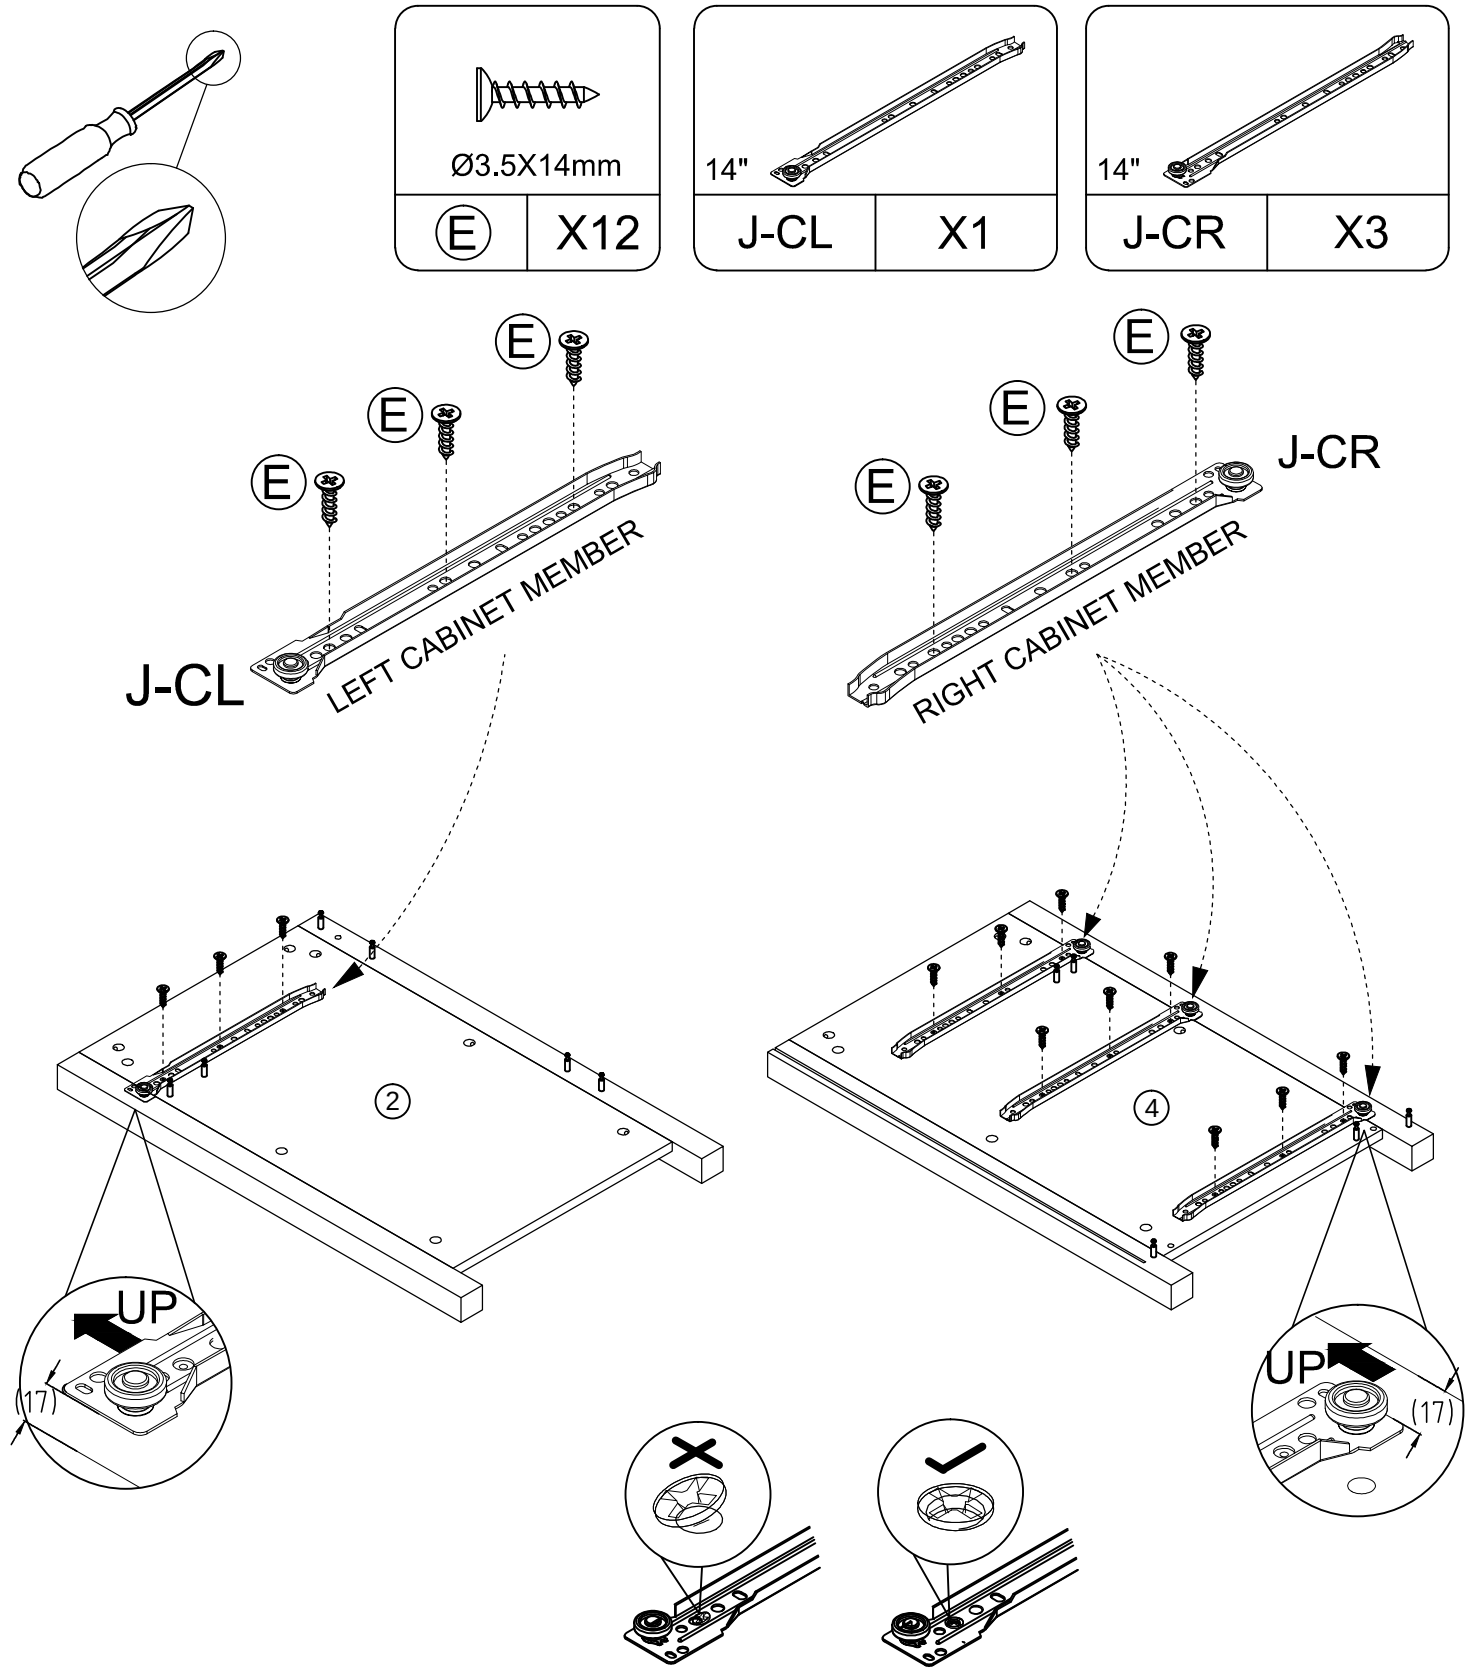






Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.

STEP10

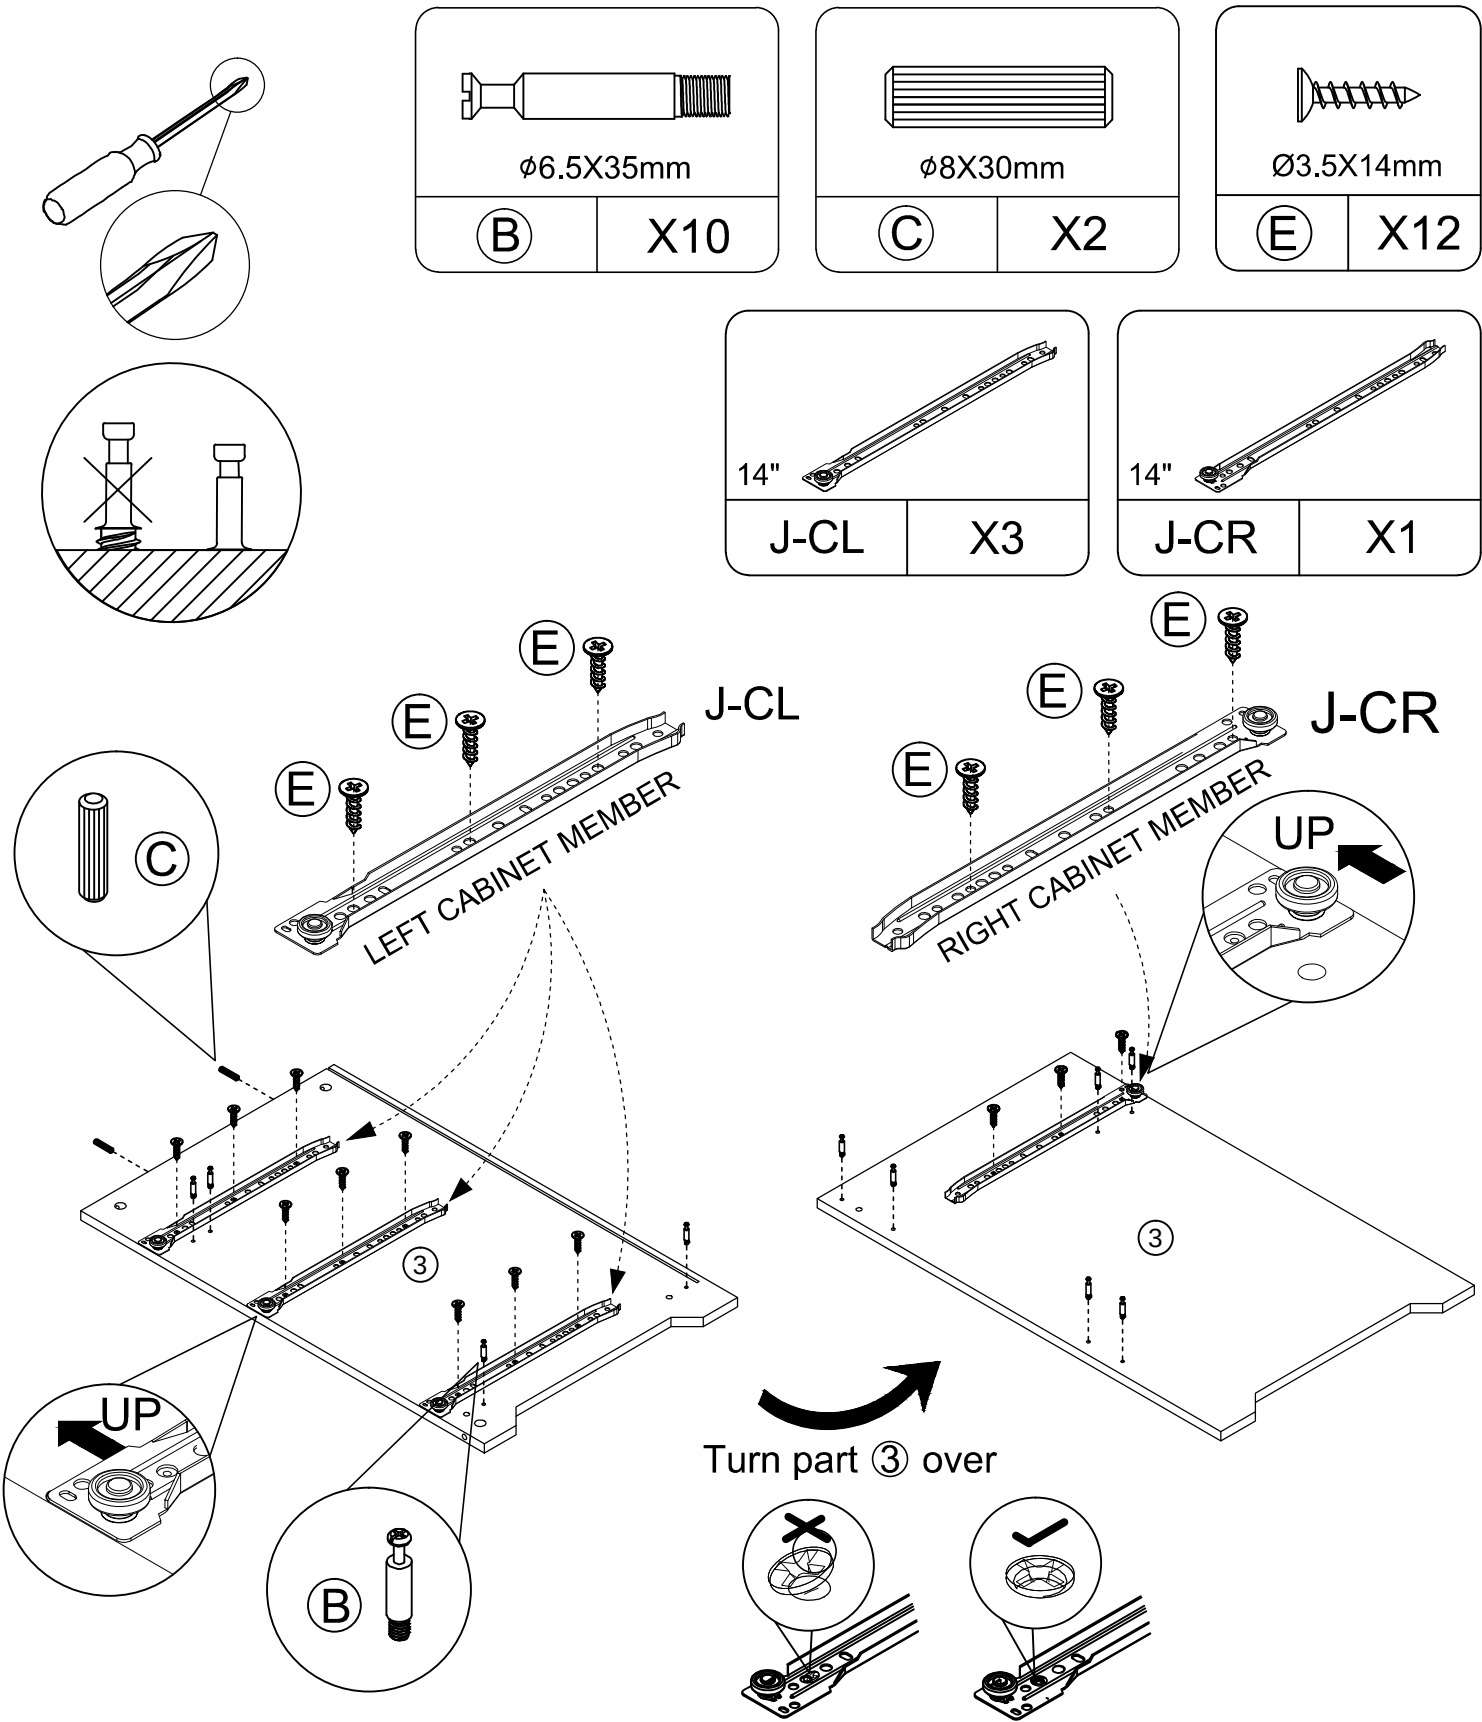





Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.

STEP11

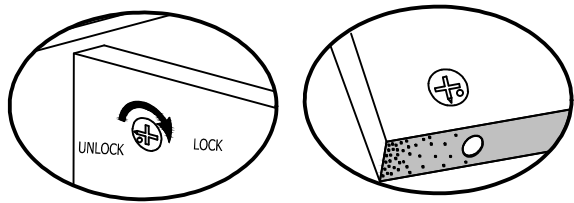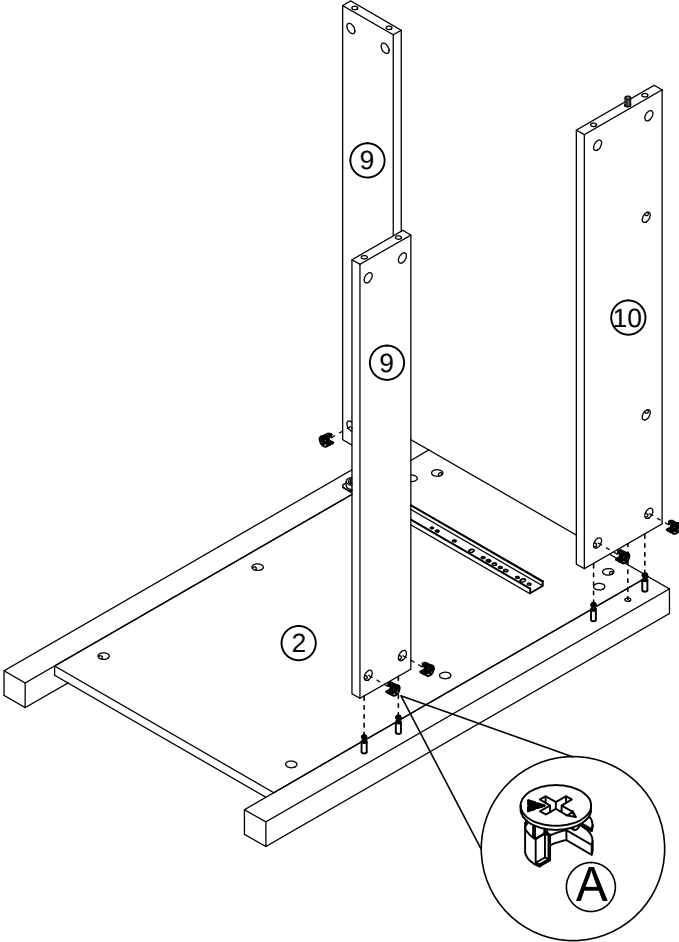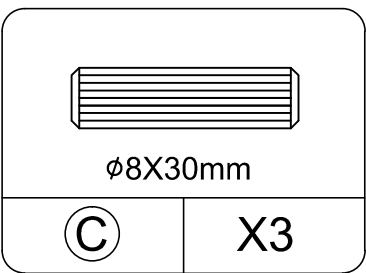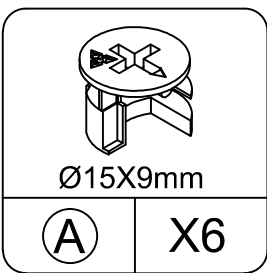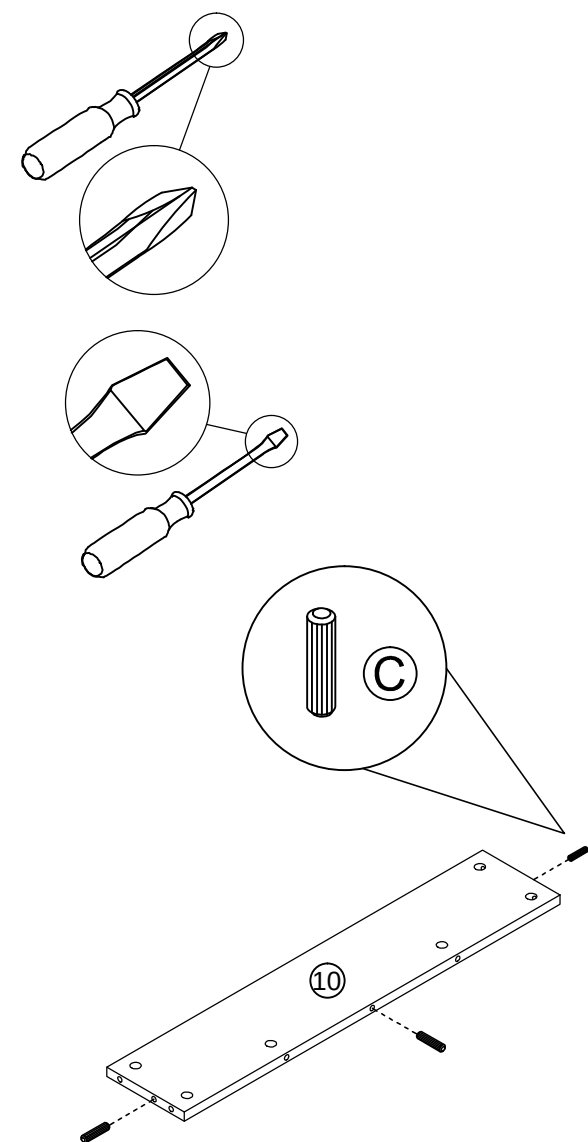



Proper orientation of CAM LOCK

STEP12

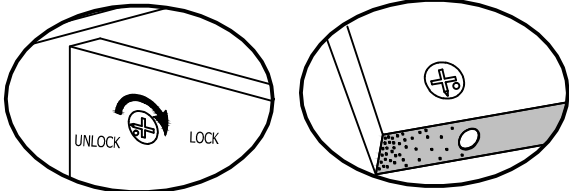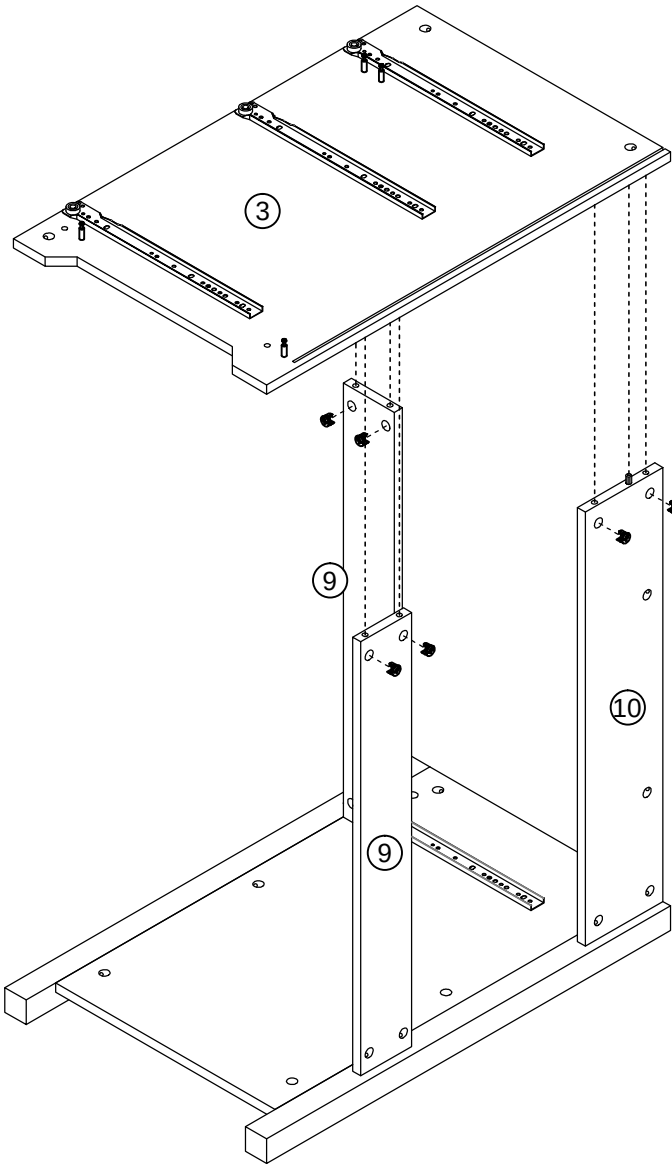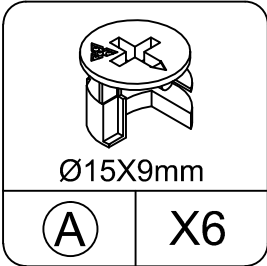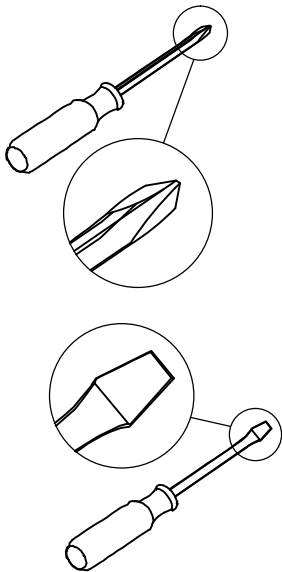


Proper orientation of CAM LOCK











STEP13

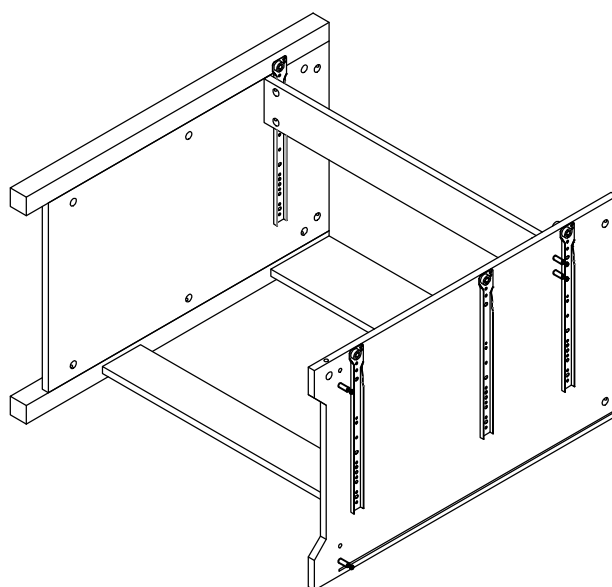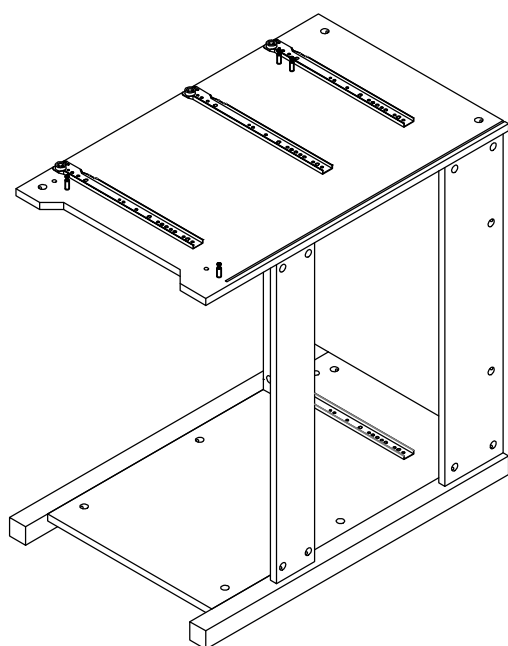

STEP14




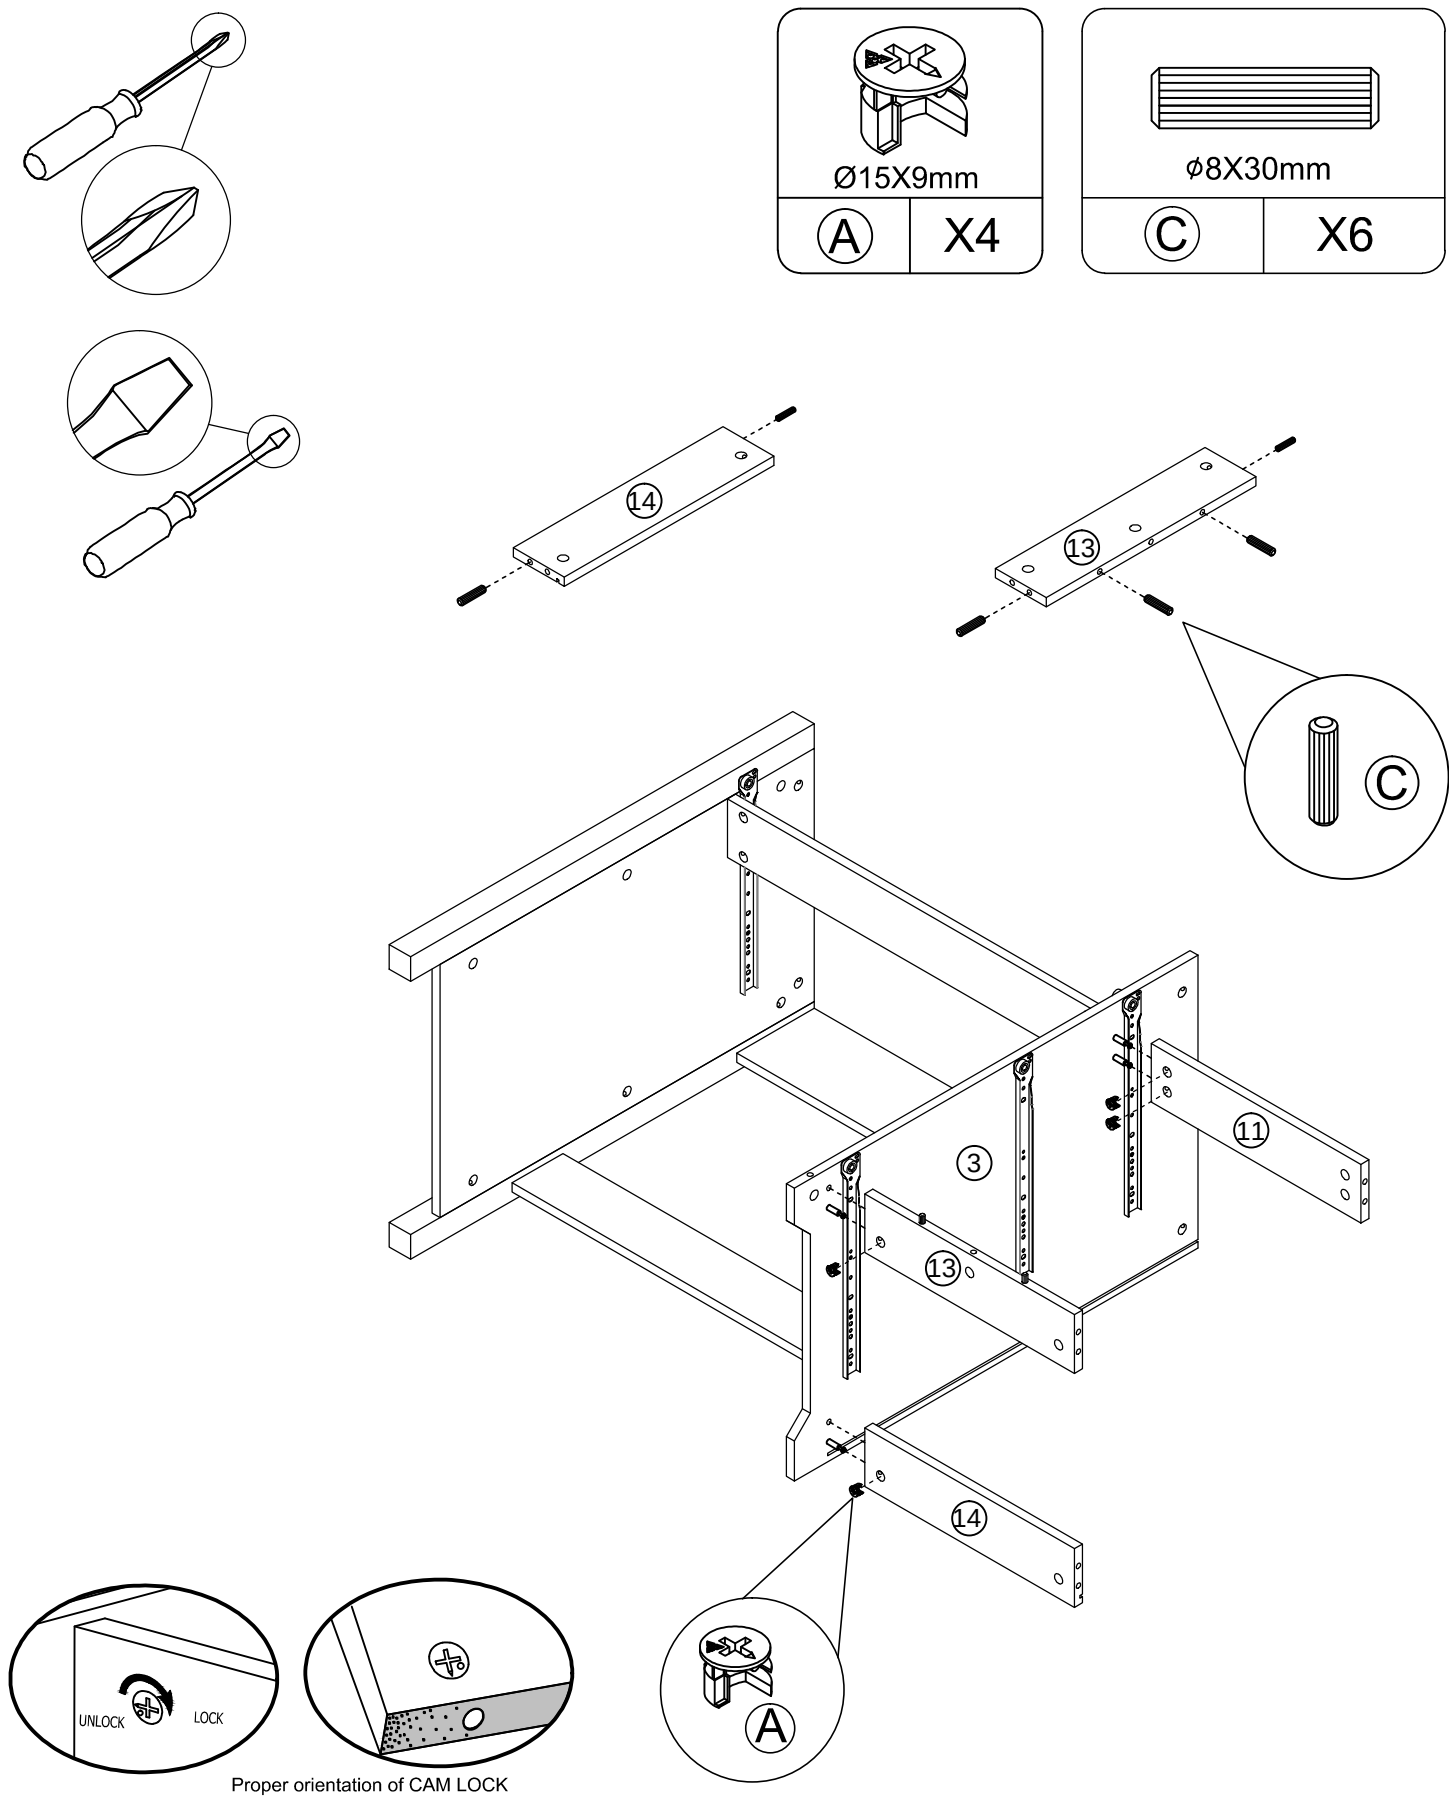


STEP15

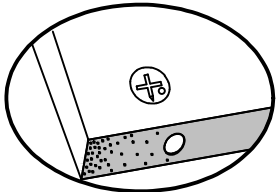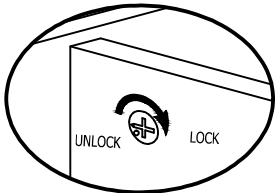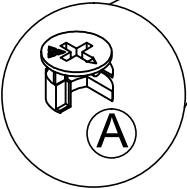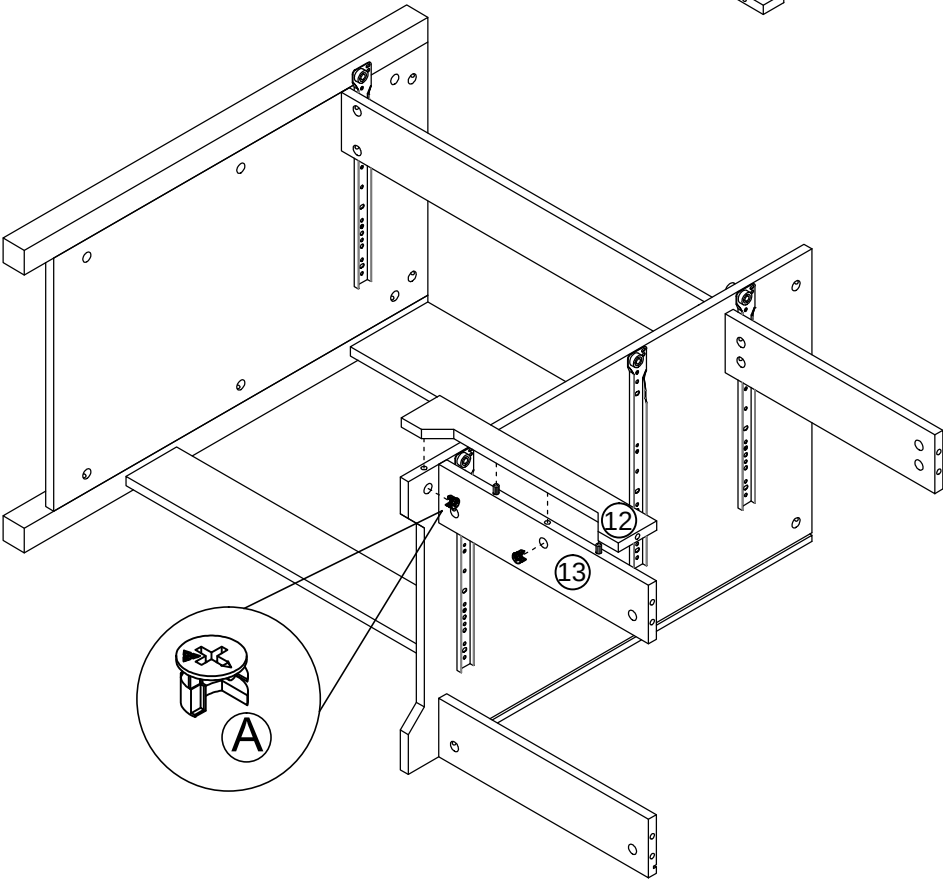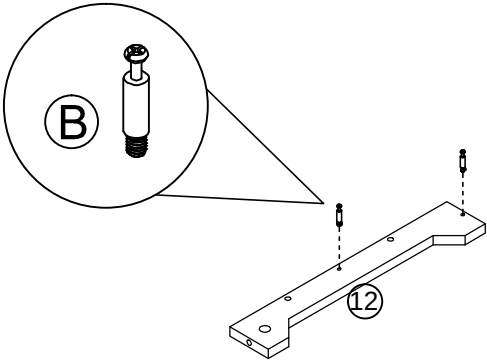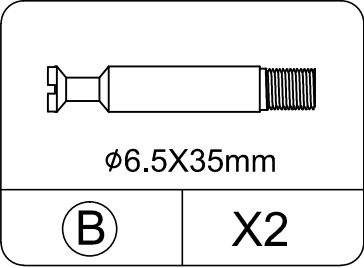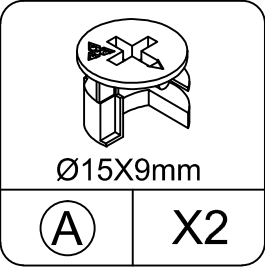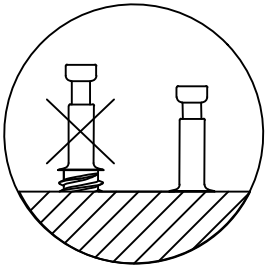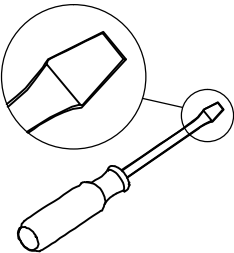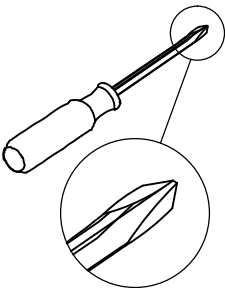


Proper orientation of CAM LOCK

STEP16

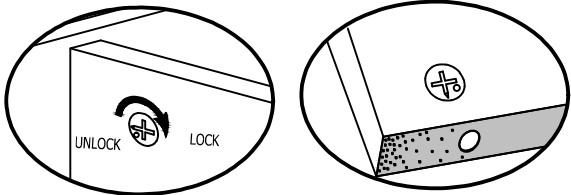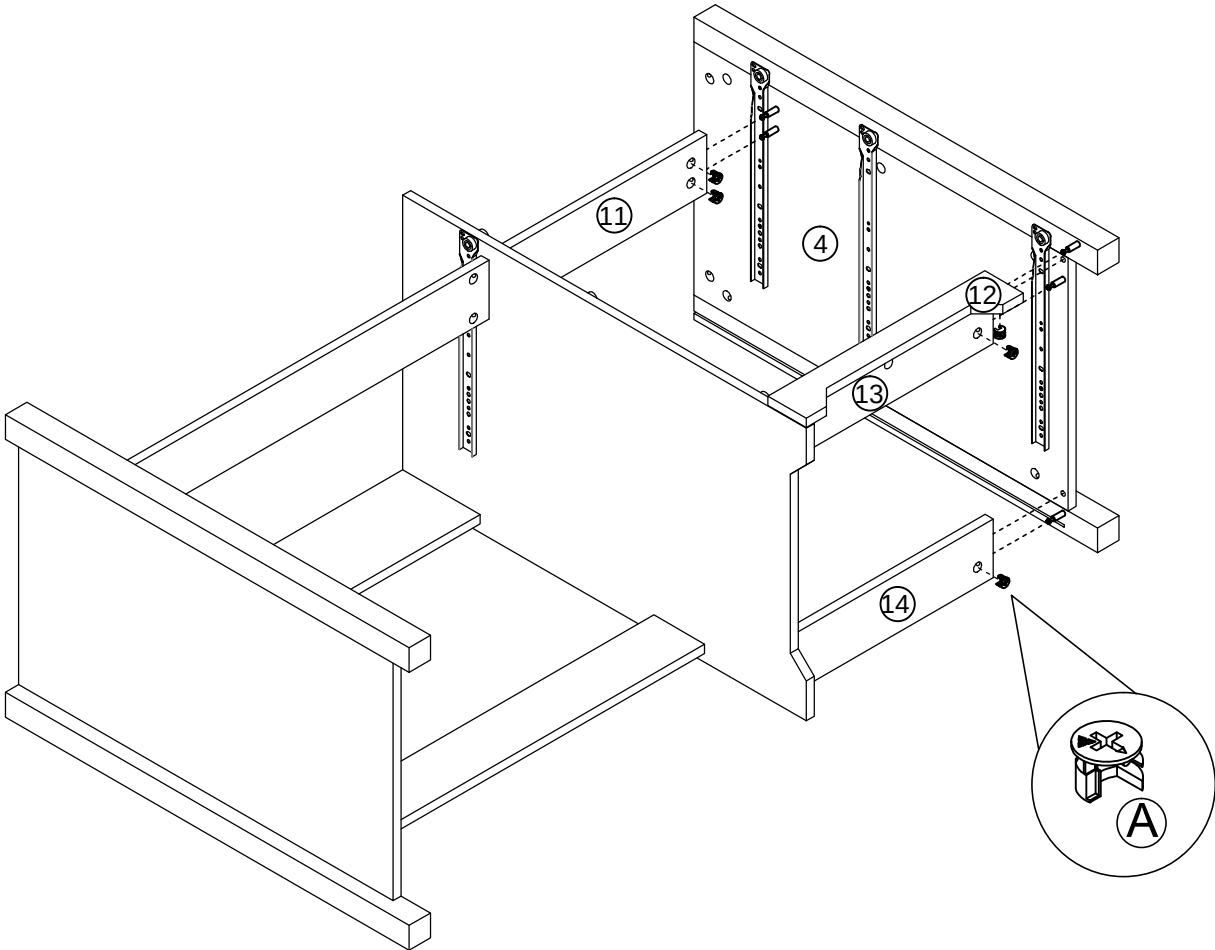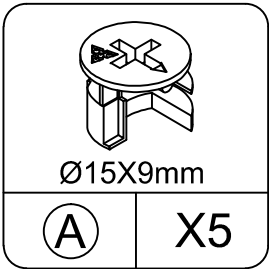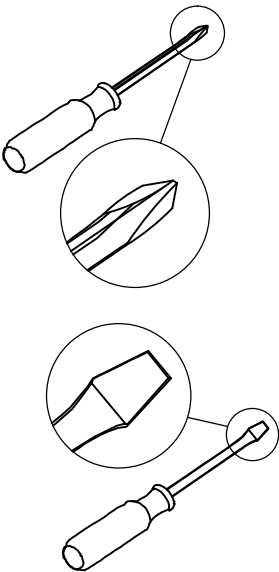


Proper orientation of CAM LOCK

STEP17


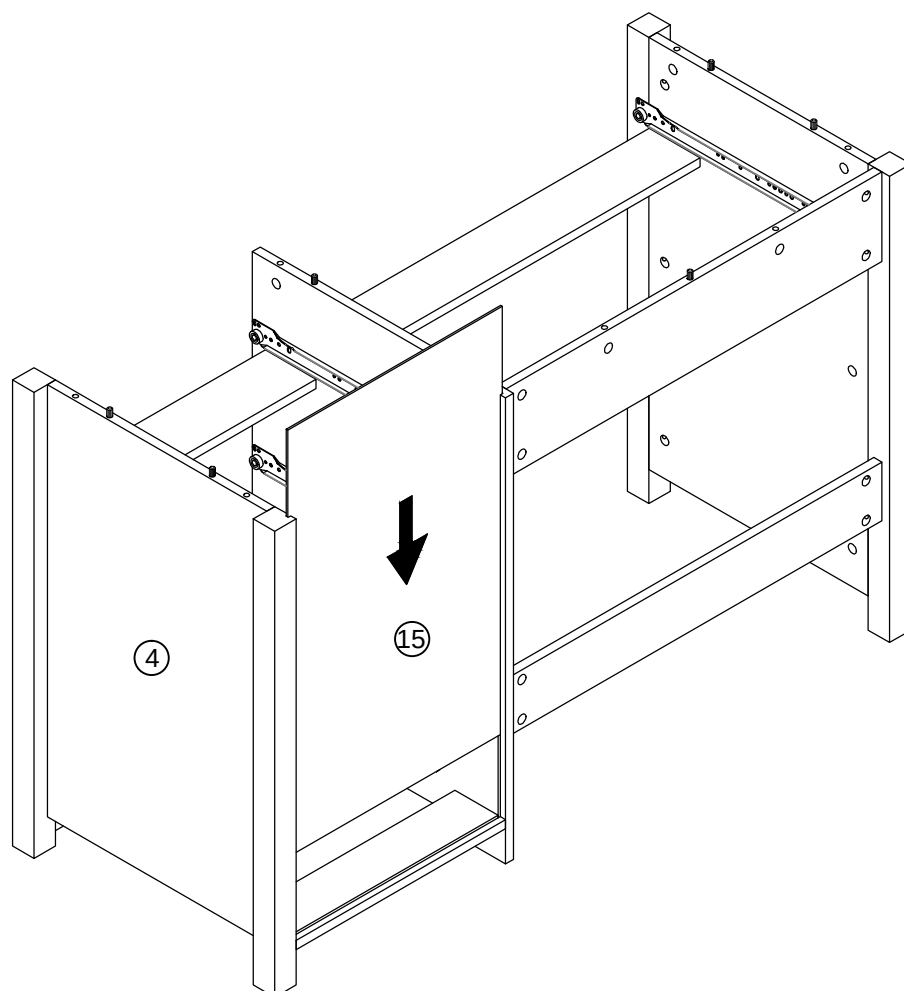


STEP18

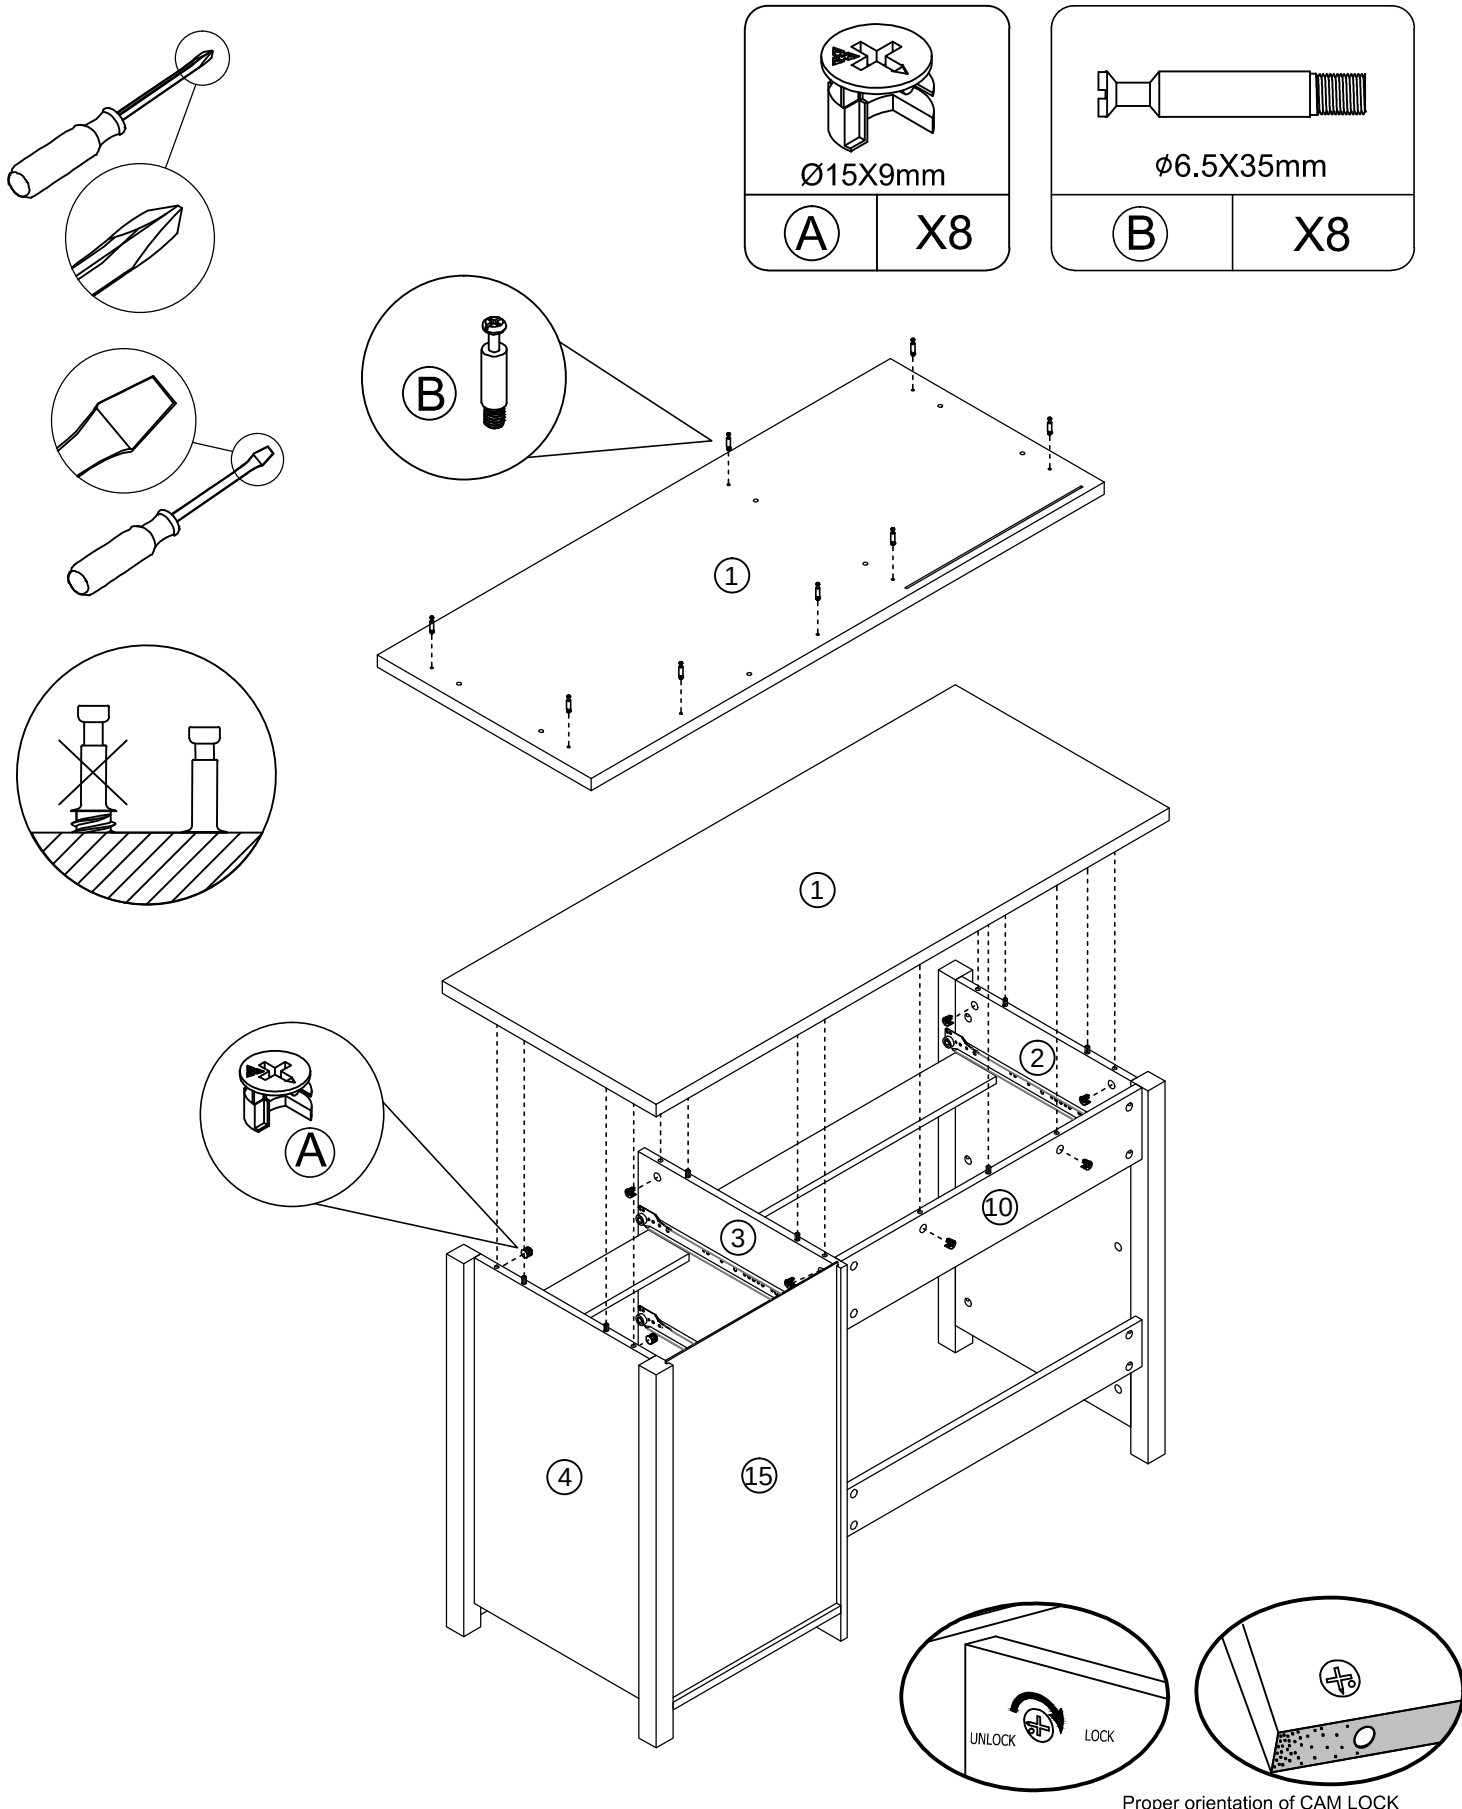

Proper orientation of CAM LOCK

STEP19

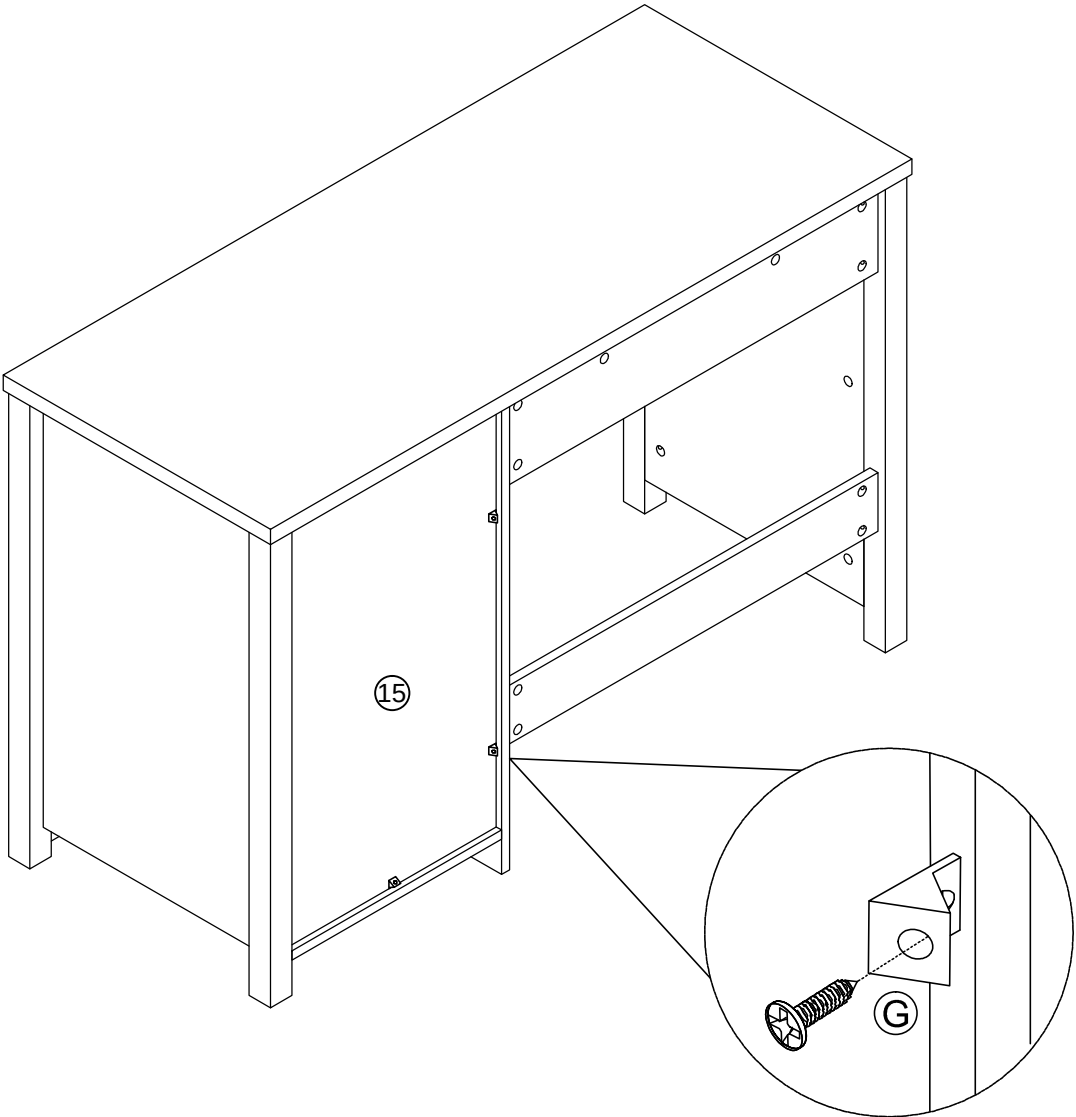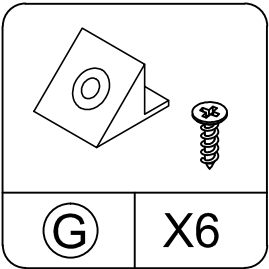

STEP20



Ø5x346

(F)	X1set
-----	-------



Ø20mm

(L)	X20
-----	-----

