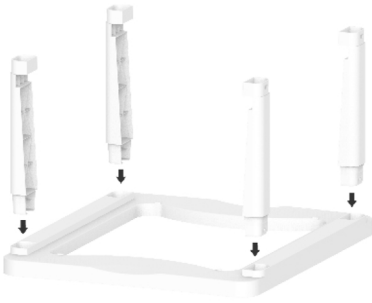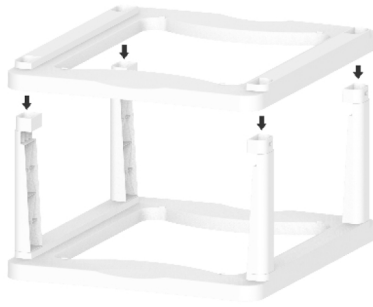# Installation Instruction

Step 1.

Insert the pillar into the slot on the upper end of the laminate and press it firmly

Step 2.

Insert the layer board into the lower pillar and fasten it.

Step 3.

Insert the pillar into the card slot on the upper end of the layer board again

Step 4.

Align the layer board with the lower pillar and insert it, and tighten it.
Repeat steps 3 and 4 to install it to the top layer.

Step 5.

Insert the cartoon handle into the drawer.

Step 6.

Insert the top cover into the lower pillar and fasten it

Step 7.

Finally, install the drawers into the cabinet one by one and complete the installation.