

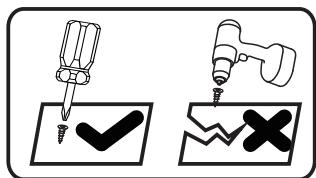
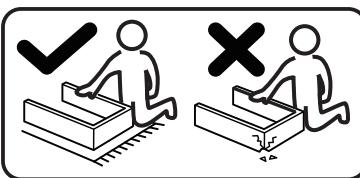
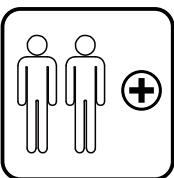
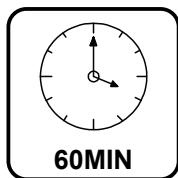


SRN SF7004-3

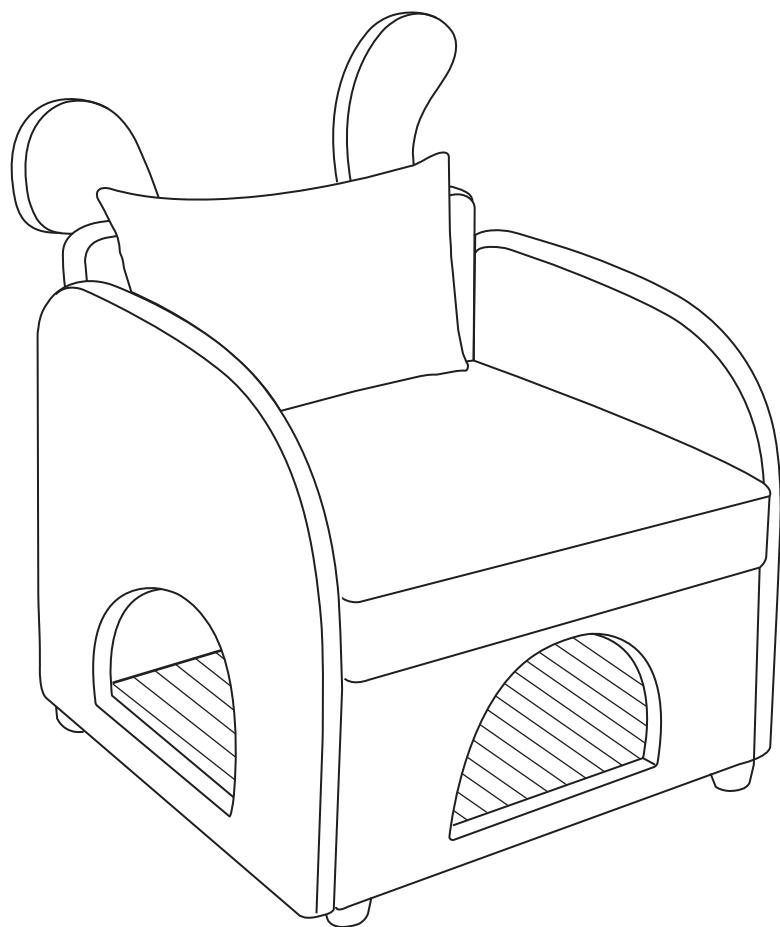


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.


- Please confirm that all components are present before beginning assembly.
- For the protection of your furniture, place all parts on a clean and smooth surface to prevent any damage.
- Please assemble the furniture by 2 persons or more.
- Do not confuse similar screws.
- Do not tighten bolts fully until all parts are connected!
- Please periodically check all fitting and re-tighten as necessary.


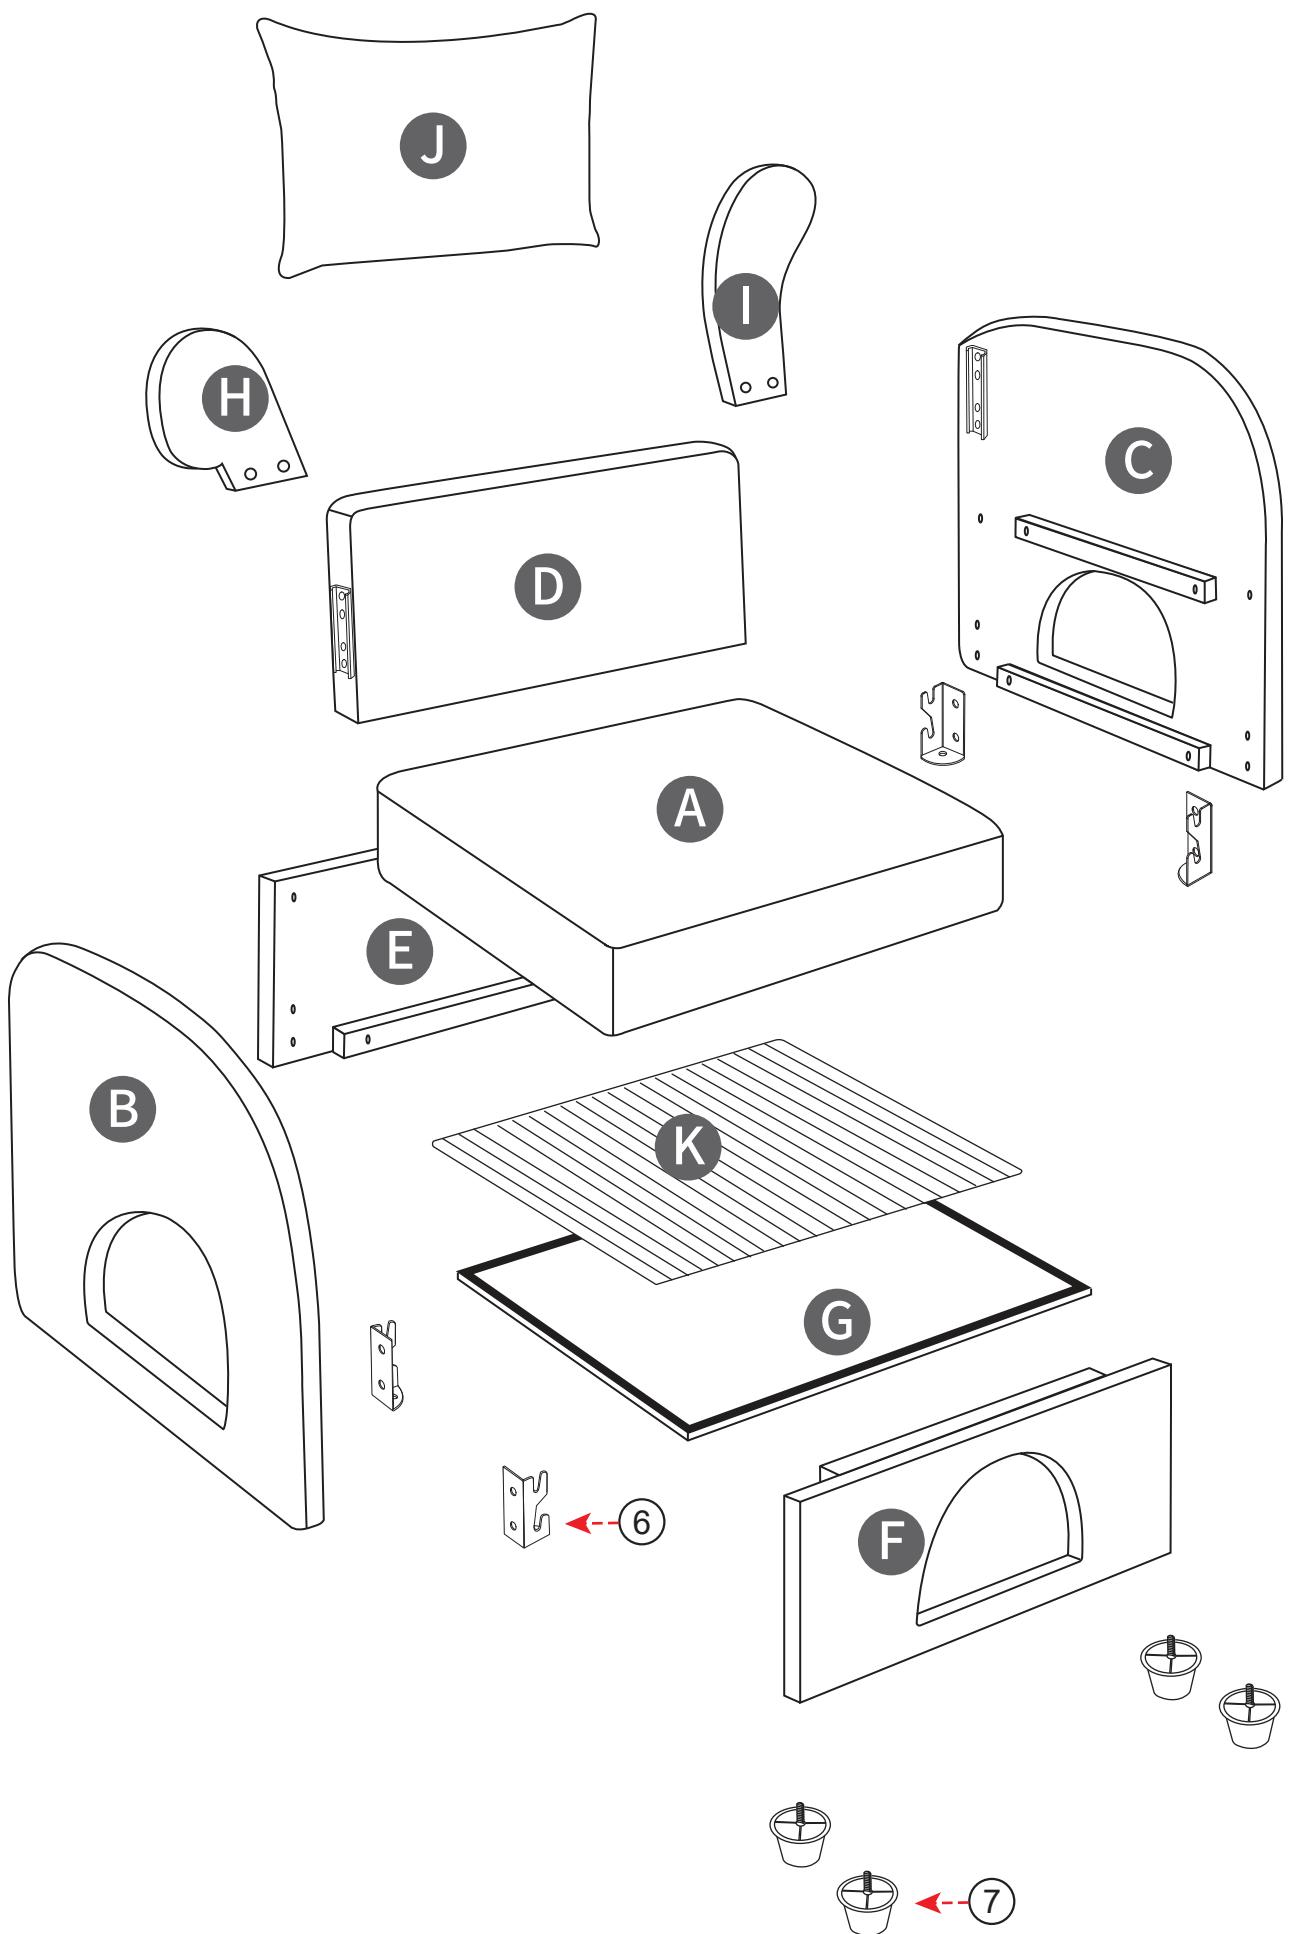


PACKING DETAILS: TOTAL 1 BOXES

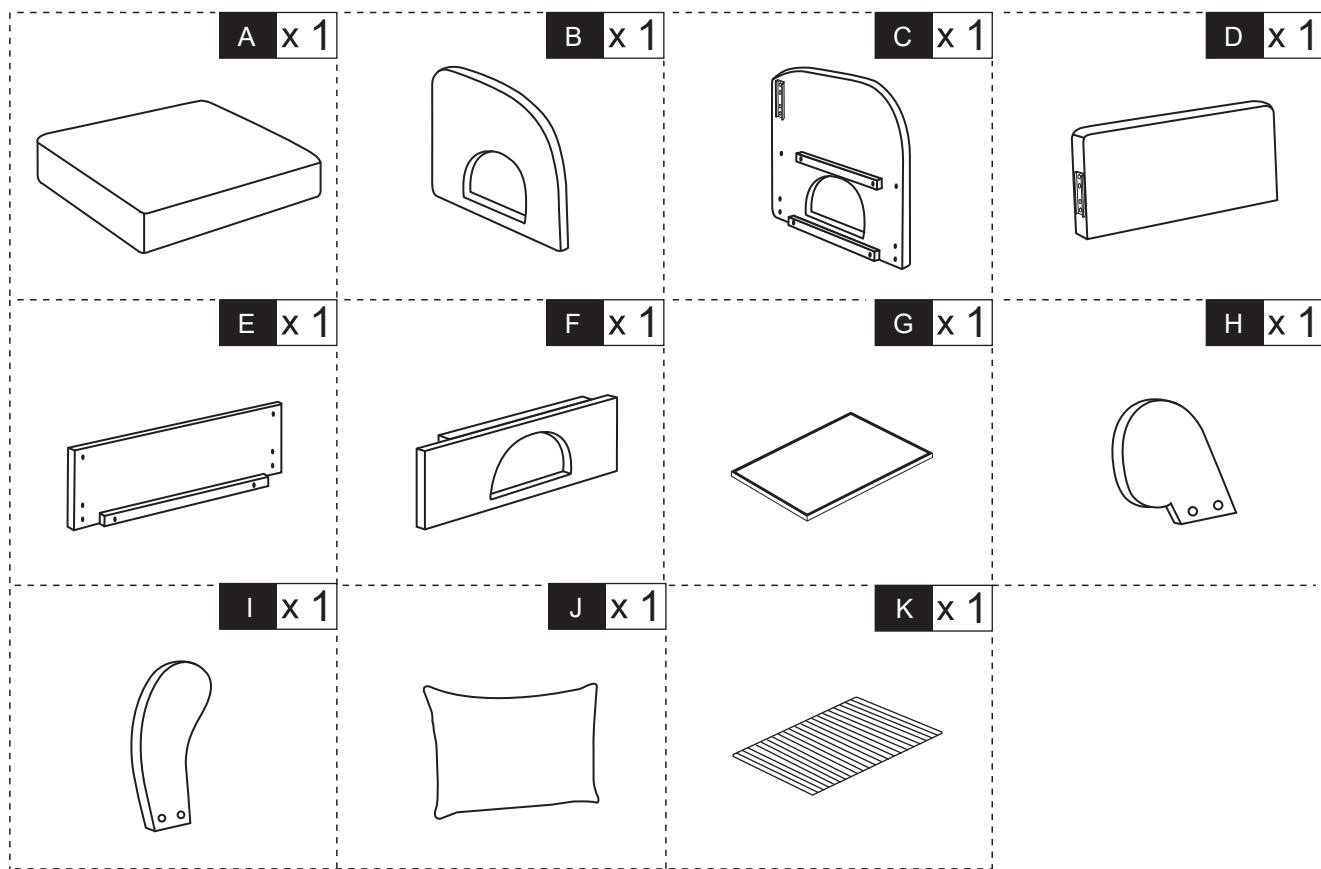


HARDWARE

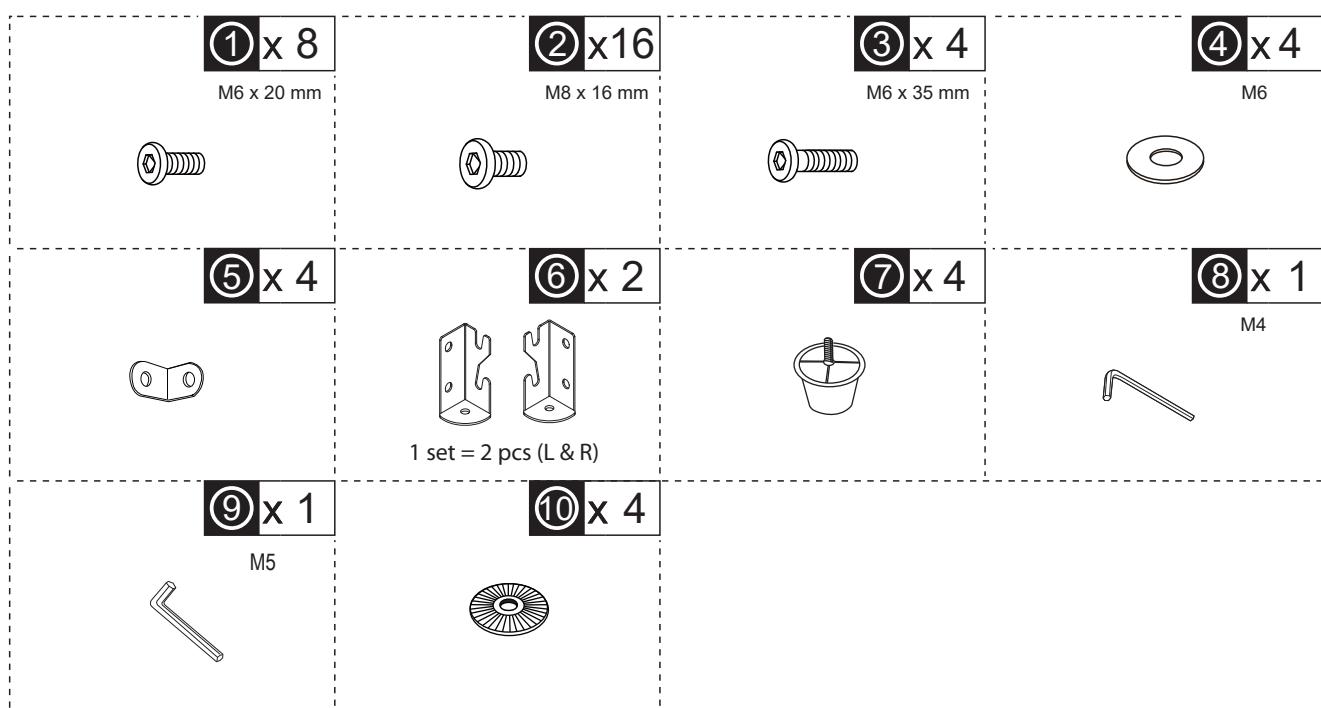


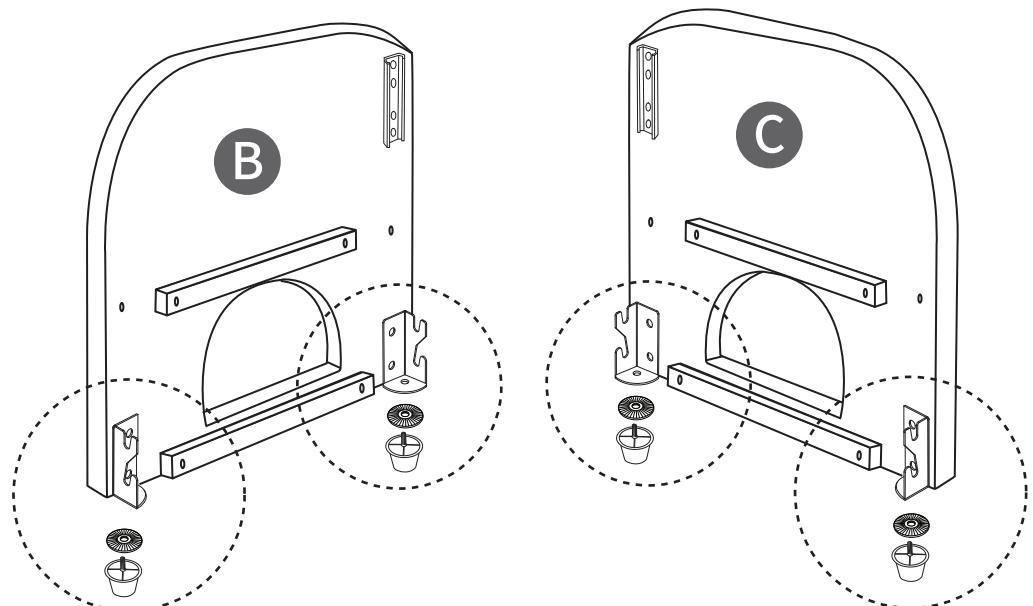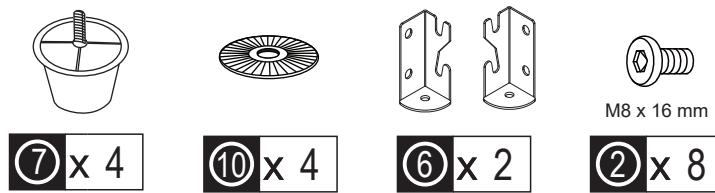

STEP 1.1

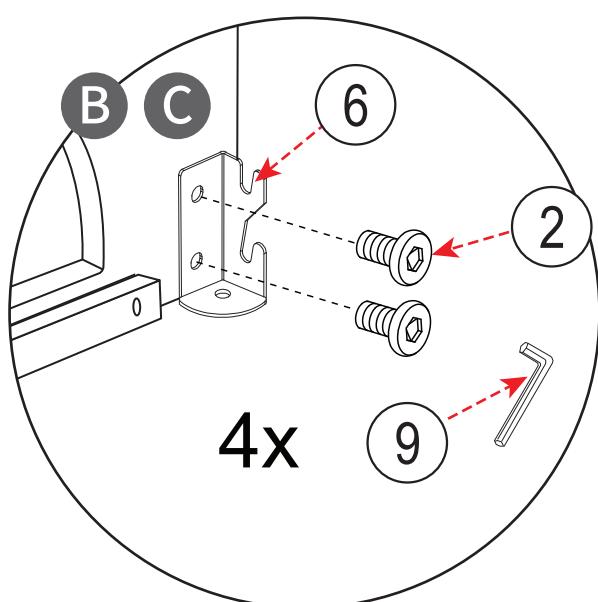

STEP 1.2

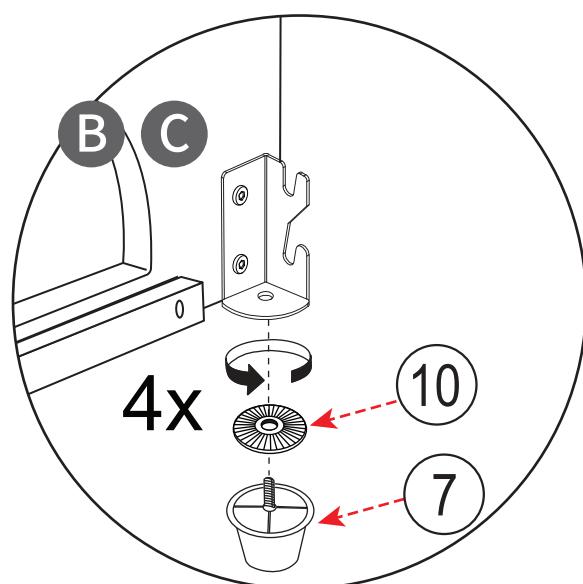




M8 x 16 mm

② x 8

4x


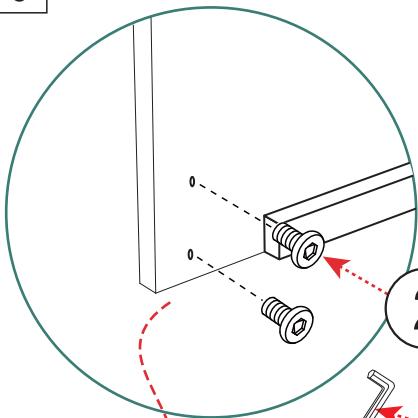


2

9






Do not fully tighten screws before completing step 3.

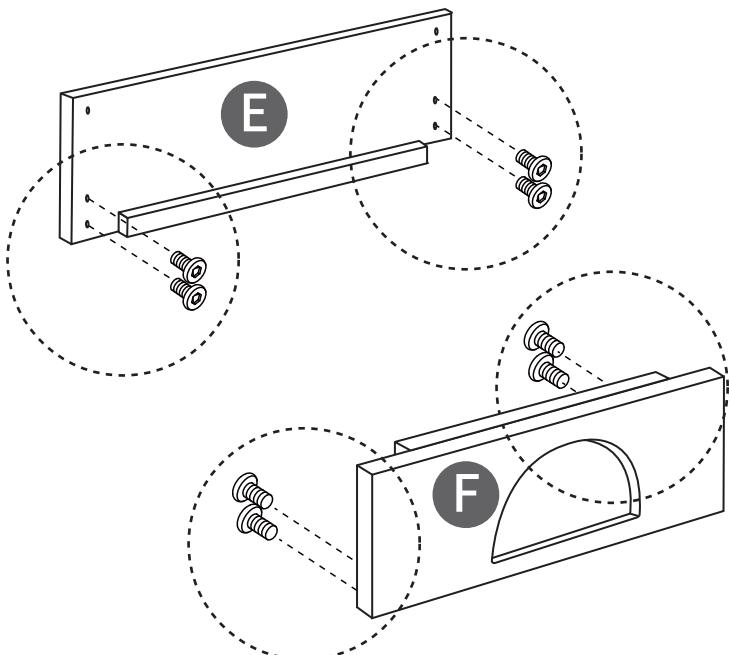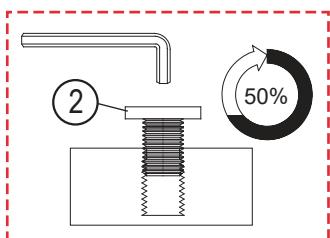

F

4x

9

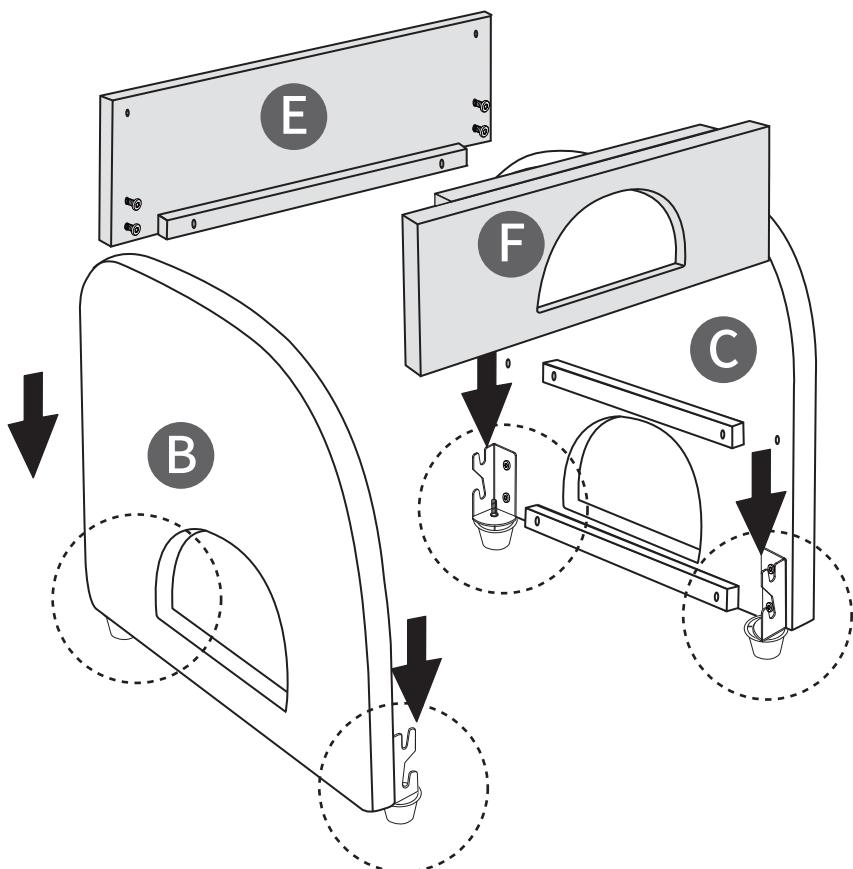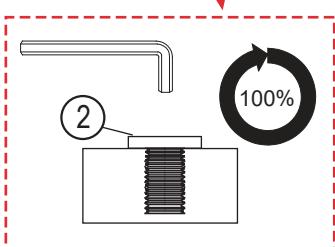
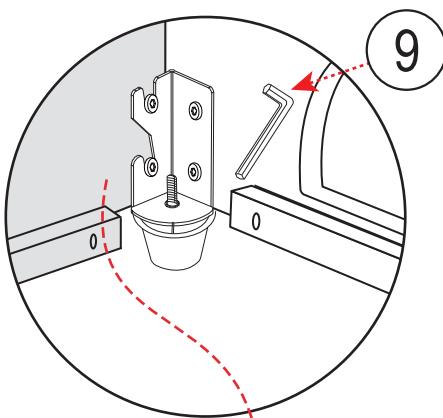


F

C

B

E

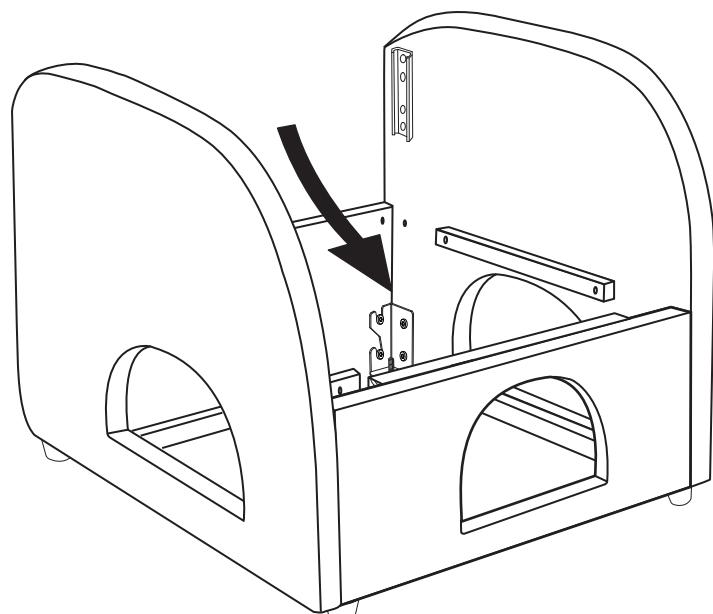
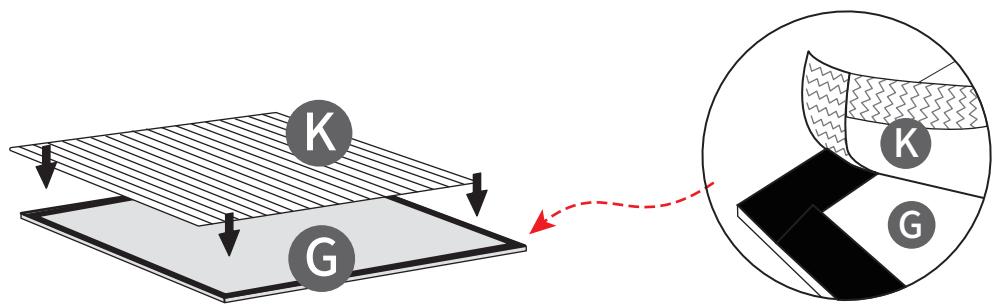


M6 x 20 mm


① x 8

⑤ x 4


4x

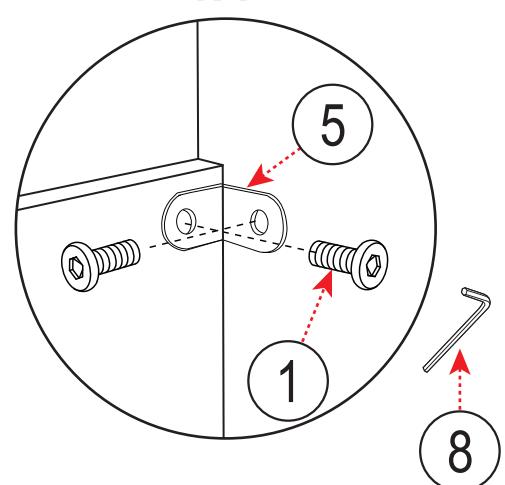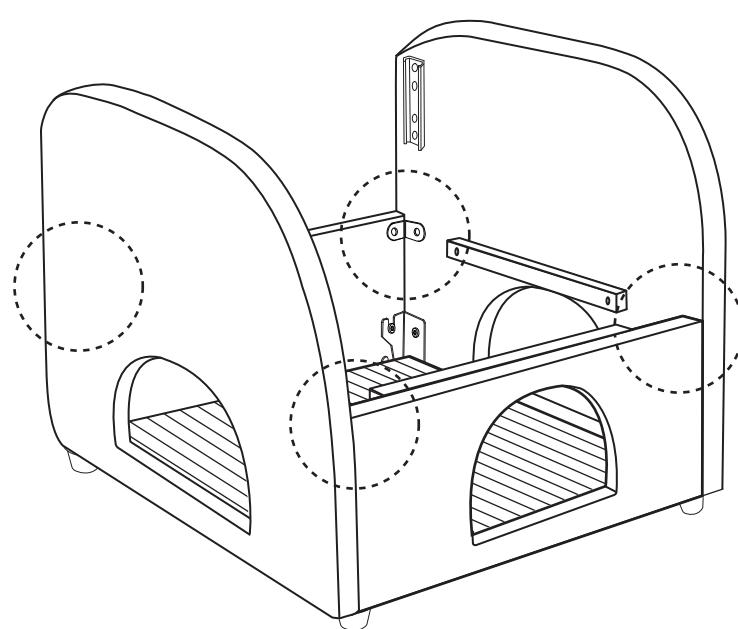

STEP 6.1

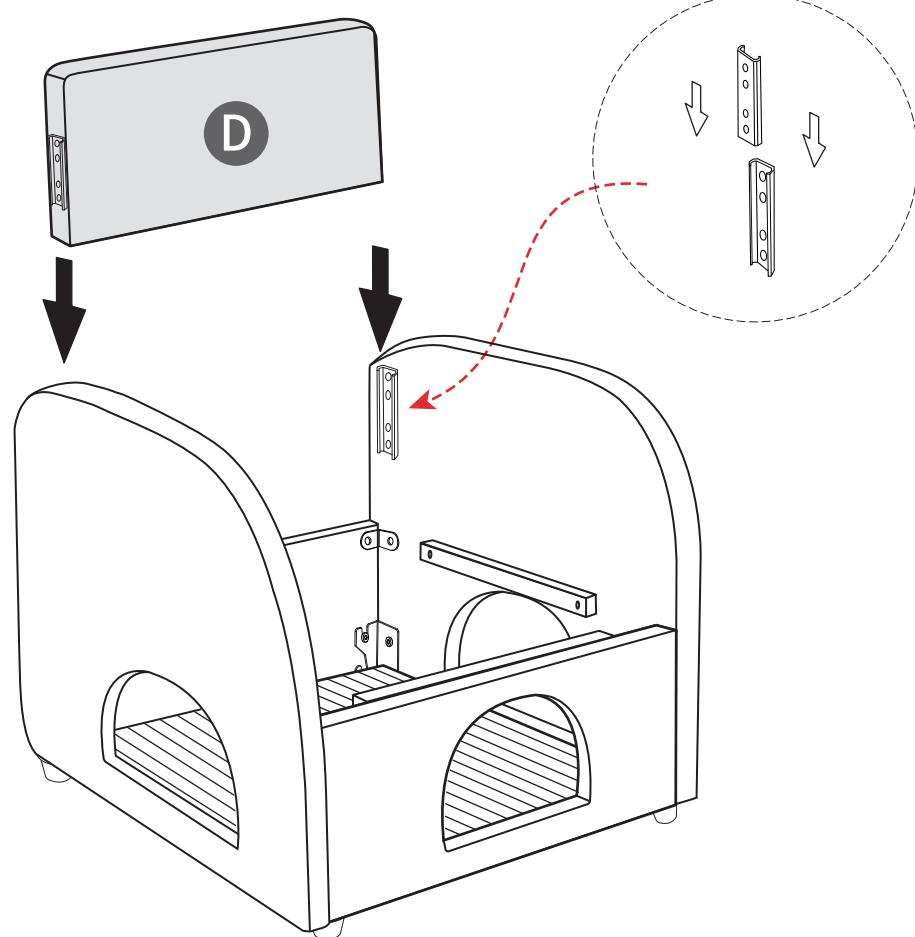

STEP 6.2

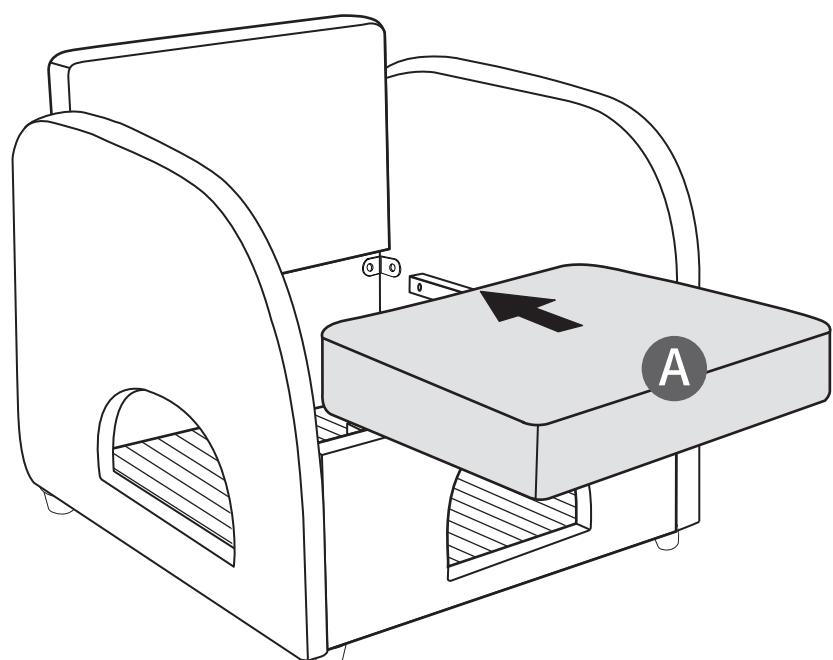



M6 x 35 mm







M6

③ x 4

④ x 4



2x

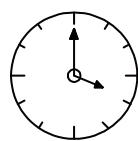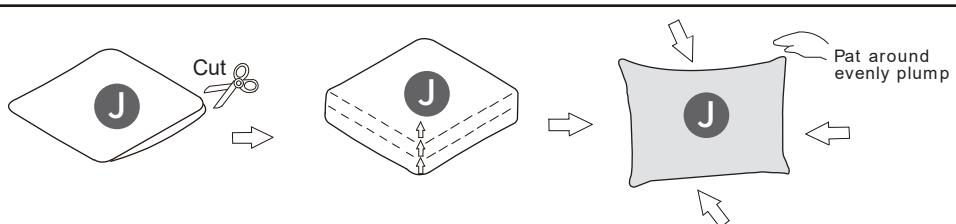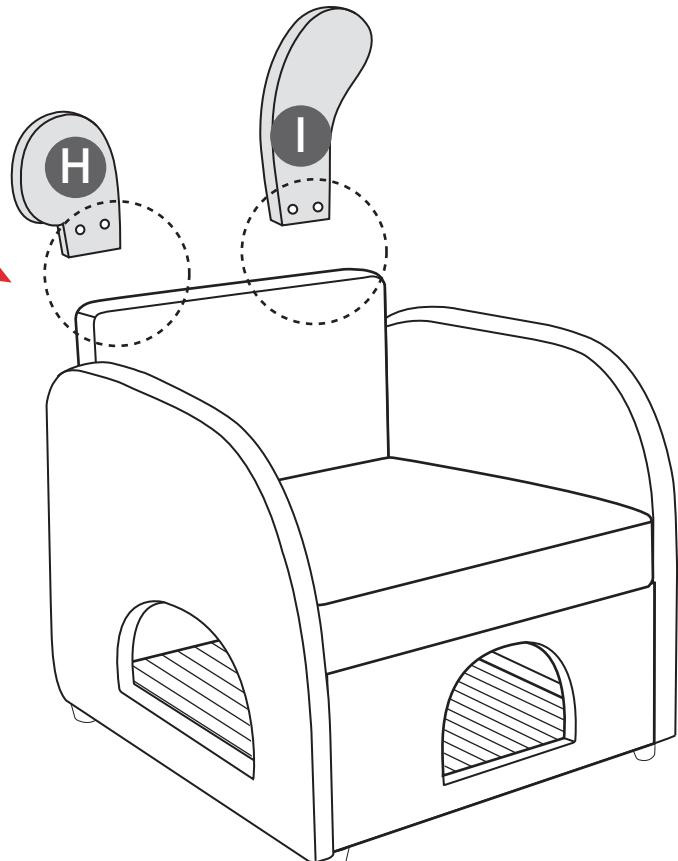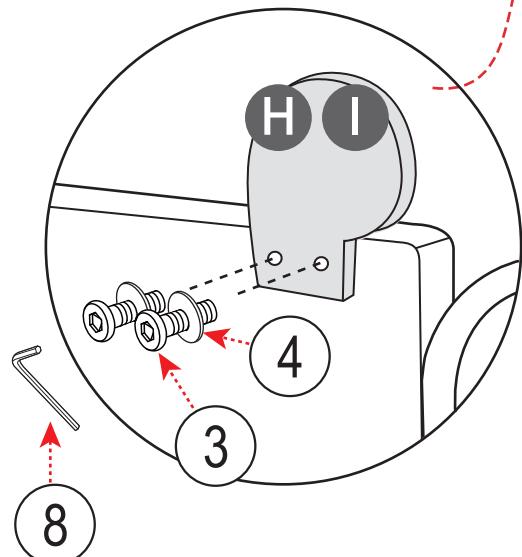

72h

The wrinkles on the cushion can be ironed with a steam iron, or after 72 hours, the wrinkles will disappear slowly.

Make the backrest pillows fuller by tapping and squeezing them.

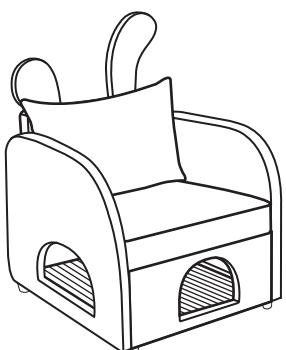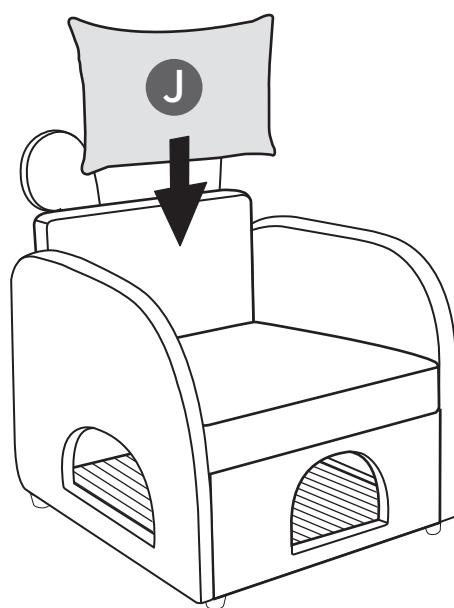

**COMPLETED
ASSEMBLY**