

Model No.: 182-6593 Polished Chrome 182-6594 Brushed Nickel 182-6595 Oil-Rubbed Bronze



Aegean Tissue Holder

#### Parts Diagram / List


#### Tools

- Level
- Power Drill
- 1/4" Drill Bit
- 1/16" Drill Bit
- Masking Tape
- Pencil
- Hammer
- · Phillips Screw Driver
- · Safety Glasses
- Stud Finder

#### Maintenance

Your new Bath Accessory is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool and harsh chemicals as these will dull the finish and void your warranty.

## Parts Diagram / List

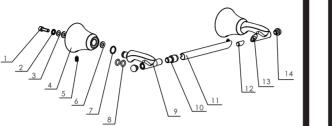

Part Name

2 Locking Washer 3 Washer

Wearing Ring

Connector

3 Ringht Base

5 Allen Wrench

7 Insert Anchors

16 Mounting Brackets

Anti-attrition Ring

Stainless Steel Bar


1 Bolt

4 Left Base

6 O-ring

Set Screw




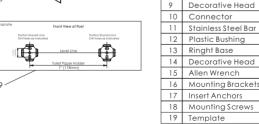


#### Installation Instructions



Locate mounting hardware before throwing away any packaging.




Use the stud finder to locate the stud to determine which mounting method is needed. Place the template on the wall in the desired location and make sure it is level, then tape to the wall.



Mark the mounting screw holes through the template with the pencil. (Once holes are marked, you can remove the template)

# Installation Instructions




#### Figure 1

Anchor

Drywall

### Drywall Installation

Front View Side View 



Step 4a – Drywall or Ceramic Tile Installation In the marked spots drill 1/4" holes in the wall, then insert the insert anchors (17) in the holes, use the hammer to tap them into place. (Be sure not to hit them too hard)


## Installation Instructions



#### Wood Wall Stud Installation Side View

Bracket


Screws

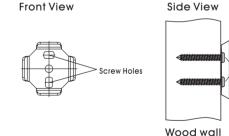

Step 4b – Wood Wall Stud Installation Drill 1/16" holes in the marked spots, be sure to keep the drill level. Insert anchors will not be needed.

6


# Installation Instructions

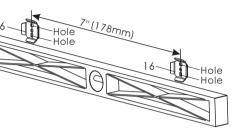

Dry Wall Installation: Attach the mounting brackets(16) using the mounting screws (18) to the insert anchors (17). See Figure 1 For example.

Wood Wall Stud Installation: Attach the mounting brackets (16) using the mounting screws directly into the stud. See Figure 2 for an example.

# 10 16 16 16 16 16 16



#### Step 6

A – Position the left base (4) over the mounting bracket (16) and tighten the set screw (5) with the allen wrench supplied (15).

B – Position the right base (13) over the mounting bracket (16) and tighten the set screw (5) with the allen wrench supplied (15).



#### LIMITED LIFETIME WARRANTY

Compass Manufacturing International warrants to the original consumer purchaser that the faucet be free from defects in material and workmanship for as long as the original consumer purchaser owns the

event that Freendo bathroom accessorries are used in a Commercial Application, this warranty is

Compass Manufacturing International will replace, free of charge, during the applicable warranty period, any part or finish that proves defective in material and/or workmanship under normal installation, use and service. This warranty shall not apply to goods which have been subject to accidents, negligence or improper installation. Compass Manufacturing International will not be liable for other damages or losses, including, but not limited to: labor charges and/or damages incurred in installation, repair or replacement as well as any other kind of loss or damage. Proof of purchase from the original consumer nuchaser must be made available for all warranty claims.

Compass Manufacturing International recommends using a professional plumber for all installation and repair. Compass Manufacturing International will, at its discretion, provide new or equivalent replacement parts for any product that proves to be defective under normal usage and service. Replacement parts may be obtained by emailing the address below, calling the number below or by writing to:

#### Compass Manufacturing International

Freendo Product Service 6702 Enterprise Drive Louisville, KY 40214 800.626.3525 warranty@cmiproduct.com

Revised 1/29/18

ct.com ©

Compass Manufacturing International


25

# Template

# Front View of Post

Position Bracket and Drill Holes as Indicated

Position Bracket and Drill Holes as Indicated

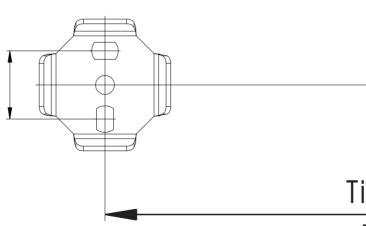

Level Line

Tissue Holder

7" (178mm)