


SUGGESTED TOOLS AND MATERIALS / OUTILS ET MATÉRIAUX PROPOSÉES




Sealant / Scellant



Tape Measure / mètre à ruban


INSTALLATION INSTRUCTIONS / Les instructions d'installation

1

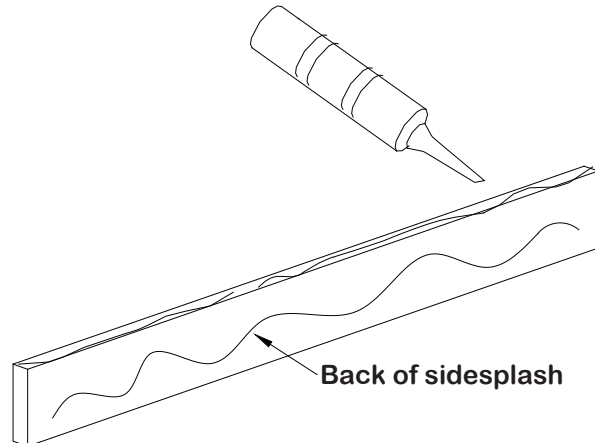

Apply a few thin beads of sealant (not included) to unpolished back and bottom edge of sidesplash. Make sure all surfaces are dry.
Appliquez quelques perles fines de scellant (non inclus) à dos et le bord inférieur du dossier. Assurez-vous que toutes les surfaces sont sèches.

2

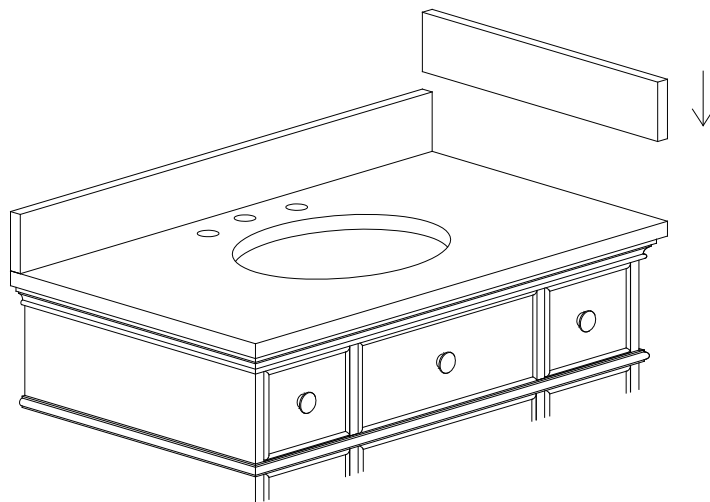

Set unpolished bottom edge of sidesplash with sealant bead on vanity top and press gently against wall and down on vanity top.
Ensemble contre le bord inférieur du dossier avec cordon de scellant sur le dessus de la vanité et appuyez doucement contre le mur et sur le dessus de la vanité.