


# ASSEMBLY INSTRUCTION

---

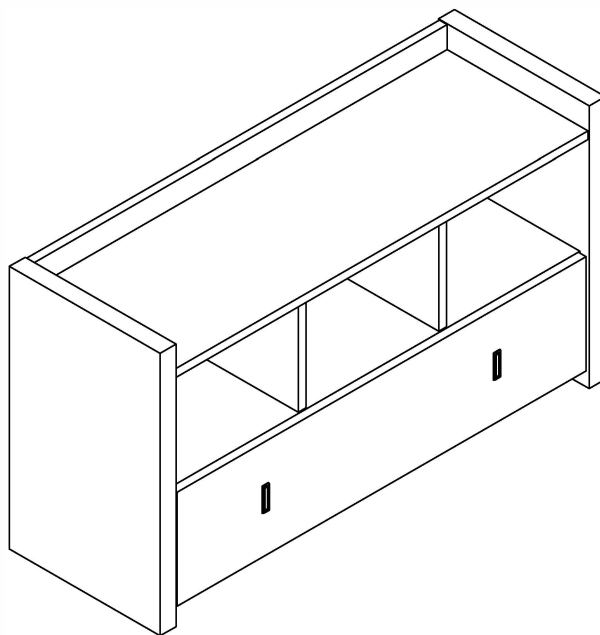

# ASSEMBLY INSTRUCTION


---

## PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box. Assembly on top of flattened box/blanket is recommended.


Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

Tip #3: Note position of all holes on each panel during assembly.

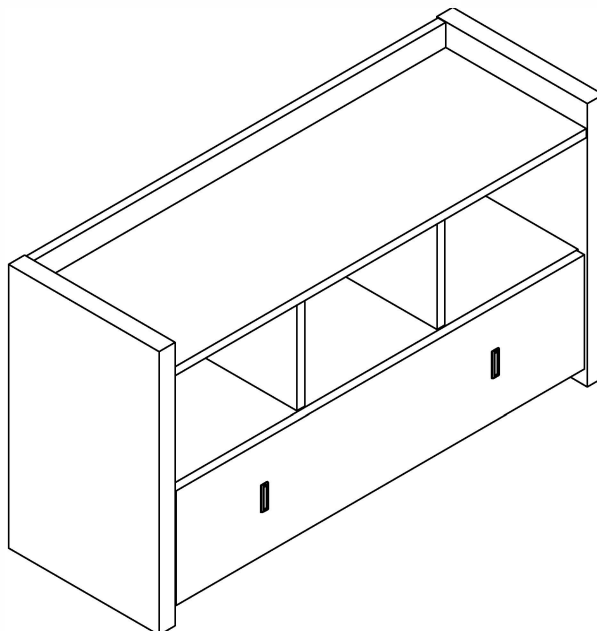

# PARTS IDENTIFICATION



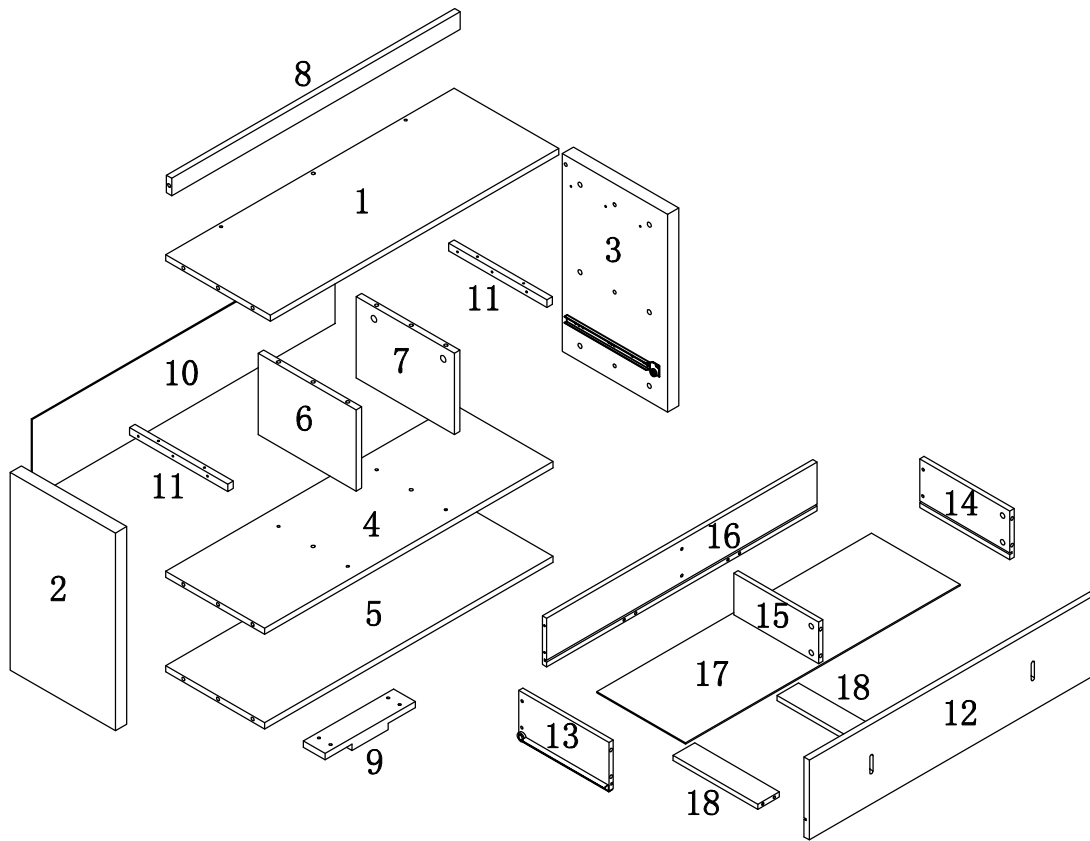









---









(1)	1pc	(7)	1pc	(13)	1pc
(2)	1pc	(8)	1pc	(14)	1pc
(3)	1pc	(9)	1pc	(15)	1pc
(4)	1pc	(10)	1pc	(16)	1pc
(5)	1pc	(11)	2pcs	(17)	1pc
(6)	1pc	(12)	1pc	(18)	2pcs


# HARDWARE IDENTIFICATION

ITEM#: 161734 161764


A		L29	16pcs
B		Ø15	16pcs
C		L20	6pcs
D		Ø12	6pcs
E		Ø8 x 25	13pcs
F		Ø6 x 30	4pcs
G		Ø4 x 25	4pcs
H		Ø4 x 30	26pcs
I		Z1016	20pcs
J		Ø20	8pcs
K		Ø16	5pcs
L		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

# ASSEMBLY INSTRUCTION

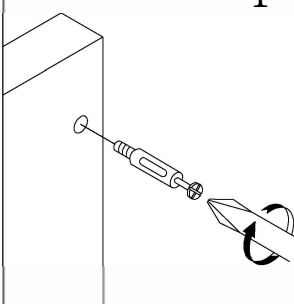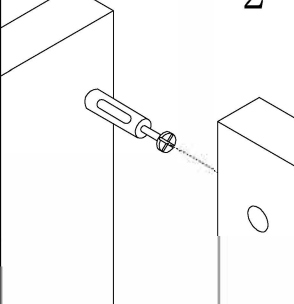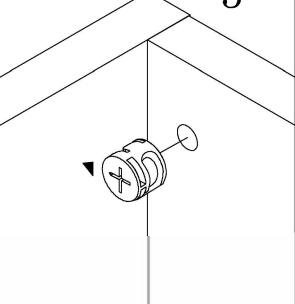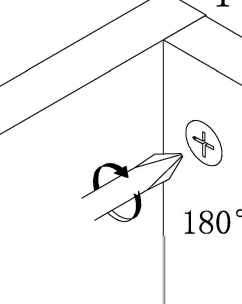HOW TO	1	2	3	4
 Cam Bolt   Cam Lock				
	1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position.

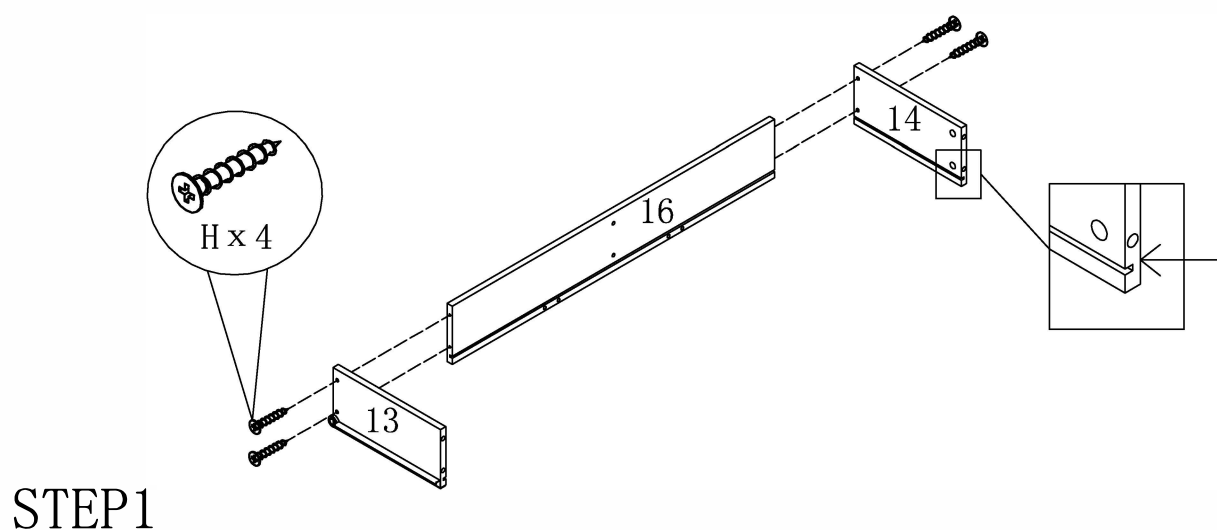


## STEP 2

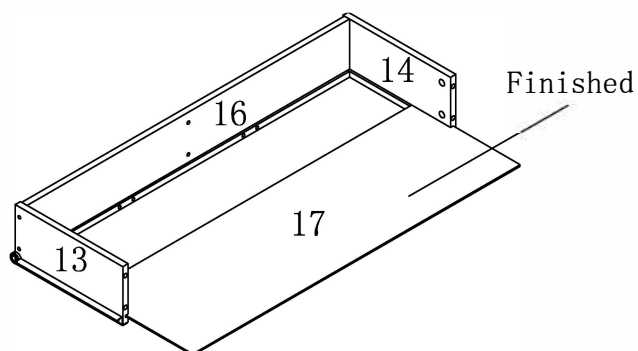


# ASSEMBLY INSTRUCTION

---

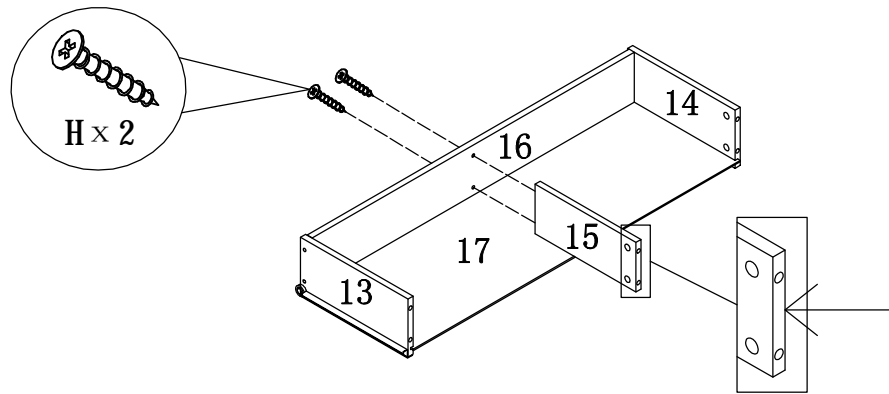


STEP3


STEP4

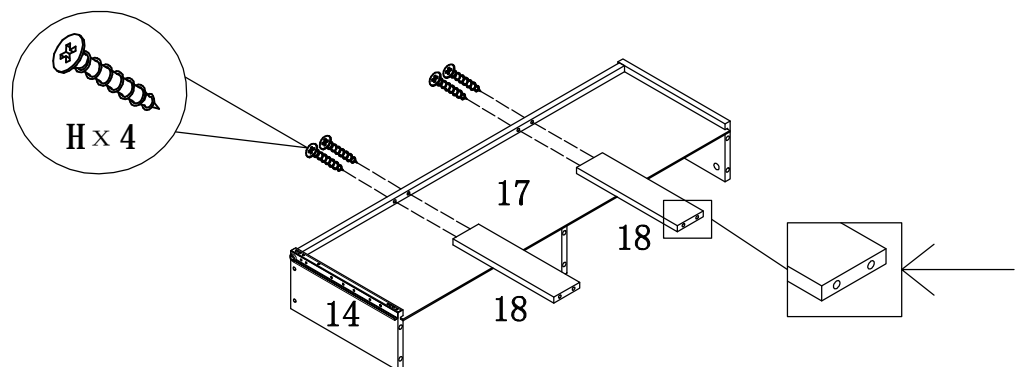

STEP5

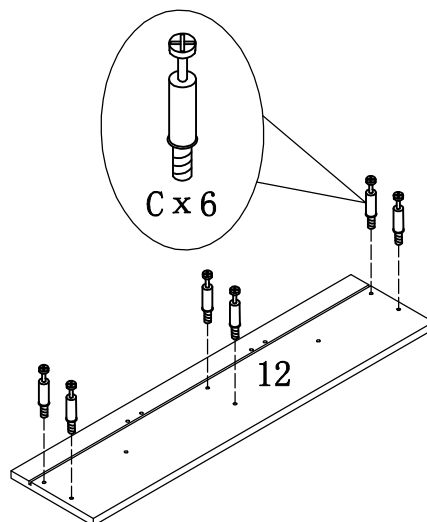


# ASSEMBLY INSTRUCTION

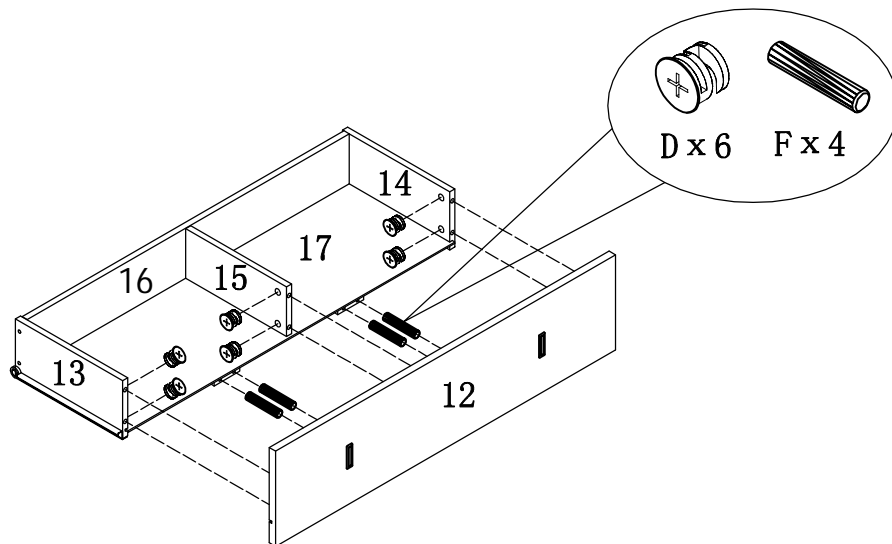


STEP6

STEP7

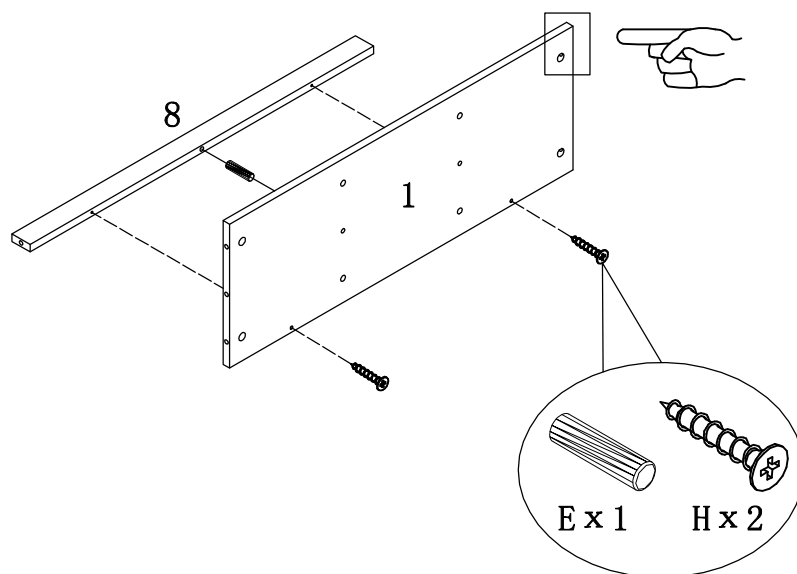


# ASSEMBLY INSTRUCTION

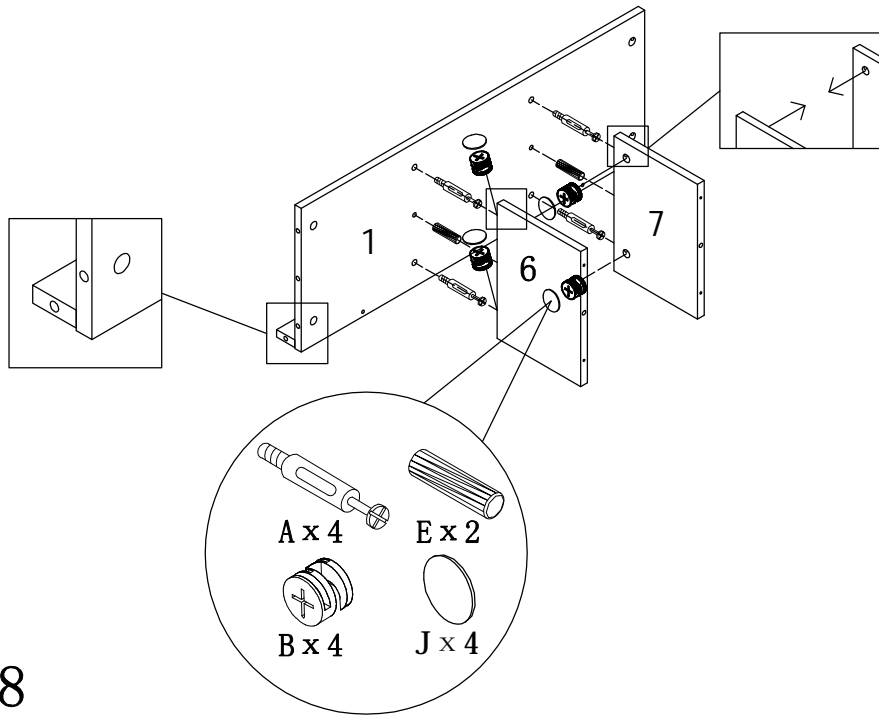

STEP8


STEP9

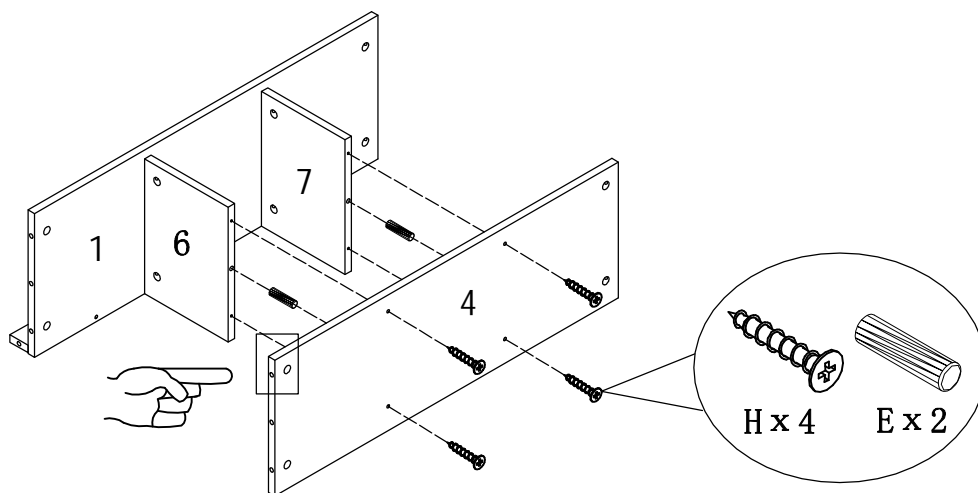




# ASSEMBLY INSTRUCTION

---

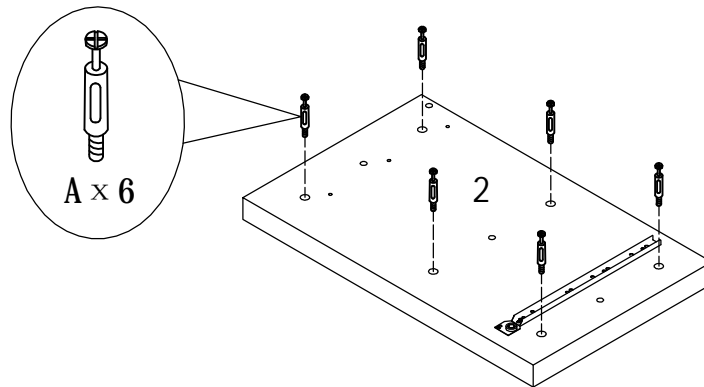


STEP10

STEP11

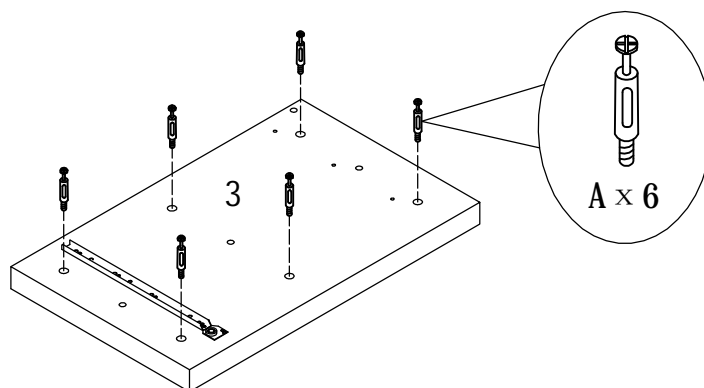


# ASSEMBLY INSTRUCTION

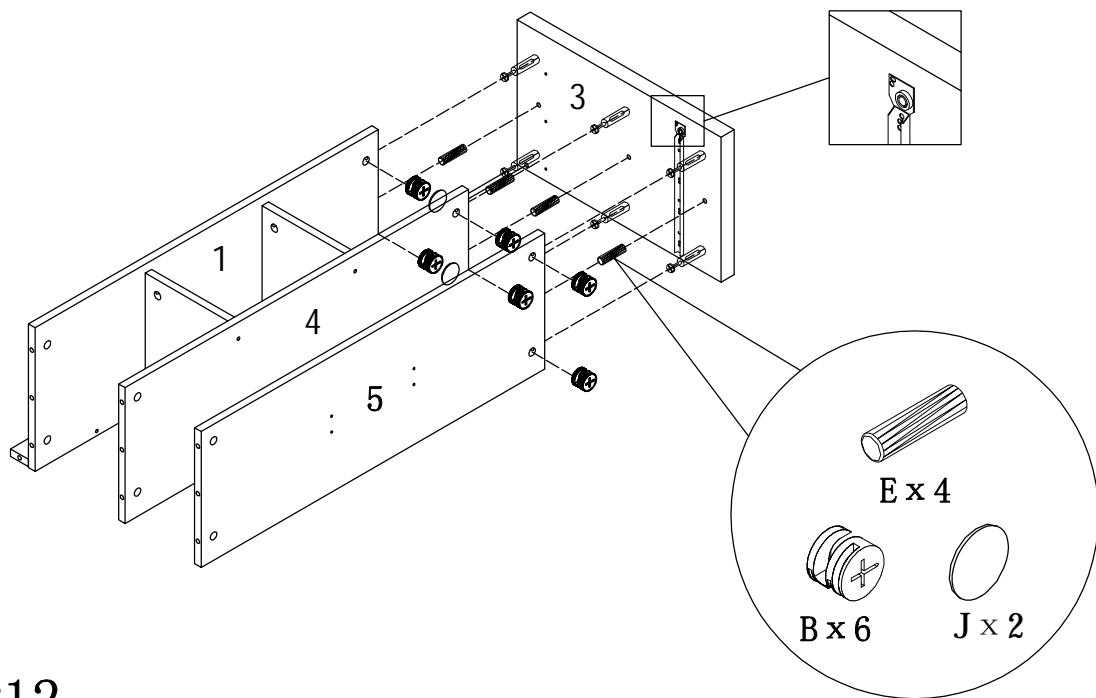


STEP12

STEP13


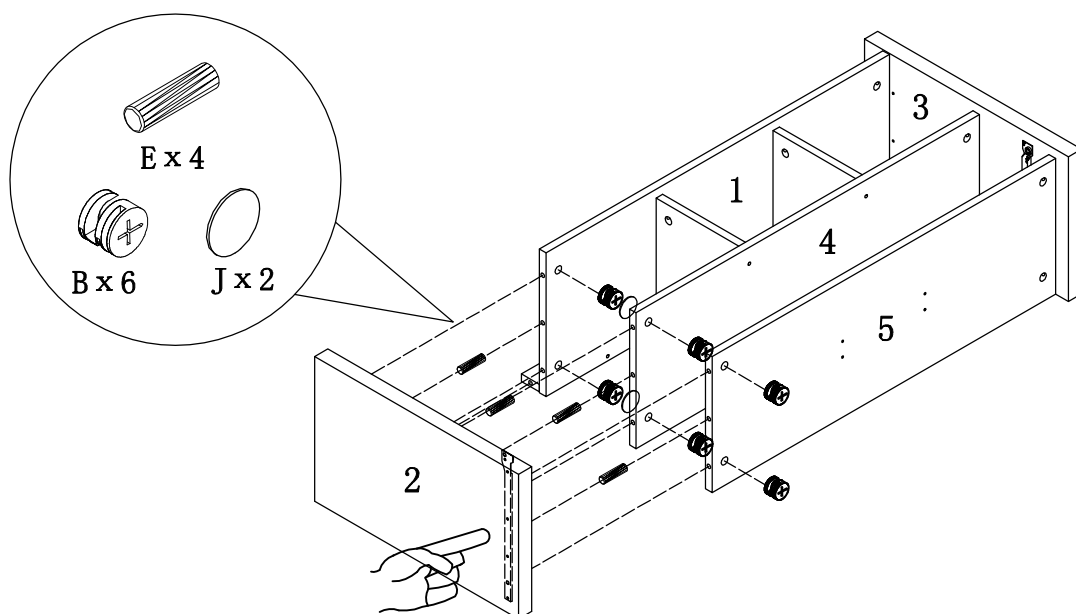


# ASSEMBLY INSTRUCTION

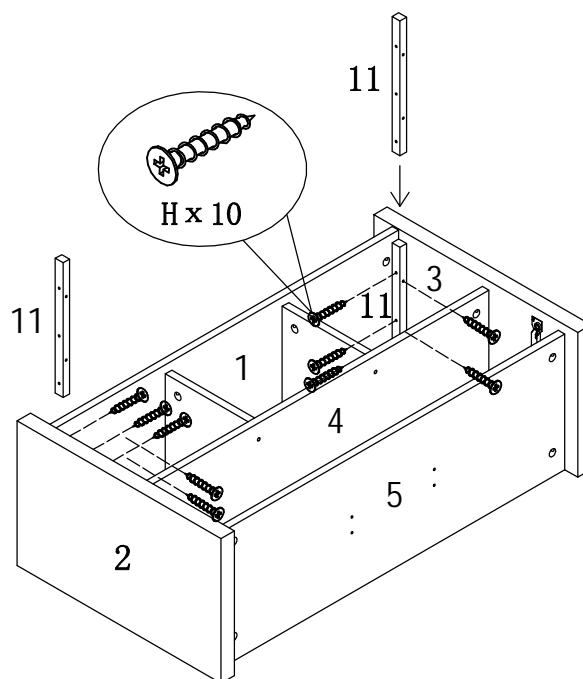


STEP14

STEP15

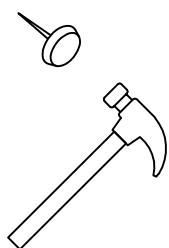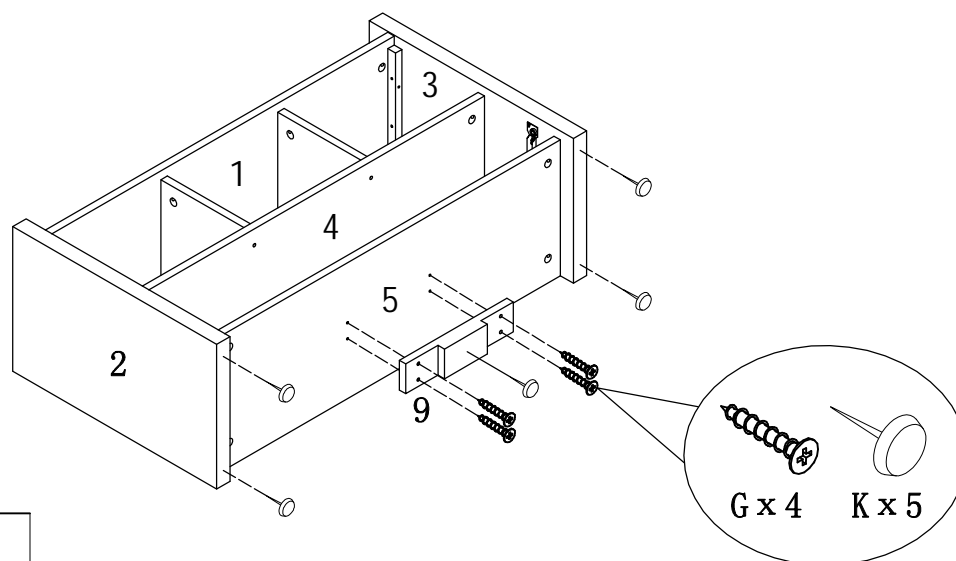

# ASSEMBLY INSTRUCTION

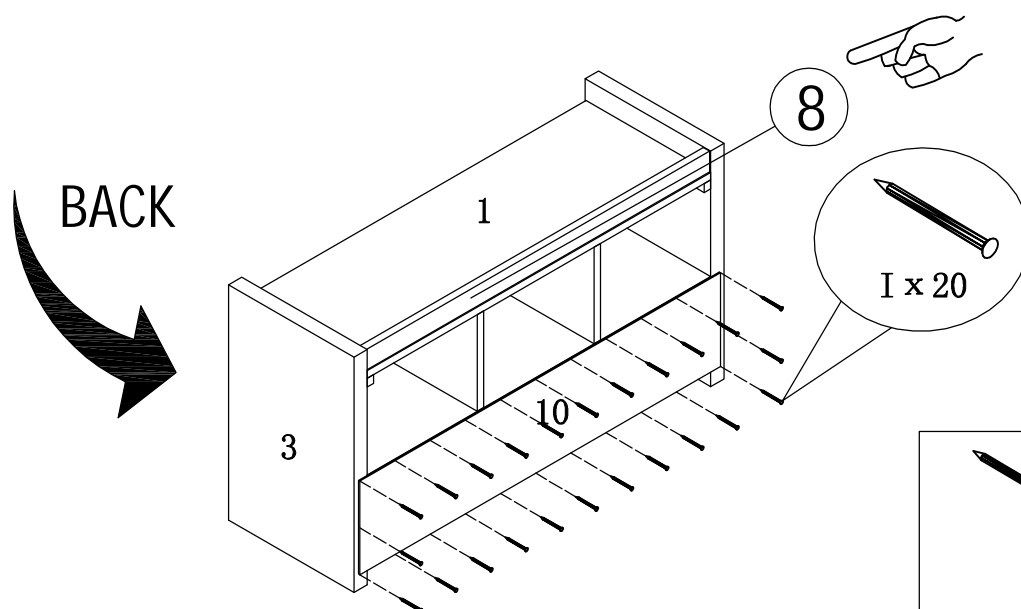

STEP16

STEP17

