


BODYSPA ADVENTURE RV

EASY INSTALLATION INSTRUCTIONS

STEP 1

Remove your existing shower head. To remove, turn the existing shower head in a counterclockwise direction.

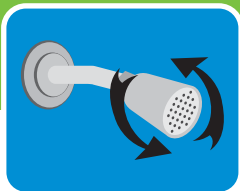


STEP 2

Remove any remnants of old plumber's tape and flush out shower pipe for 5 to 10 seconds.




STEP 3

Wrap plumber's tape clockwise 3 or 4 turns around threaded end of shower arm.

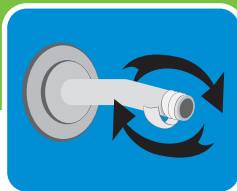


STEP 4

In a clockwise direction, screw end of hose to the taped portion of the shower arm. Hand tighten only.

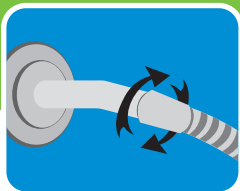


STEP 5

Attach other end of hose to base of handheld and hand tighten.

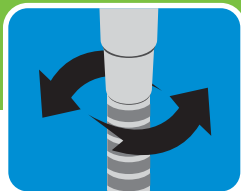

STEP 6

Attach double stick tape provided to back of holder and press firmly to clean, dry shower wall. Place your new handheld shower head into holder.

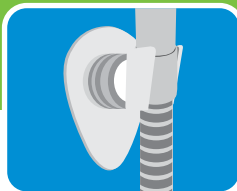

**NO TOOLS
NEEDED**



STOP! NEED HELP?

**PLEASE DO NOT RETURN THIS
PRODUCT TO THE STORE.**

If you need installation assistance, replacement parts or have questions regarding our warranty, our Customer Service team can be contacted by:

PHONE:

1-866-440-9257
or **775-420-5600**

LIVE CHAT:

www.oxygenics.com

EMAIL:

support@oxygenics.com

ONLINE:

www.oxygenics.com/claims


Business hours:

Monday - Thursday 7:00 am to 5:00 pm PST
Friday 7:00 am to 4:30pm PST*

*Closed on all nationally observed holidays

EASY TWIST SPRAY SELECTION

Enjoying multiple spray patterns during your shower has never been easier. With the BodySpa Adventure RV's easy twist design, simply rotate the easy spray selector for a quick spray change.

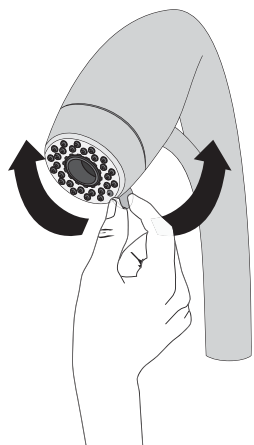

1.8 GPM

For use with automatic compensating valves rated at 1.35 GPM (5.11 L/min) or less.



2.0 GPM


For use with automatic compensating valves rated at 1.50 GPM (5.68 L/min) or less.

BODYSPA ADVENTURE RV

INSTRUCCIONES PARA LA INSTALACIÓN FÁCIL

PASO 1

Quite su cabezal de ducha existente. Para la extracción, gire el cabezal de ducha existente en el sentido contrario a las agujas del reloj.

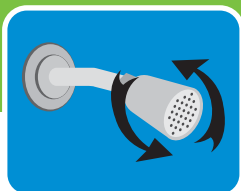


PASO 2

Quite cualquier remanente de vieja cinta de plomería y enjuague el caño de la ducha durante 5 a 10 segundos.




PASO 3

Envuelva con cinta de plomero en el sentido de las agujas del reloj con 3 o 4 vueltas alrededor del brazo de ducha.

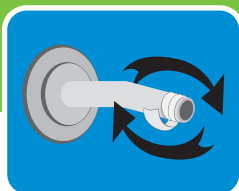


PASO 4

En el sentido de las agujas del reloj, ajuste el extremo de la manguera a la parte encintada del brazo de ducha. Ajuste sólo con la mano.

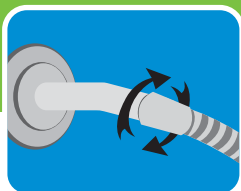


PASO 5

Fije el extremo de la manguera a la ducha portátil y ajuste a mano.

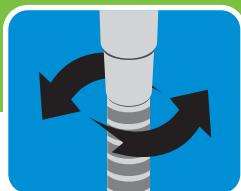

PASO 6

Adhiera la cinta de doble faz suministrada a la parte trasera del sostén y presione firmemente a la pared limpia y seca de la ducha. Coloque su cabezal de ducha de mano en el sostén.

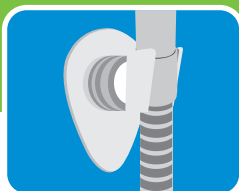

NO SE NECESITA HERRAMIENTAS

¡DETÉNGASE! ¿NECESITAS AYUDA?

NO DEVUELVA ESTE PRODUCTO A LA TIENDA.

Si necesita asistencia de instalación, partes de repuesto o si tiene preguntas sobre su garantía, contacte a atención al cliente al

TELÉFONO:

1-866-440-9257
o al **775-420-5600**

CHAT EN VIVO:

www.oxygenics.com

CORREO ELECTRÓNICO:

support@oxygenics.com

EN LÍNEA:

www.oxygenics.com/claims

Horario de atención:


De lunes a jueves de 7:00 am a 5:00 pm PST

Viernes de 7:00 am a 4:30 pm PST *

* Cerrado en todos los días festivos observados a nivel nacional

SELECCIÓN DE LLUVIA DE GIRO FÁCIL

Disfrutar de varios patrones de lluvia durante su ducha nunca fue más fácil. Con el diseño de giro fácil de la BodySpa Adventure RV, sólo debe rotar el seleccionador fácil de lluvia para un cambio rápido de lluvia.

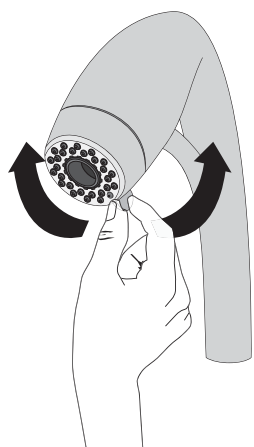

1.8 GPM

Para el uso con válvulas de compensación automáticas nominal de 1.35 GPM (5.11 L/min) o menos.



2.0 GPM

Para el uso con válvulas de compensación automáticas nominal de 1.50 GPM (5.68 L/min) o menos.