


ASSEMBLY INSTRUCTIONS

FULL BED WITH TWIN TRUNDLE AND 2 DRAWERS

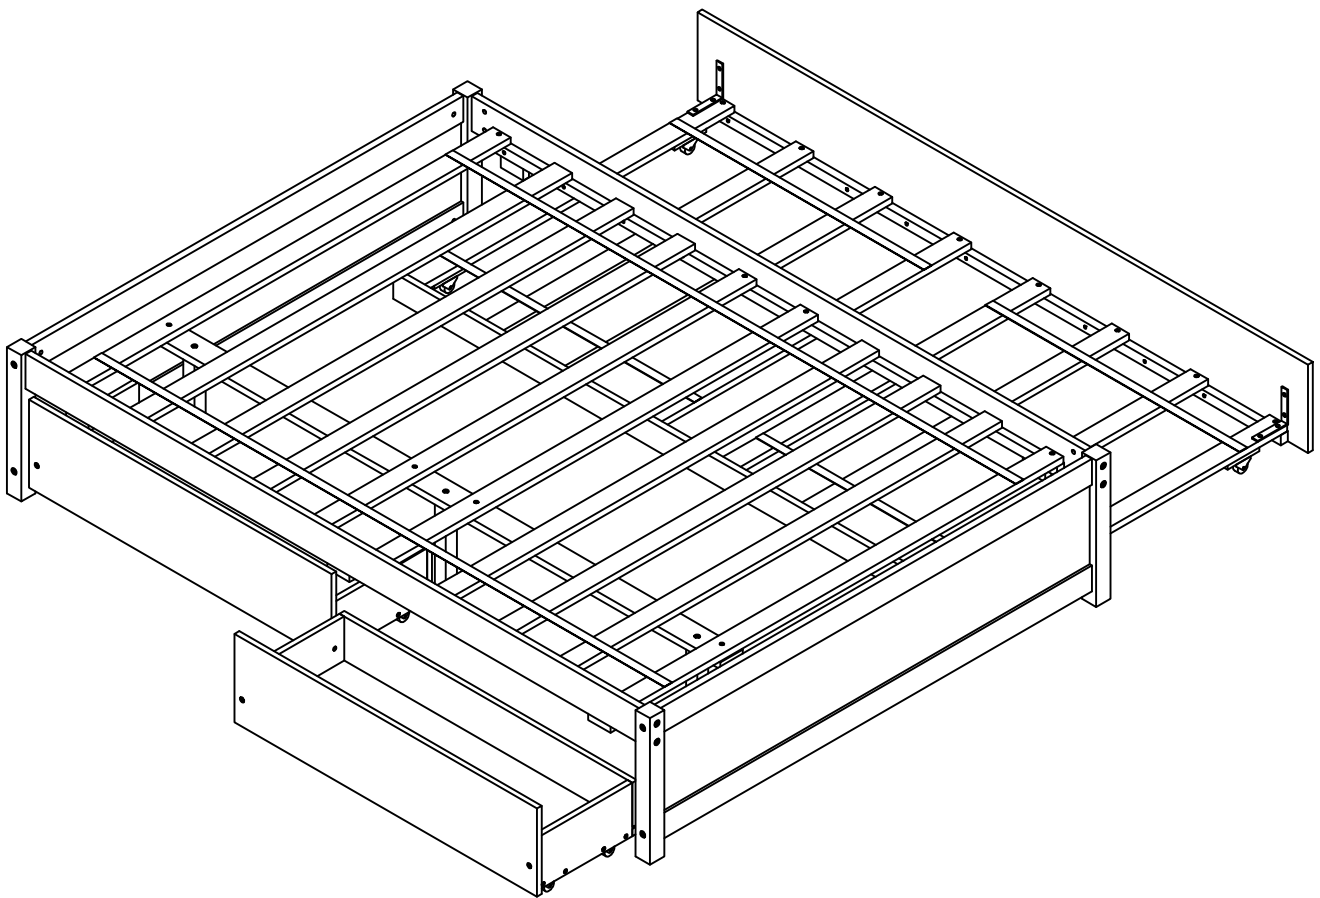


If you have any questions, please feel free to contact us.






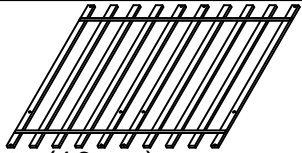







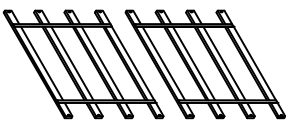


Email: service@qualfurn.net

YX5504








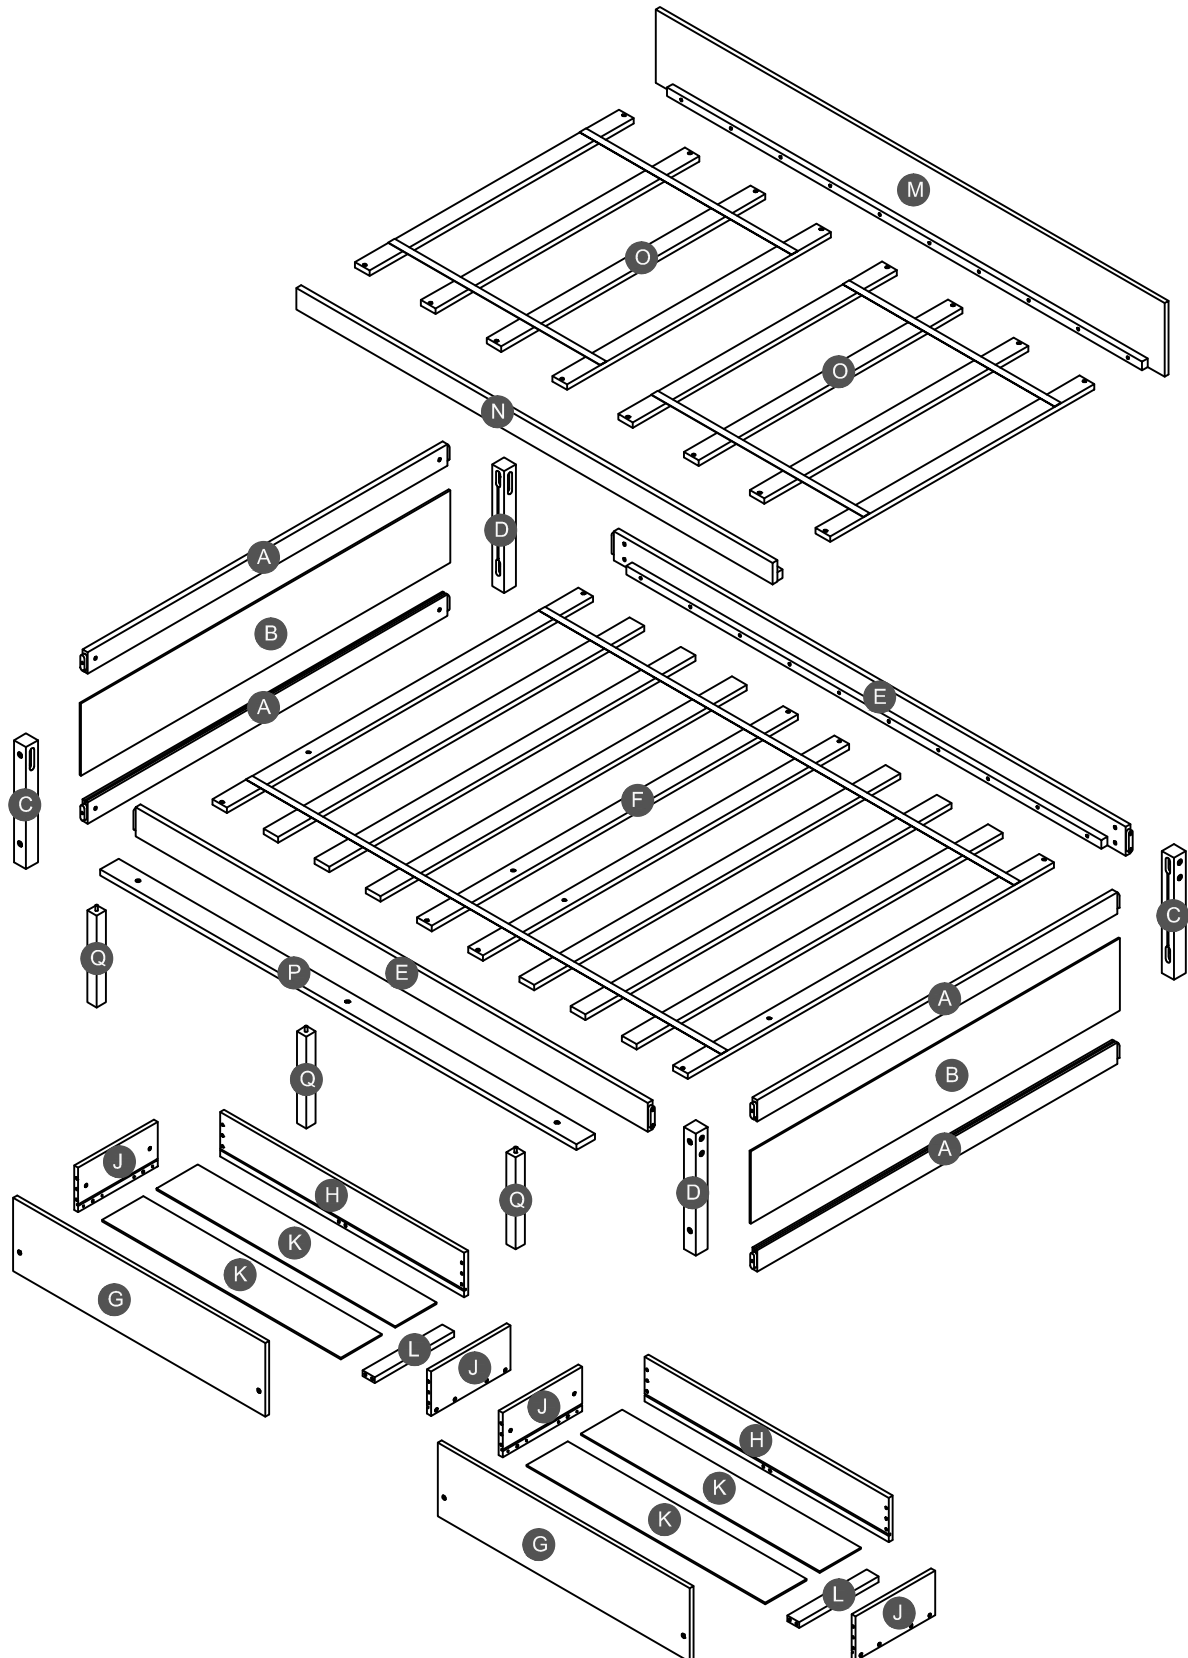






Detail View




Part List

A  HB/FB horizontal - 4pcs	B  HB/FB side panel - 2pcs	C  Leg (Left front&Right back) - 2pcs
D  Leg (Left back&Right front) - 2pcs	E  Side rail (Front & back) - 2pcs	F  Slat - (10pcs)
G  Drawer front - 2pcs	H  Drawer back - 2pcs	J  Drawer (Left / Right)- 4pcs
K  Drawer bottom - 4pcs	L  Drawer support - 2pcs	M  Front panel of trundle - 1pc
N  Back panel side rail of trundle - 1pc	O  Trundle Slat - (8pcs)	P  Support slat - 1pc
Q  Leg support - 3pcs		

Hardware List


1  $\varnothing 8 \times 30 \text{ mm}$ Wood dowel (24pcs)	2  $(\varnothing 15) 1/4" \times 100 \text{ mm}$ Hex-Head bolts (8pcs)	3  $(\varnothing 15) 1/4" \times 80 \text{ mm}$ Hex-Head bolts (8pcs)
4  $(\varnothing 12) 1/4" \times 60 \text{ mm}$ Hex-Head bolts (8pcs)	5  $(1/4") 4.5 \times 58 \text{ mm}$ Allen key (1pc)	6  $1/4" \times 15 (9.5 \text{ mm})$ Horizontal-Hole bolts (24pcs)
7  $100 \times 54 \times 20 \text{ mm}$ Wheels (8pcs)	8  $70 \times 35 \times 19 \text{ mm}$ Drawer stooper (5pcs)	9  $\varnothing 10 \times 20 \text{ mm}$ Wood dowel (8pcs)
10  $\varnothing 4 \times 30 \text{ mm}$ Wood screws (62pcs)	11  $100 \times 63 \times 20 \text{ mm}$ Wheels (4pcs)	12  $95 \times 95 \times 18 \times 3 \text{ mm}$ Metal bracket (2pcs)
13  $40 \times 18 \times 18 \times 2 \text{ mm}$ Metal bracket (2pcs)	14  $\varnothing 3.5 \times 15 \text{ mm}$ Wood screws (16pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

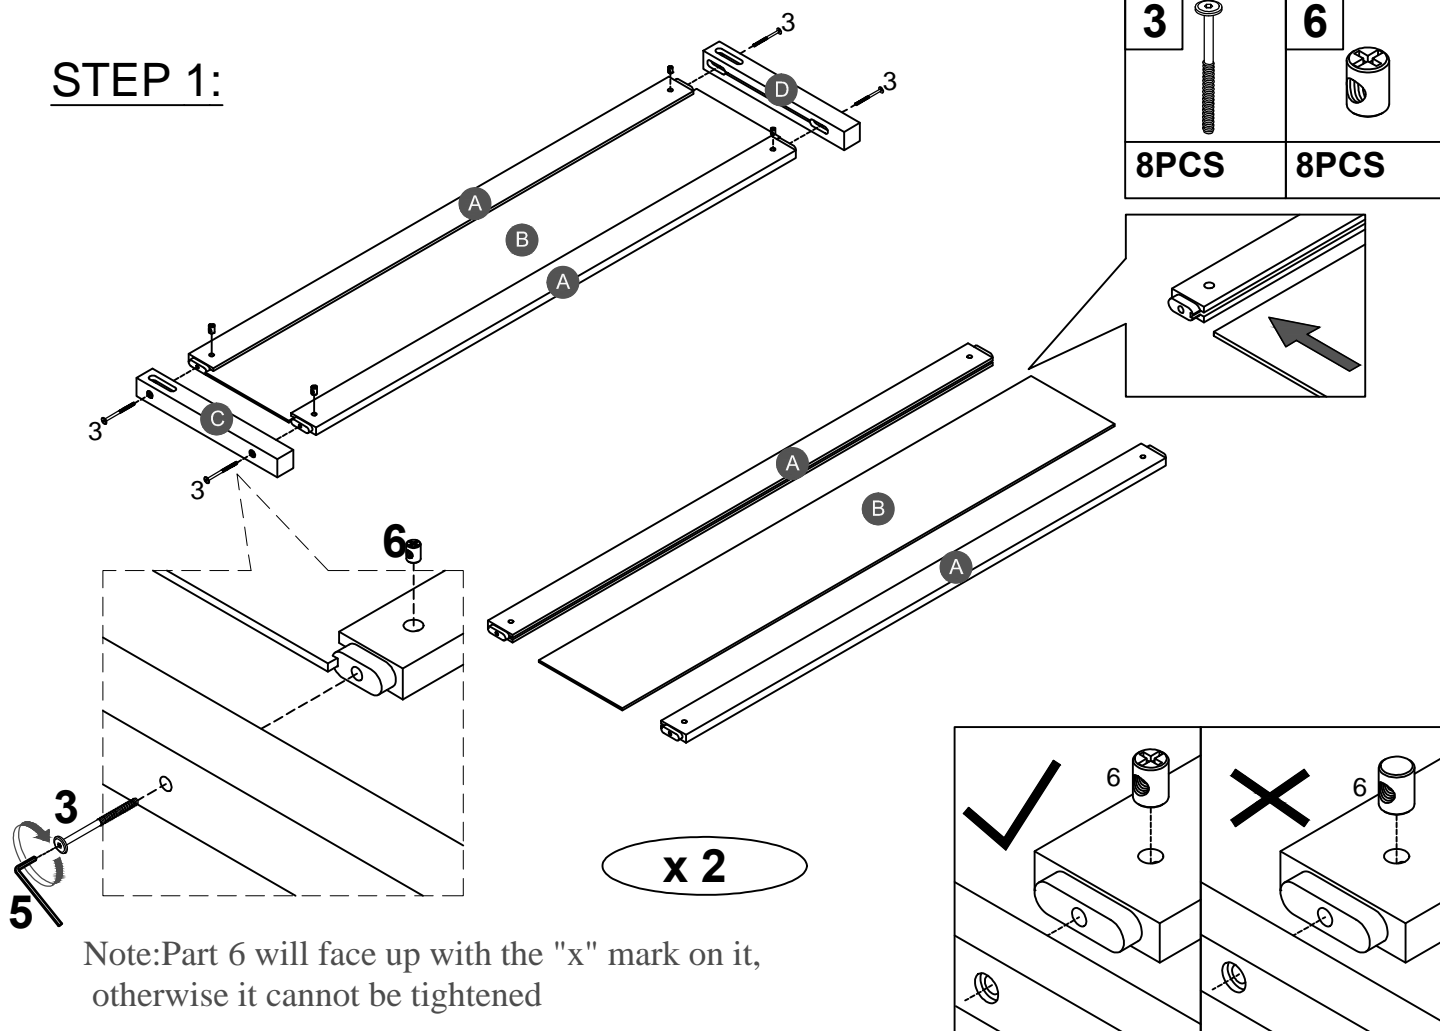


STEP 2:

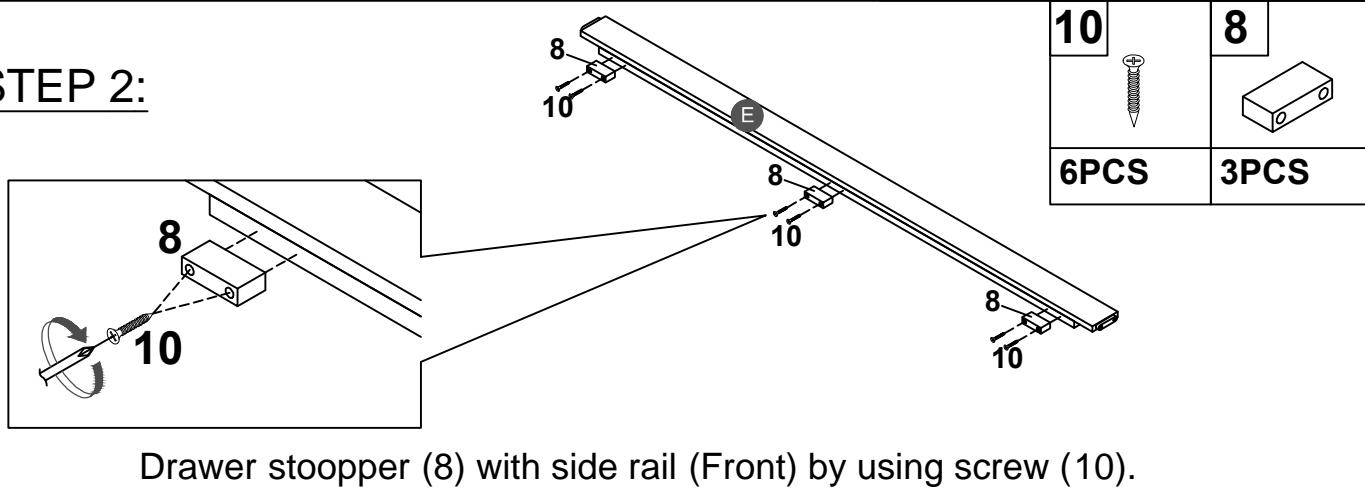

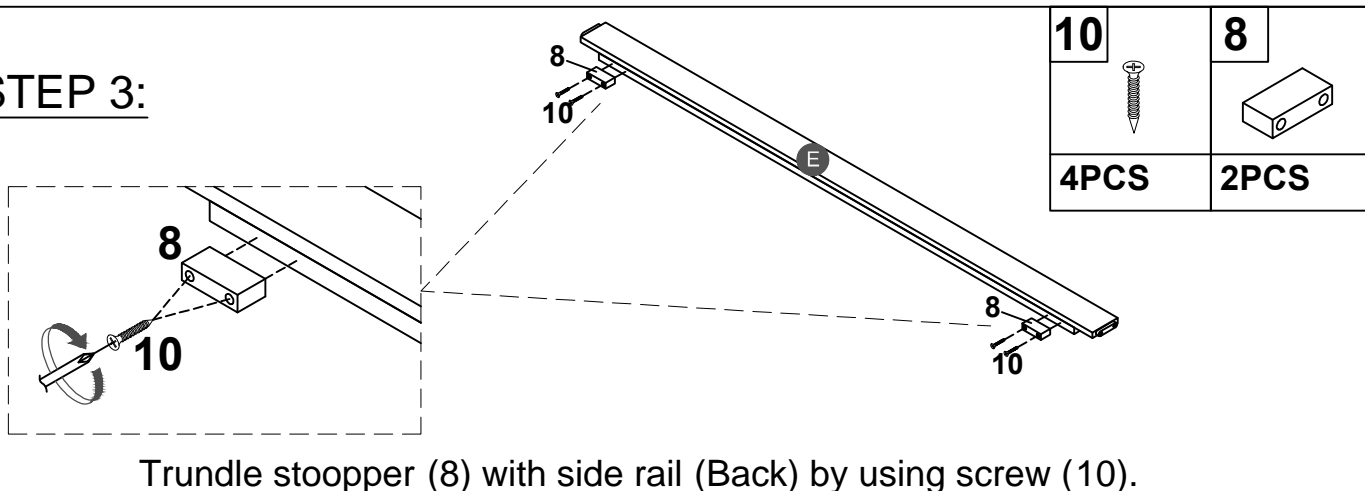

STEP 3:

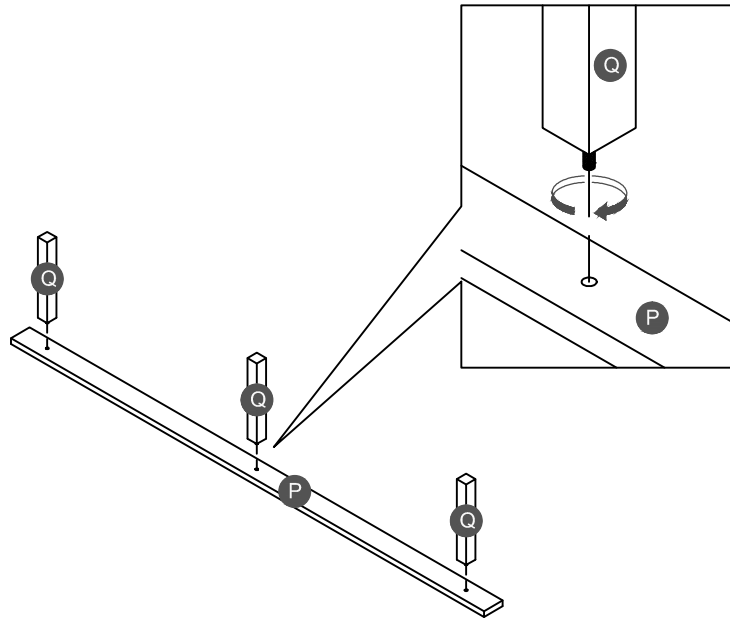


STEP 4:




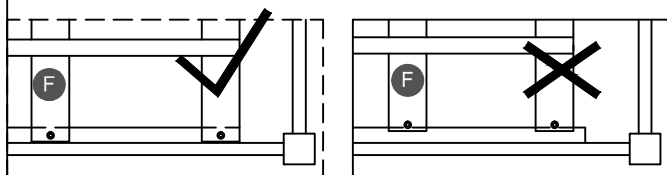
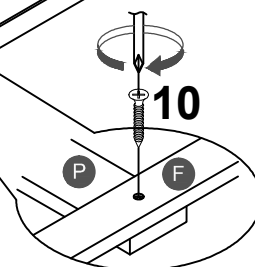
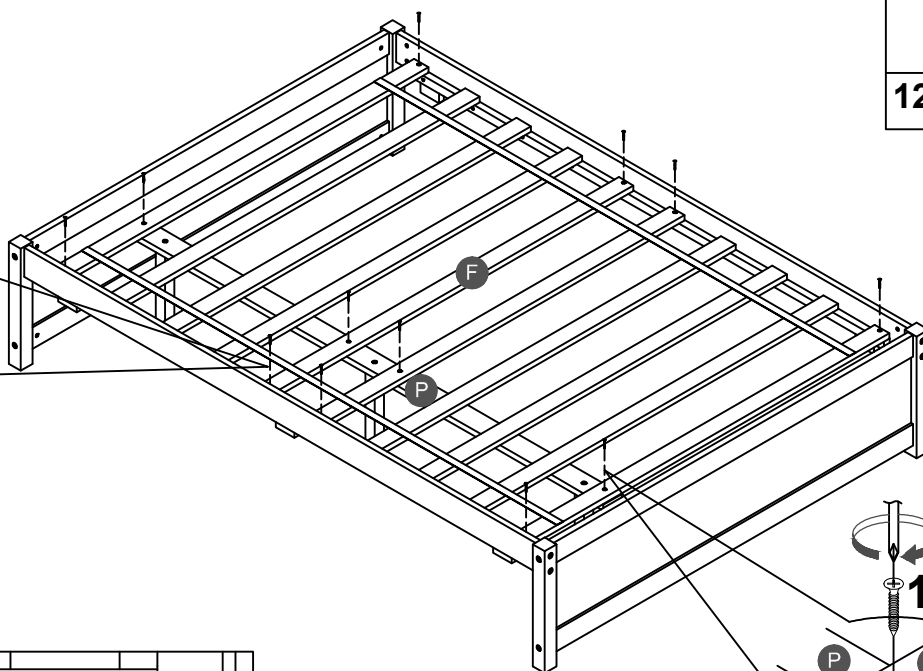
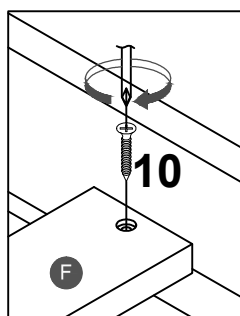
STEP 5:

2		6	
8PCS		8PCS	

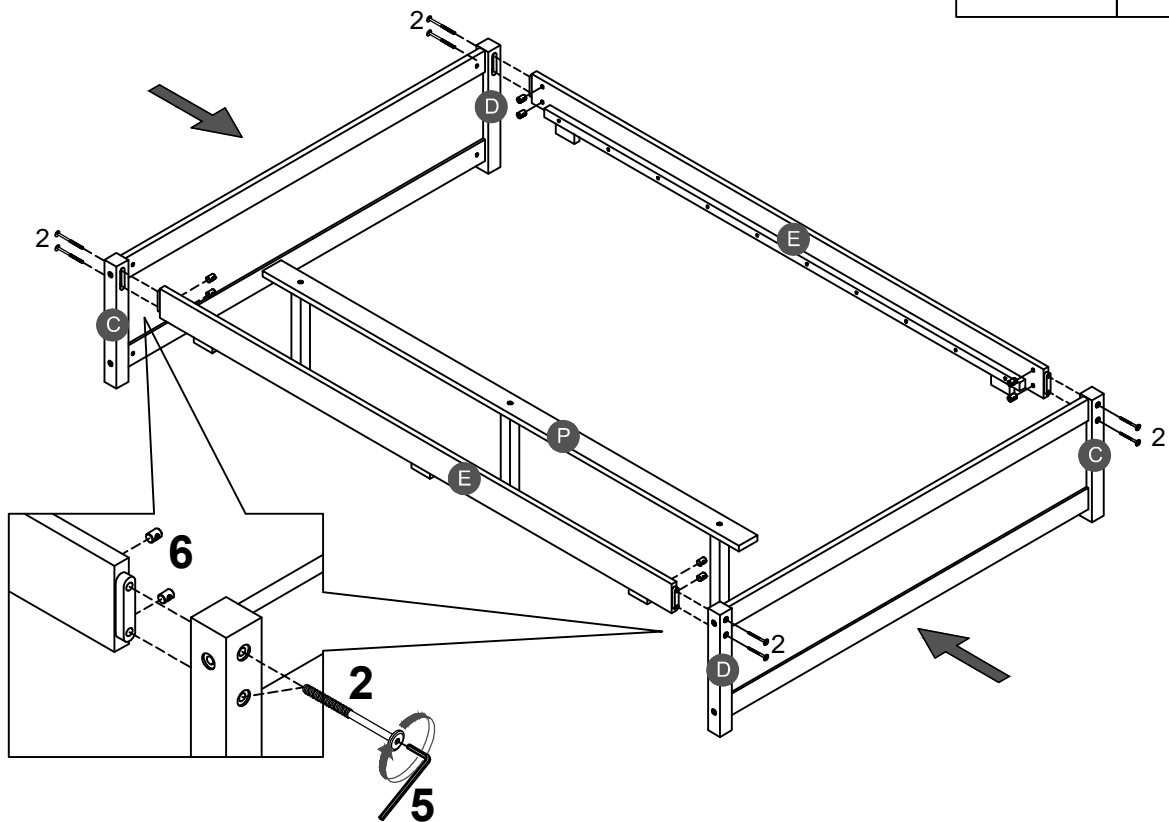




STEP 6:


10

12PCS



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break

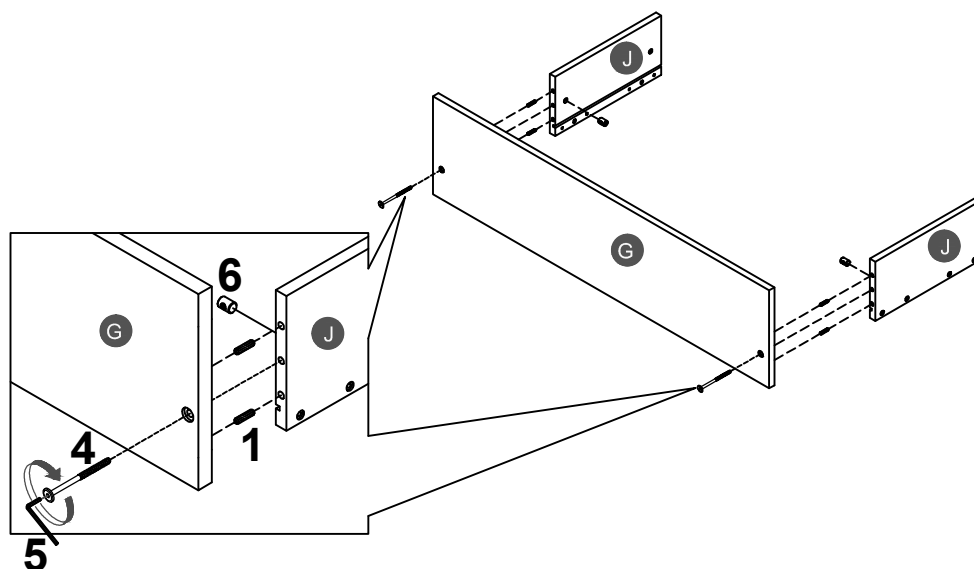


STEP 7:


1 	4 	6 
8PCS	4PCS	4PCS






x 2



STEP 8:

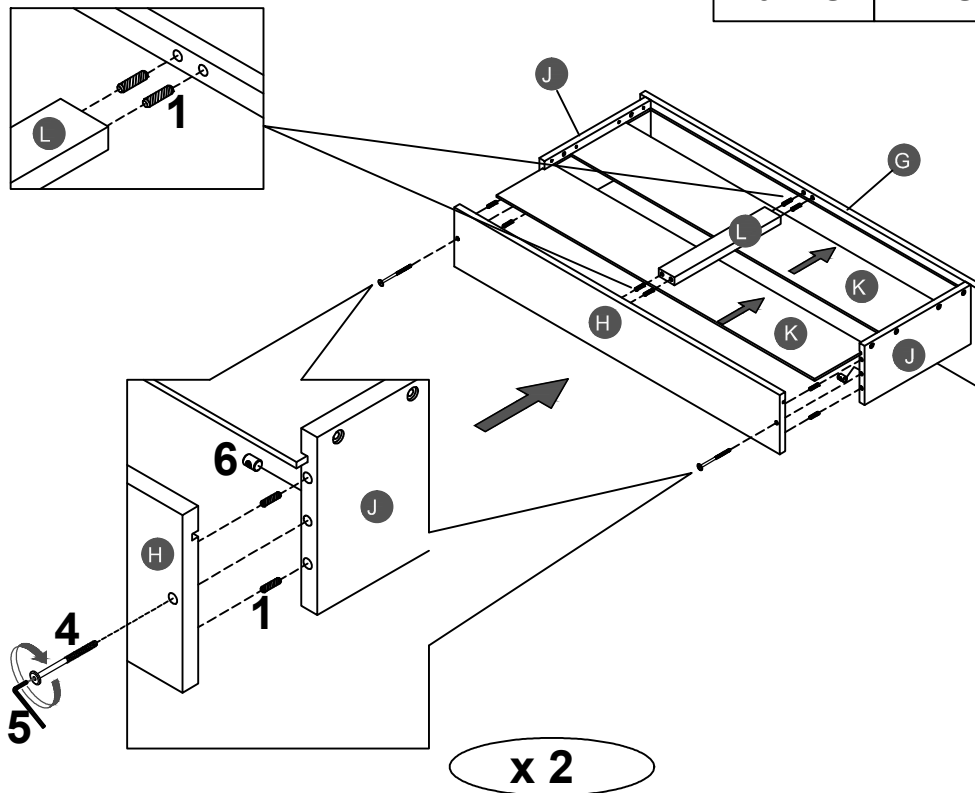1		4		6	
16PCS		4PCS		4PCS	





STEP 9:

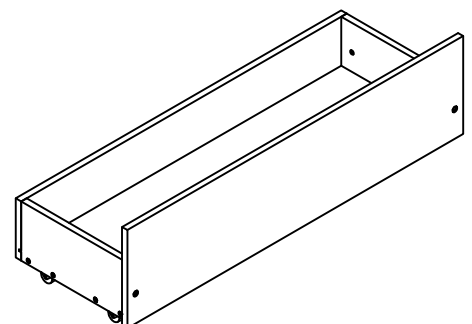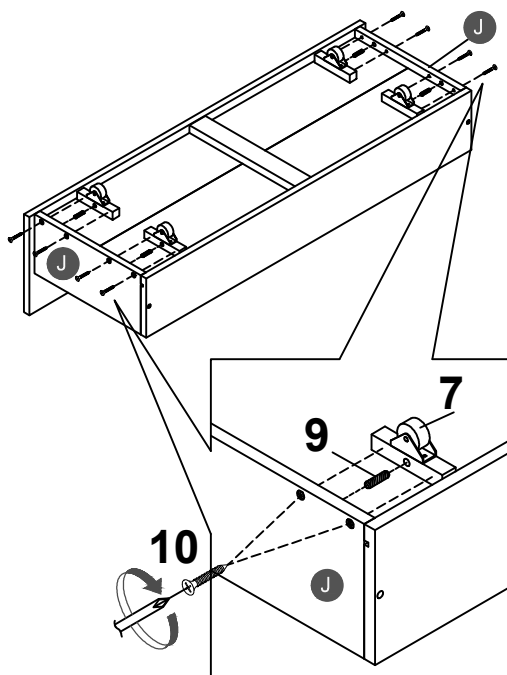
7		9		10	
8PCS		8PCS		16PCS	




x 2



STEP 10:

11	10
	
4PCS	8PCS

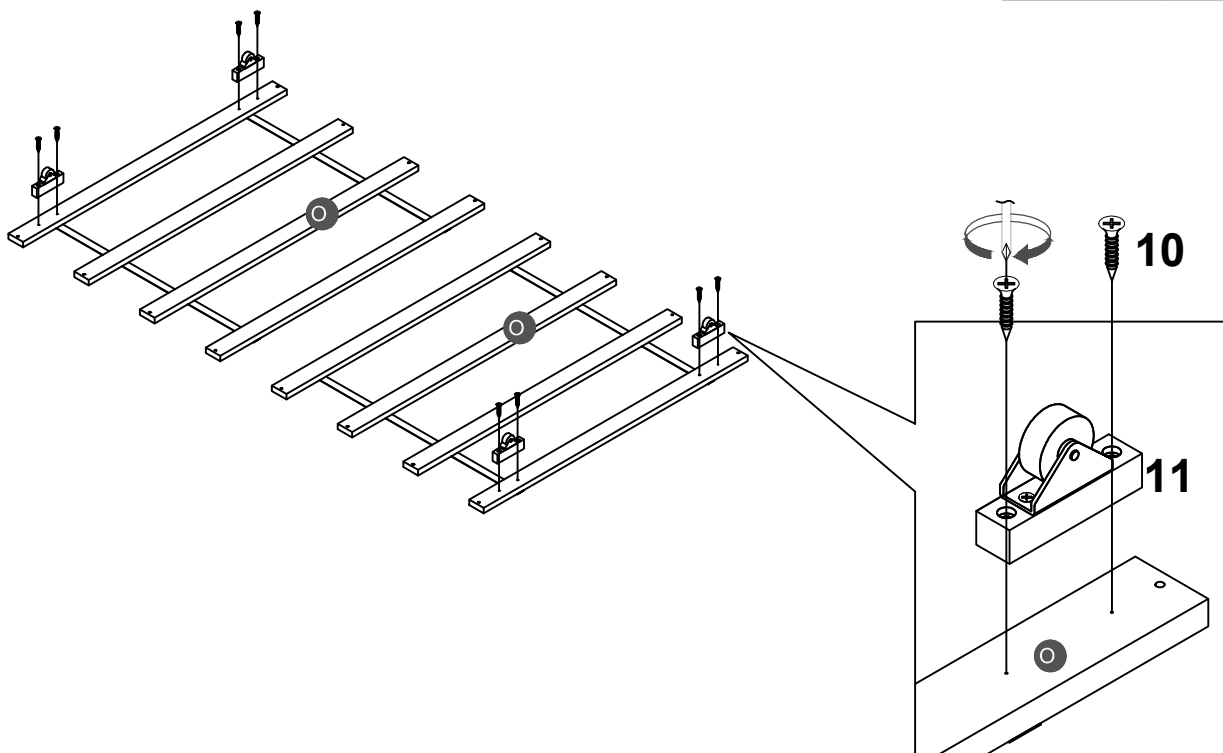



STEP 11:


10

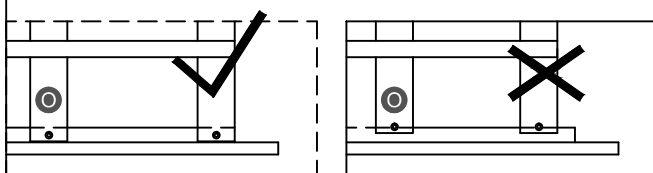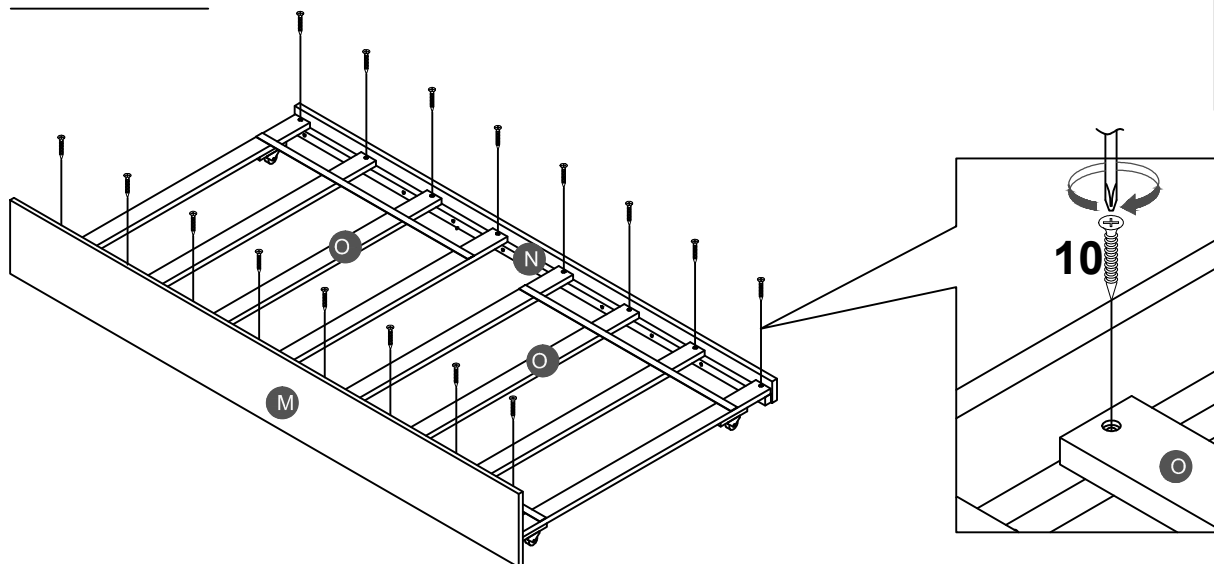16PCS





Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break


STEP 12:

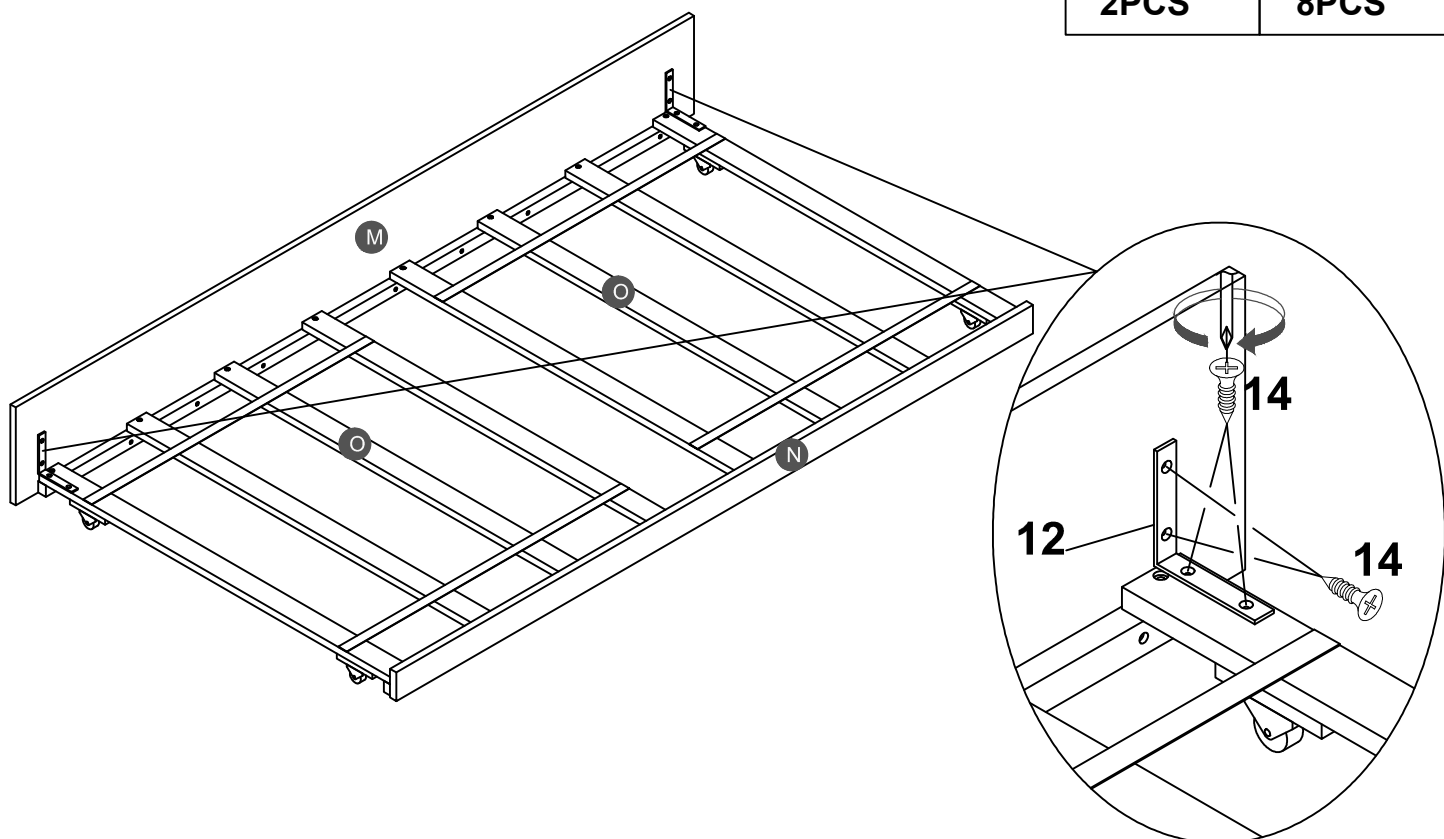12	14
	
2PCS	8PCS




STEP 13:

14	13
	
8PCS	2PCS

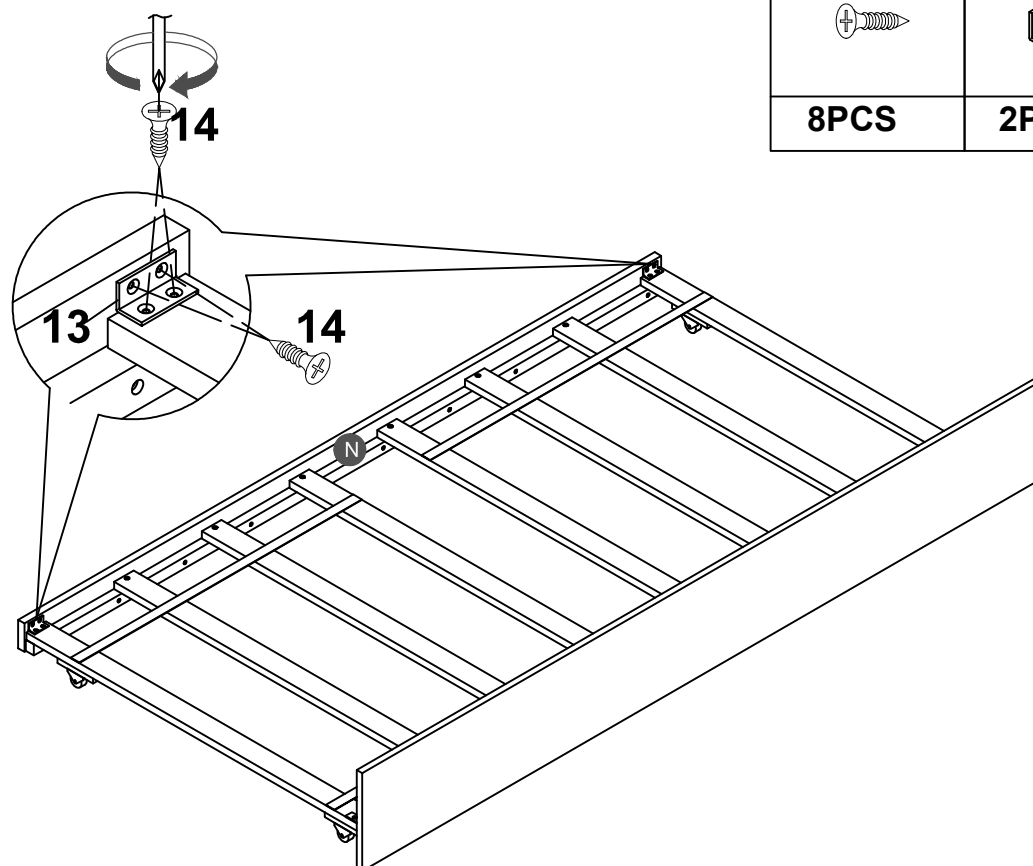

STEP 14:

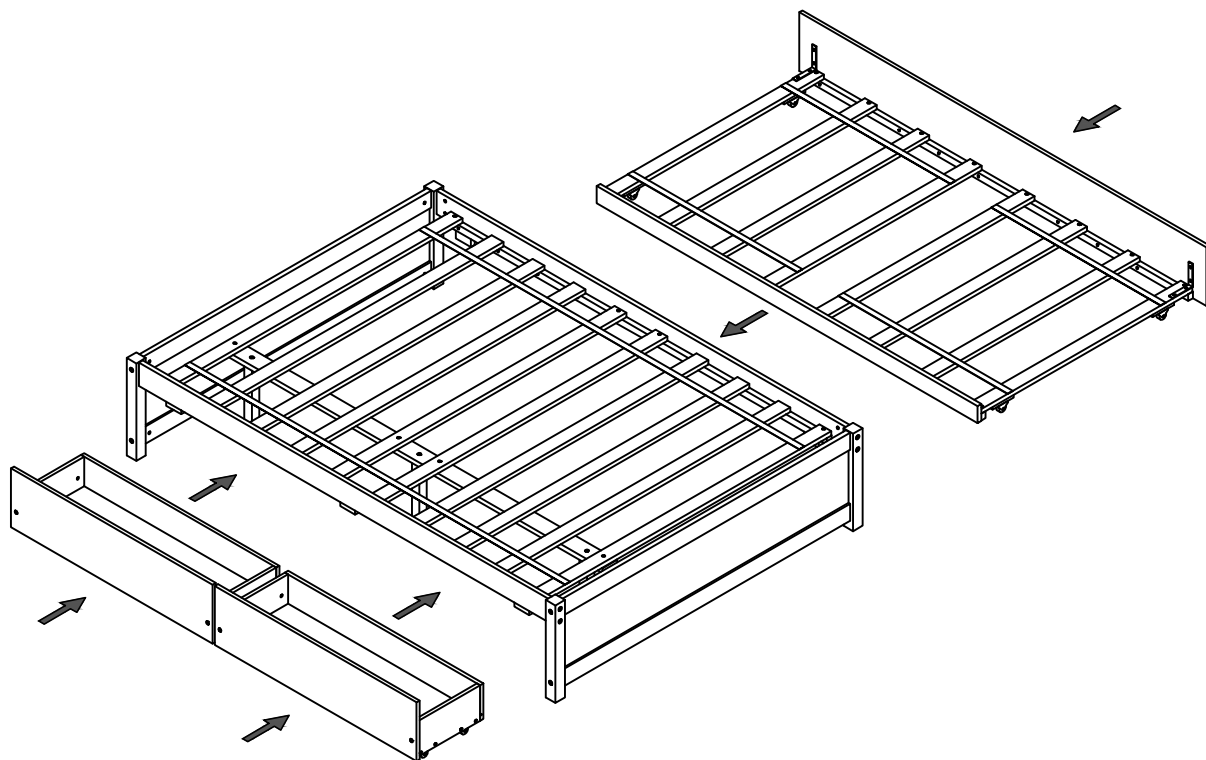

Push Drawers and Trundle under the bottom of Full bed.

