




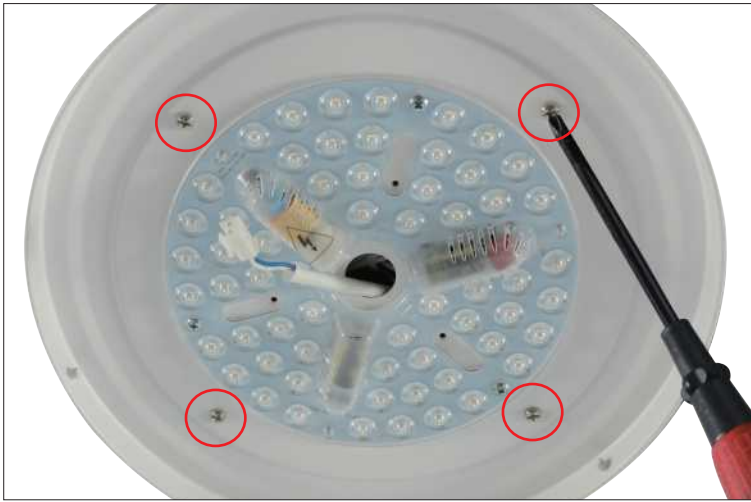


Step 18
Fix the light kit with the screws.

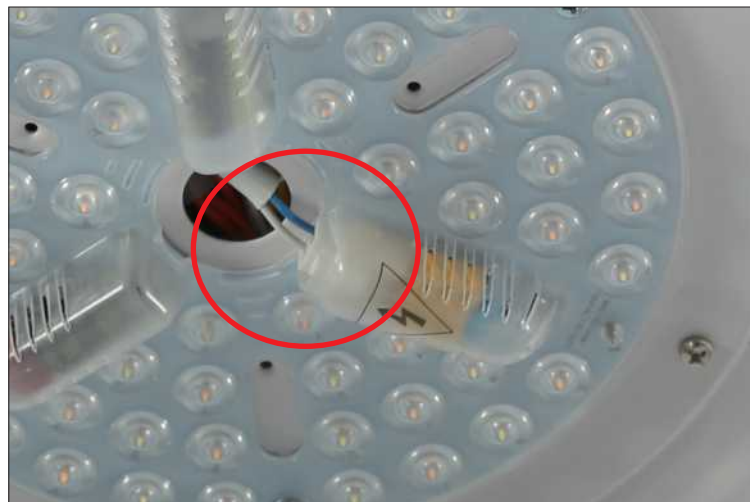

Step 19
Connect the light kit power cord to the light kit receiver.

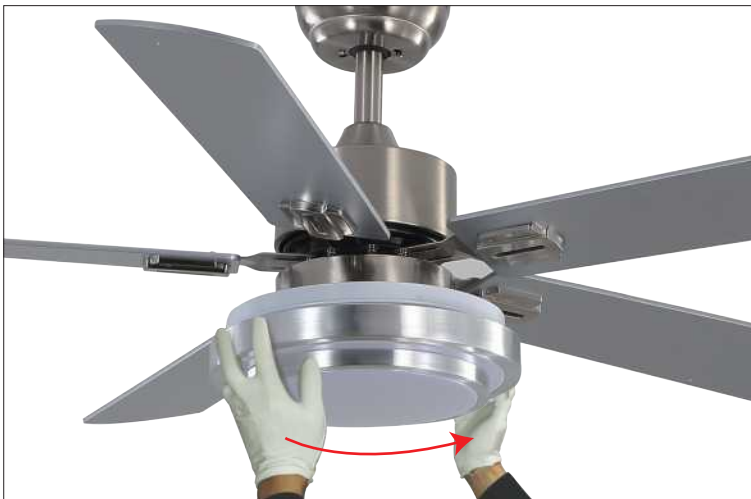

Step 20
Rotate the light cover until fixed.

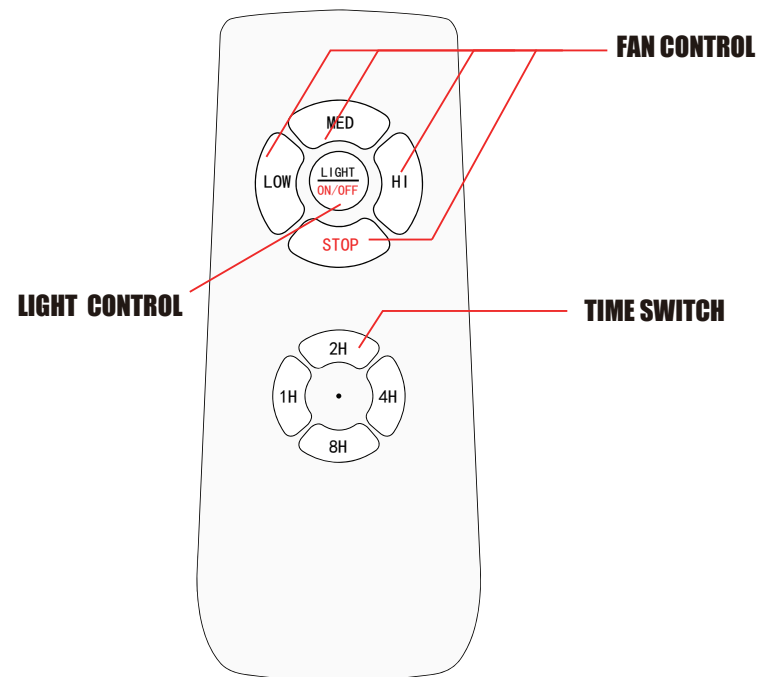

CEILING FAN INSTALLATION

NOTE

1. PRESS THE ON/OFF BUTTON CONTINUOUSLY TO CHANGE THE COLOR TEMPERATURE . TURN BACK ON THE LIGHT MORE THAN 7 SECONDS AFTER TURN OFF THE LIGHT , THE COLOR TEMPERATURE WILL BE THE SAME AS LAST TIME.
2. IF THE REMOTE CONTROL CANNOT BE USED NORMALLY, PLEASE PRESS AND HOLD THE MIDDLE AND LOW BUTTONS AT THE SAME TIME WITHIN 5 SECONDS AFTER THE PRODUCT IS POWERED ON, UNTIL YOU HEAR TWO BEEPS TO SUCCEED.IF IT DOESNT WORK. PLEASE TRY AGAIN.



① Motor



② Hanging Bracket



③ Up Canopy



④ Blades



⑤ Down Rod



⑥ Down Rod 2



⑦ Blade Holder Brackets





⑧ Blades Holders



⑨ Down Canopy




⑩ light cover

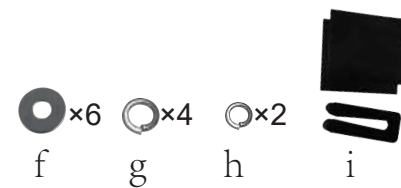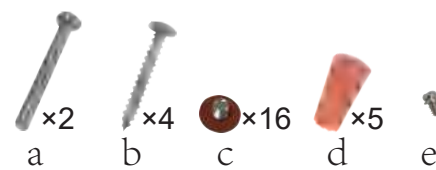

⑪ Hardware fitting




⑫ Remote Control

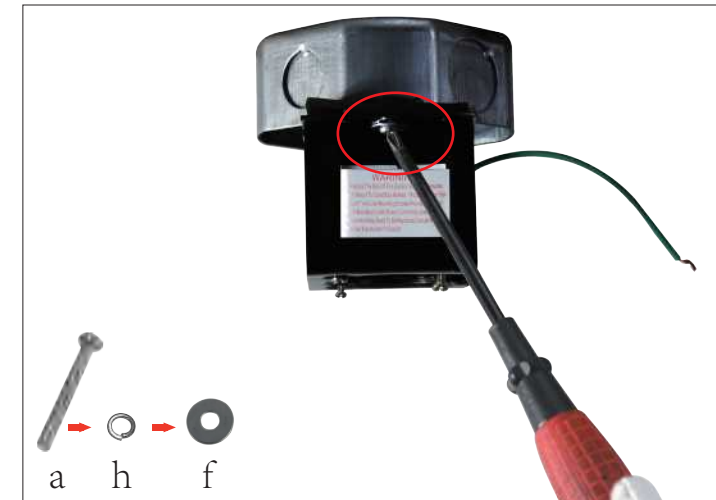

Step 1 For concrete ceiling, install the mounting plate to octagon box with two machine screws.

or

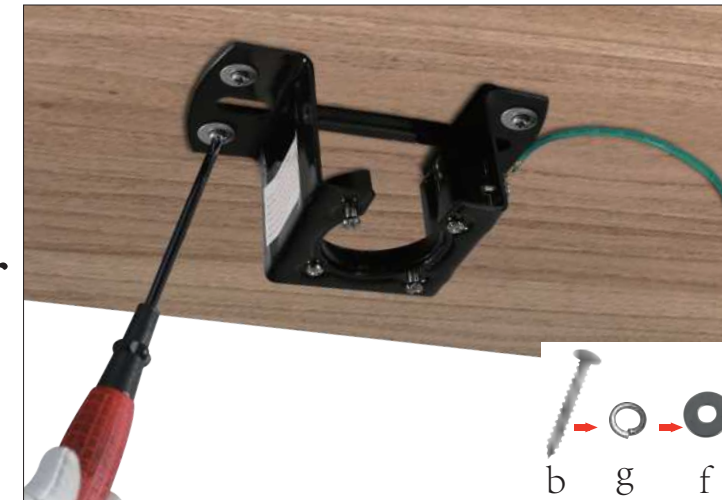

Step 1 For wooden ceiling, install the mounting plate to wooden ceiling with two wood screws.



Step 2
Remove the 4 fixing screws for the light kit.



Step 3
Remove the 8 fixing screws for the fan blades.



Step 4
Loosen the 2 screws of the coupler.




Step 5
Pull out the R-pin from the rod.



Step 6
Put the wires and the two canopies through the downrod



Step 7
Insert the cross pin and fix it with R-pin.

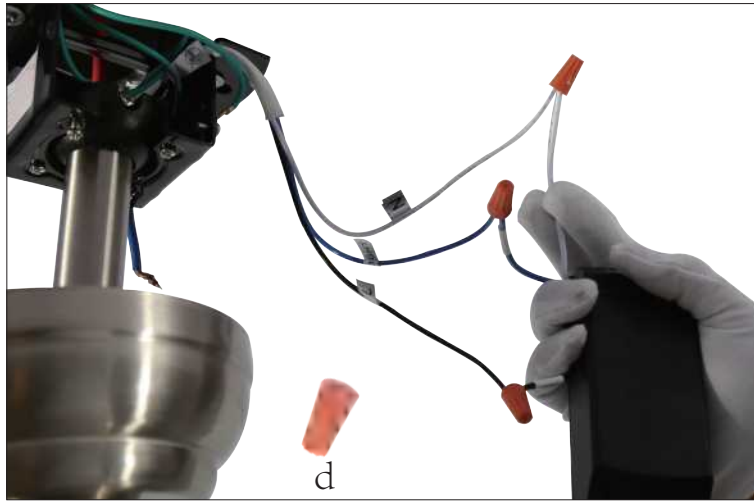

Step 12
Connect the same color wires of the fan and receiver.




Step 13
Connect the receiver to home wires. Black for Live wire, White for neutral wire, Green for ground wire.



Step 8
Tighten the 2 screws of the coupler.



Step 9
Cover the coupler with down canopy.

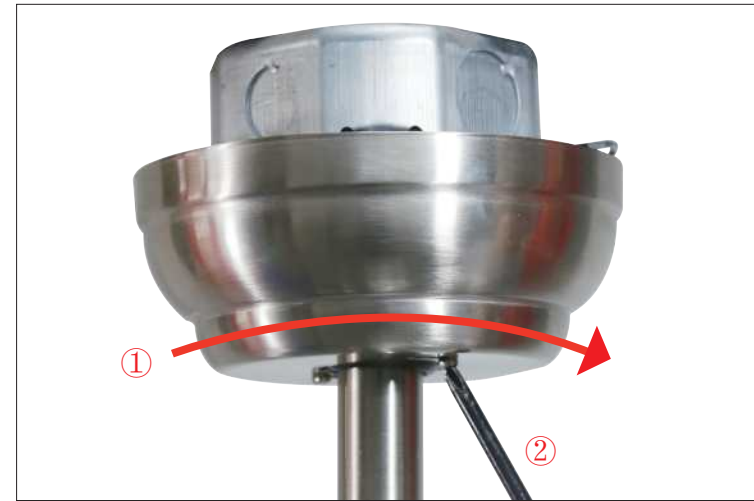

Step 14
① Rotate the up canopy.
② Tighten the two screws.




Step 15
Align the hole between blade and holder.



Step 10
Loosen the two opposite screws



Step 11
Hang the fan on the hanging bracket and align the slot on the downrod with the bulge on the hanging bracket.

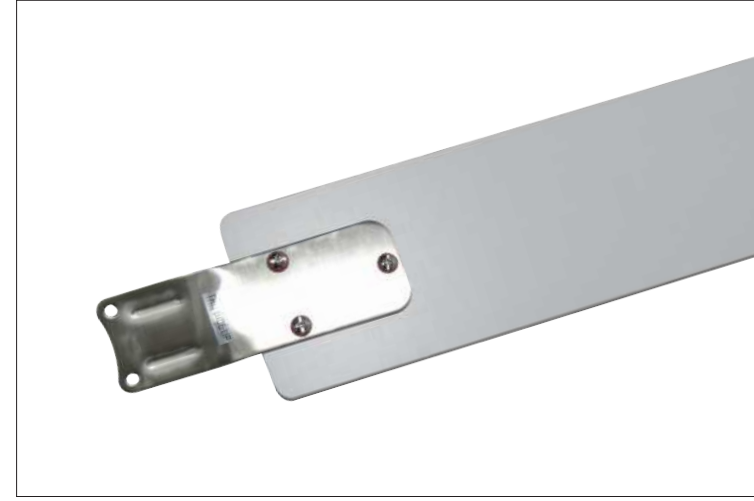

Step 16
The other side, fix the blade holder bracket with screws and washers.



Step 17
Install the blades, tighten the screws.