


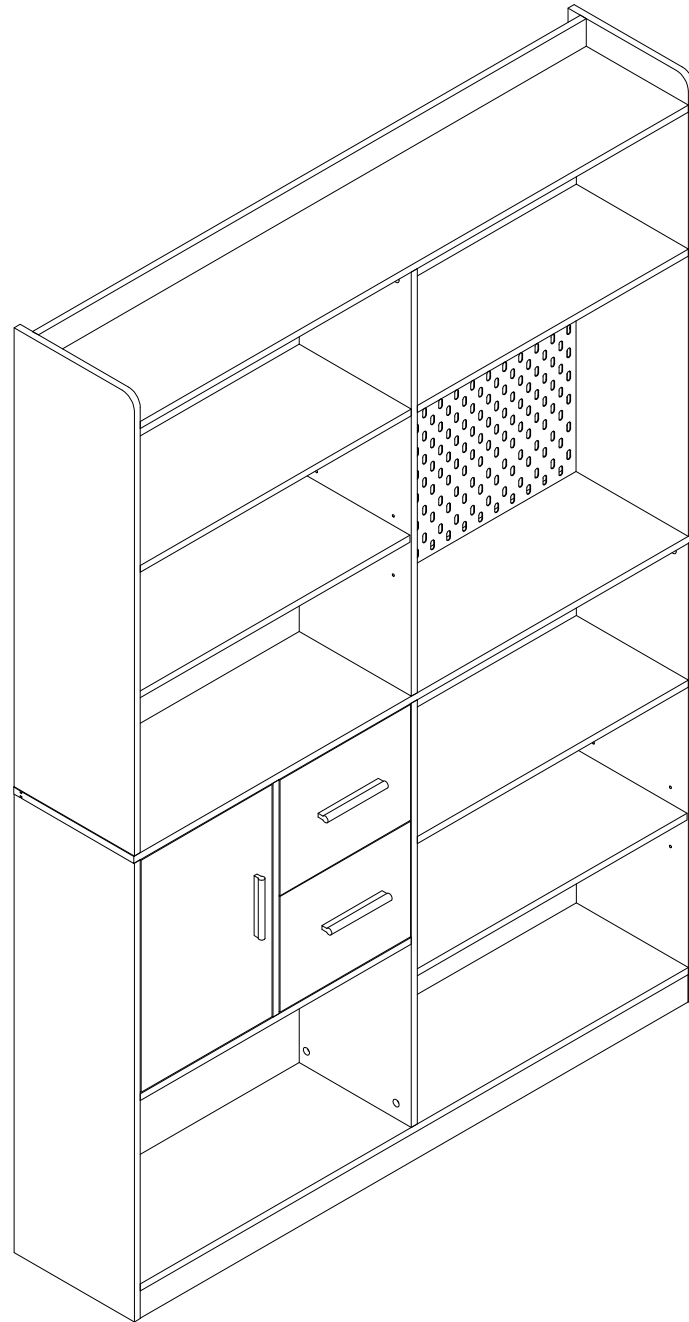


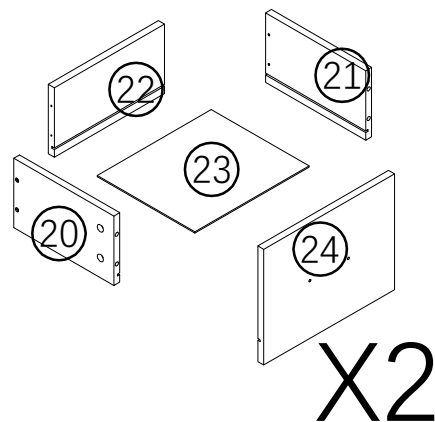

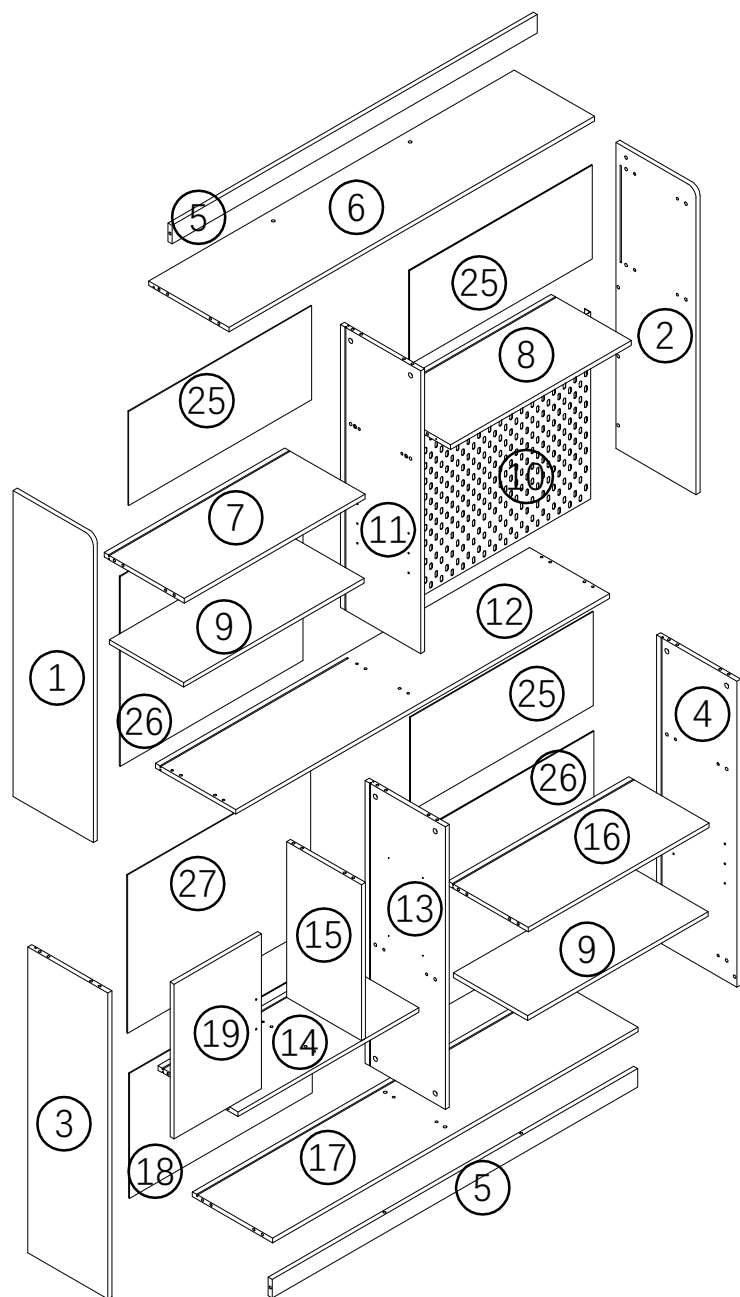


O 01 02 03 04 05 2PCS	H 8PCS	A 50PCS
P 24PCS	I 4*18 6PCS	B 50PCS
Q 1PCS	J 3.5*35 8PCS	C 8*40 44PCS
	K 28PCS	D 7*50 10PCS
	L 3*12 28PCS	E 250mm E2 E1 2PCS
	M 3PCS	F 3.5*14 30PCS
	N 6PCS	G 2PCS

1




992*300 1PS

2




992*300 1PS

3




992*300 1PS

4




992*300 1PS

5

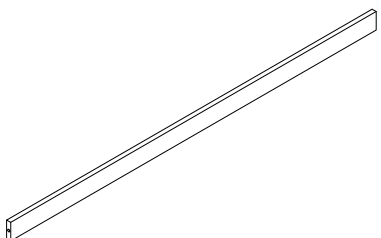


1168*60 2PS

6

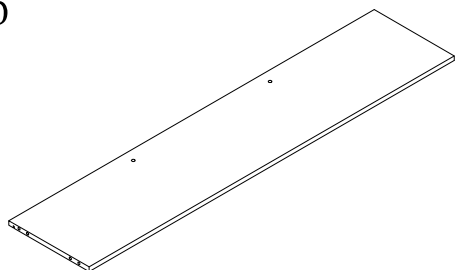


1168*300 1PS

7

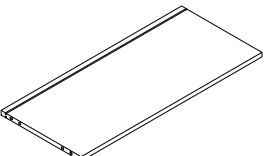


576.5*300 1PS

8

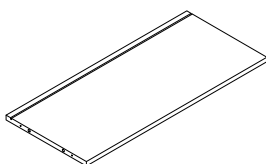


576.5*300 1PS

9

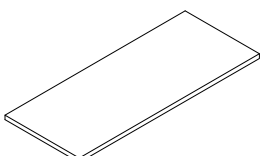


575*278 2PS

10

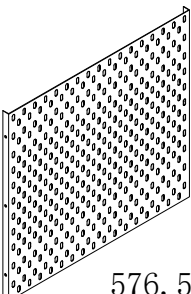


576.5*606 1PS

11




917*300 1PS

12

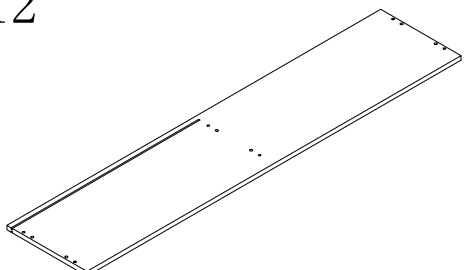


1200*300 1PS

13




917*300 1PS

14

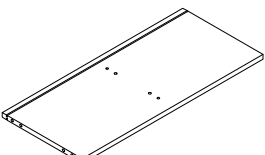


576.5*300 1PS

15




506*280 1PS

16

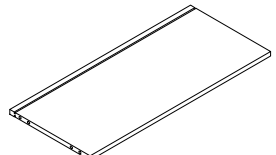


576.5*300 1PS

17

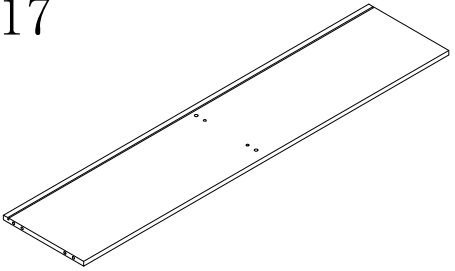

1168*300 1PS

18

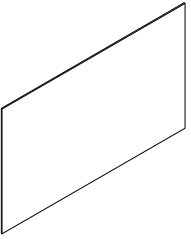


405*585 1PS

19




502*277 1PS

20

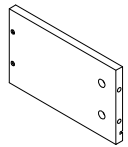


250*150 2PS

21

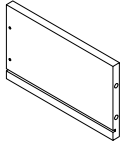


250*150 2PS

22

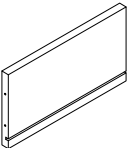


225*150 2PS

23

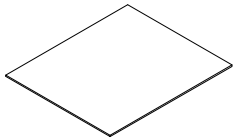


235*244 2PS

24

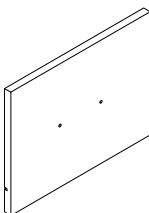


276*250 2PS

25

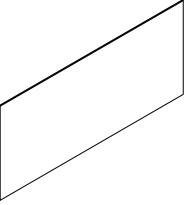


305*585 3PS

26

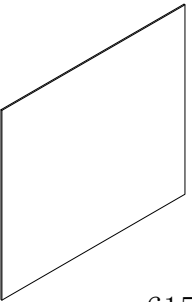


615*585 2PS




27

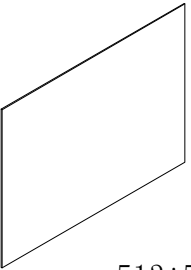

513*585 1PS



1

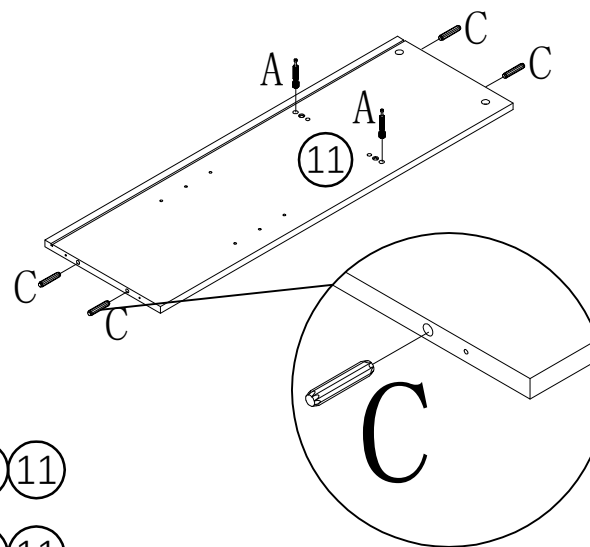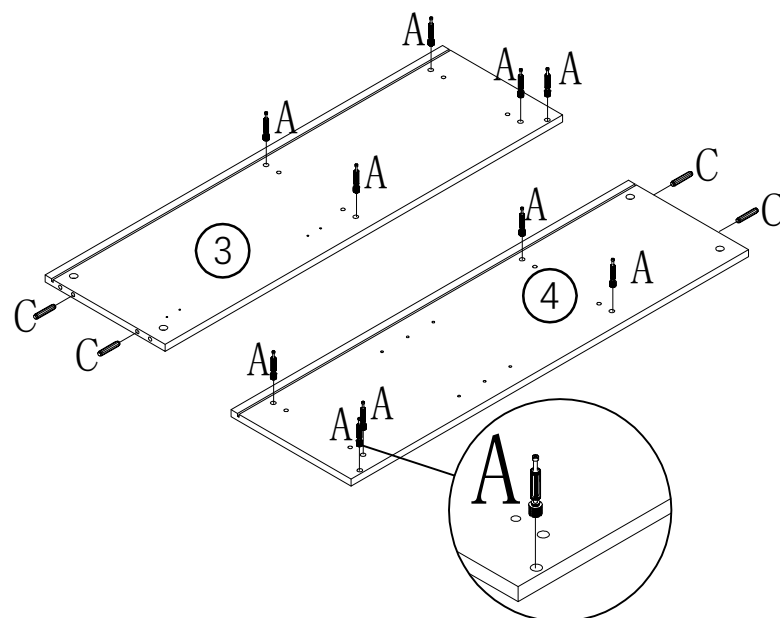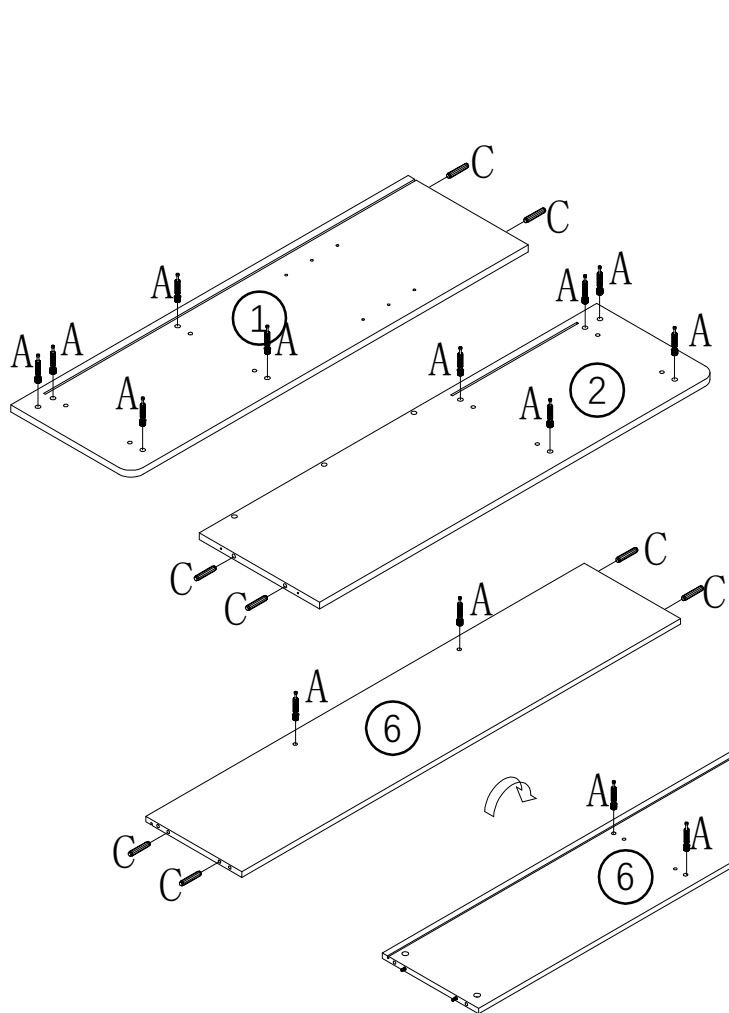

A*26


put A on board (1)(2)(3)(4)(6)(11)



C*16






put C on board (1)(2)(3)(4)(6)(11)

2

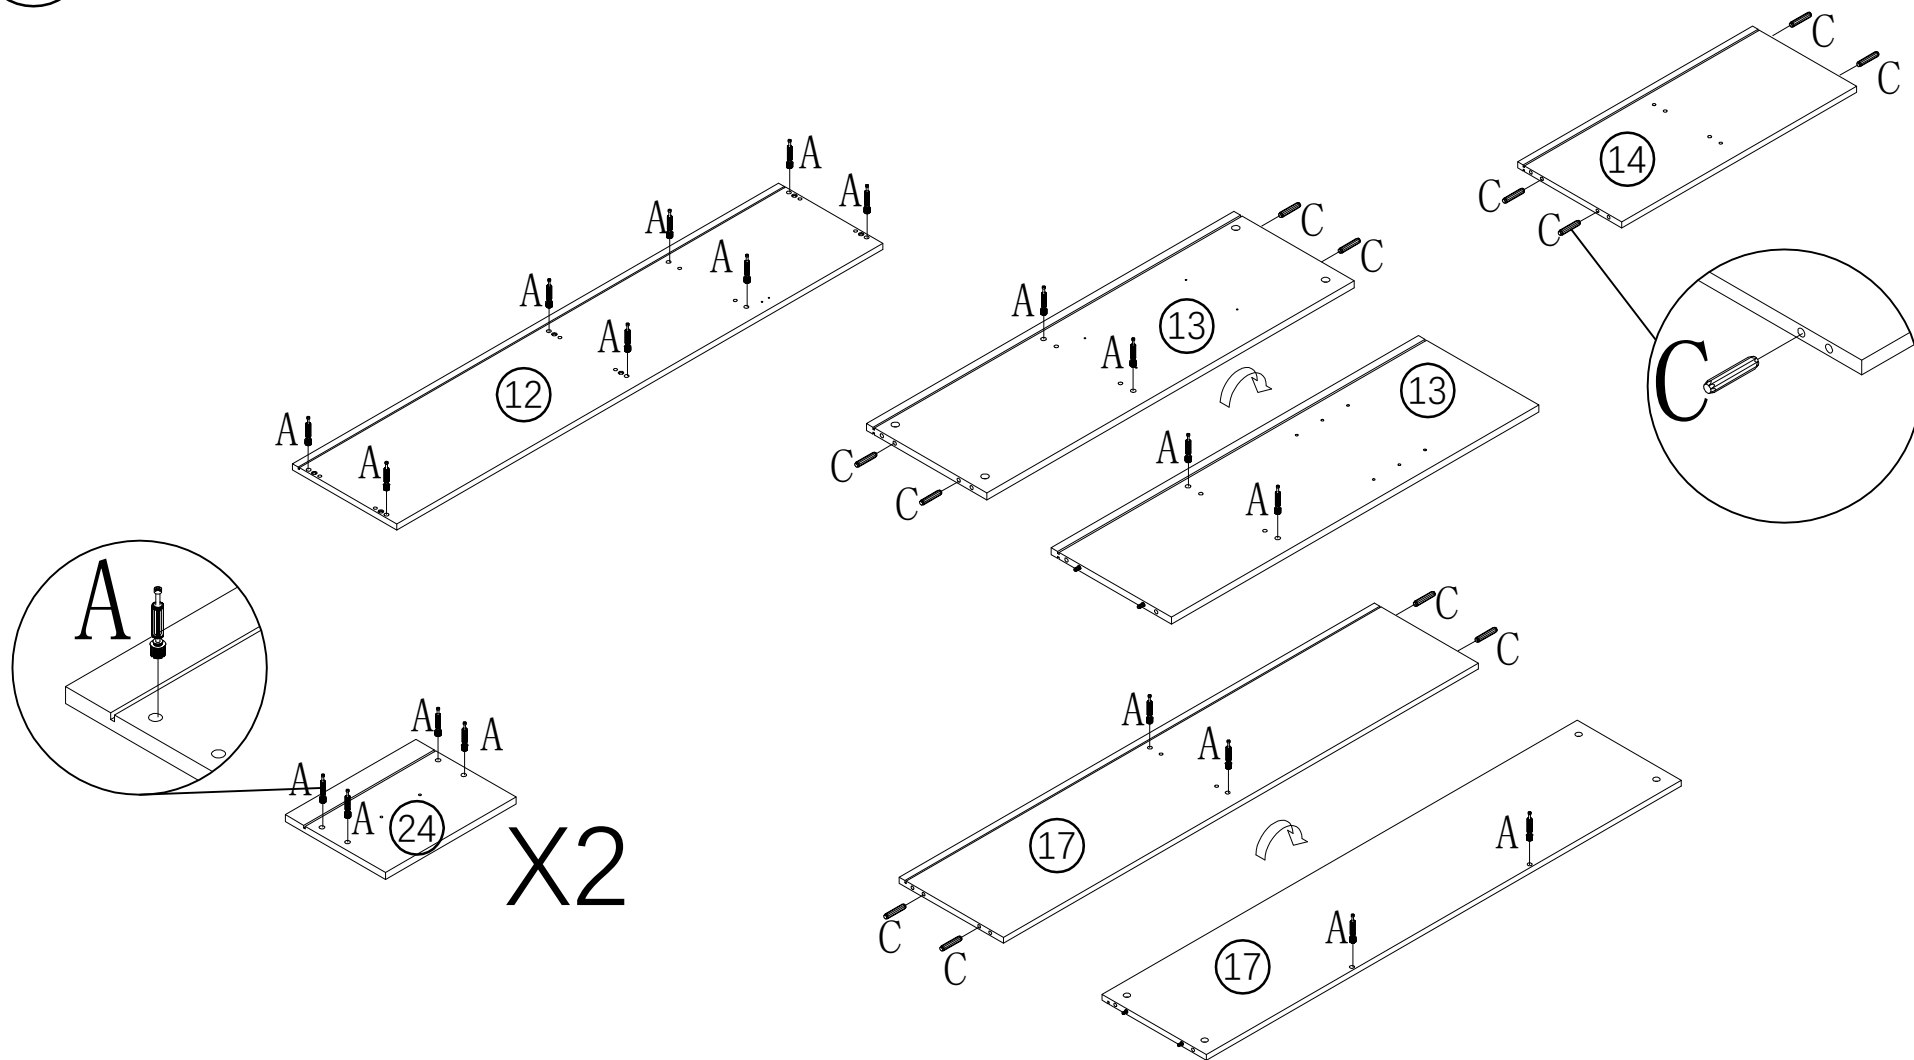

	A*24	put A on board 12 13 17 24
	C*12	put C on board 13 14 17



3

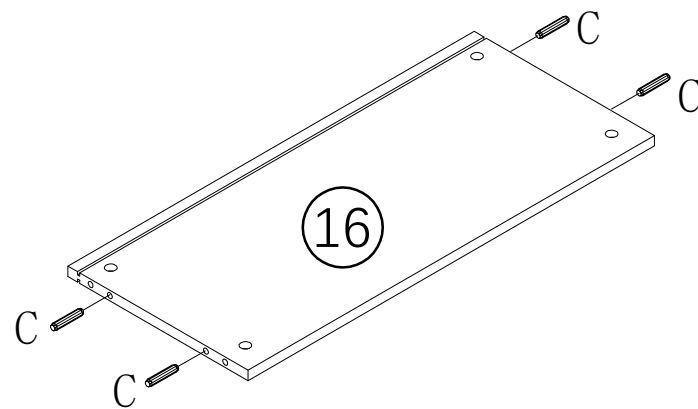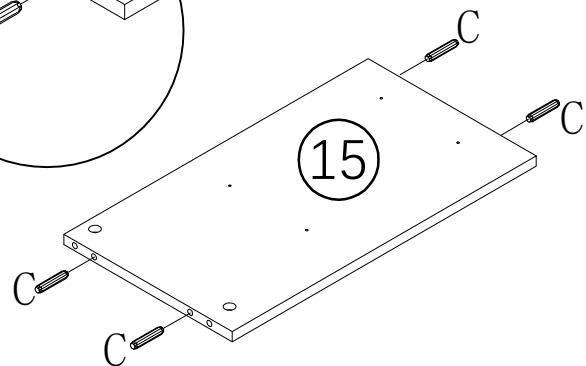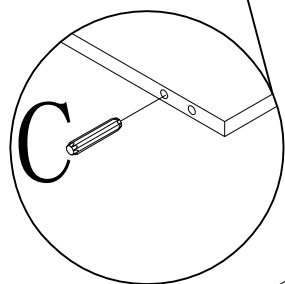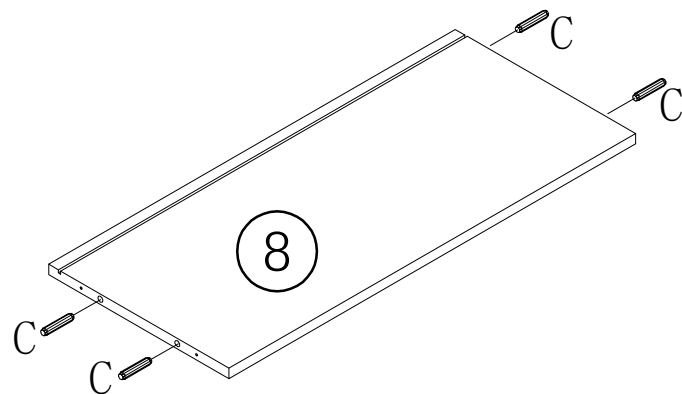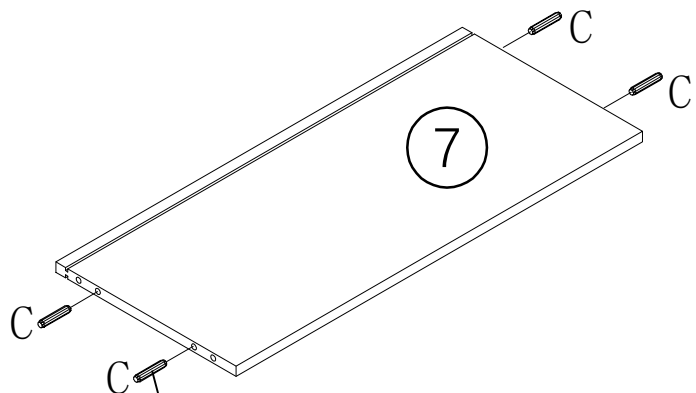

C*16

put C on board 7 8 15 16

4

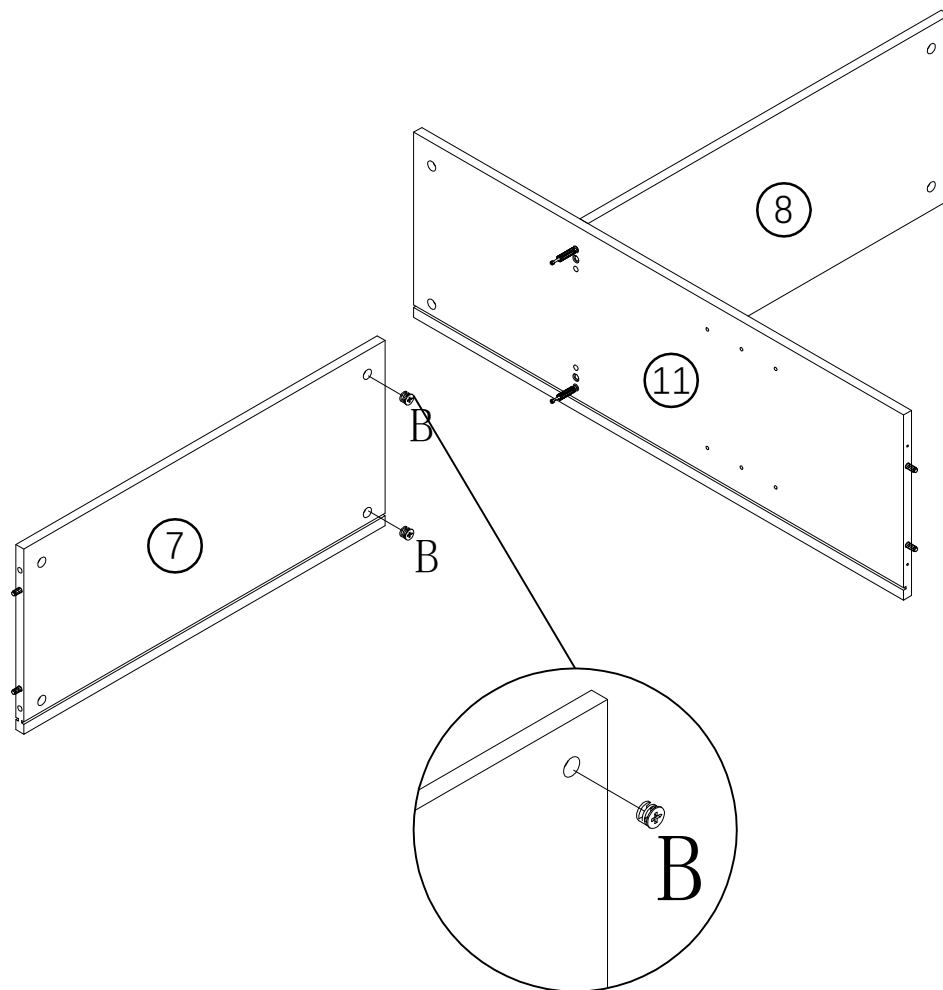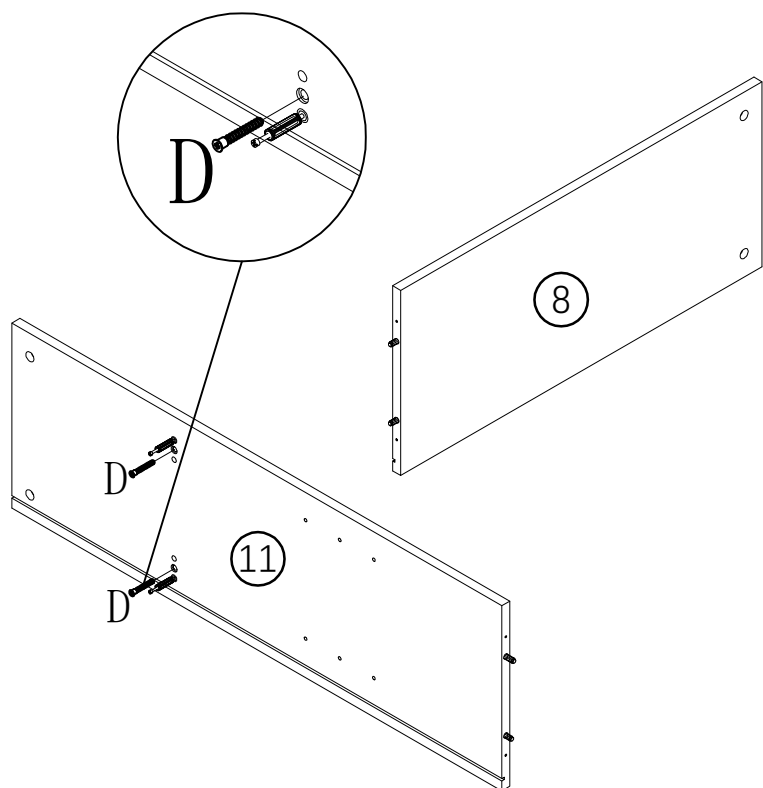

B*2

put B on board ⑦





D*2

put D on board ⑪

Make sure the arrow on the screw align to the hole on the side.

5

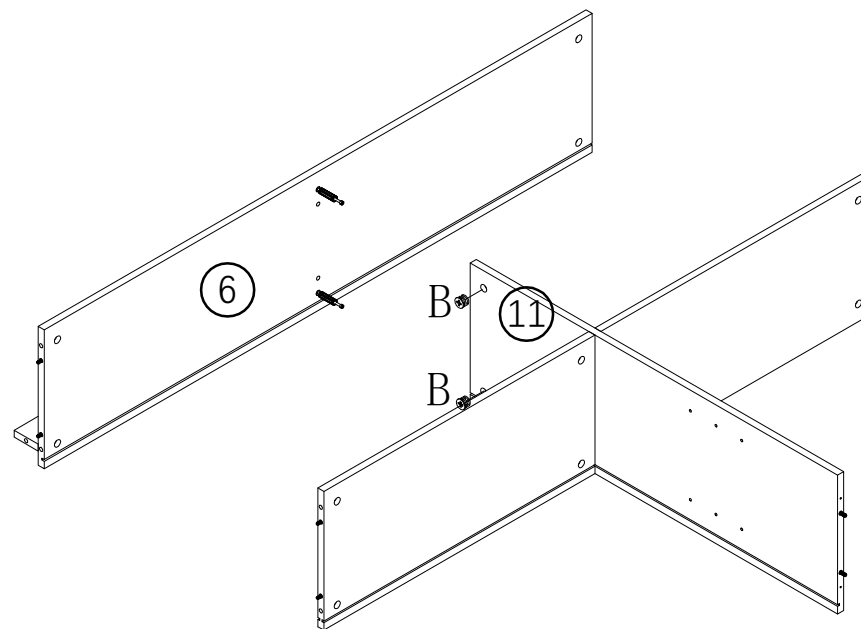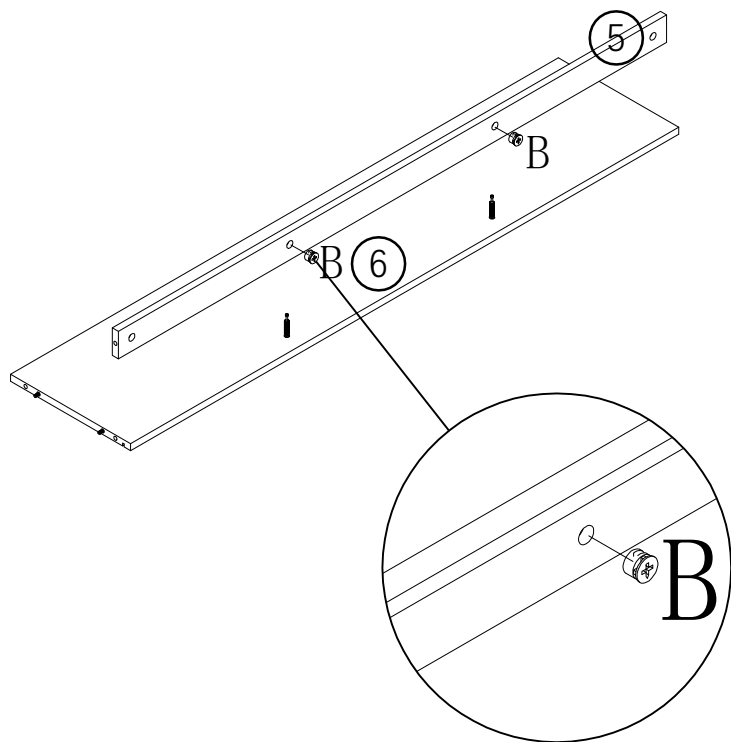



Make sure the arrow on the screw align to the hole on the side.



B*4

put B on board (5)(11)

6

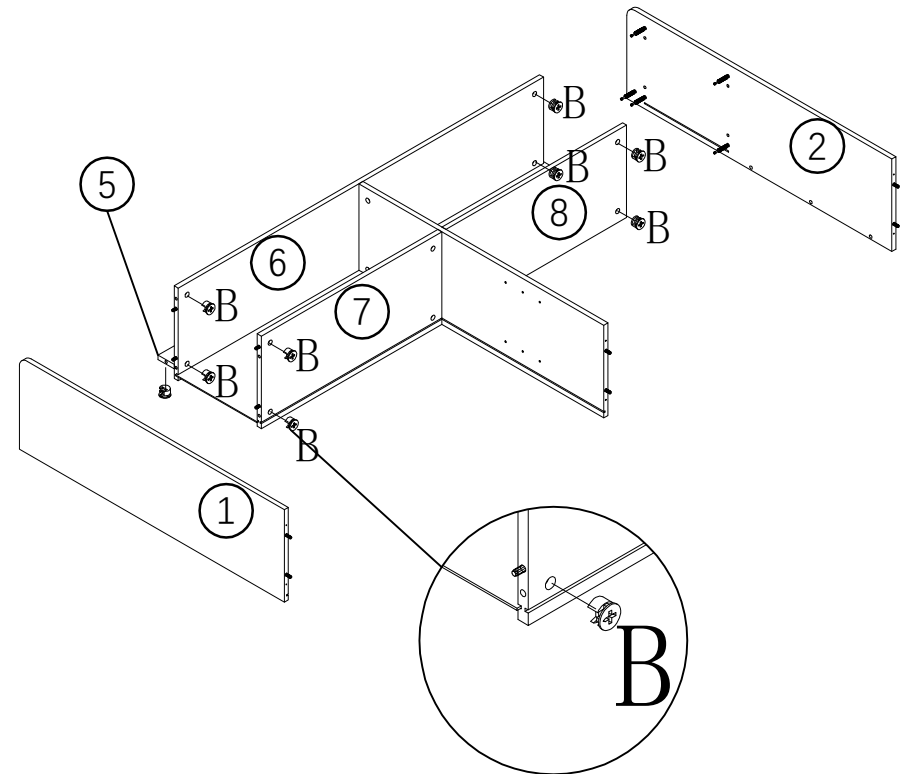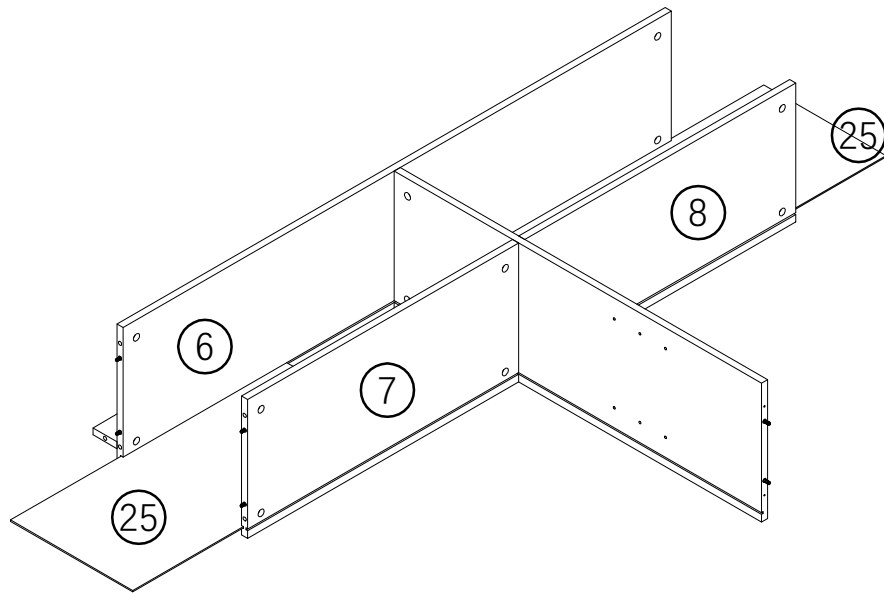




Make sure the arrow on the screw align to the hole on the side.



B*10

put B on board (5)(6)(7)(8)



7

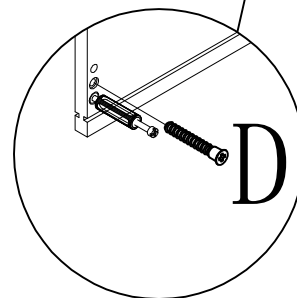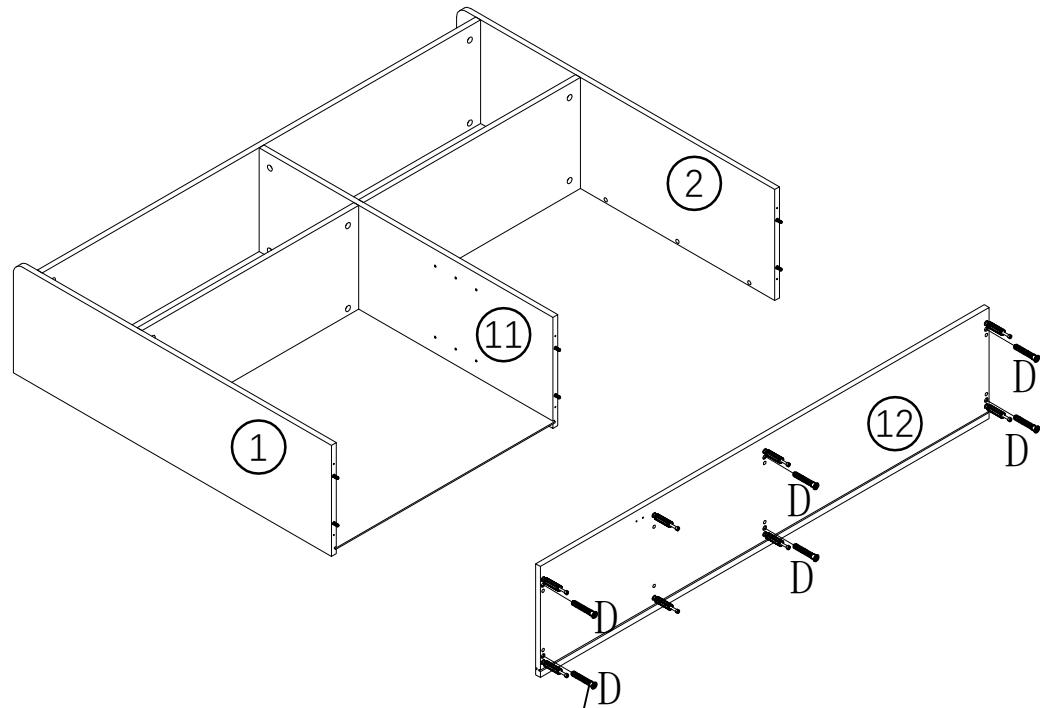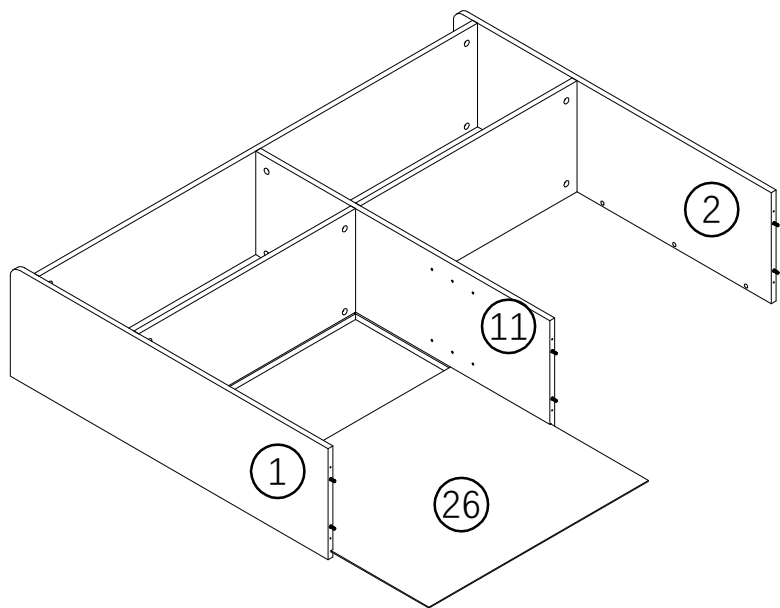

D*6

put D on board 12

8

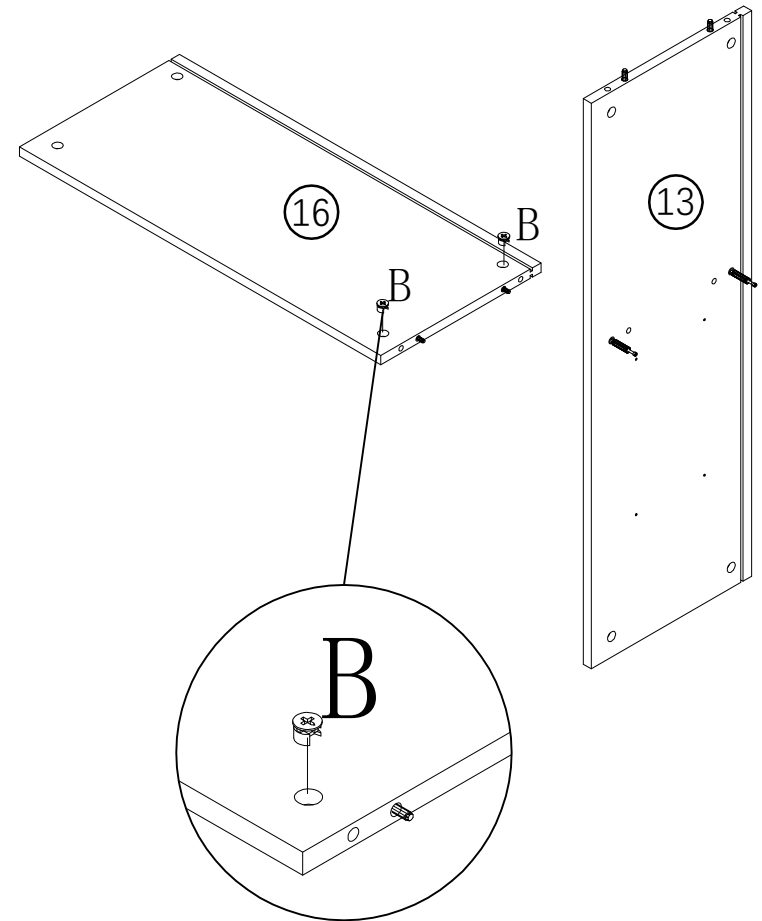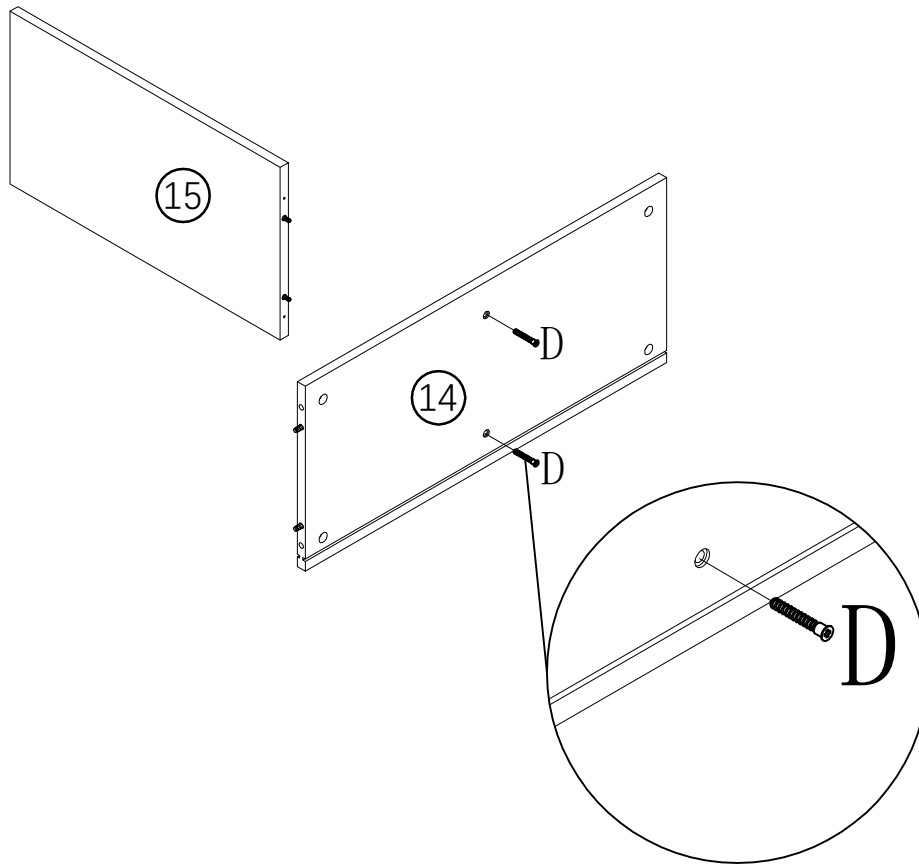


	B*2
	D*2

put B on board ①⑥


put D on board ①④

Make sure the arrow on the screw align to the hole on the side.

9

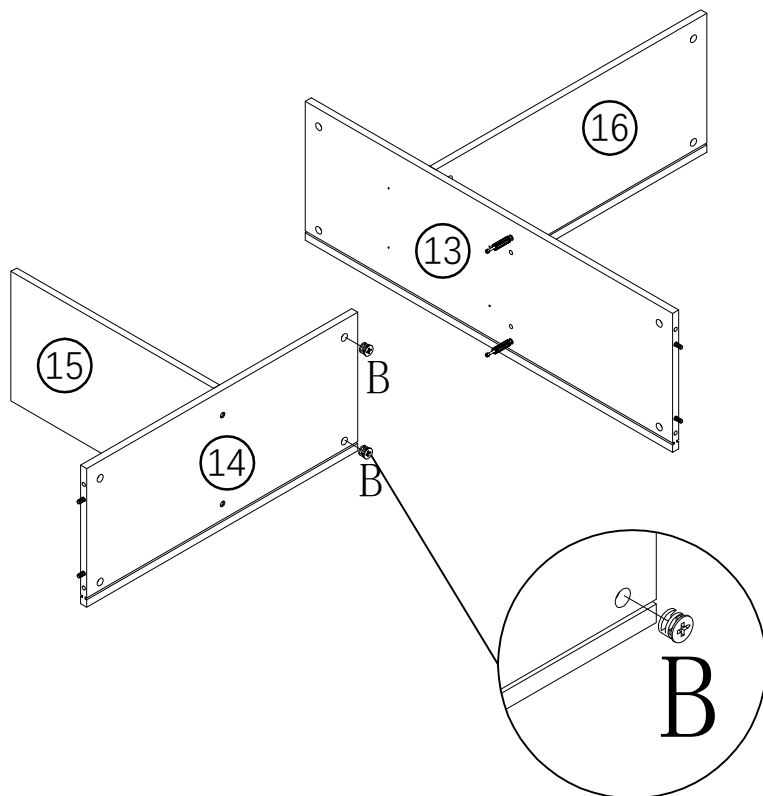



Make sure the arrow on the screw align to the hole on the side.

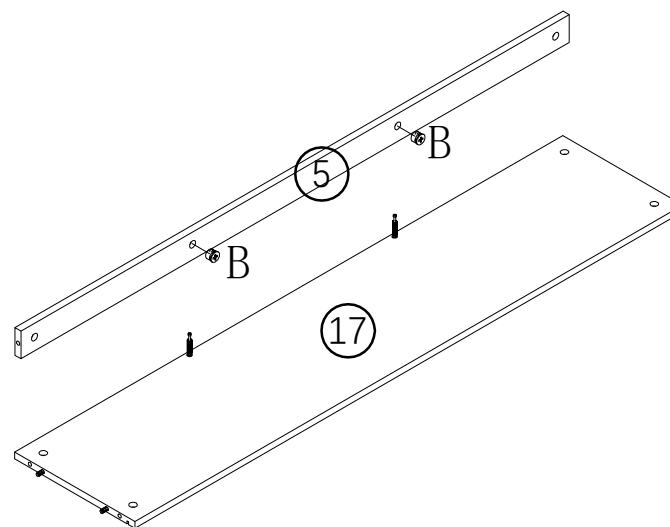

B*4

put B on board 5 14

10

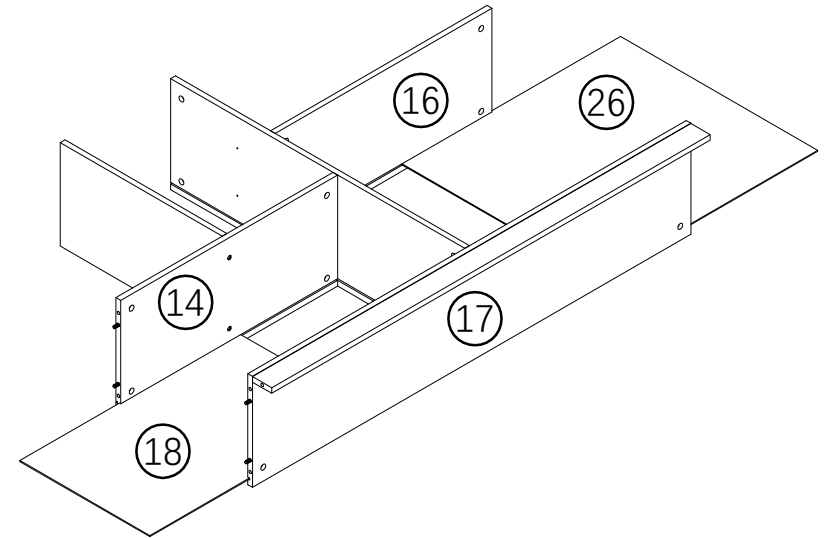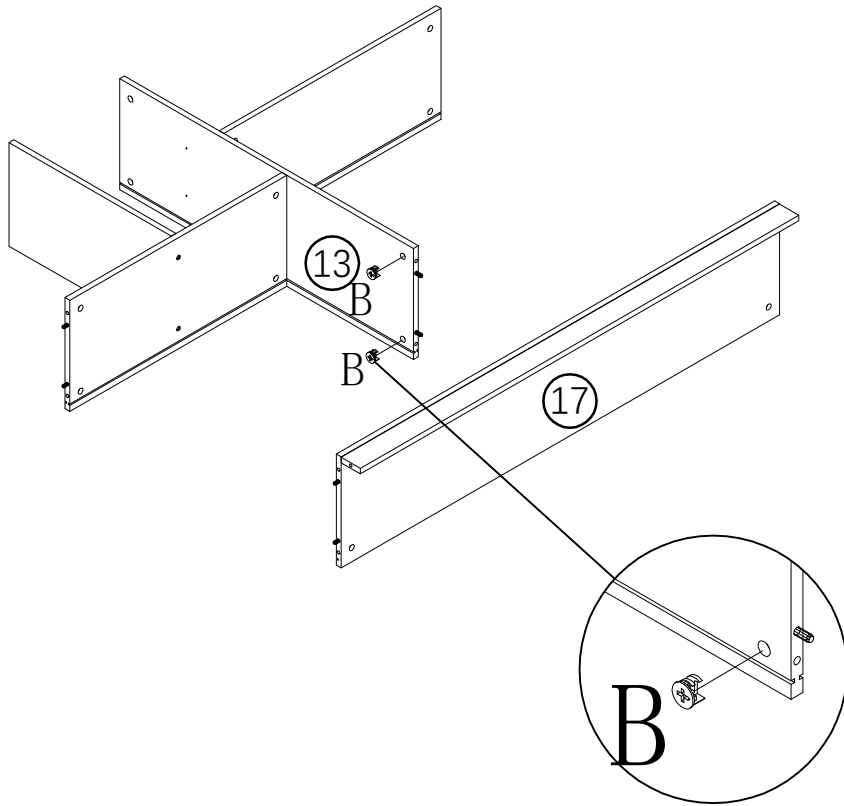


Make sure the arrow on the screw align to the hole on the side.




B*2

put B on board 13

11

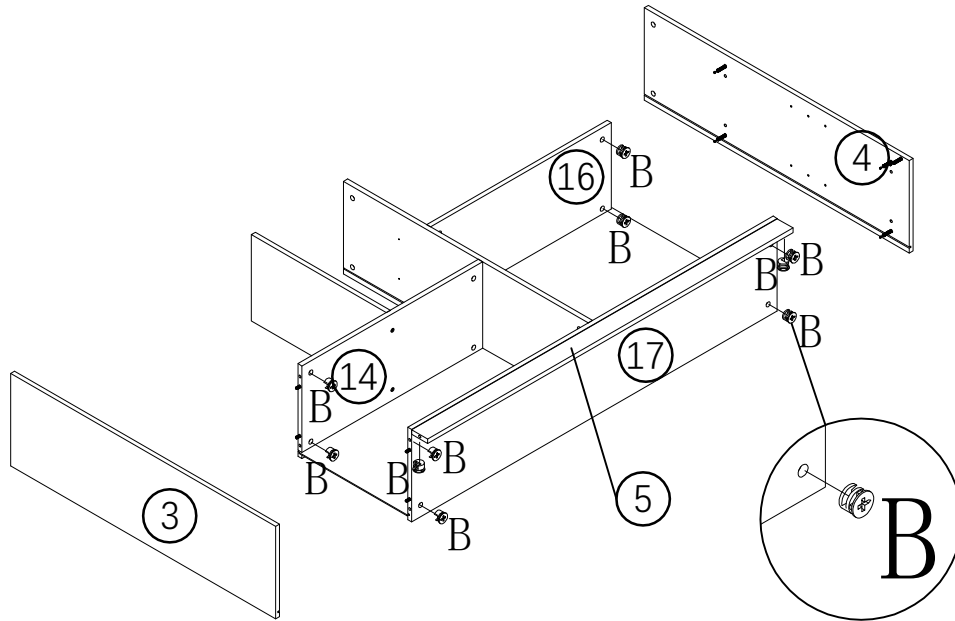


Make sure the arrow on the screw align to the hole on the side.

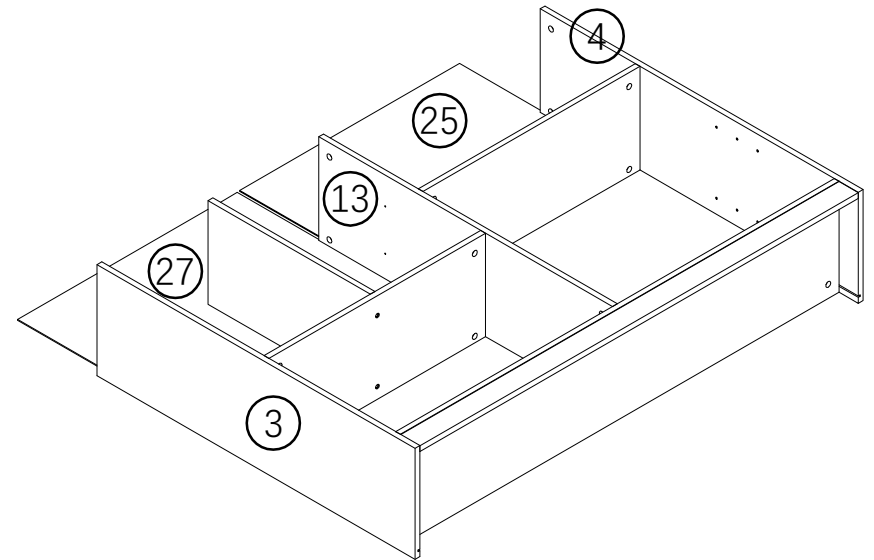

B*10

put B on board 5 14 16 17

12

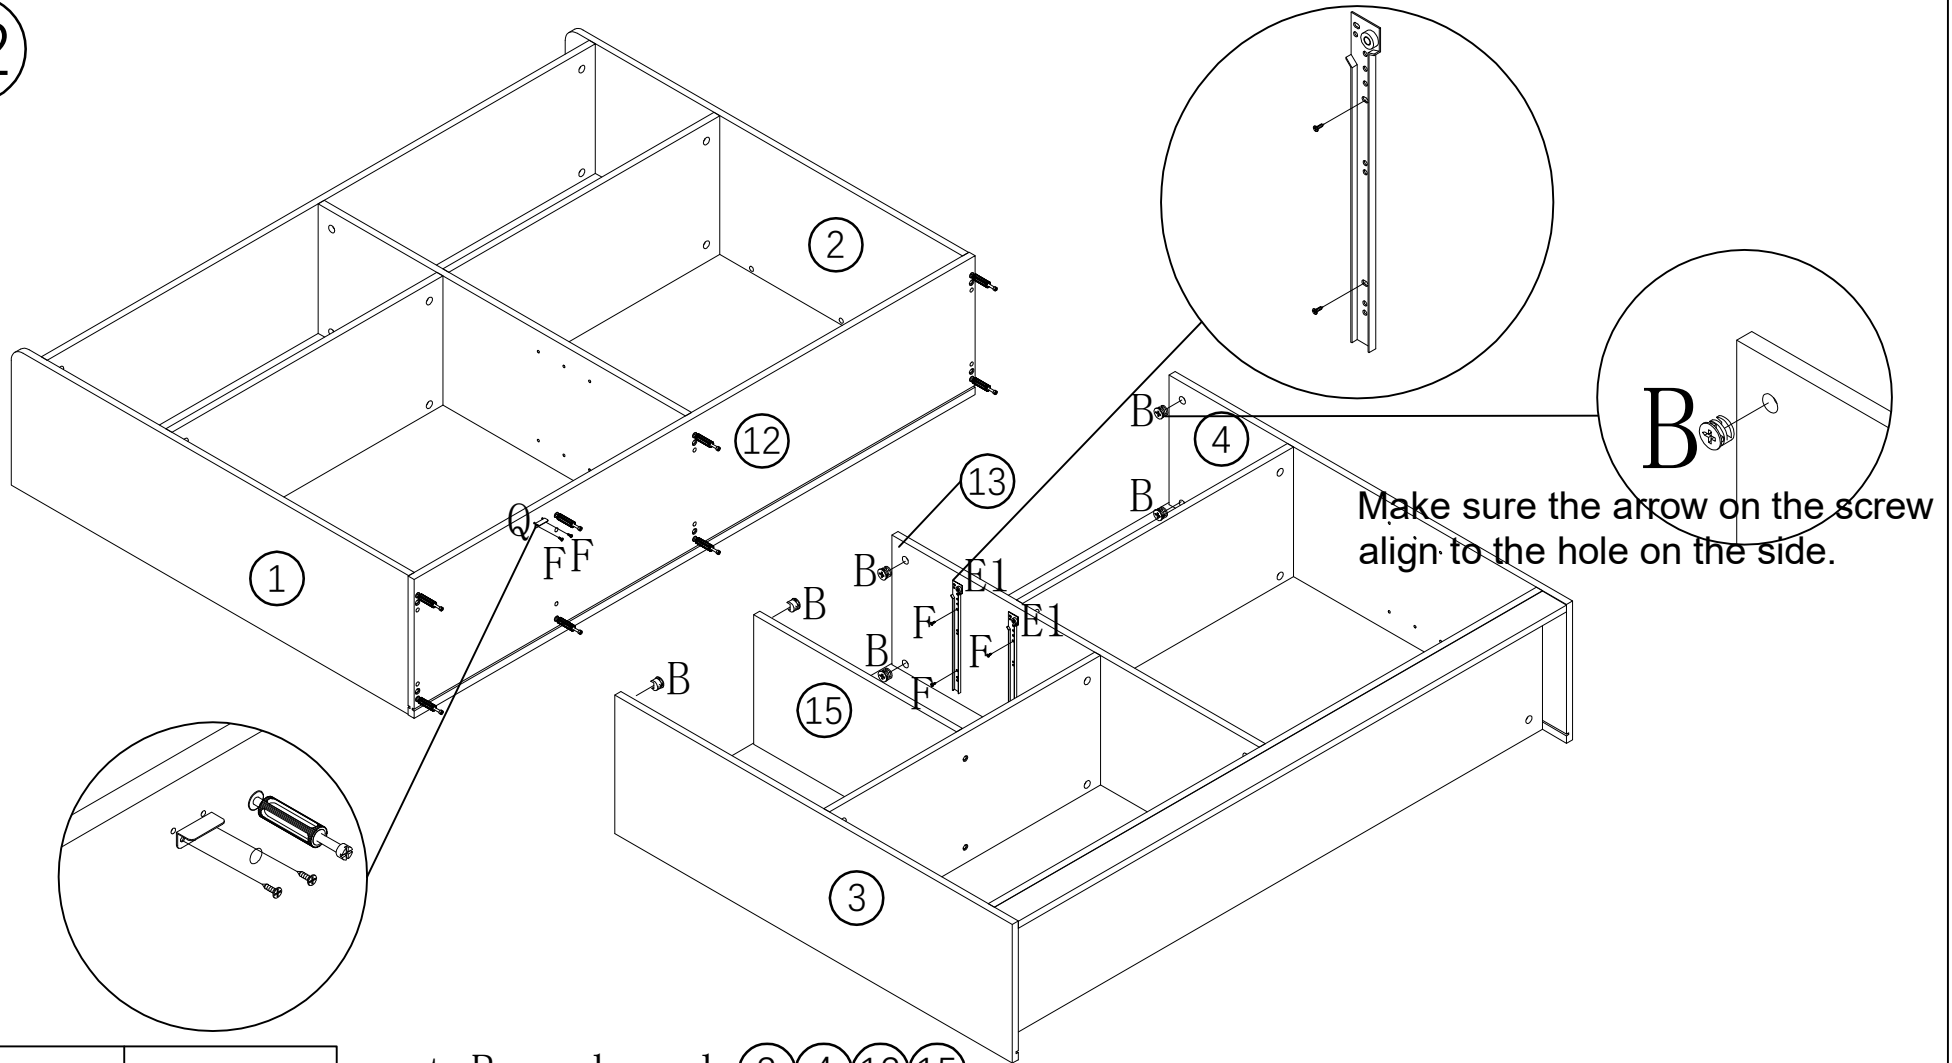

	B*8
	E1*4
	F*10
	Q*1


put B on board (3)(4)(13)(15)

put E1 on board (13)(15)


put F on board (12)(13)(15)

put Q on board (12)

13

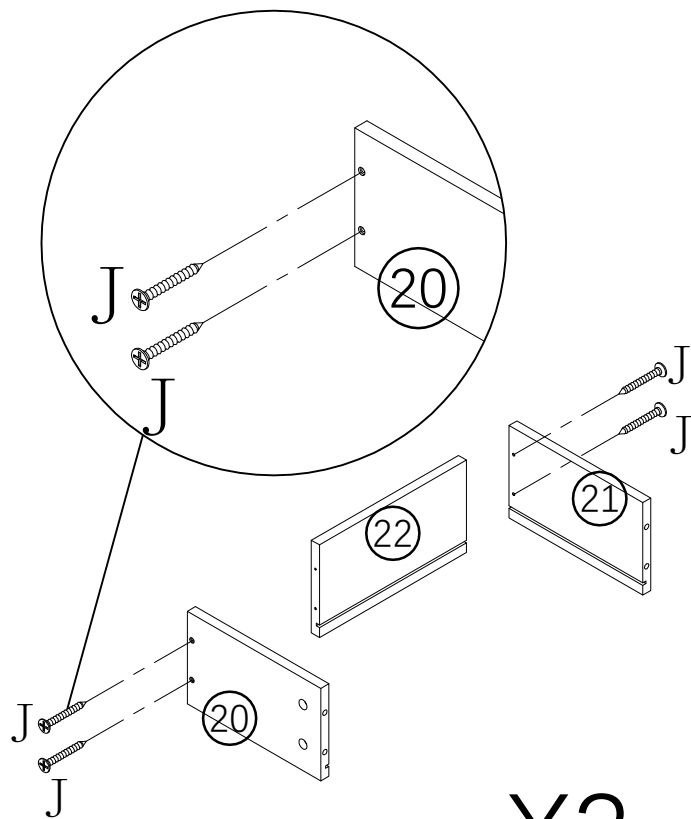

X2

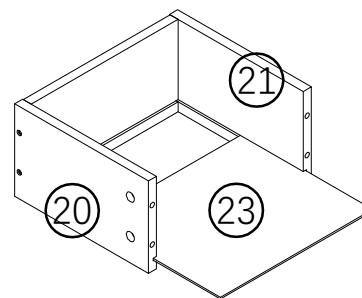


X2



J*8


put J on board (20)(21)

14





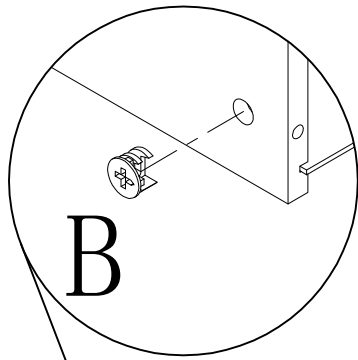


Make sure the arrow on the screw align to the hole on the side.

B

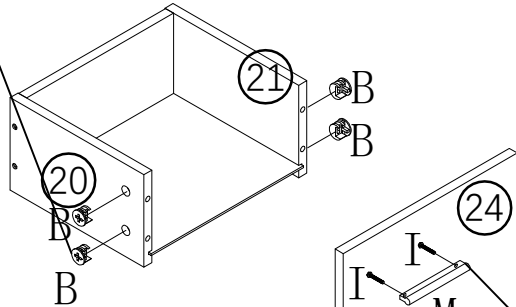

X2

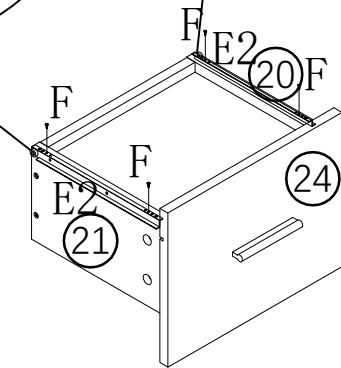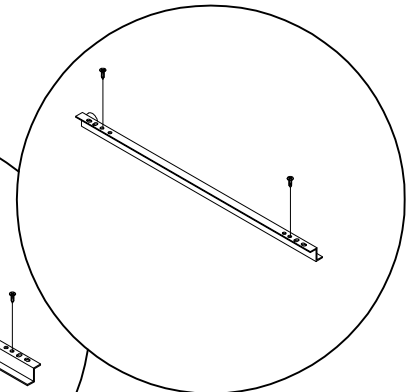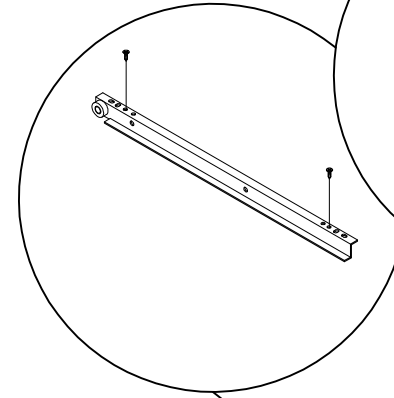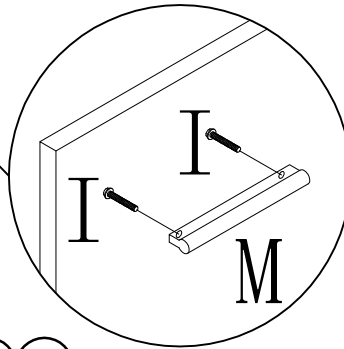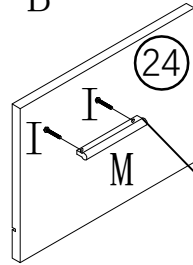

X2

	B*8
	E2*4
	F*8
	I*4
	M*2

put B on board (20)(21)


put E2 on board (20)(21)

put F on board (20)(21)

put I on board (24)

put M on board (24)

16

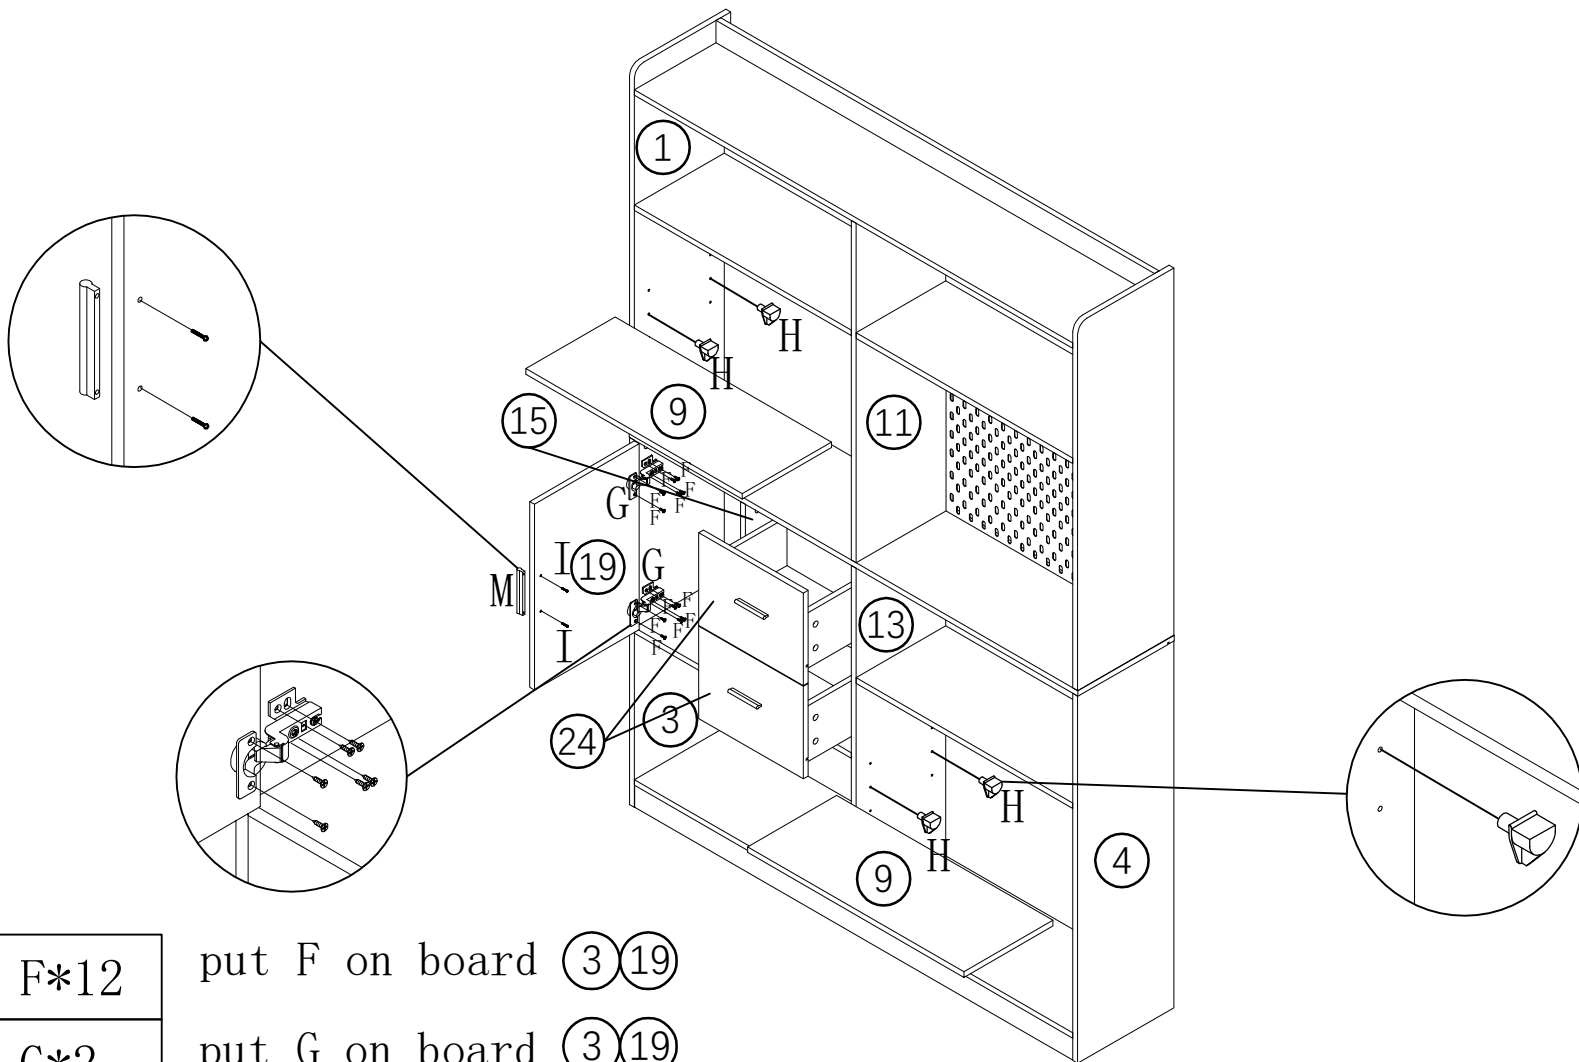

	F*12
	G*2
	H*8
	I*2
	M*1

put F on board (3)(19)






put G on board (3)(19)

put H on board (1)(4)(11)(13)

put I on board (19)

put M on board (19)

17

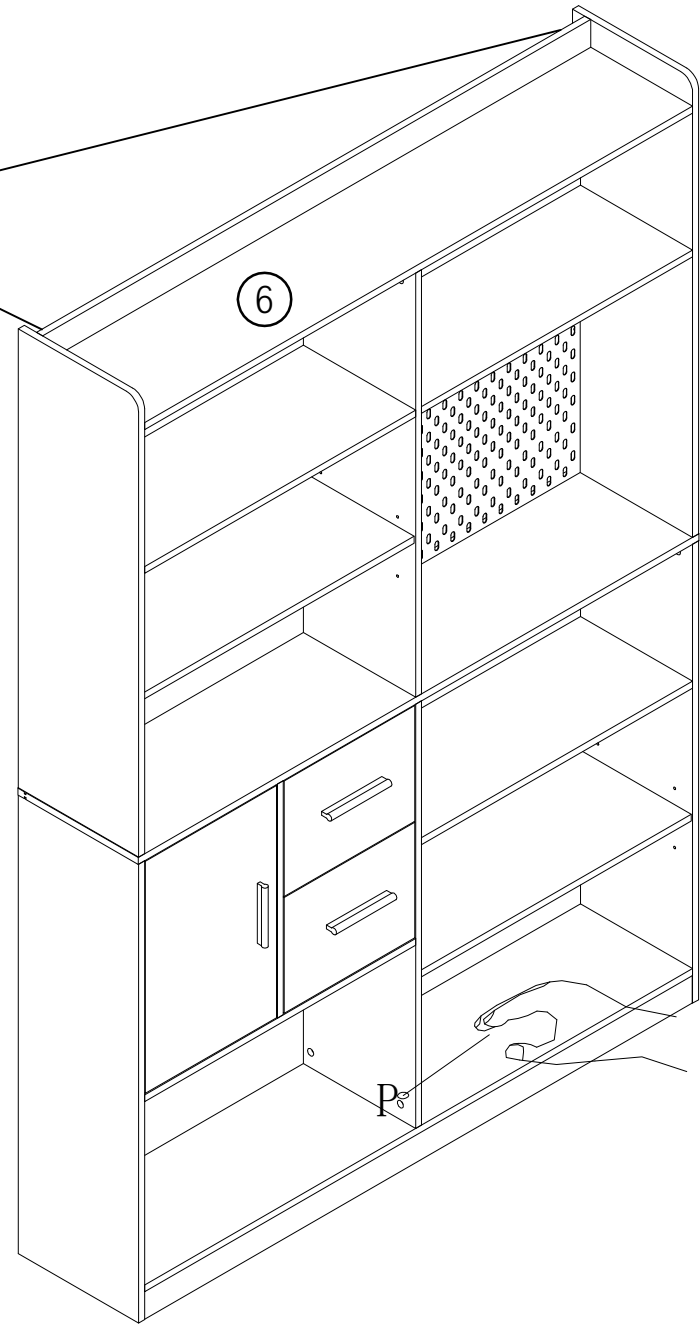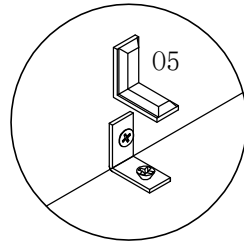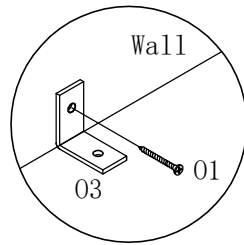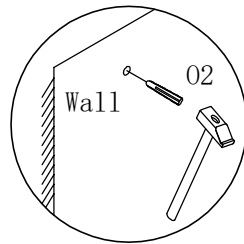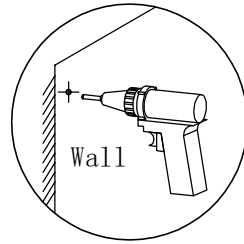

	01*2
	02*2
	05*2
	P*24