



# CABINET DRAWER KNOBS AND PULLS

## SIZING GUIDE


### 13" x 5" Drawer

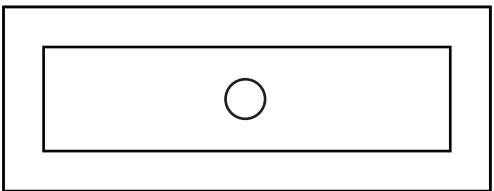


1-1/4" Knob

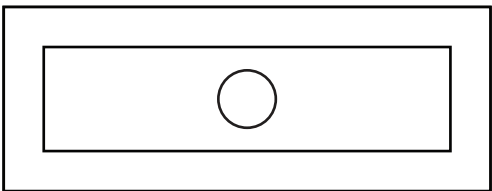


1-5/8" Knob

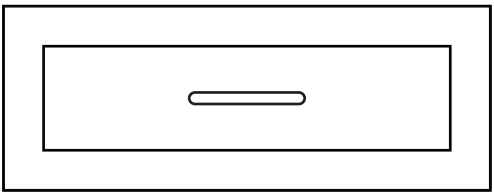


3" (76 mm) Pull

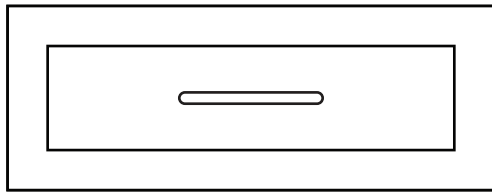

3-3/4" (96 mm) Pull

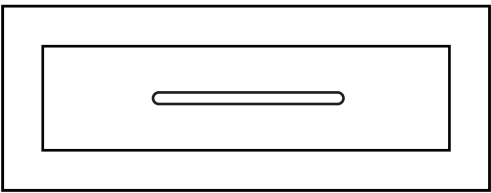


5" (128 mm) Pull


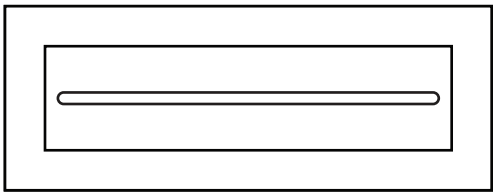


10" (256 mm) Pull



### 22" x 6" Drawer

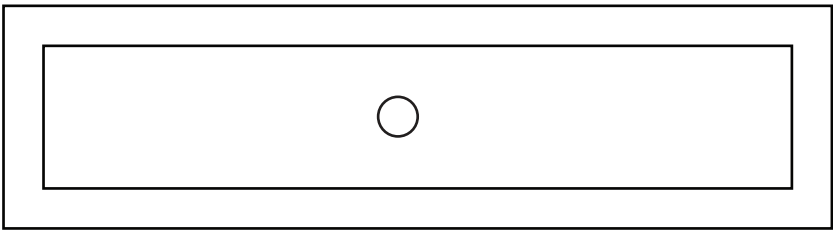



1-1/4" Knob

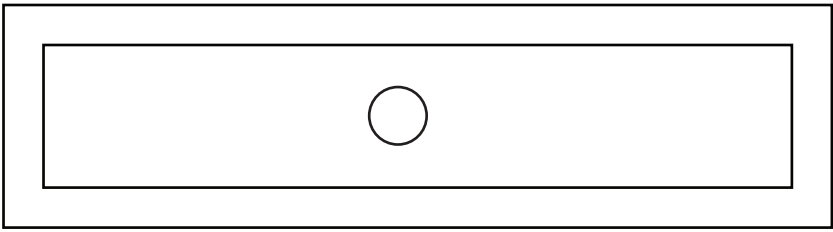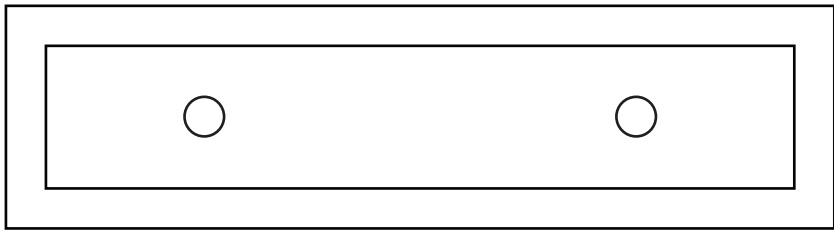



1-5/8" Knob

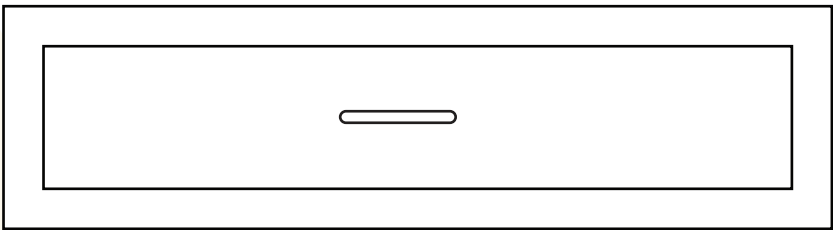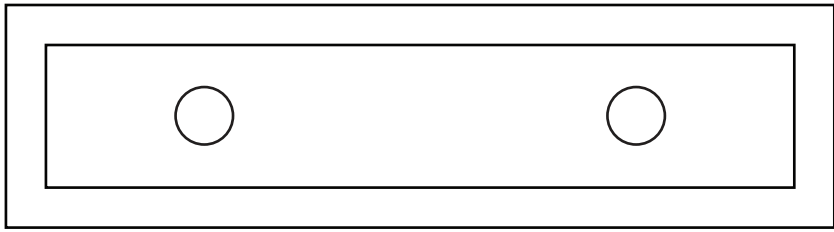



3" (76 mm) Pull

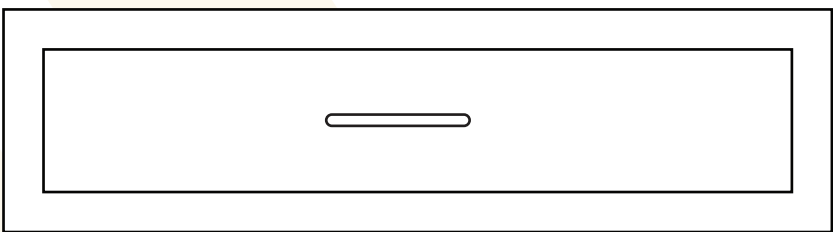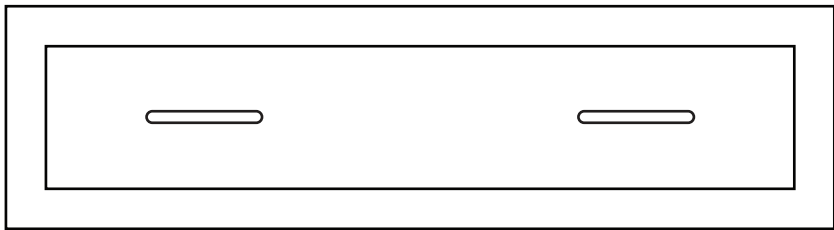

3-3/4" (96 mm) Pull

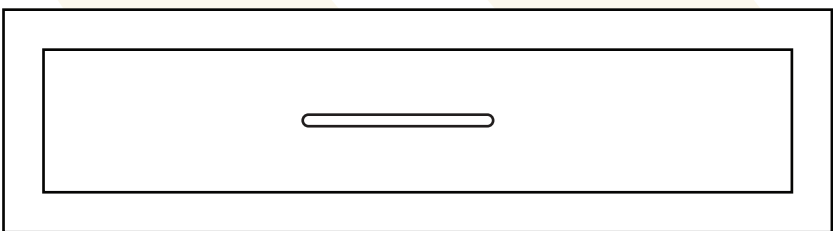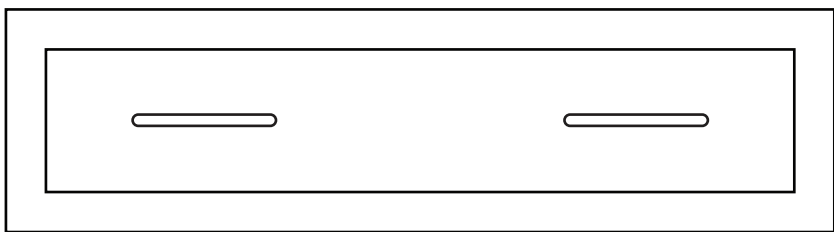


5" (128 mm) Pull

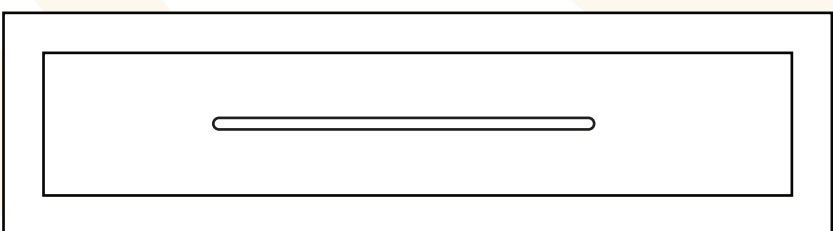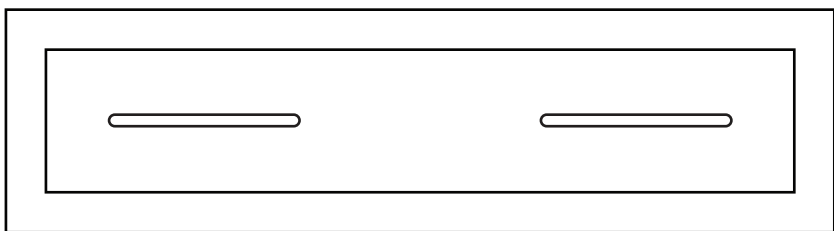

10" (256 mm) Pull


**Design Tip:** When selecting cabinet pulls, use the 1/3 rule – the pull should measure approximately 1/3 the width of a drawer or 1/3 the height of a door.

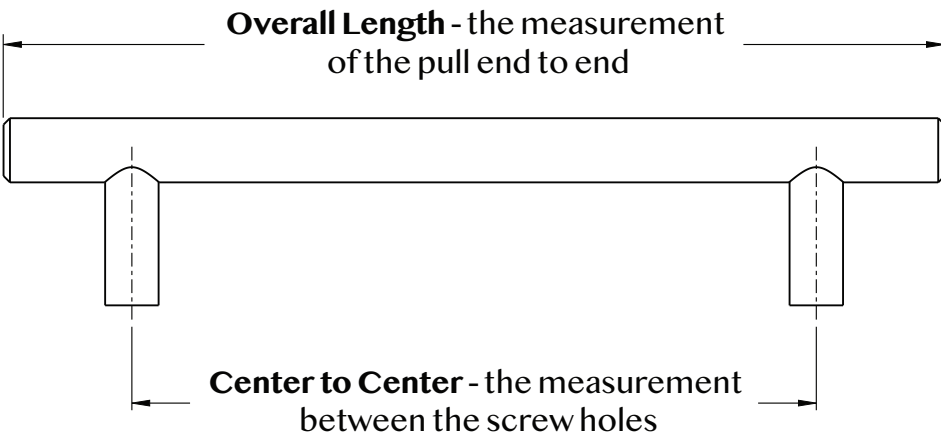


# CABINET DOOR KNOBS AND PULLS

## SIZING GUIDE


### 13" x 23" Door

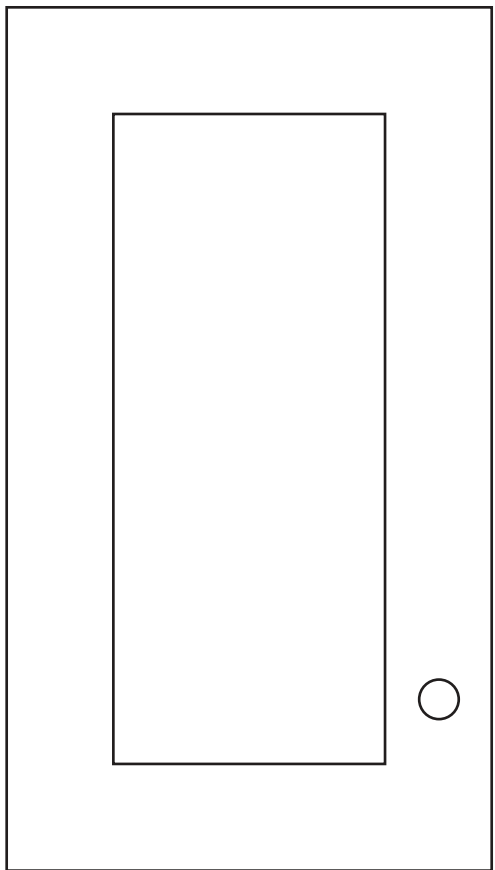


1-1/4" Knob

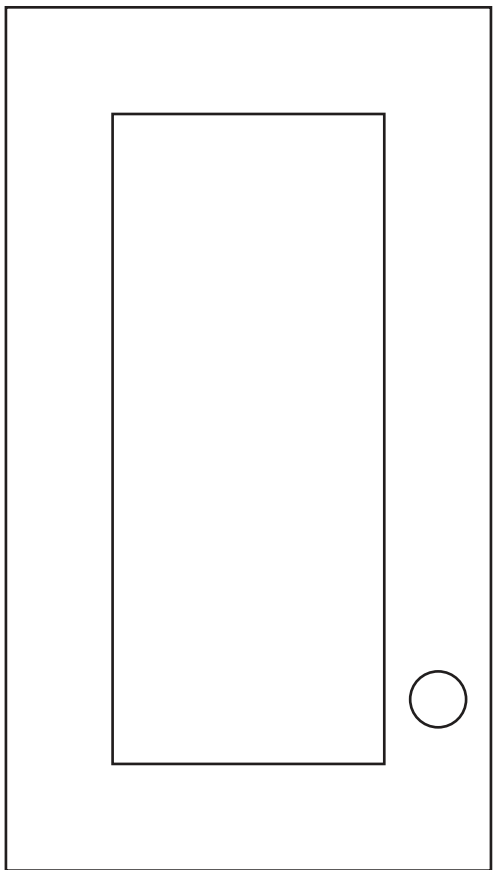


1-5/8" Knob

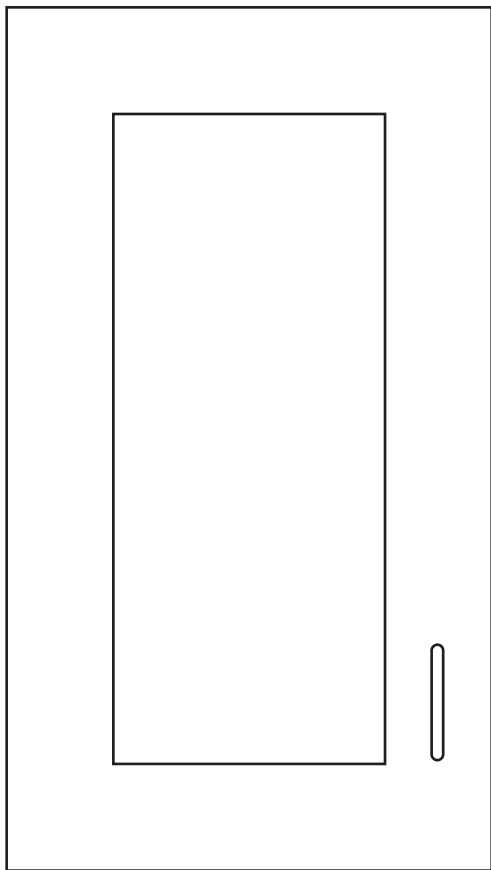

3" (76 mm) Pull

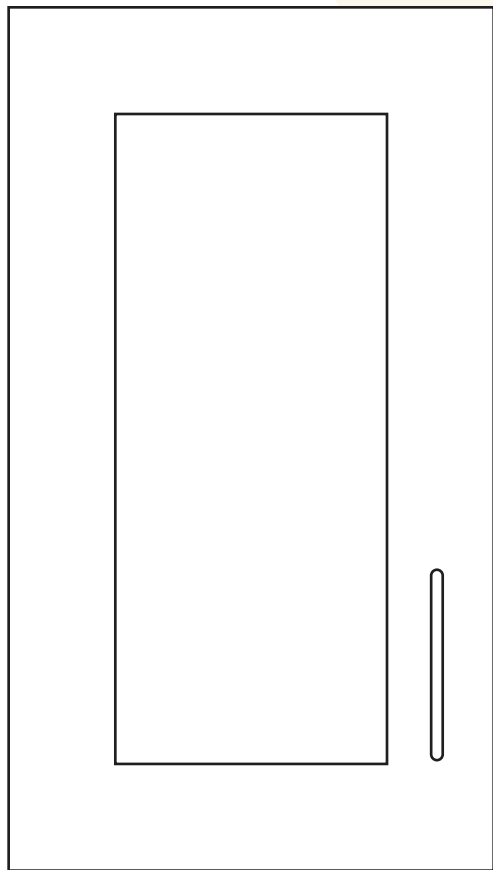


5" (128 mm) Pull

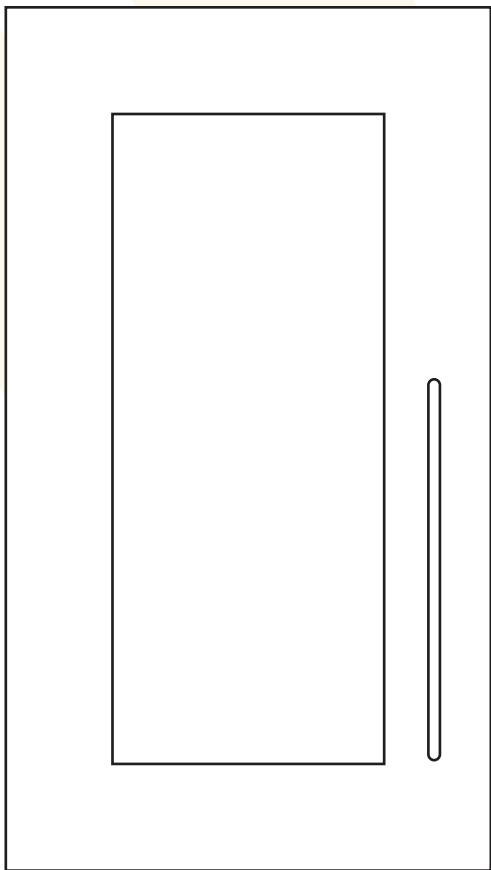


10" (256 mm) Pull


### 16" x 39" Door

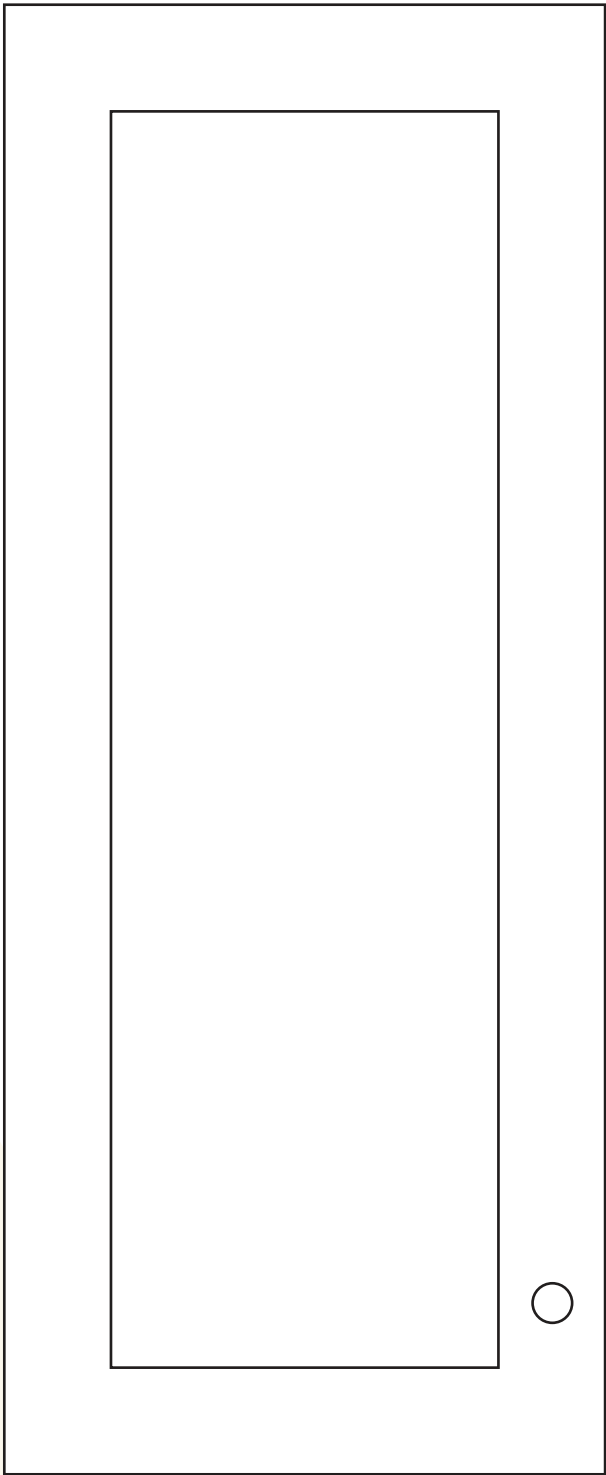


1-1/4" Knob

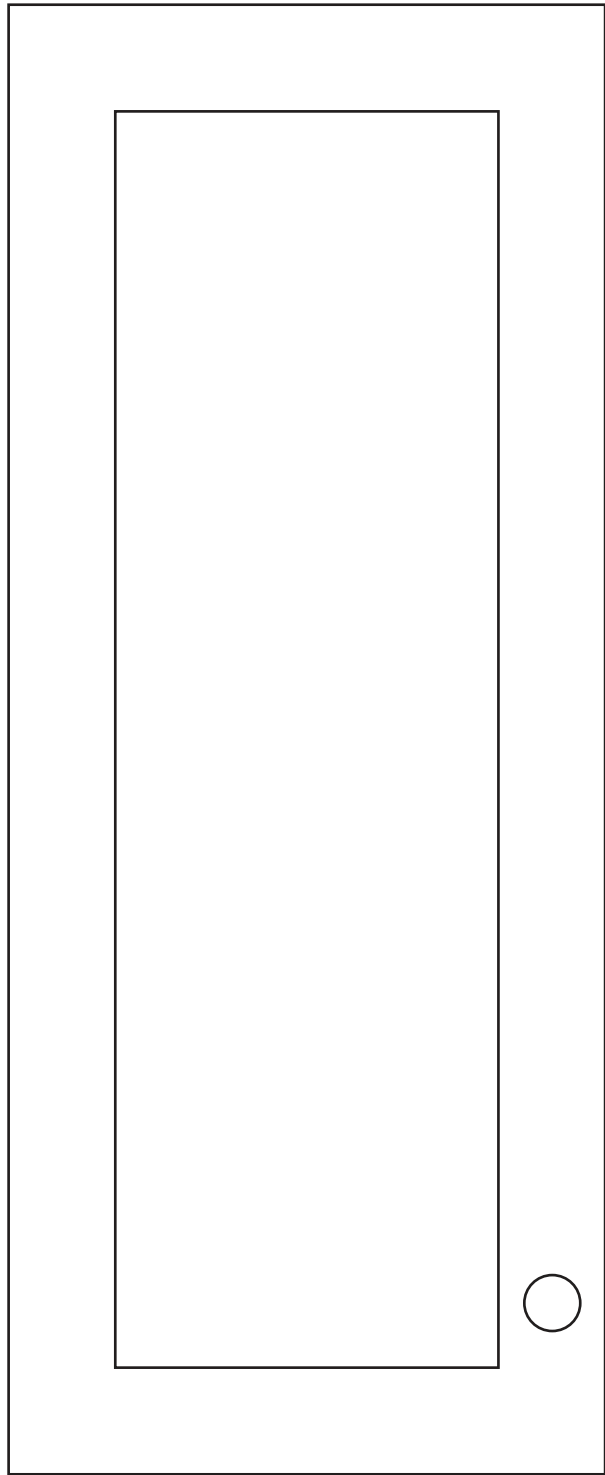


1-5/8" Knob

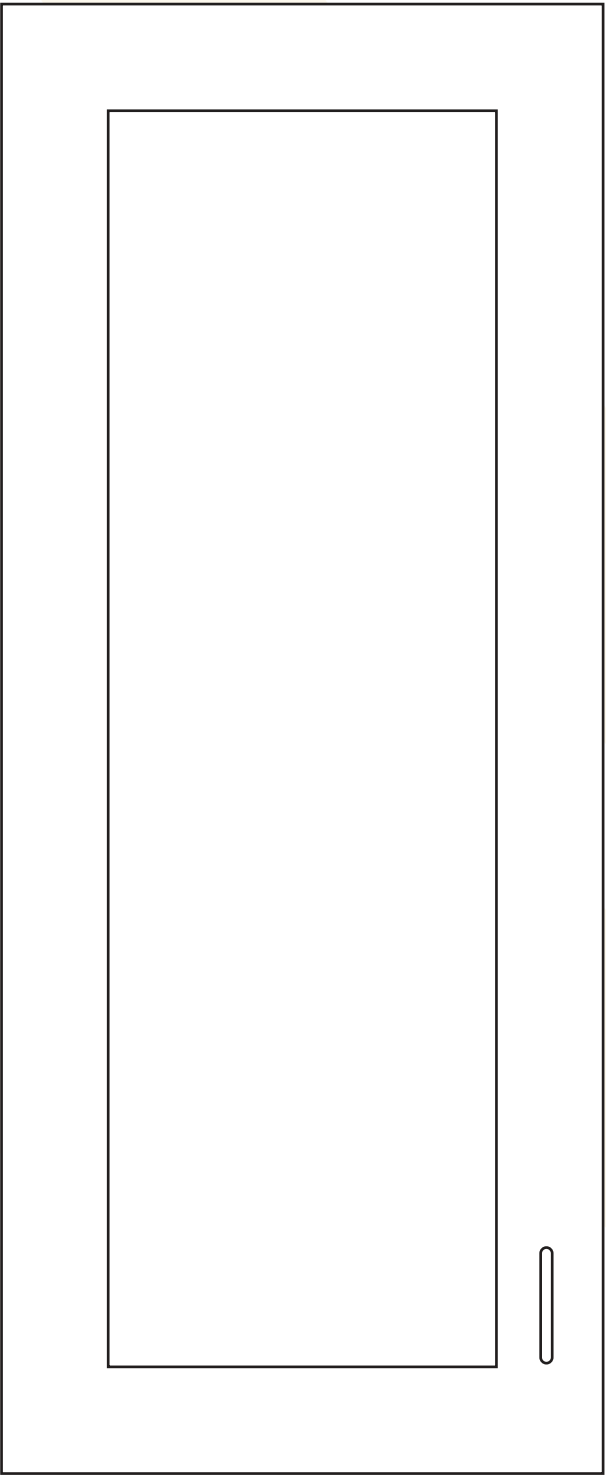

3" (76 mm) Pull

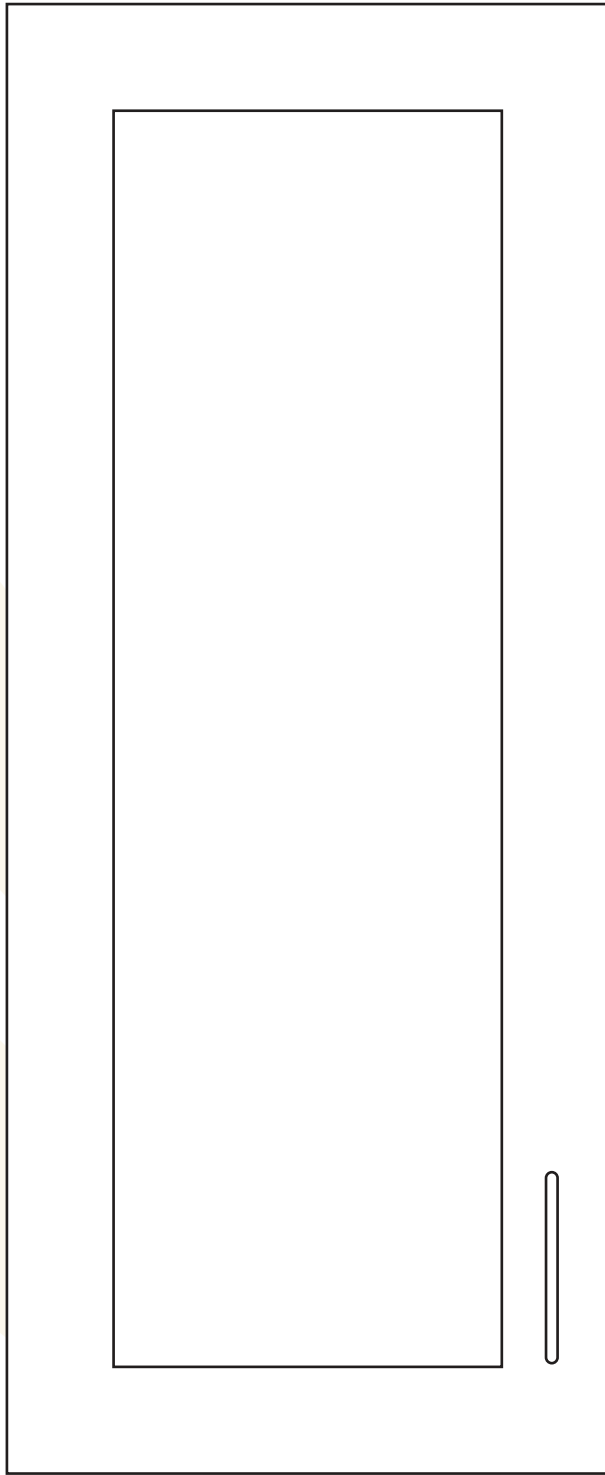

5" (128 mm) Pull

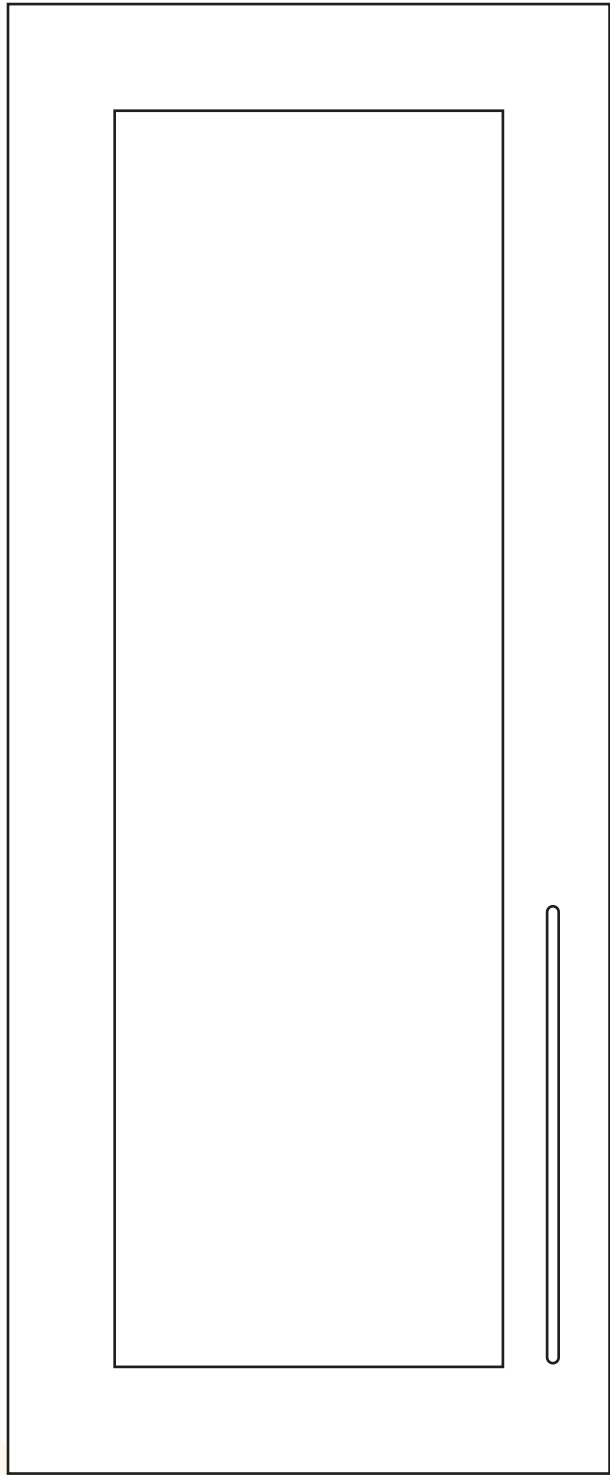

10" (256 mm) Pull

**Design Tip:** When selecting cabinet pulls, use the 1/3 rule – the pull should measure approximately 1/3 the width of a drawer or 1/3 the height of a door.

