


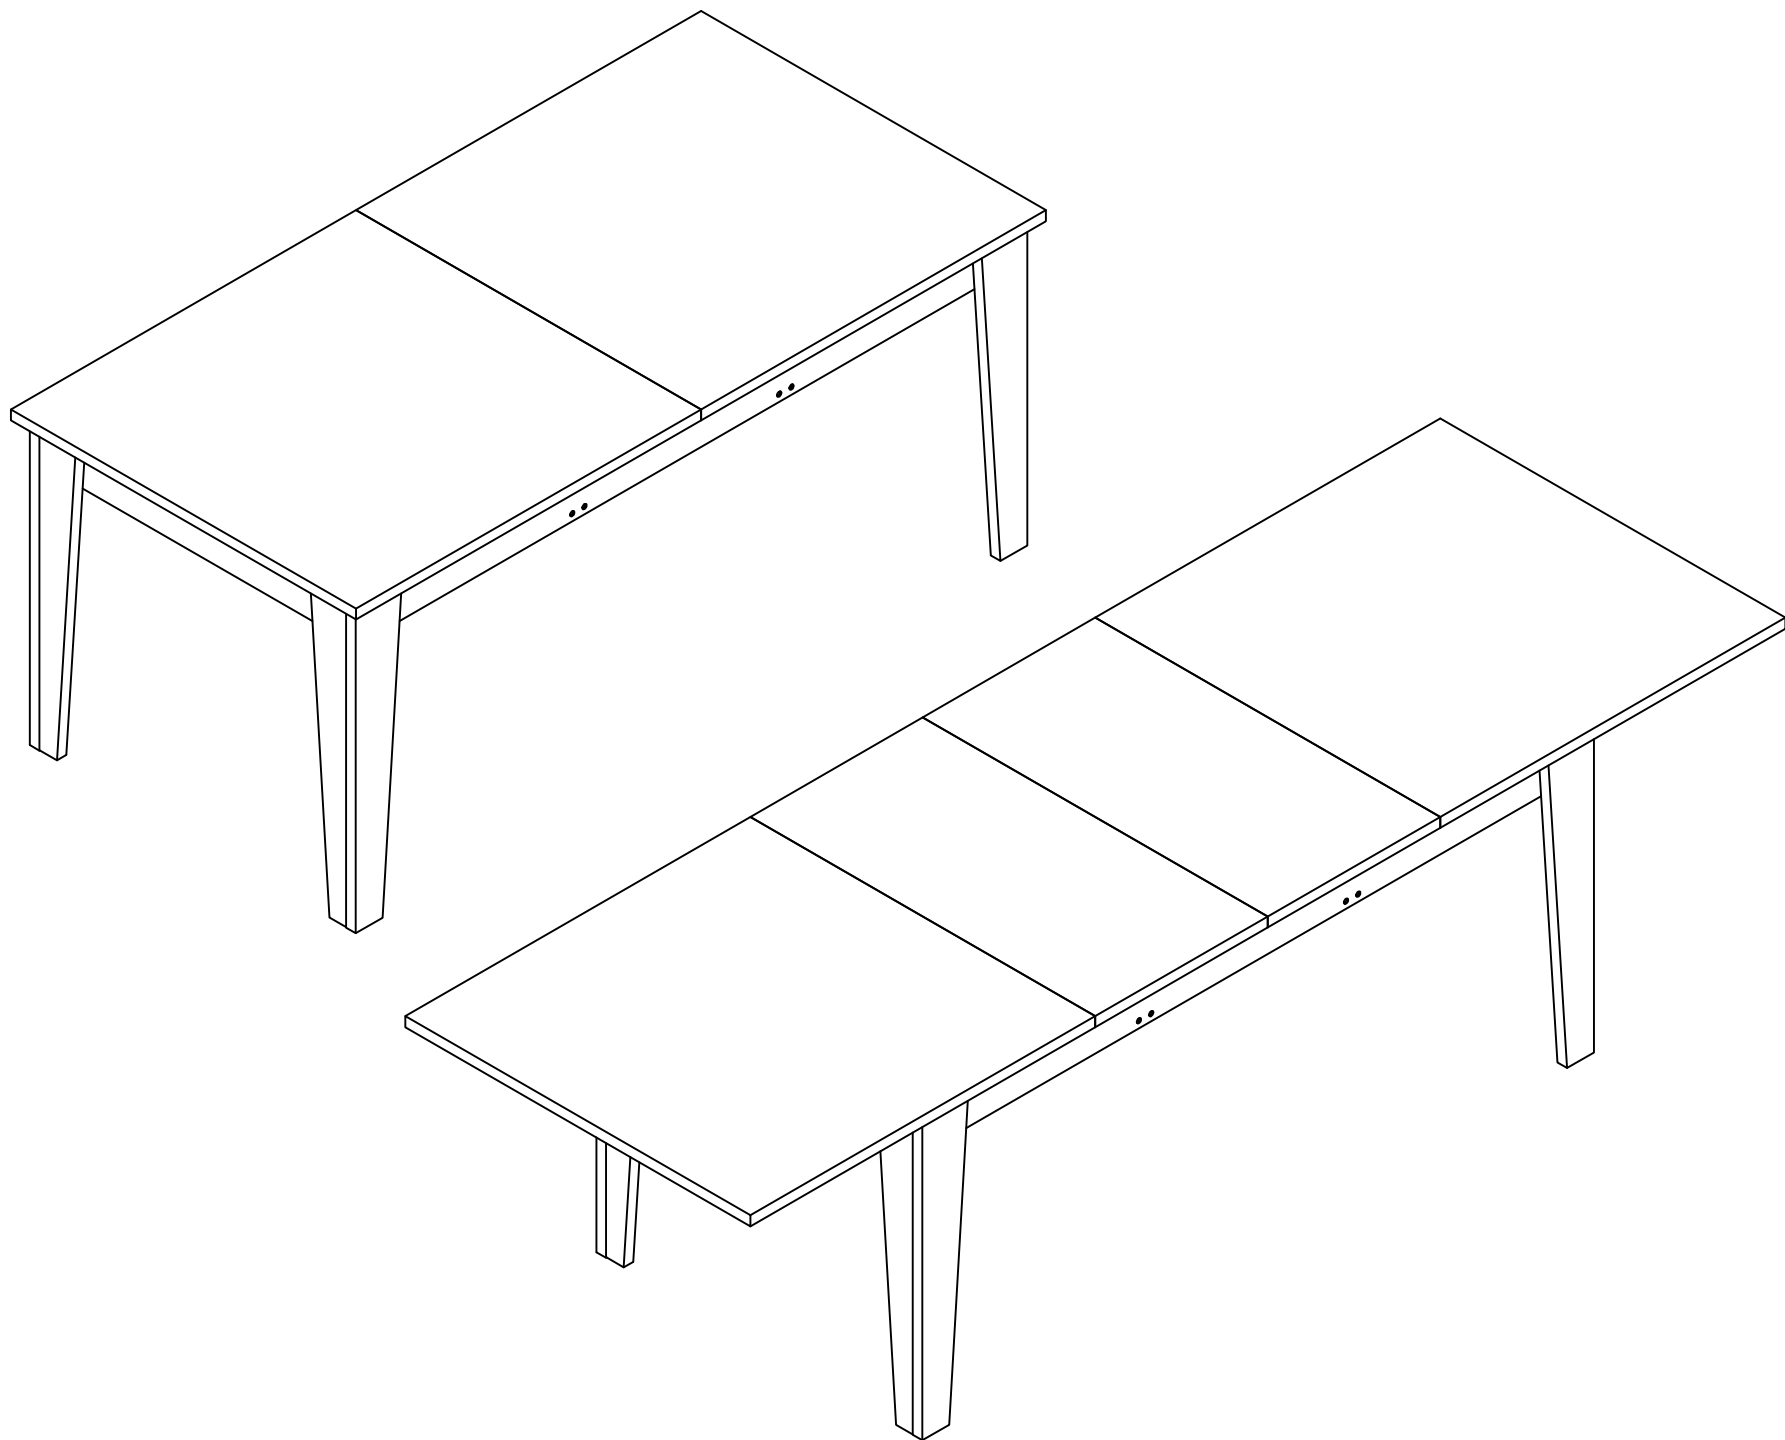
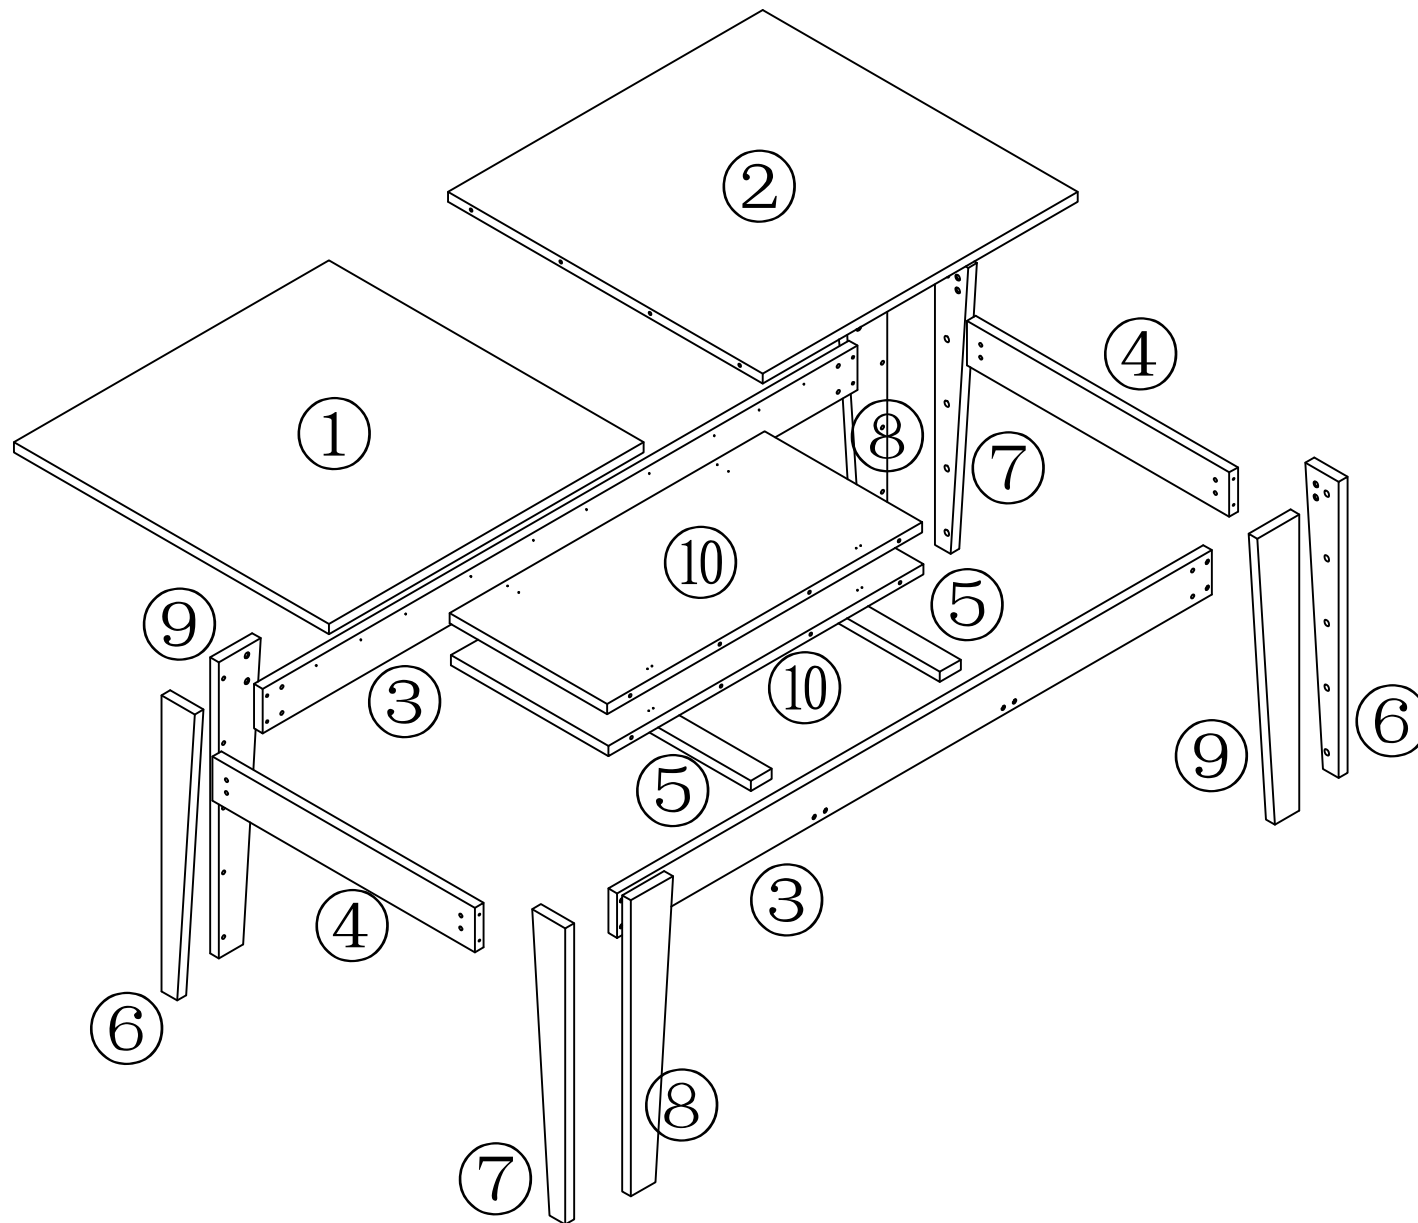




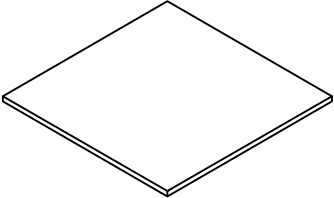
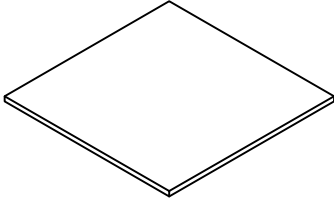
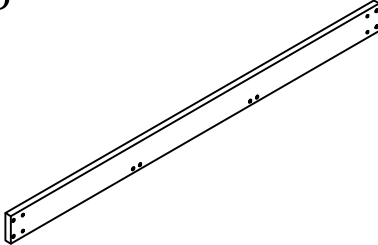
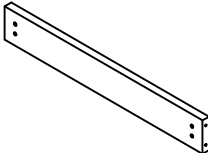


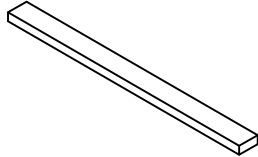

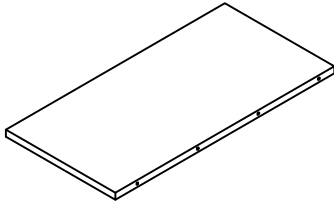

A  20PCS	B  20PCS	C 3.5*14  64PCS	D  1PCS	E 7*50  16PCS	F  6PCS	G  12PCS	H 8*30  16PCS
---	---	---	--	--	--	---	---

1  900*900 1PS	2  900*900 1PS	3  1700*110 2PS	4  750*110 2PS	5  750*60 2PS
6  733*95 2PS	7  733*95 2PS	8  733*120 2PS	9  733*120 2PS	10  900*450 2PS







Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

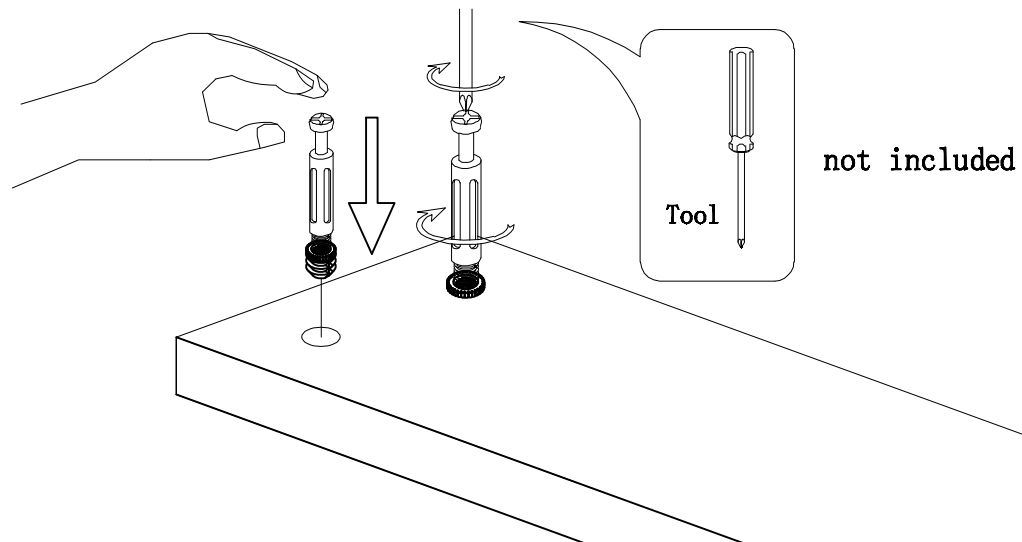

II

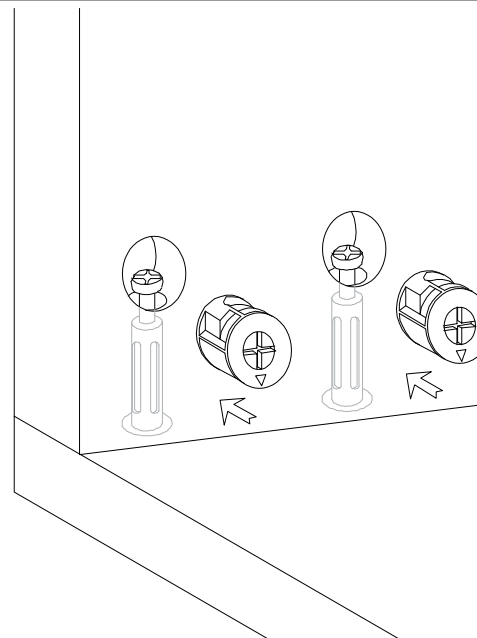

III

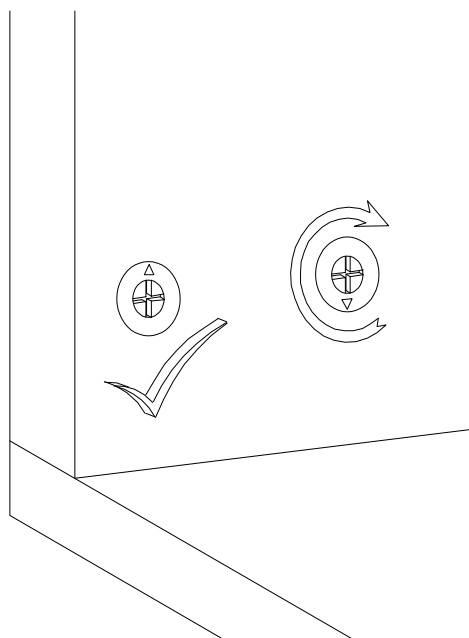


IV




Scan QR code for assembly video

1

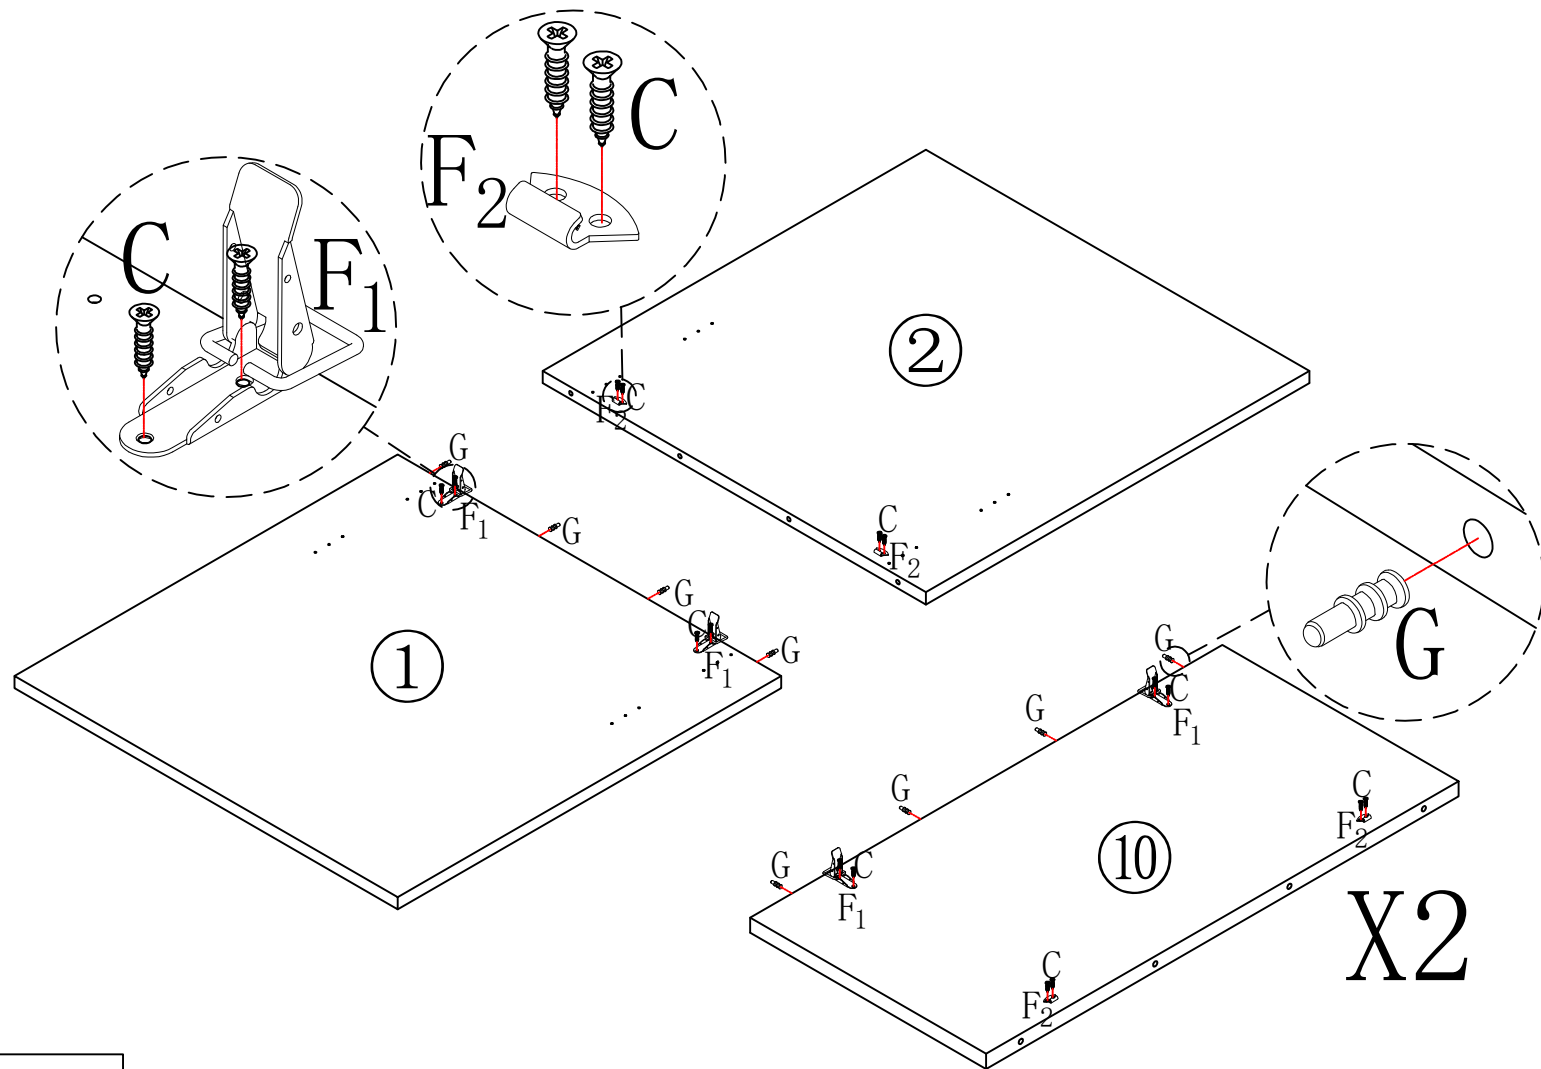


	C*24
	F*6
	G*12

②

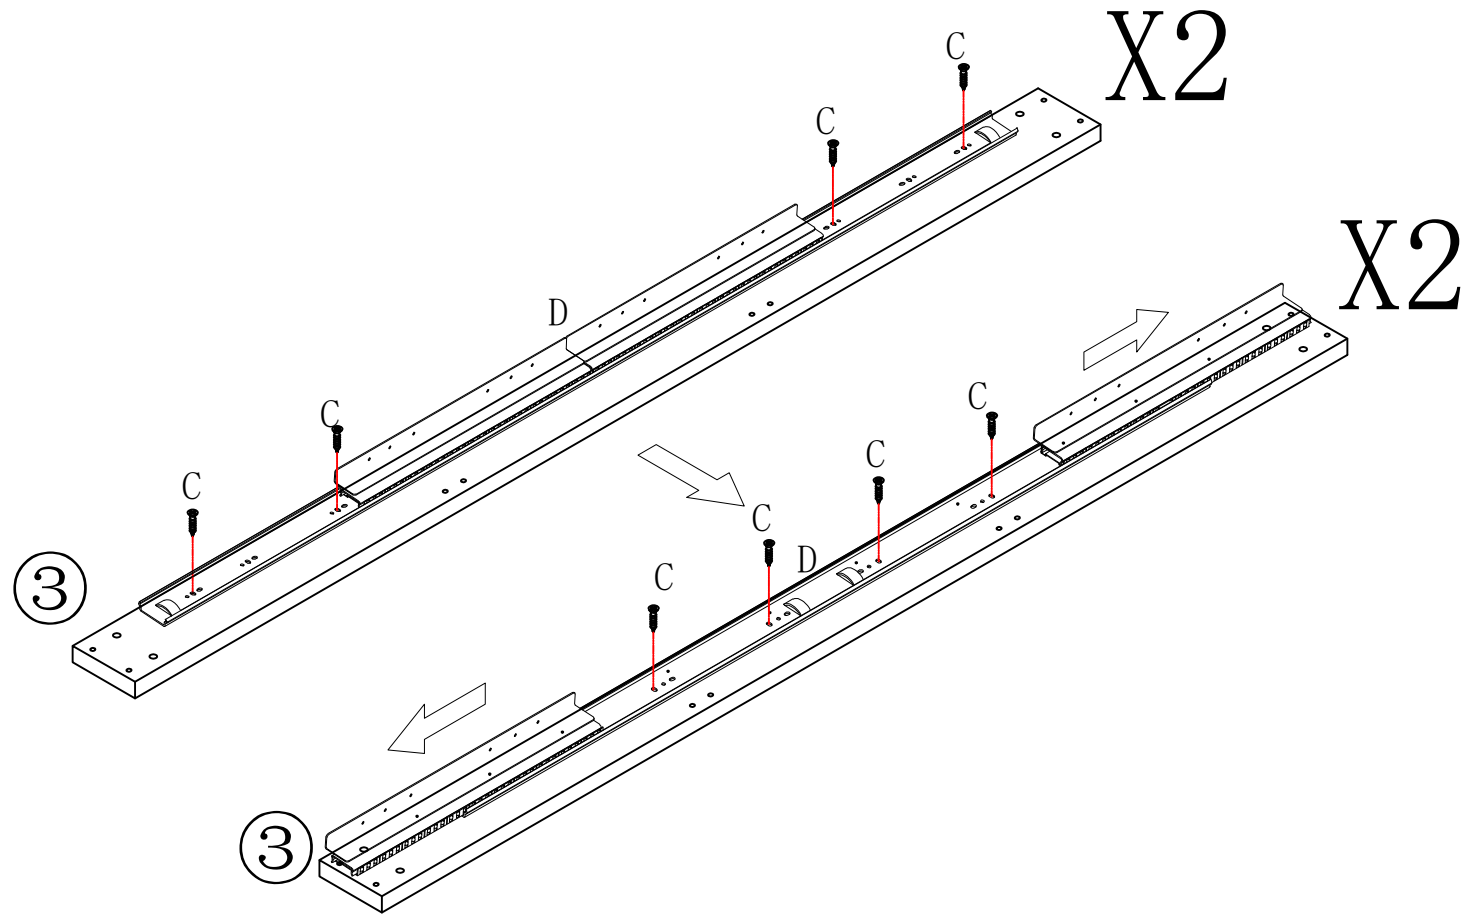

	C*16
	D*1

③

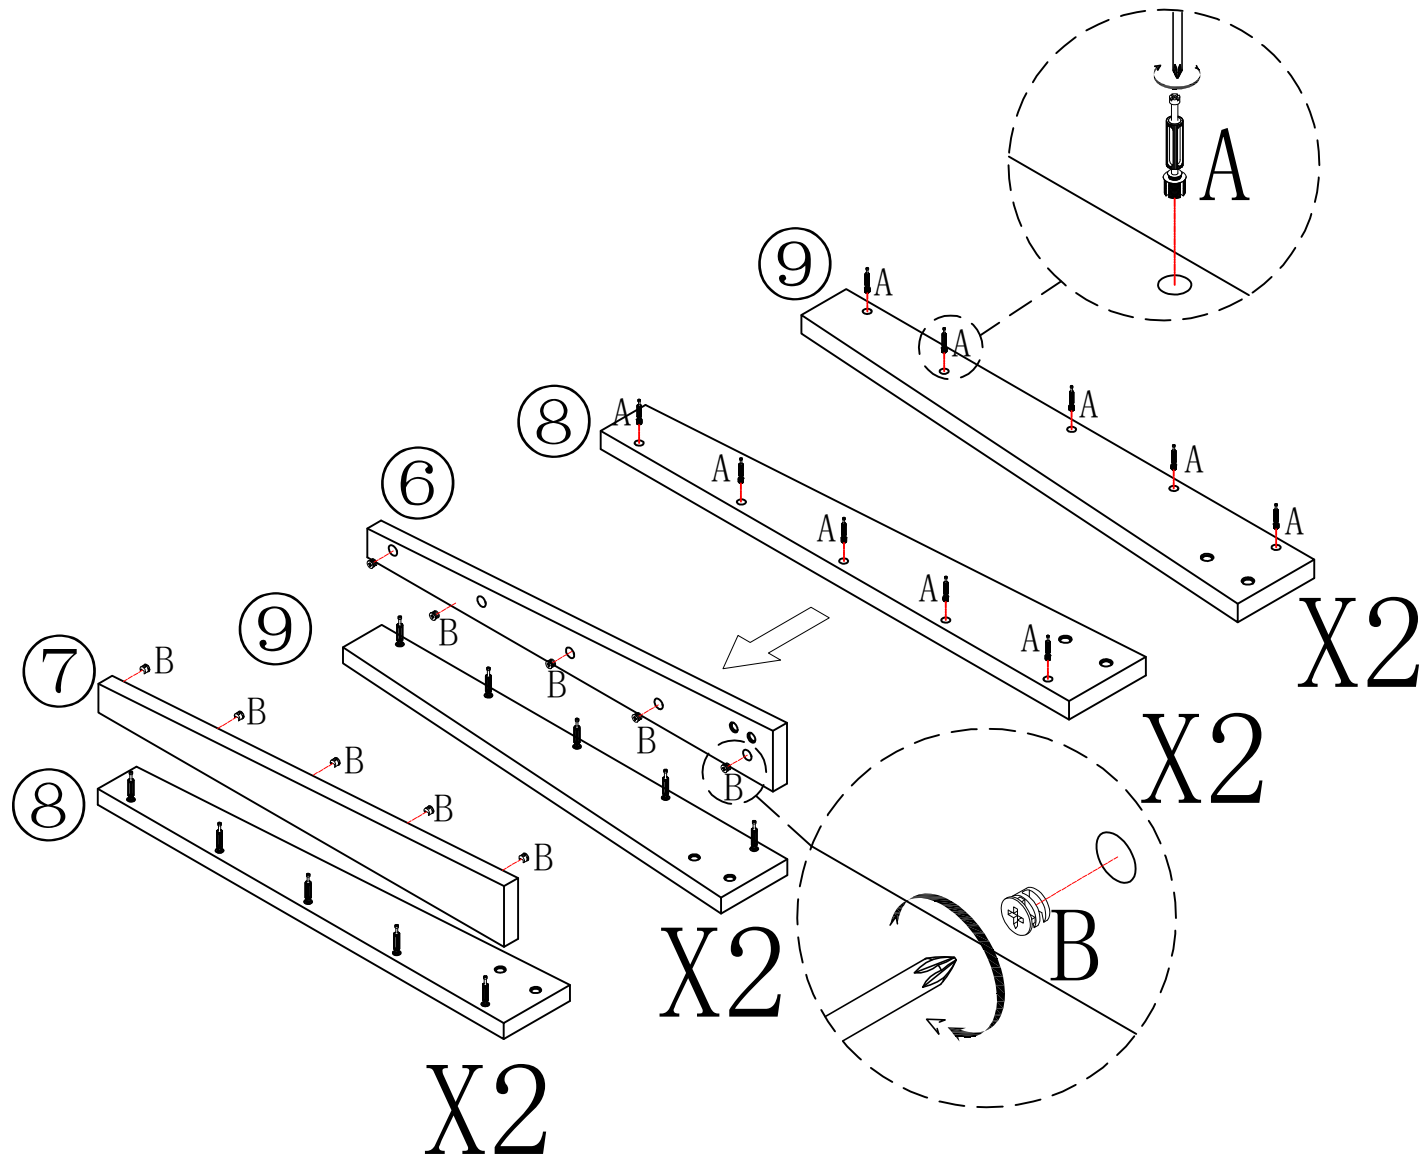

Make sure the arrow on the screw align to the hole on the side.

put A on board ⑧ ⑨

put B on board ⑥ ⑦




A*20




B*20

4

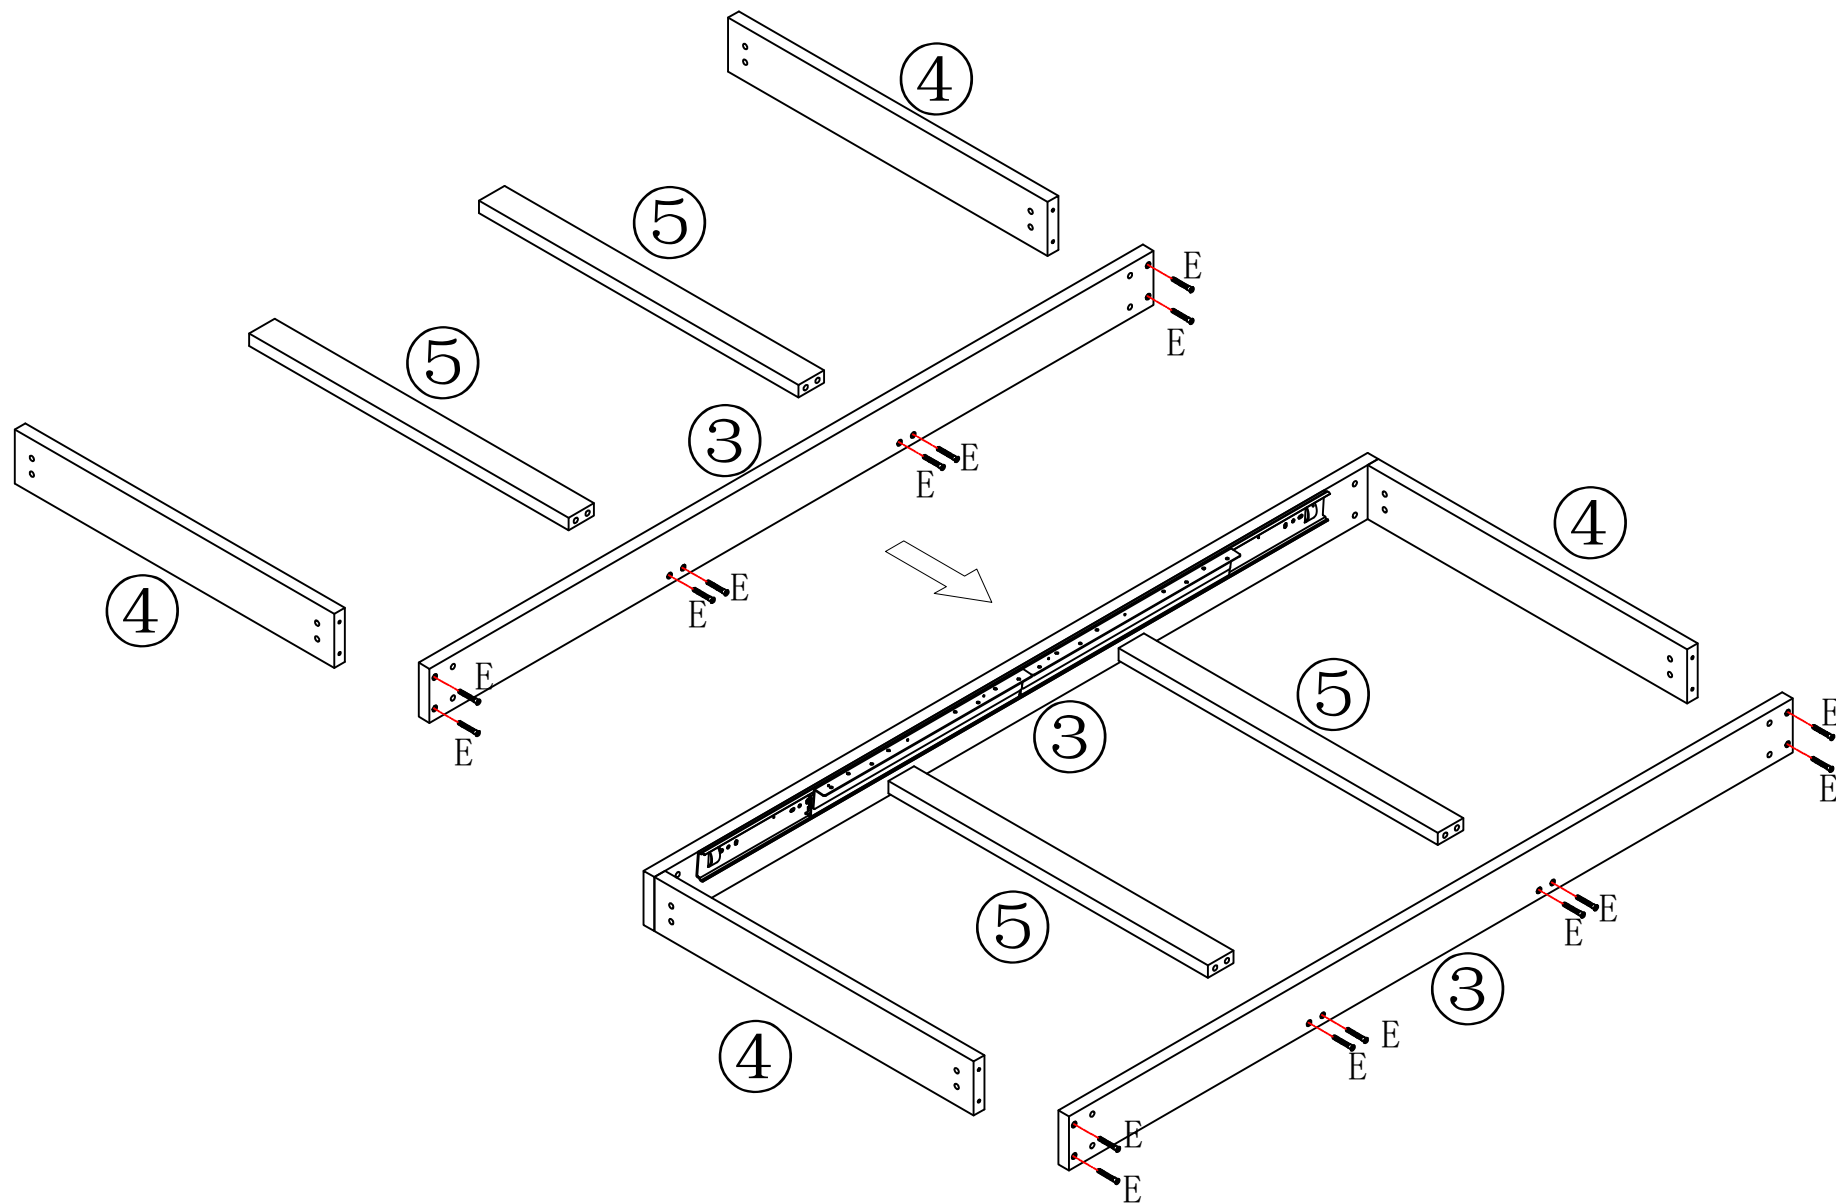


E*16

5

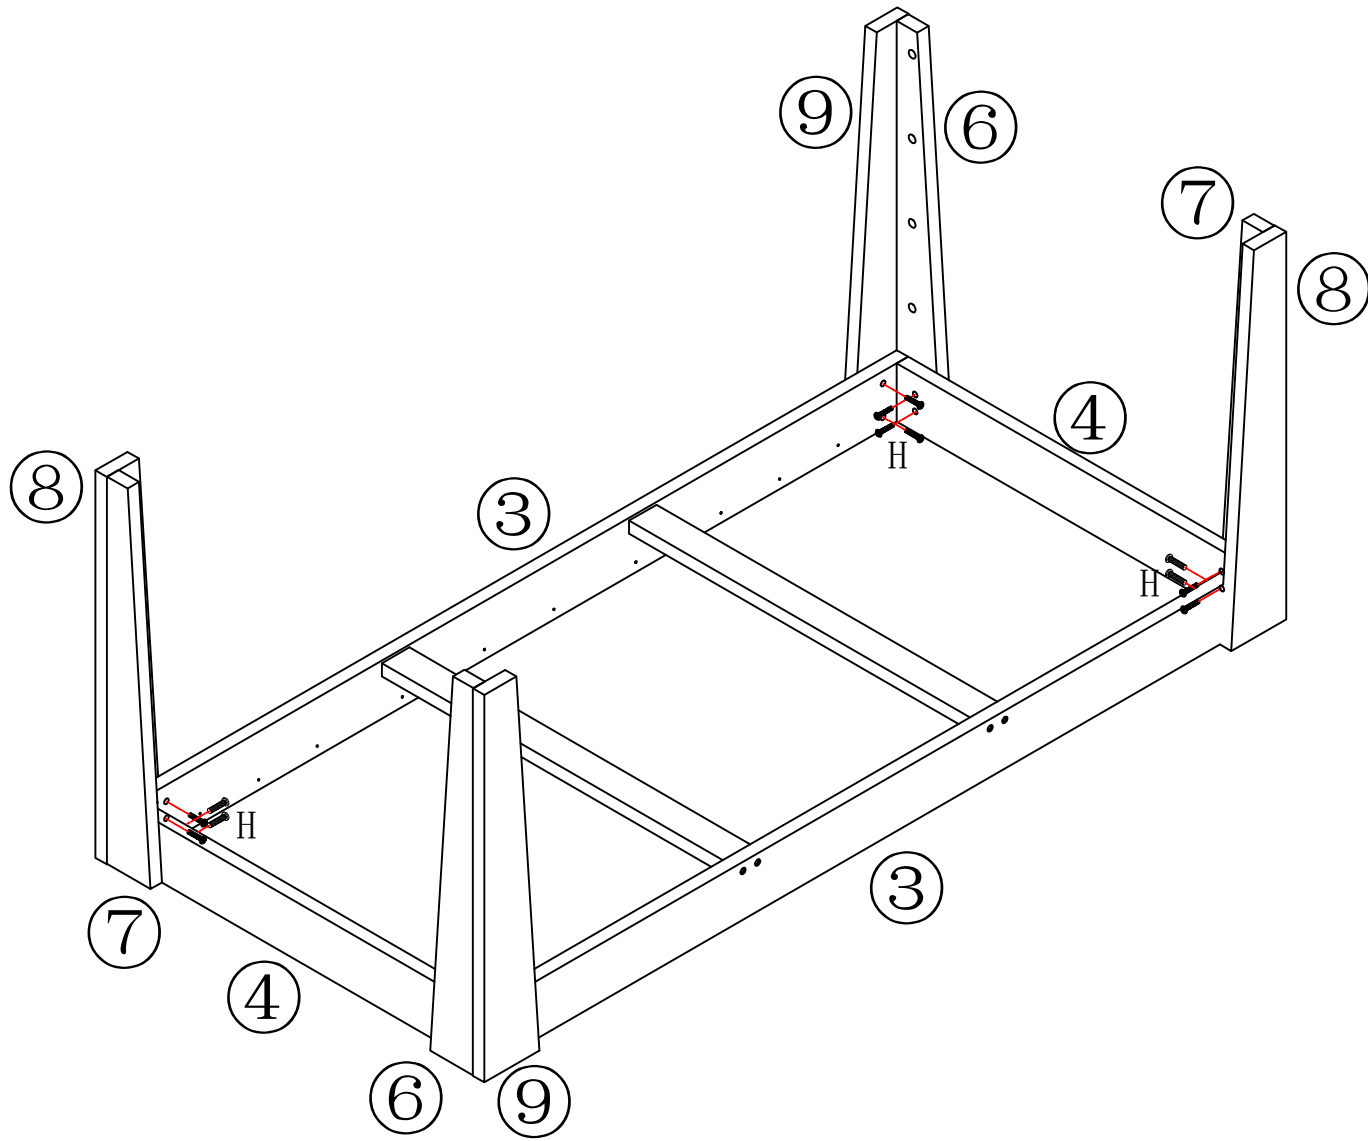


H*16


6

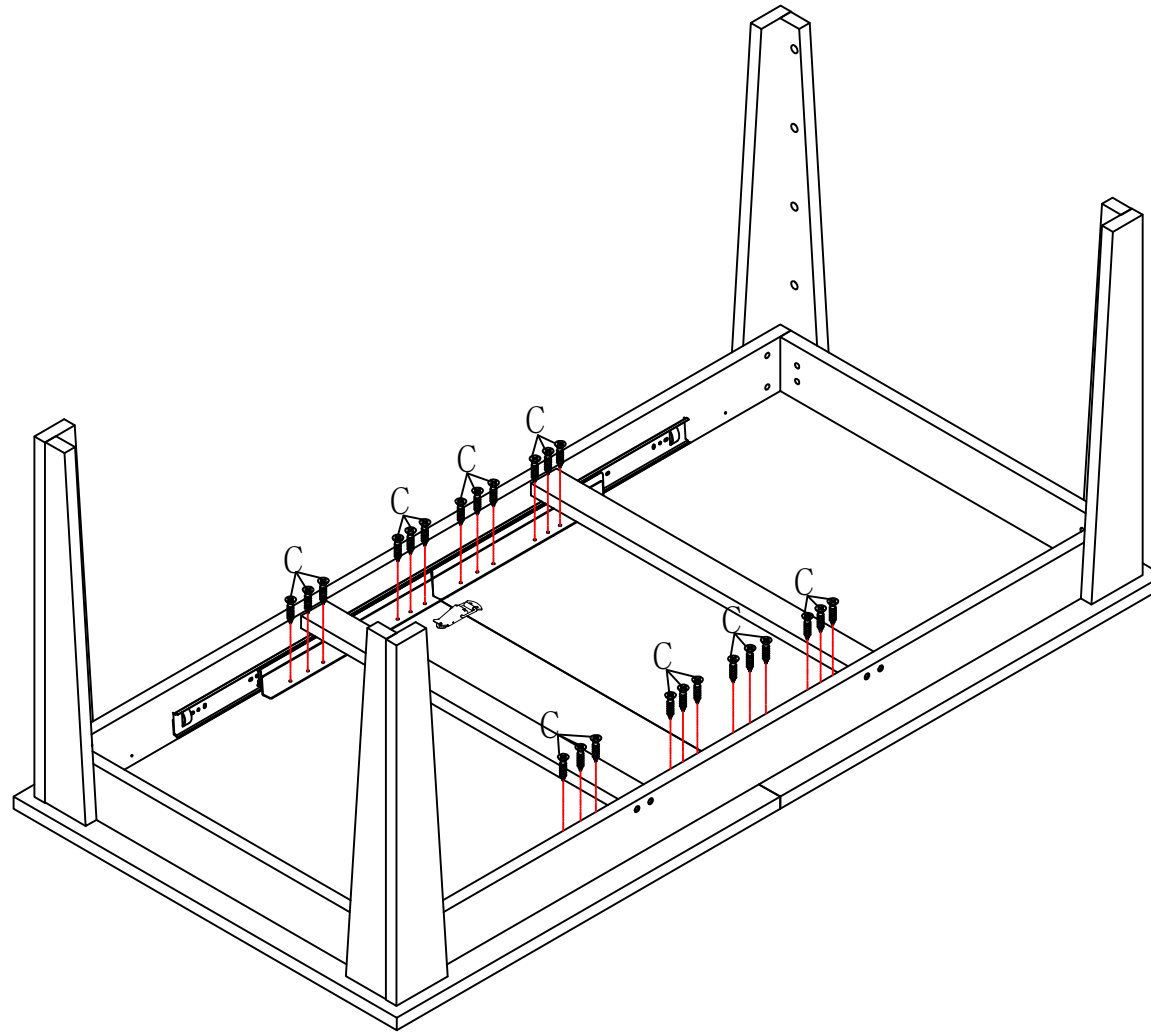

C*24

7

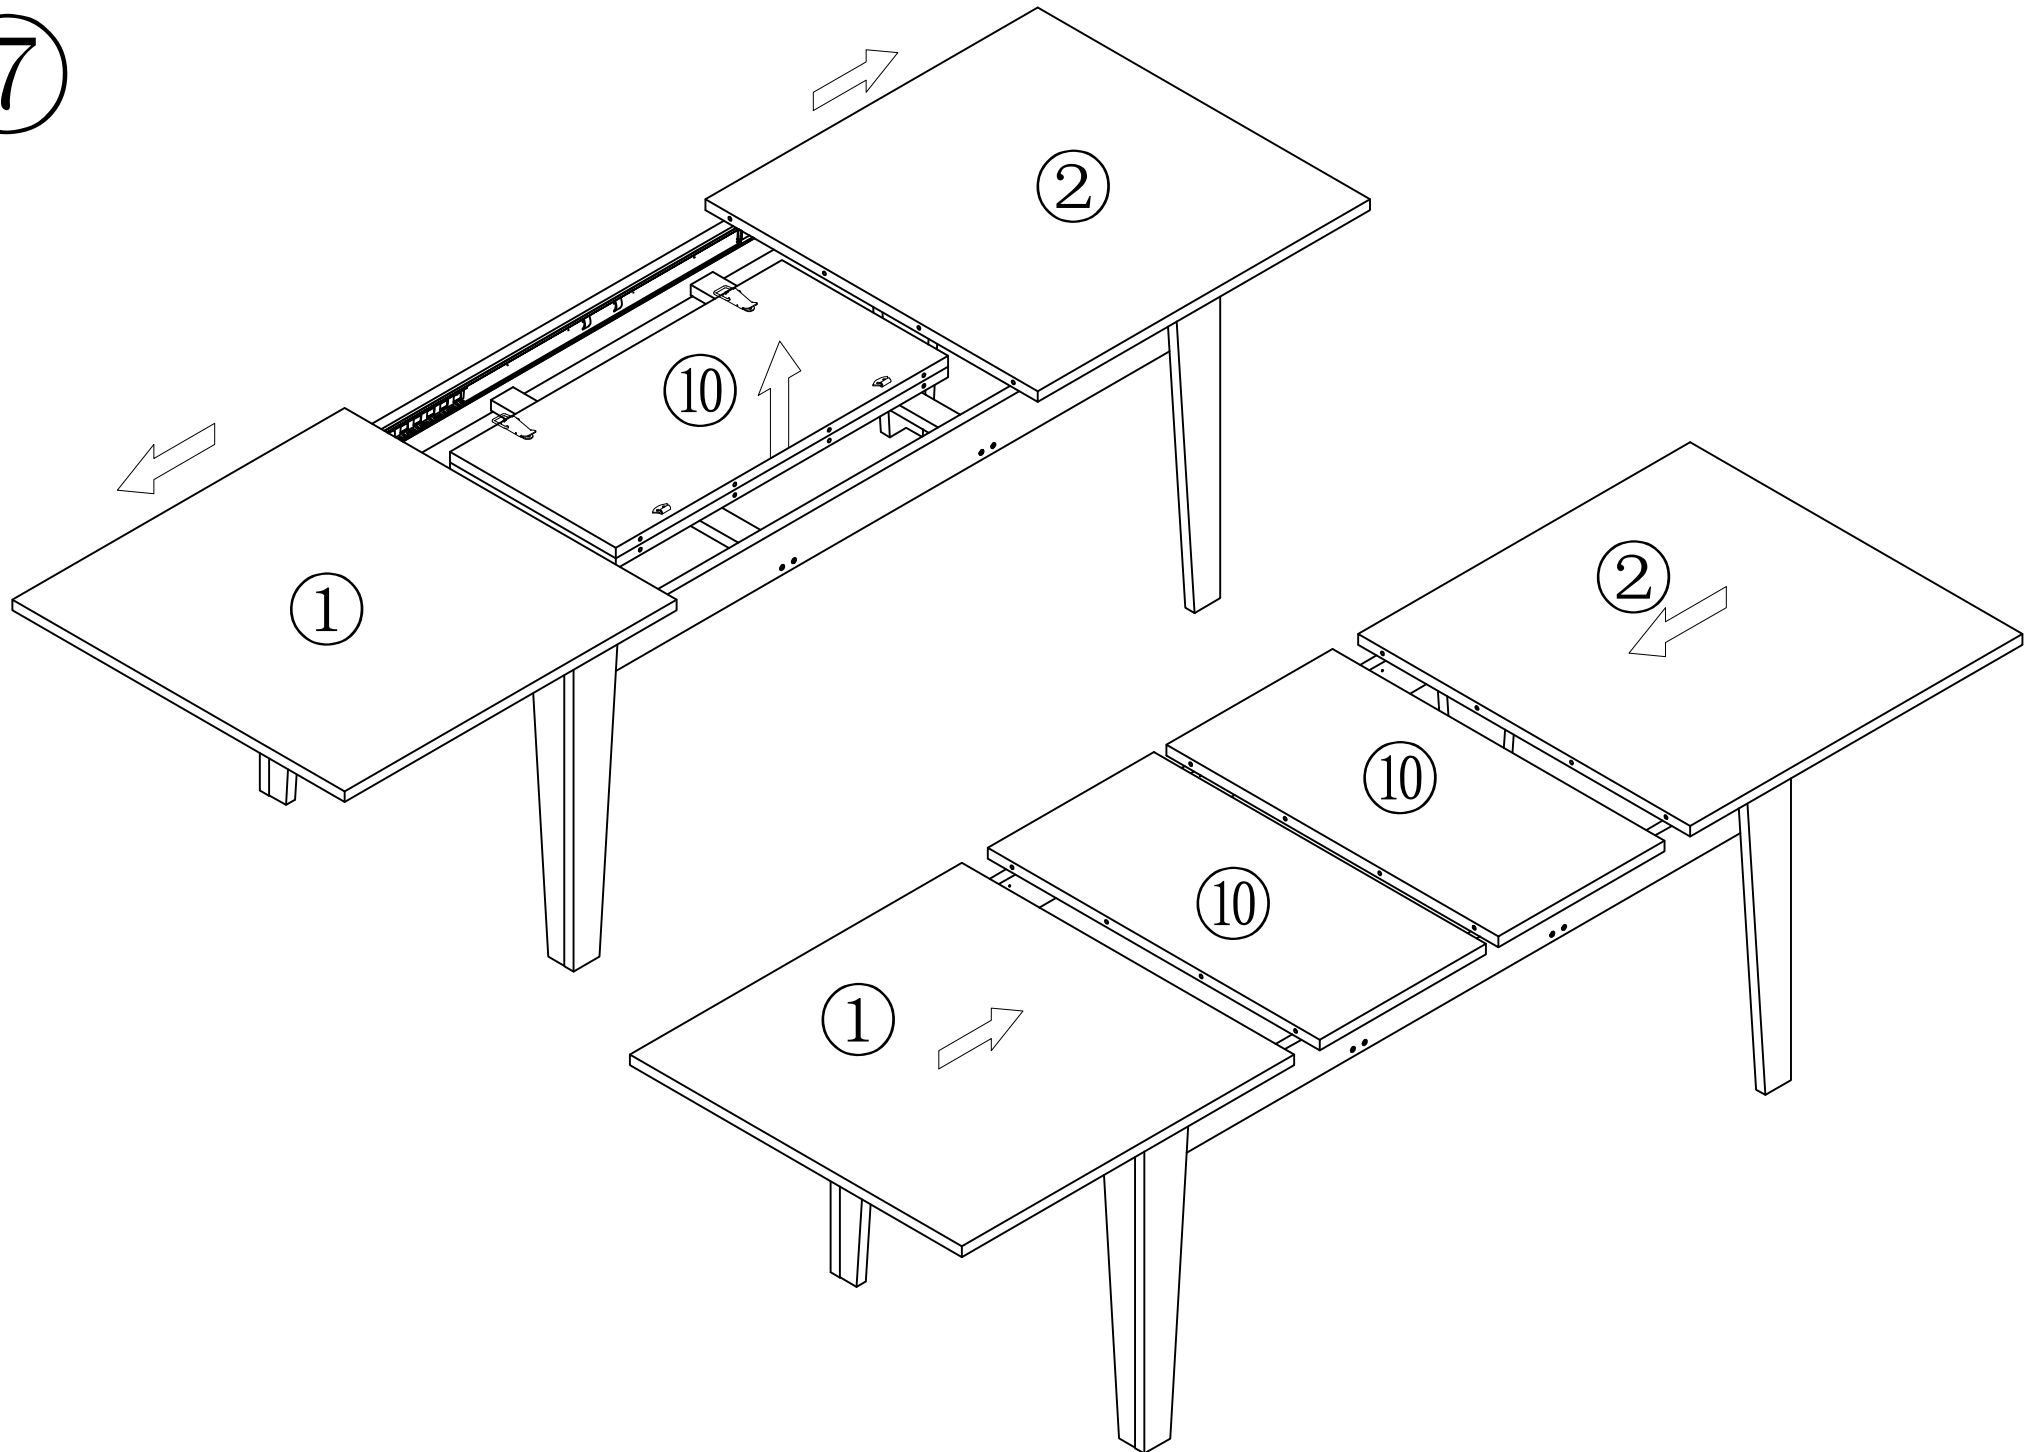

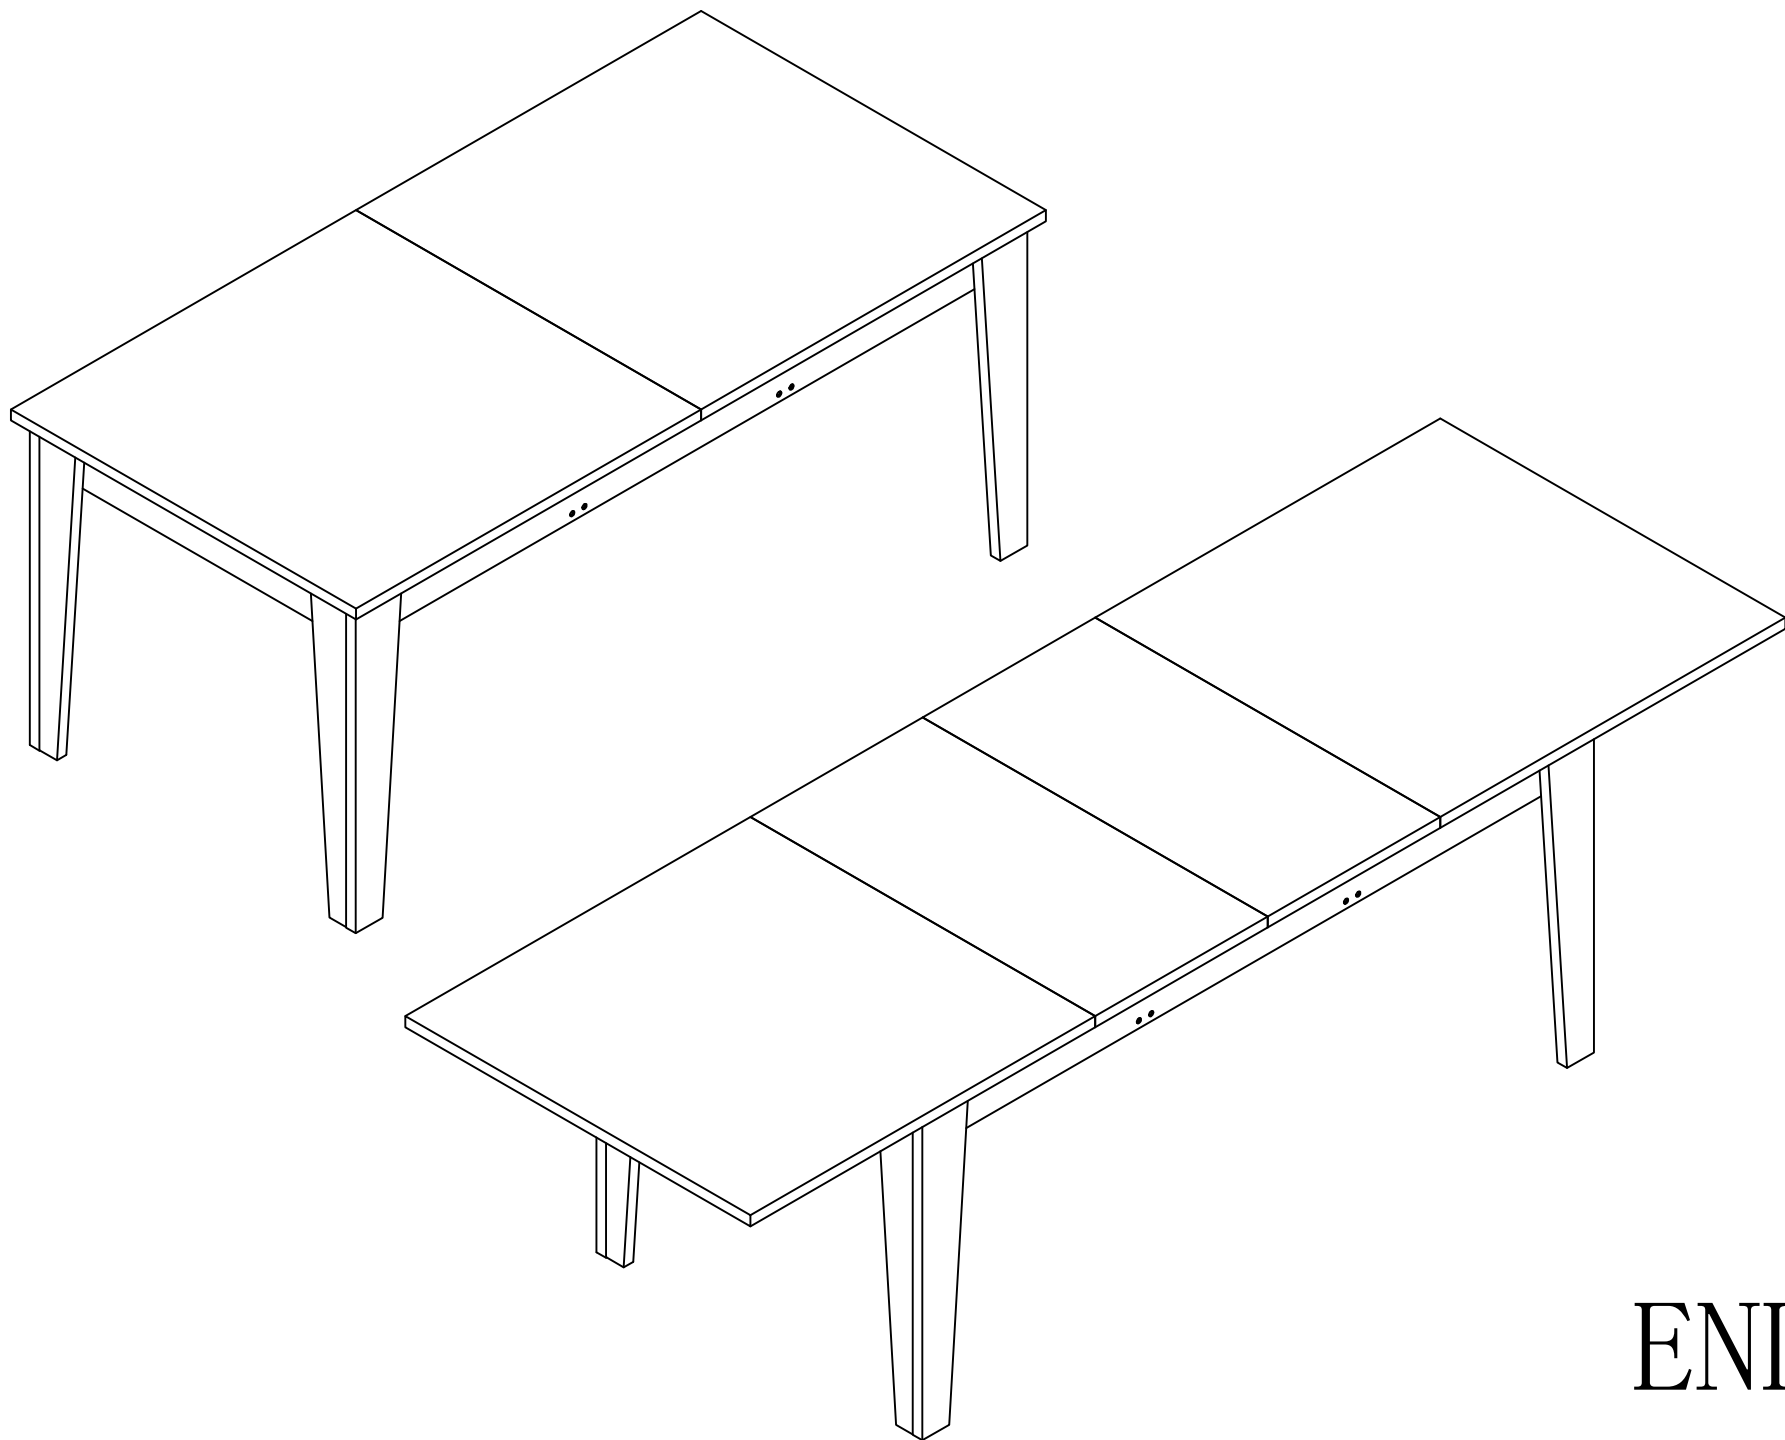

END