



1. Shingle up to the roof penetration.

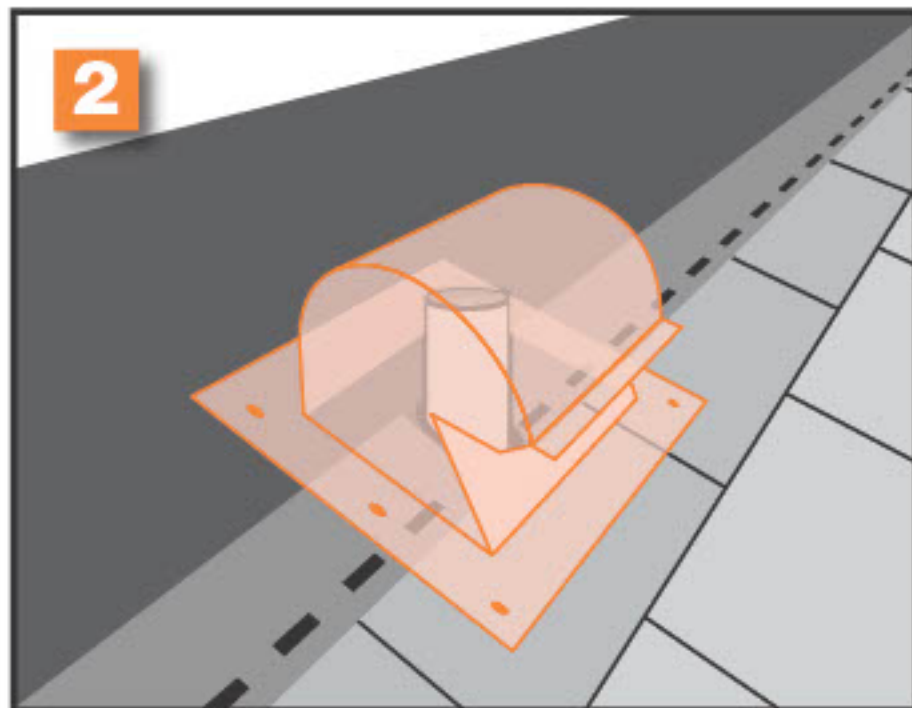

2. Position flashing over the vent pipe. Secure flange with 6 roofing nails.

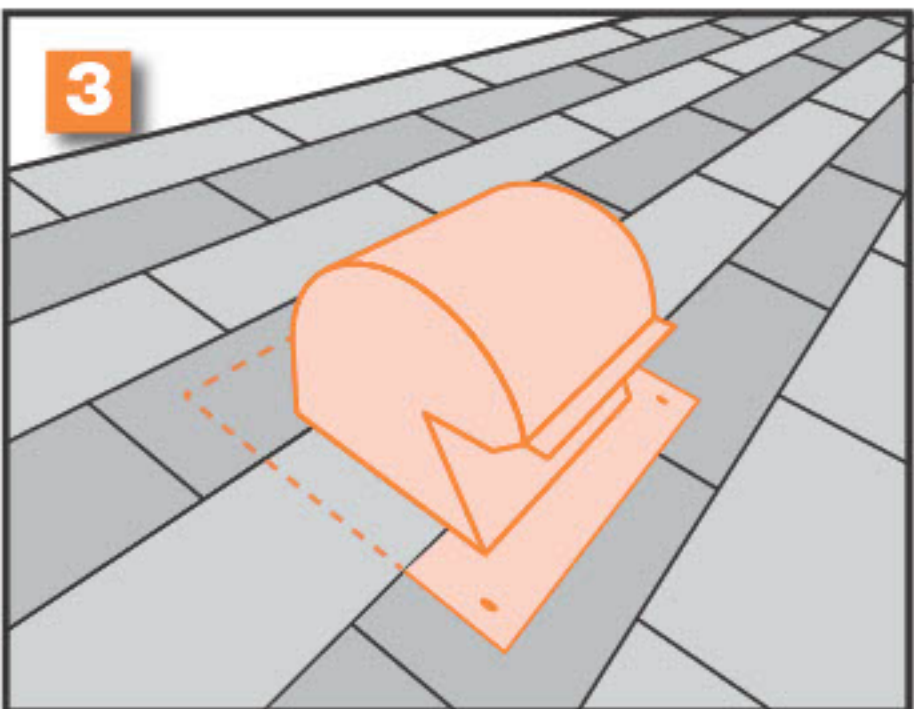

3. Continue shingling above the vent pipe. Note that the lower portion of the flange sits above the shingle while the upper portion is underneath the shingles.



CAUTION! Working above grade is inherently dangerous, be sure that proper fall protection measures are in place. When working with power tools and sheet metal, gloves and eye protection are absolutely required.

These installation guidelines are for use with typical or standard applications. It is always recommended to seek advice from a licensed professional, and to check with your local building inspector or building permit office for approvals and possible variations that may apply.