


ASSEMBLY INSTRUCTIONS

DAY BED

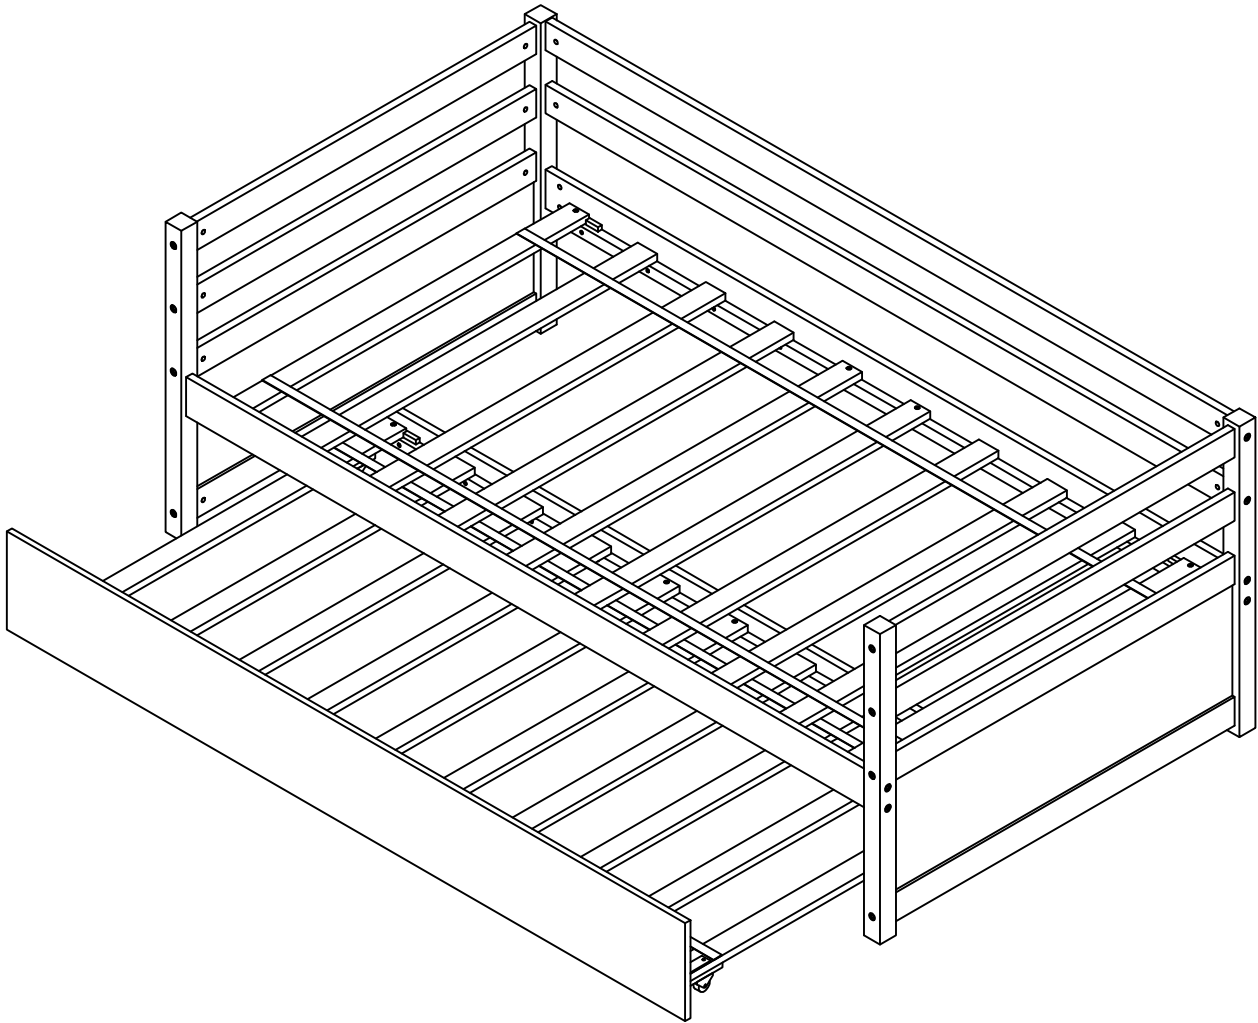

If you have any questions, please feel free to contact us.

Email: service@qualfurn.net

PLEASE DO NOT RETURN PRODUCT TO THE STORE.


If you have any problems or concerns, please feel free to contact our customer service department. We will reply to you at the first time.












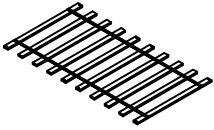


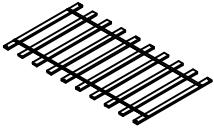
E-Mail: csr@merax.com
Tel: 626-912-8886 Ext.100

WF191421









Detail View

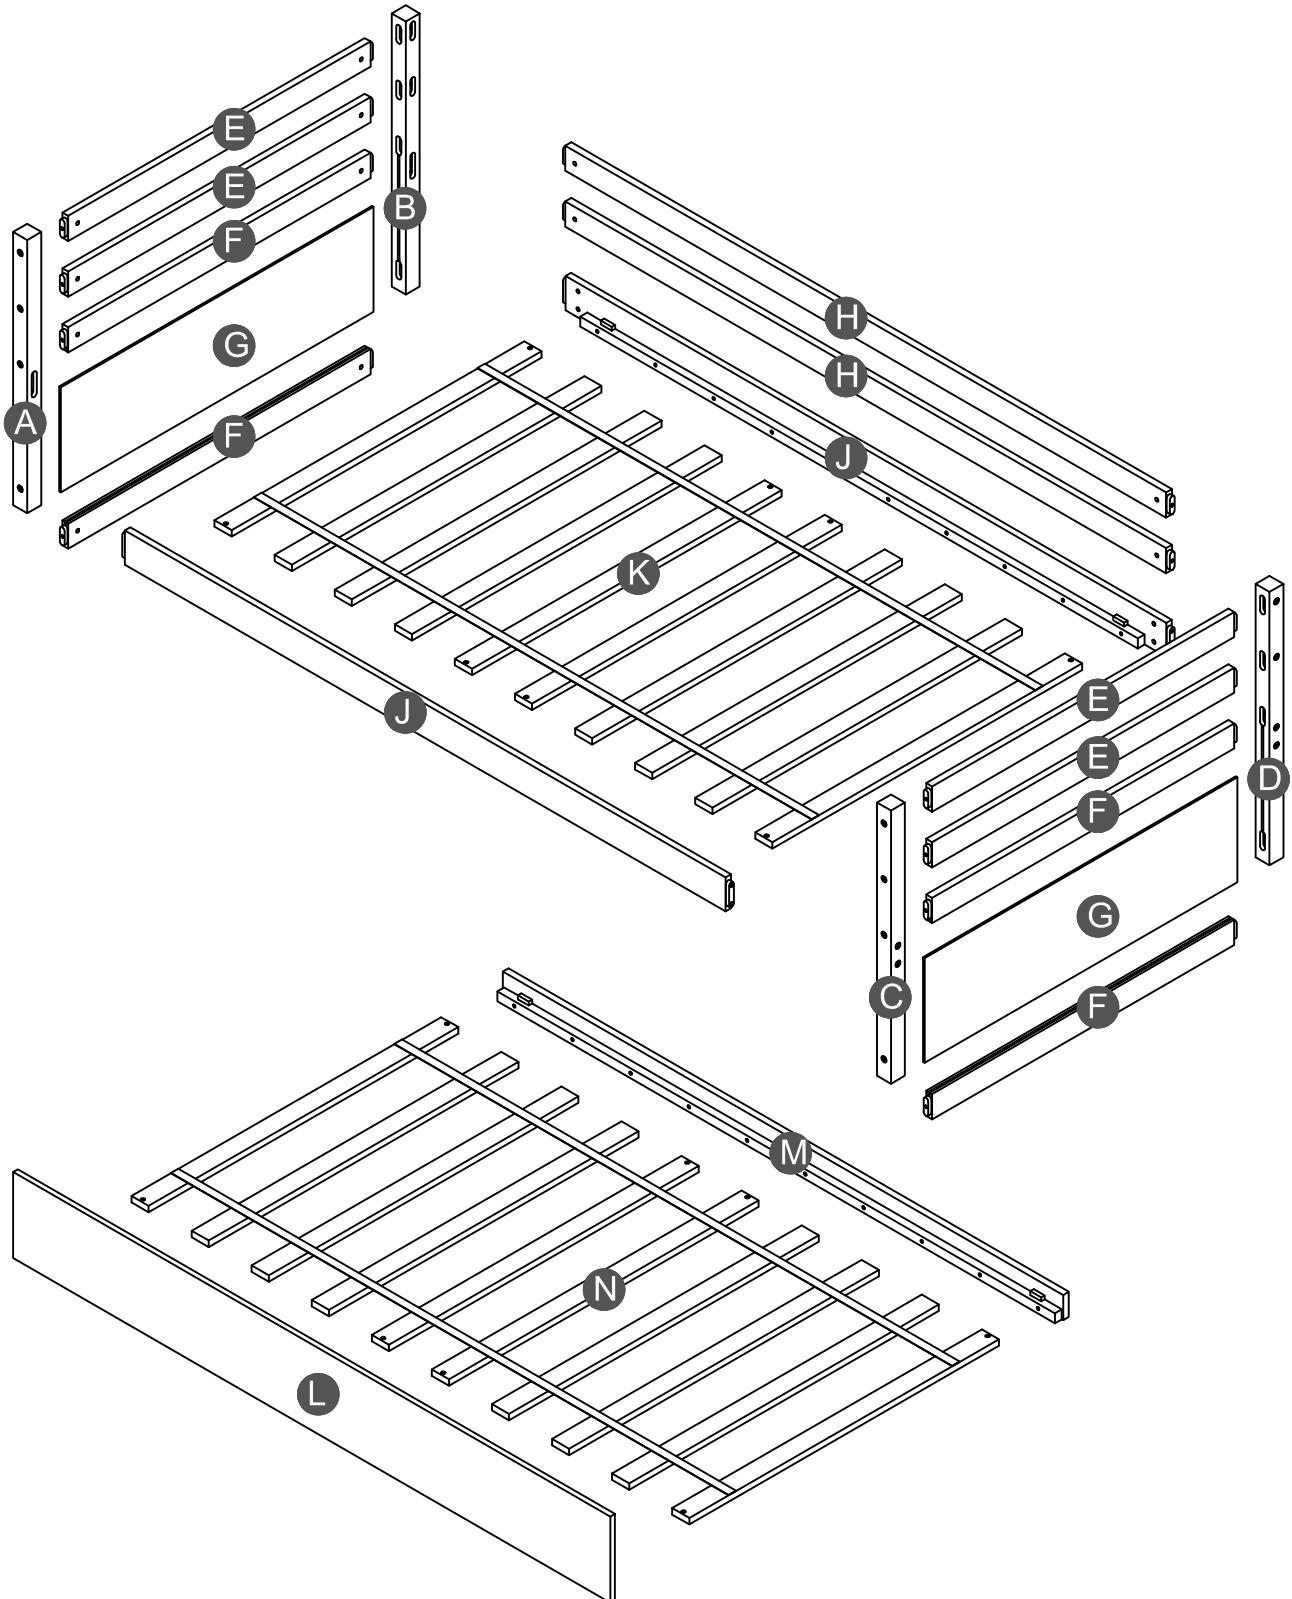



Part List

A  Leg HB (Left)- 1pc	B  Leg HB (Right)- 1pc	C  Leg FB (Left)- 1pc
D  Leg FB (Right)- 1pc	E  Upper orizontal bars (HB&FB) - 4pcs	F  Lower horizontal bars(HB&FB)- 4pcs
G  Side panel (HB&FB) - 2pcs	H  Guard rail (back) - 2pcs	J  Side rail (front & back)- 2pcs
K  Slat - 1set - (10pcs)	L  Drawer front panel - 1pc	M  Drawer back panel - 1pc
N  Drawer Slat - 1set - (10pcs)		

Hardware List


1  (Ø15)1/4"*100mm Hex-Head bolts (12pcs)	2  (Ø15)1/4"*80mm Hex-Head bolts (16pcs)	3  1/4"*15 (9.5mm) Horizontal-Hole bolts(28pcs)
4  Ø4*30mm Wood screws (24pcs)	5  100*65*20 mm Wheels (4pcs)	6  (1/4")4.5*58mm Allen key (1pc)
7  120*120*25*2mm Metal bracket (2pcs)	8  Ø3*12mm Wood screws (8pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

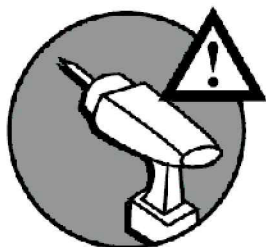


DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !

STEP 1:

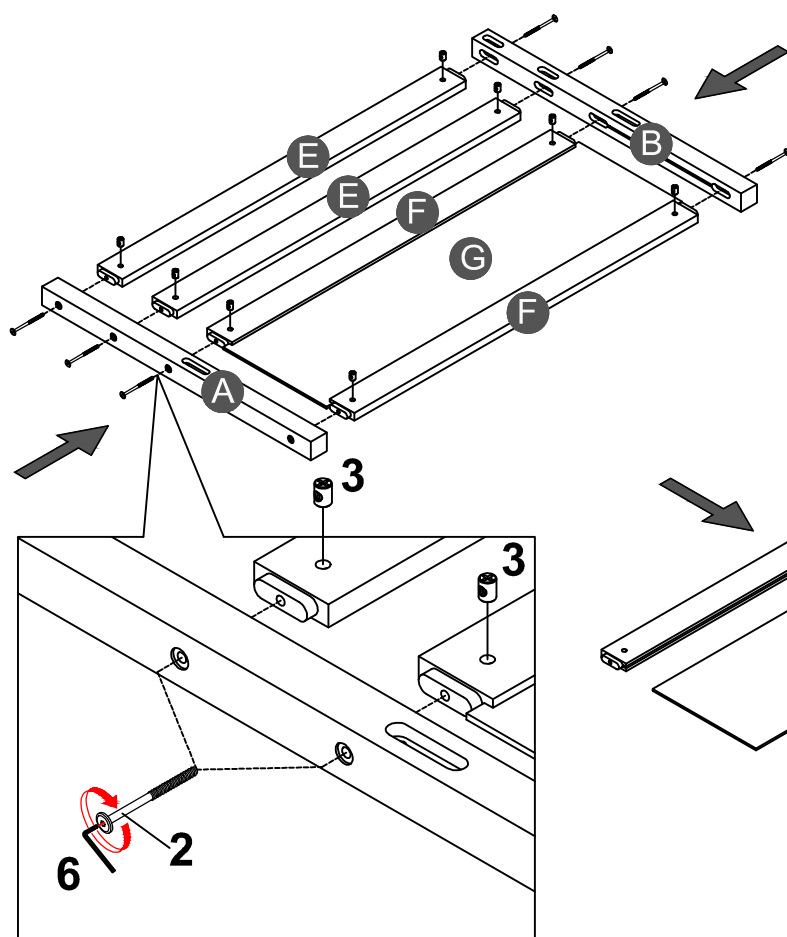



2	3
8PCS	8PCS

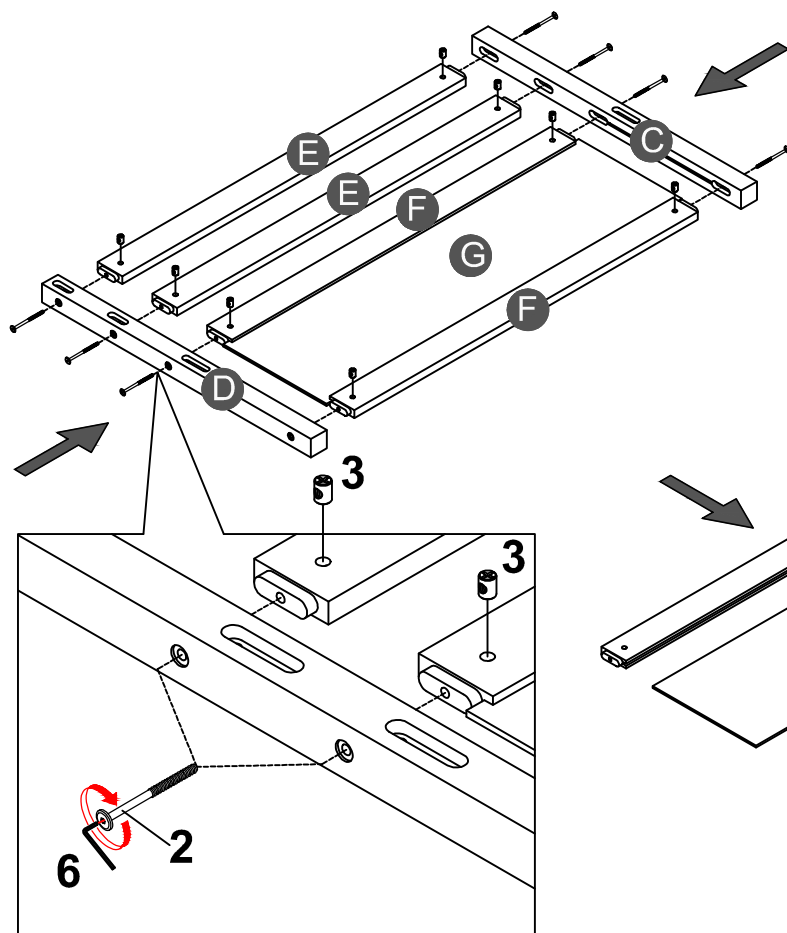
STEP 2:




2	3
8PCS	8PCS


STEP 3:

1		3	
12PCS		12PCS	

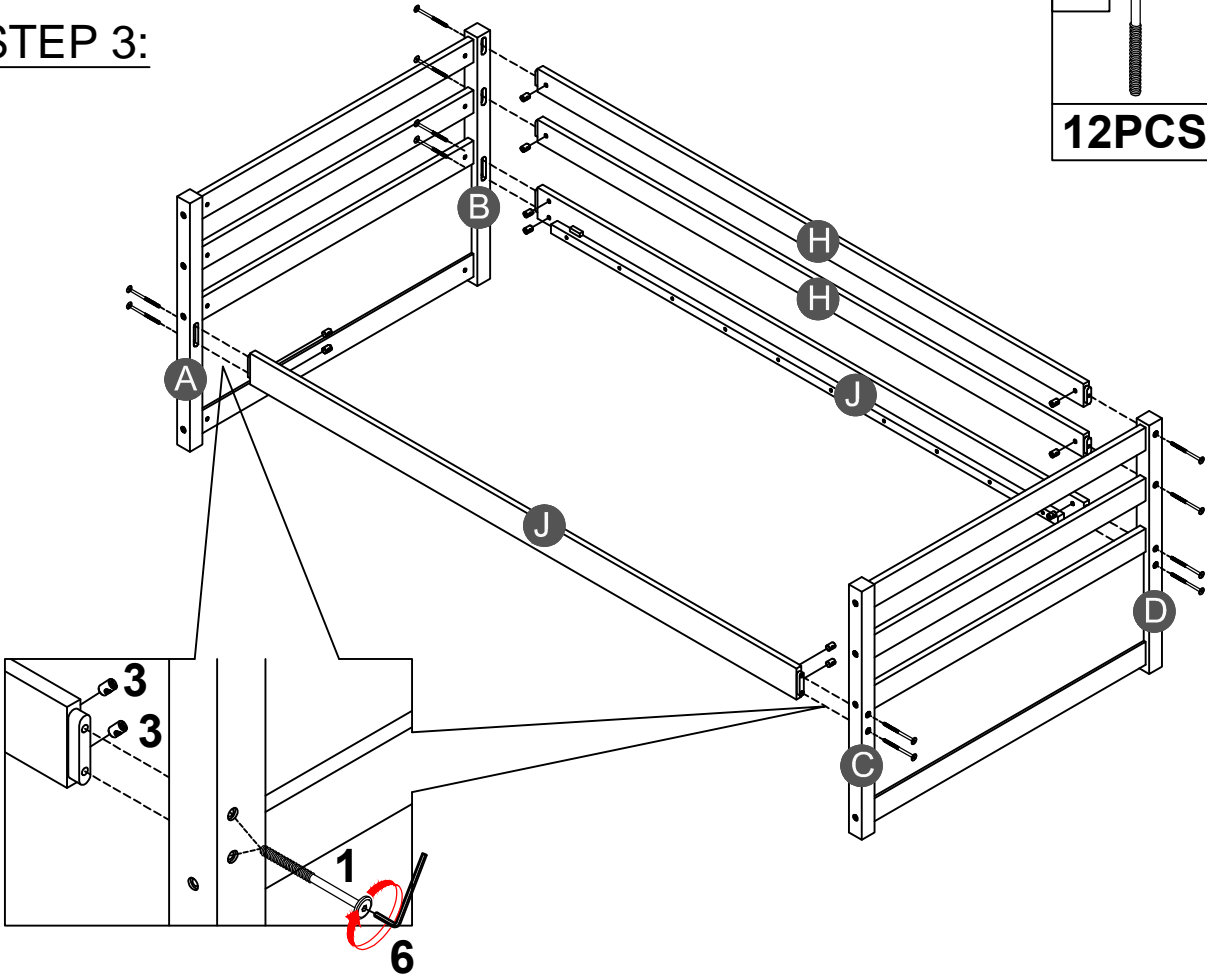



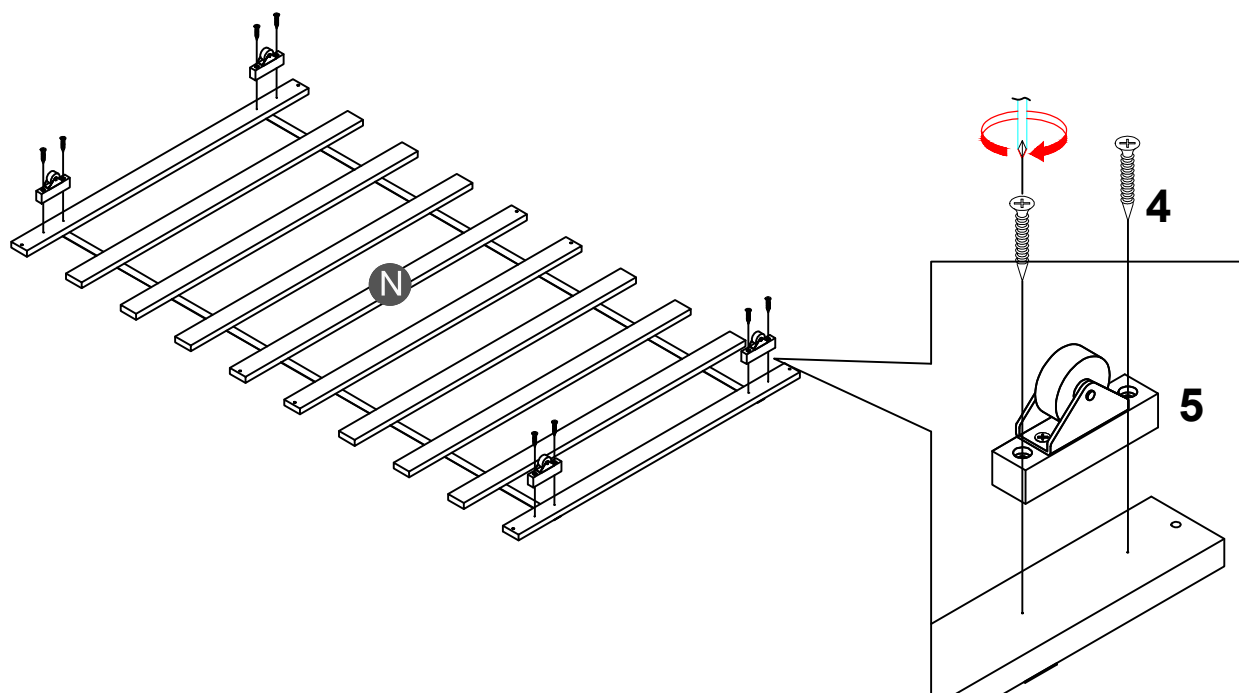
STEP 4:

4	
8PCS	

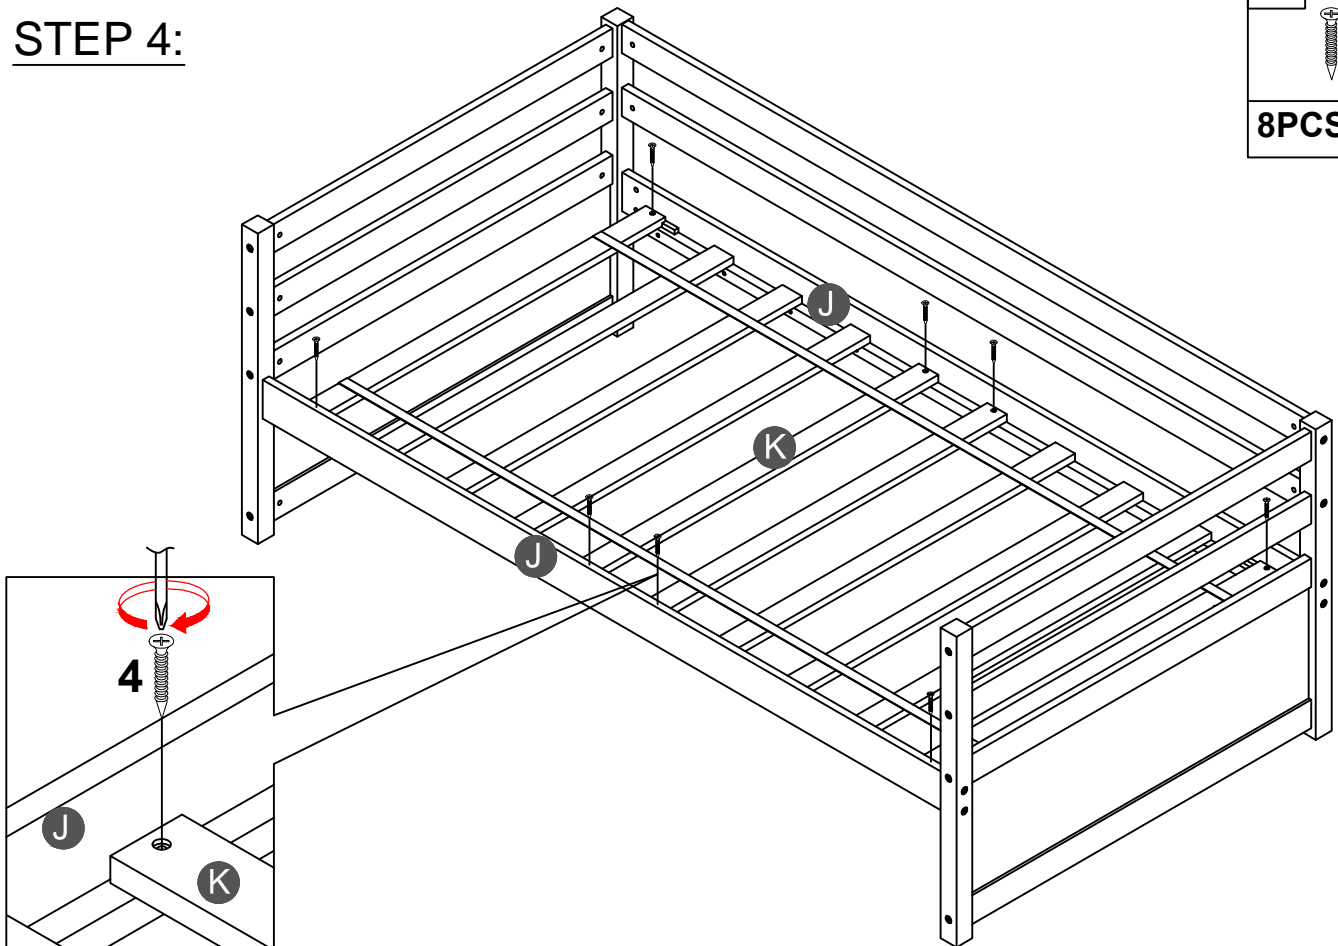


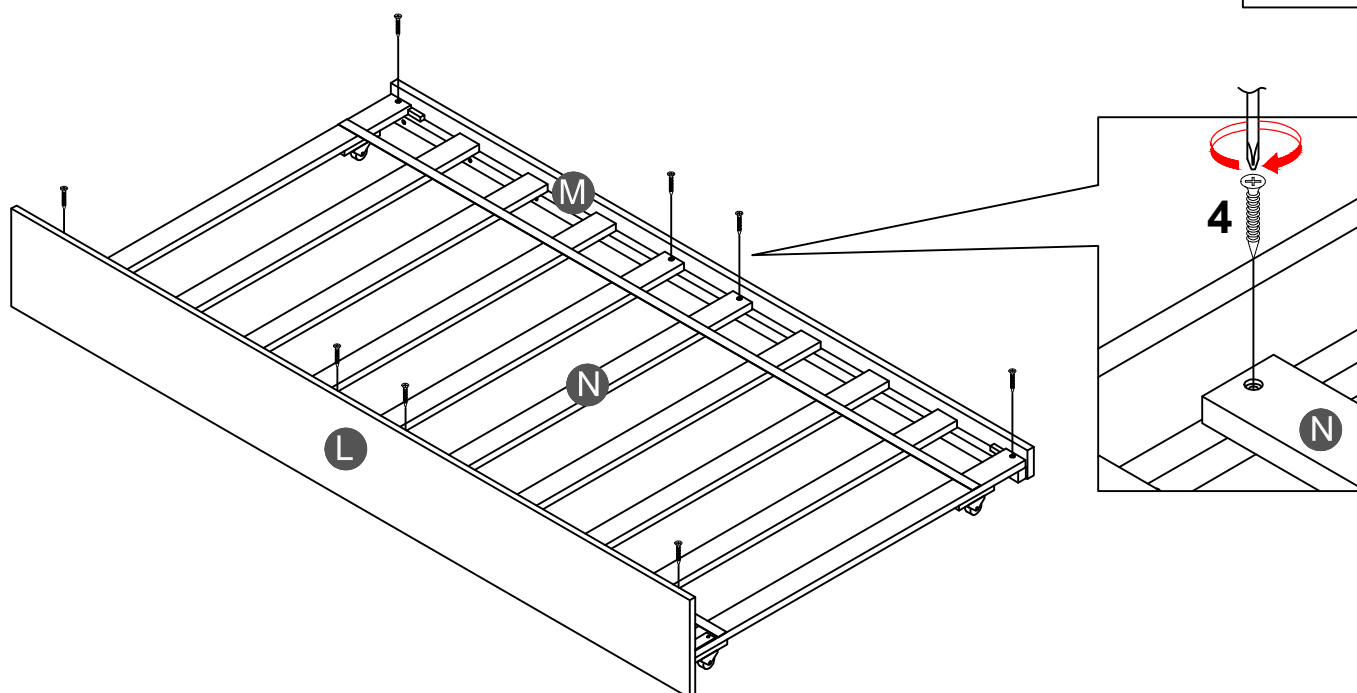
STEP 5:

5	4
	
4PCS	8PCS






STEP 6:


4

8PCS

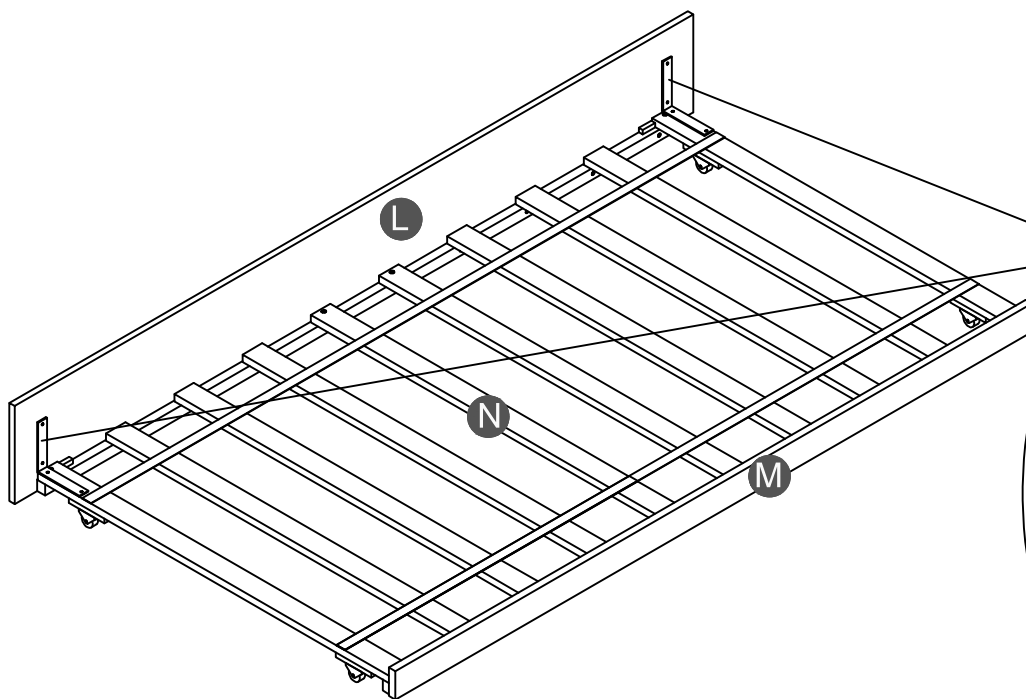


STEP 7:



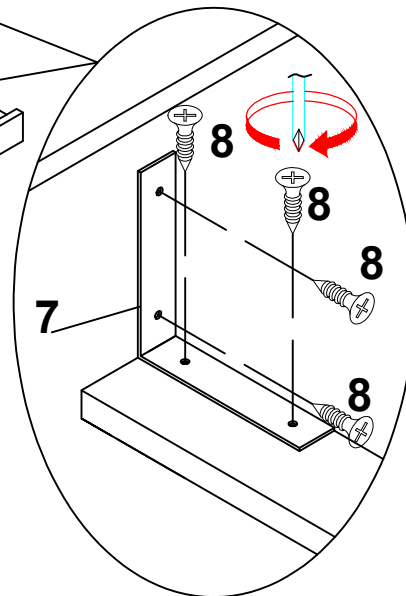7	8
	
2PCS	8PCS



STEP 8:

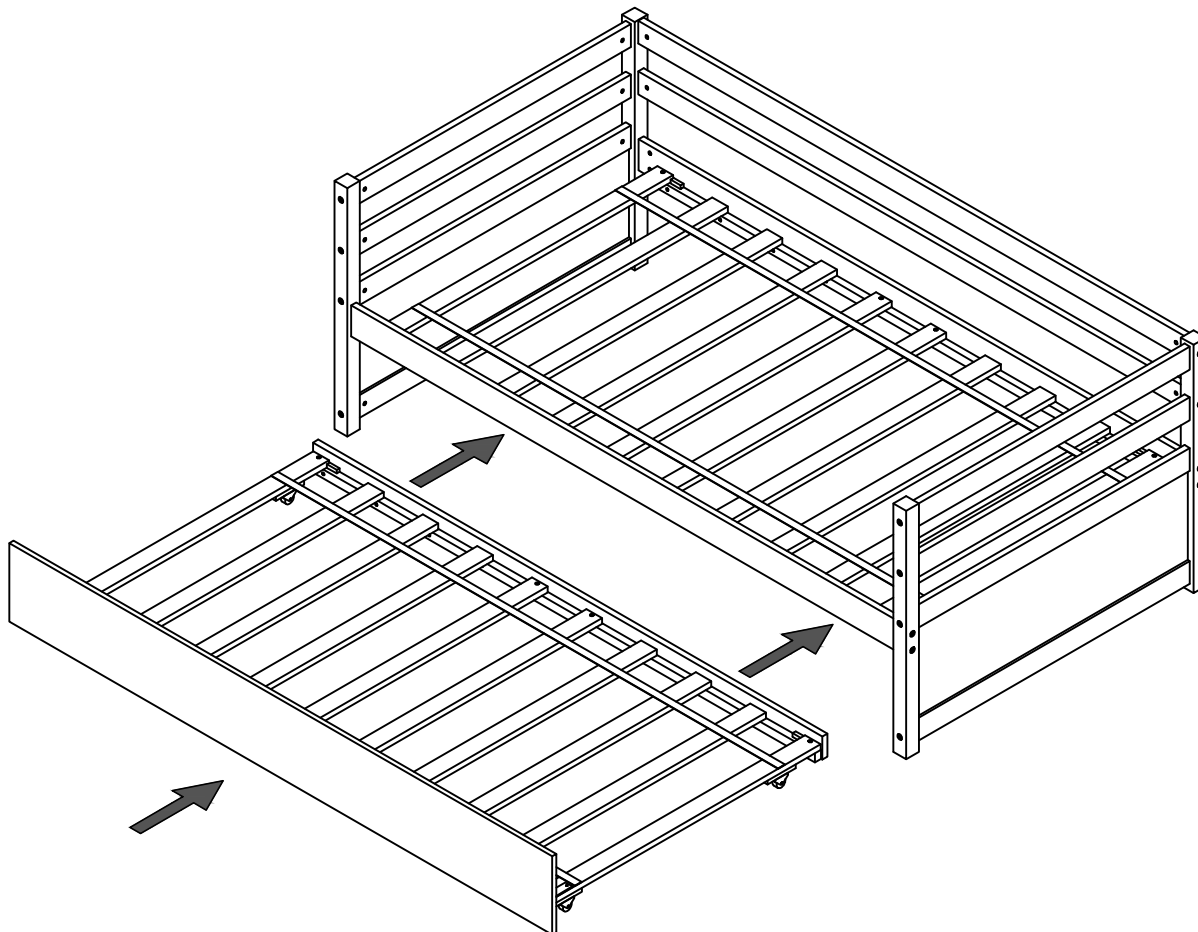

Push Trundle under the bottom of Day Bed.