


Hall Tree

Assembly Instructions - Please keep for future reference

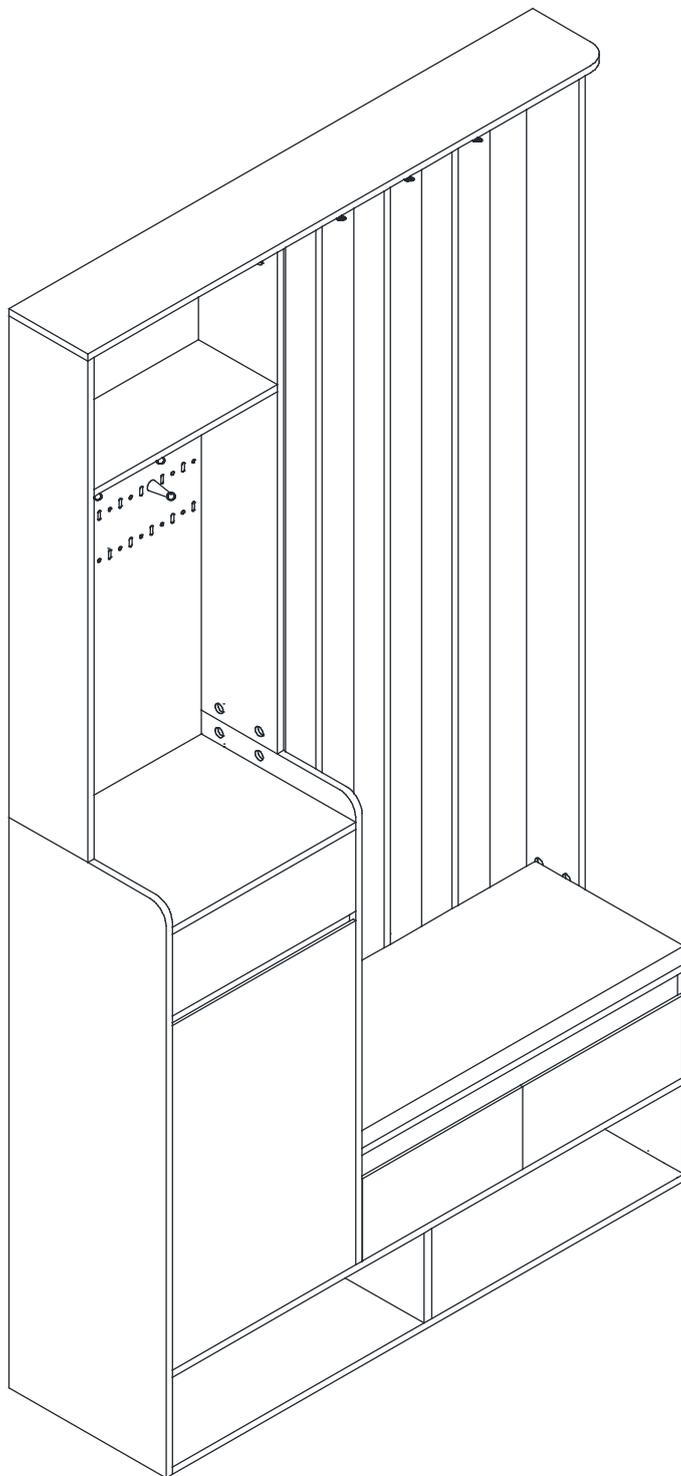

Dimensions

Width-39.37inch

Depth-11.8inch

Height-70.87inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning – please follow these instructions




To help prevent product toppling over please follow the below steps:-

- Use the anti tip stap or wall fixing method provided (if applicable)
- Do not allow children to climb or hang on the furniture
- Do not open more than one drawer at a time
- Do not place heavy items in the top drawers
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
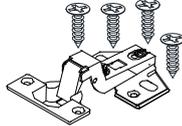
<p>(A)</p>  <p>Cam Bolt x 72+2</p>	<p>(B)</p>  <p>Dowel x 36+2</p>	<p>(C)</p>  <p>Cam lock x 80+2</p>	<p>(D)</p>  <p>3.5*12mm Screw x 24+2</p>
<p>(E)</p>  <p>3*14 Hook x 4SET</p>	<p>(F)</p>  <p>Stud Bolt x 4</p>	<p>(G)</p>  <p>2.6*10mm Screw x 34+2</p>	<p>(H)</p>  <p>4*24mm Hook x 4SET</p>
<p>(I)</p>  <p>3.5*14mm Hinge x 2SET</p>	<p>(J)</p>  <p>4*25mm Screw x 12+1</p>	<p>(K)</p>  <p>4*35mm Anti falling iron sheet x 2SET</p>	<p>(CL)</p>  <p>250mm runner x 3</p>
<p>(CR)</p>  <p>250mm runner x 3</p>	<p>(DL)</p>  <p>250mm runner x 3</p>	<p>(DR)</p>  <p>250mm runner x 3</p>	<p>(L)</p>  <p>Allen key x 1</p>
<p>(M)</p>  <p>Hole sticker x 80+2</p>			

Tools required

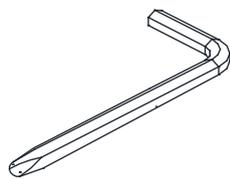

Phillips screwdriver
(medium & large)


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

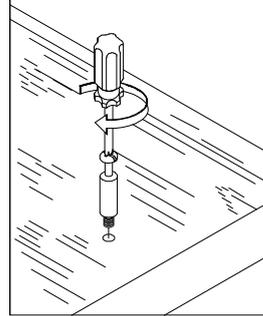

Step 2

Push the male camlock into the entry hole.

2

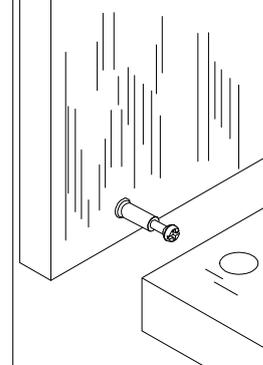


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

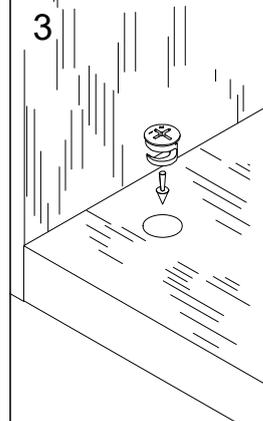


Step 4

Turn the female camlock clockwise with a screwdriver.





You should feel a click when the camlock is locked in place.

The joint is now secure.


4

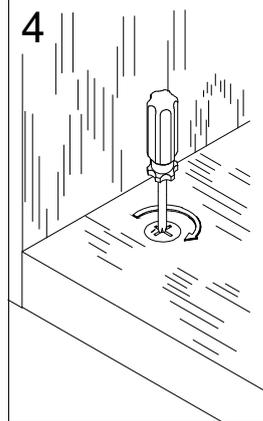

Assembly Instructions

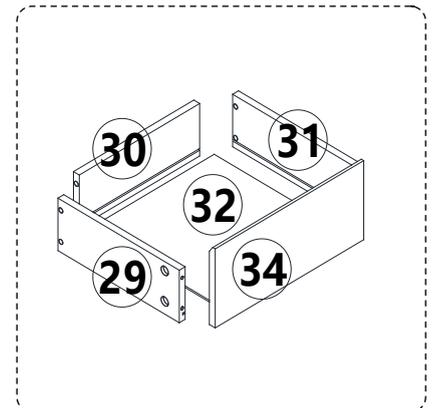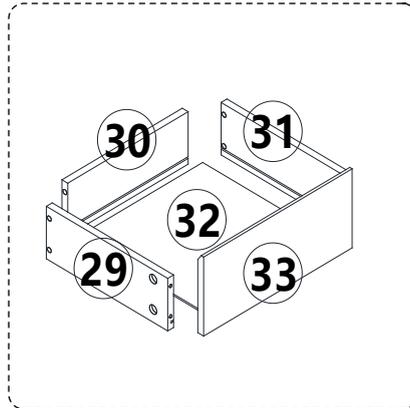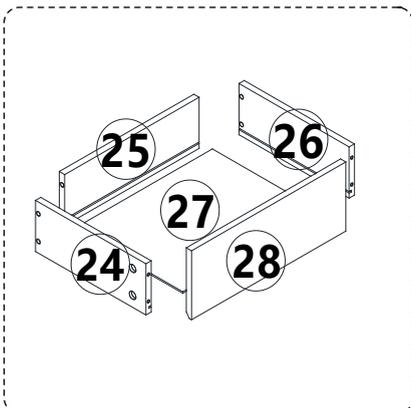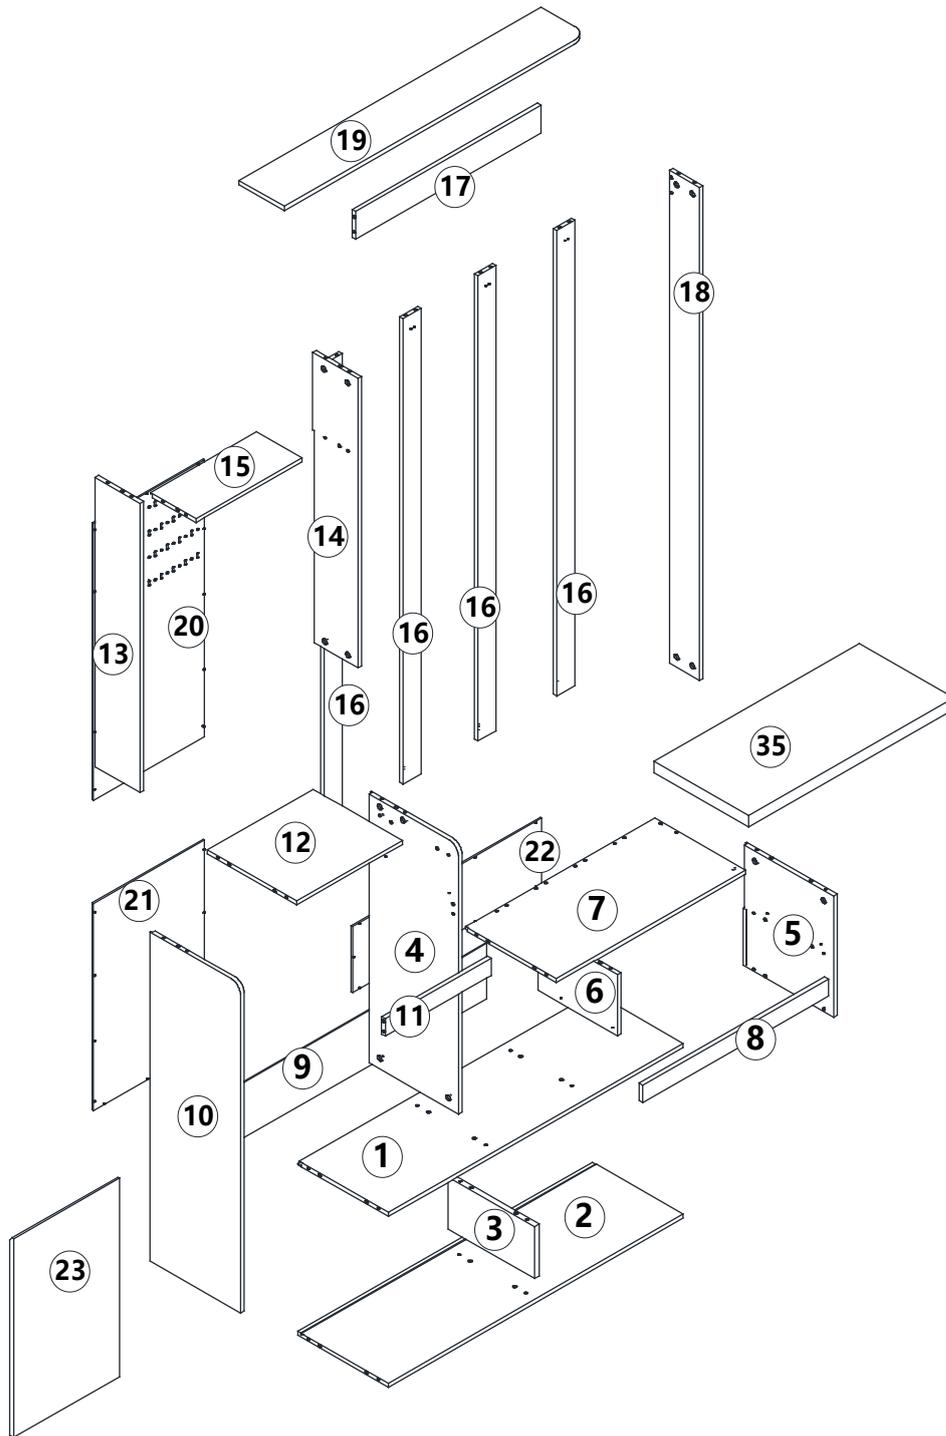


PART LIST




① x1

Middle panel
976*300*12mm




② x1

Bottom panel
976*300*12mm

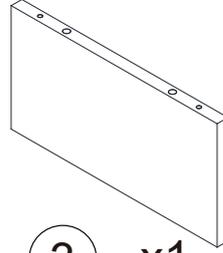


③ x1

Middle side panel
280*150*12mm

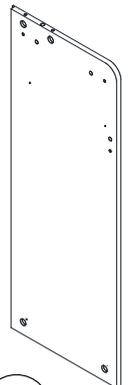


④ x1

Right side panel
778*300*12mm

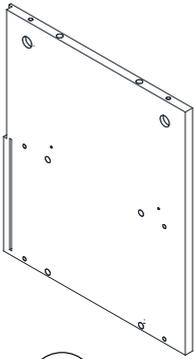


⑤ x1

Right side panel
335*300*12mm

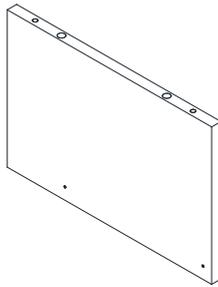


⑥ x1

Middle side panel
280*120*12mm

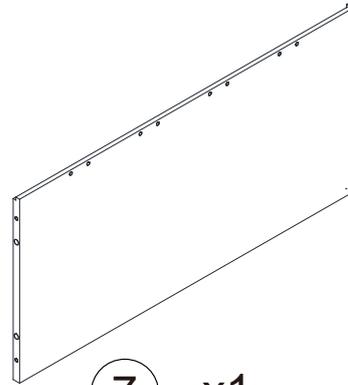


⑦ x1

Middle panel
621*300*15mm




⑧ x1

Horizontal panel
608*40*12mm

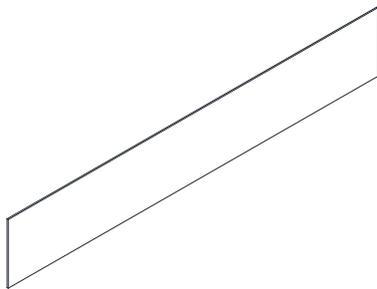


⑨ x1

Backboard
986*160*3mm

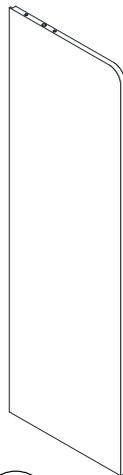


⑩ x1

Left side panel
949*300*12mm

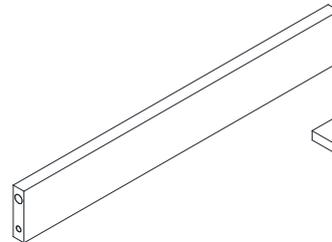

⑪ x1


Horizontal panel
356*50*12mm

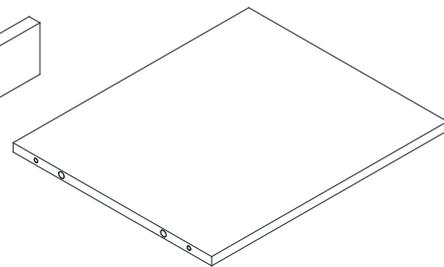

⑫ x1

top panel
356*295*12mm

PART LIST




13 x1

Left side panel
838*150*12mm



14 x1

Right side panel
838*150*12mm

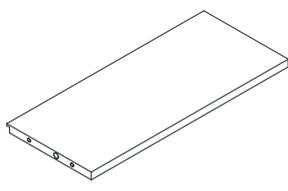


15 x1

middle panel
356*150*12mm



16 x4

upright panel
1360*60*12mm

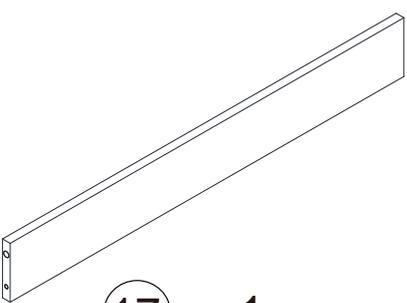


17 x1

horizontal panel
608*81*12mm




18 x1

right upright panel
1370*100*12mm

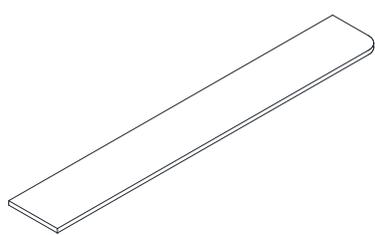


19 x1

top panel
1000*150*12mm

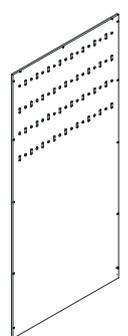


20 x1

Backboard
800*370*5mm

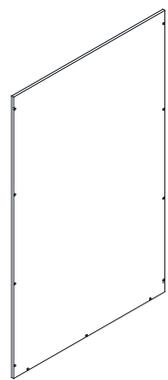


21 x1

Backboard
595*370*5mm

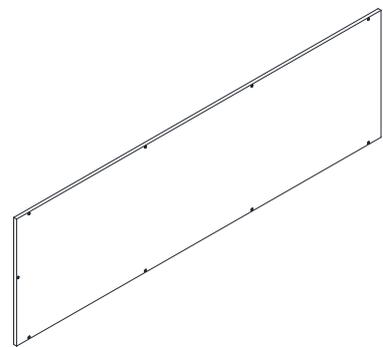


22 x1

Backboard
619*175*3mm

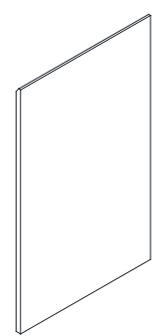

23 x1


door panel
552*350*15mm

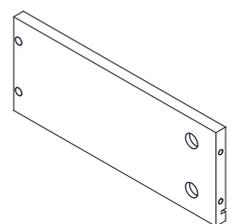


24 x1

drawer left side panel
250*91*12mm


PART LIST

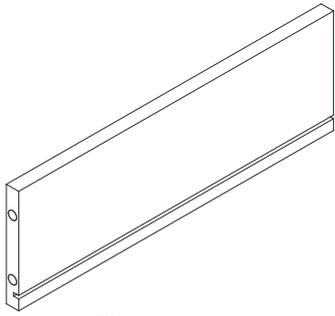


②⑤ x1

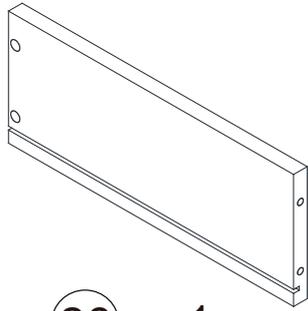

②⑥ x1

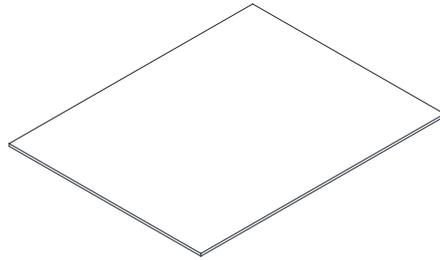


②⑦ x1

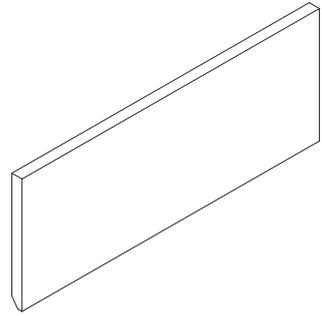


②⑧ x1


drawer back panel 306*91*12mm drawer right side panel 250*91*12mm drawer bottom panel 315*248*3mm drawer front panel 350*136*15mm

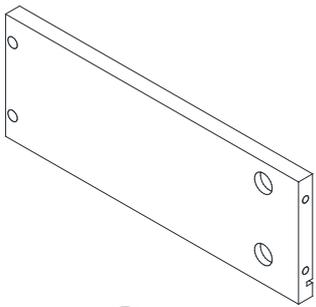


②⑨ x2

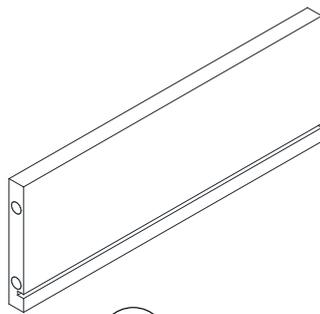

③⑩ x2

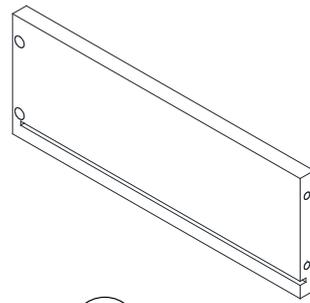


③① x2

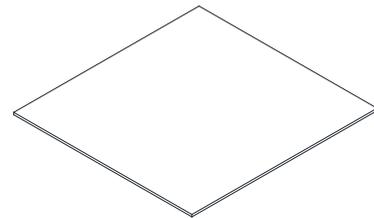


③② x2


drawer left side panel 249*91*12mm drawer back panel 340*91*12mm drawer right side panel 249*91*12mm drawer bottom panel 259*247*3mm

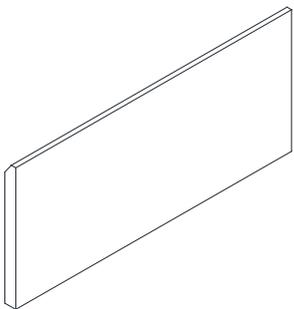

③③ x1

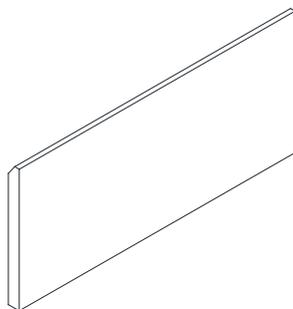

③④ x1



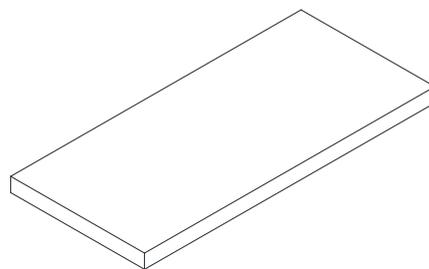


③⑤ x1

drawer front panel 300*136*15mm drawer front panel 300*136*15mm seat cushion 609*288*30mm

Assembly Instructions

Step 1

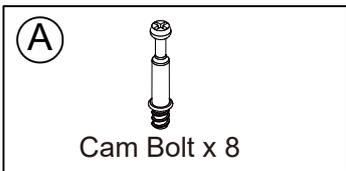
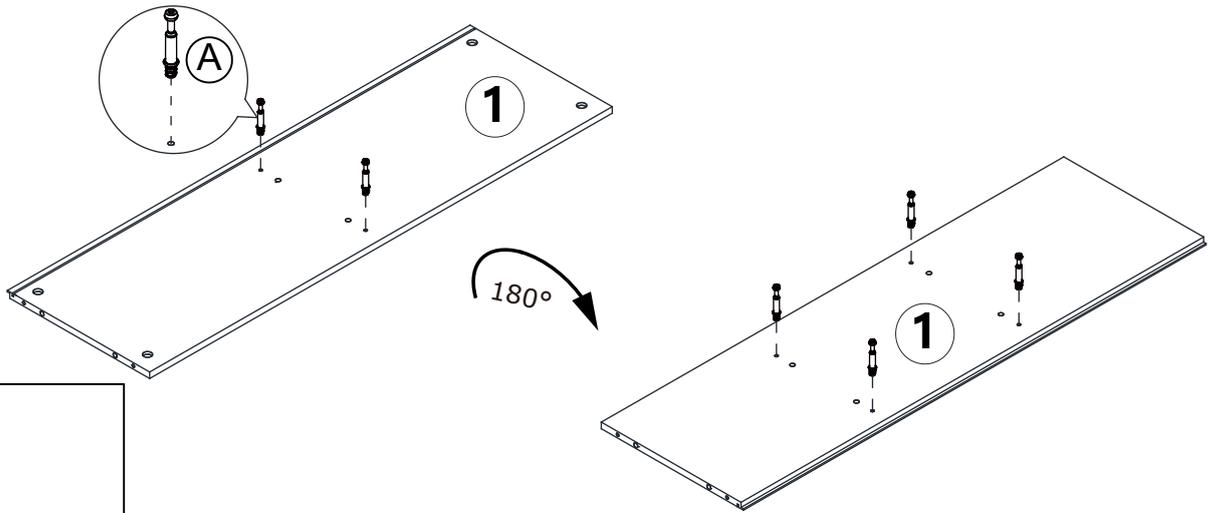
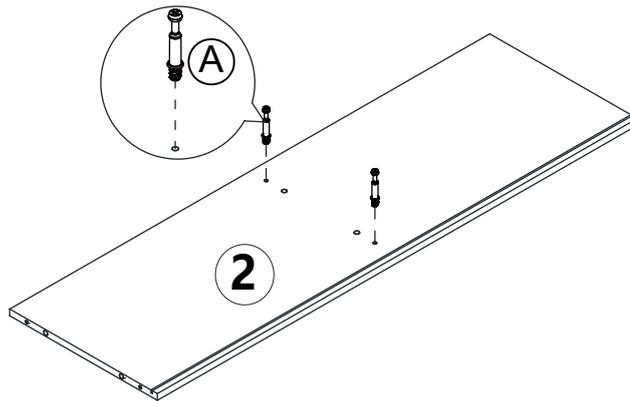


Step 2

step1



step2

step3


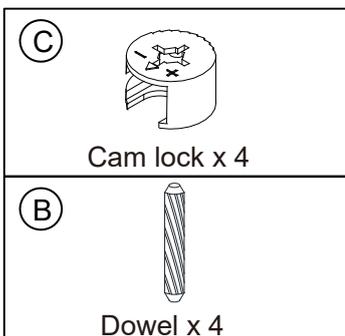
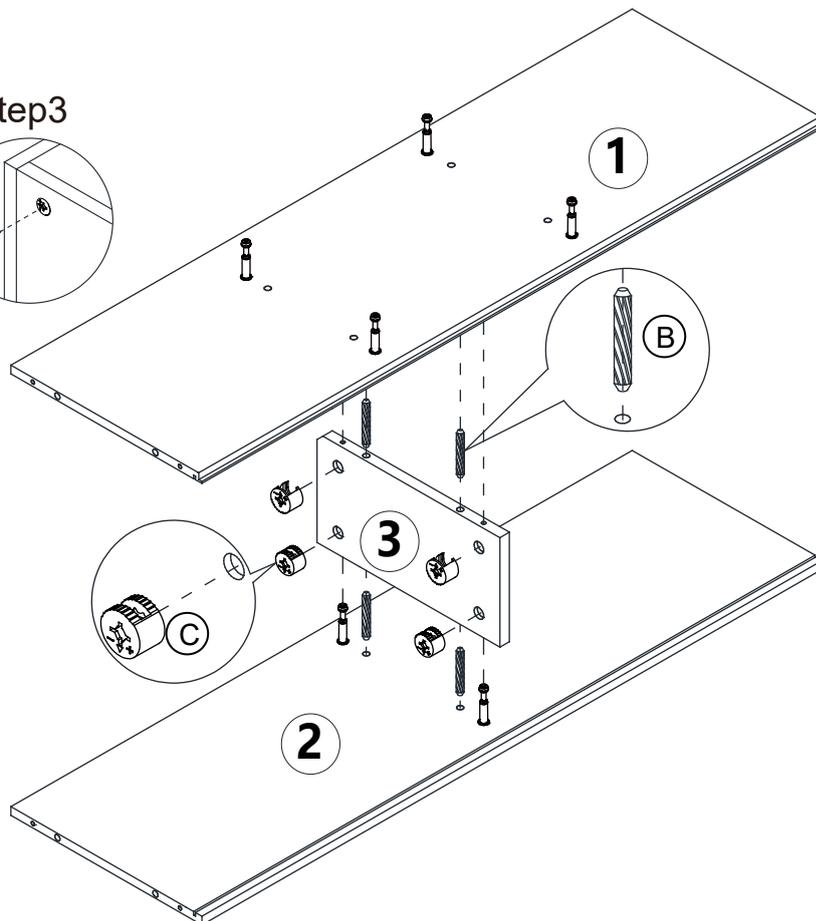
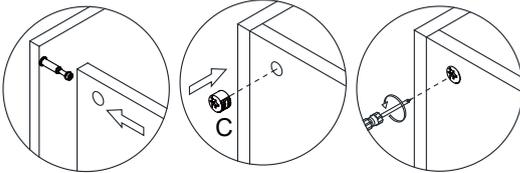


Assembly Instructions

Step 3

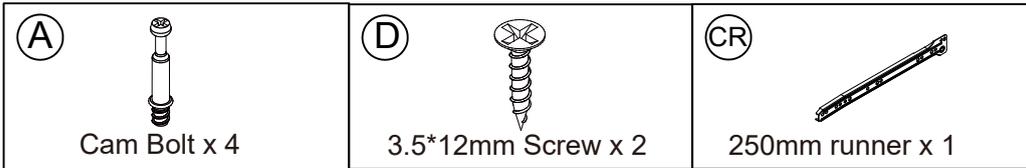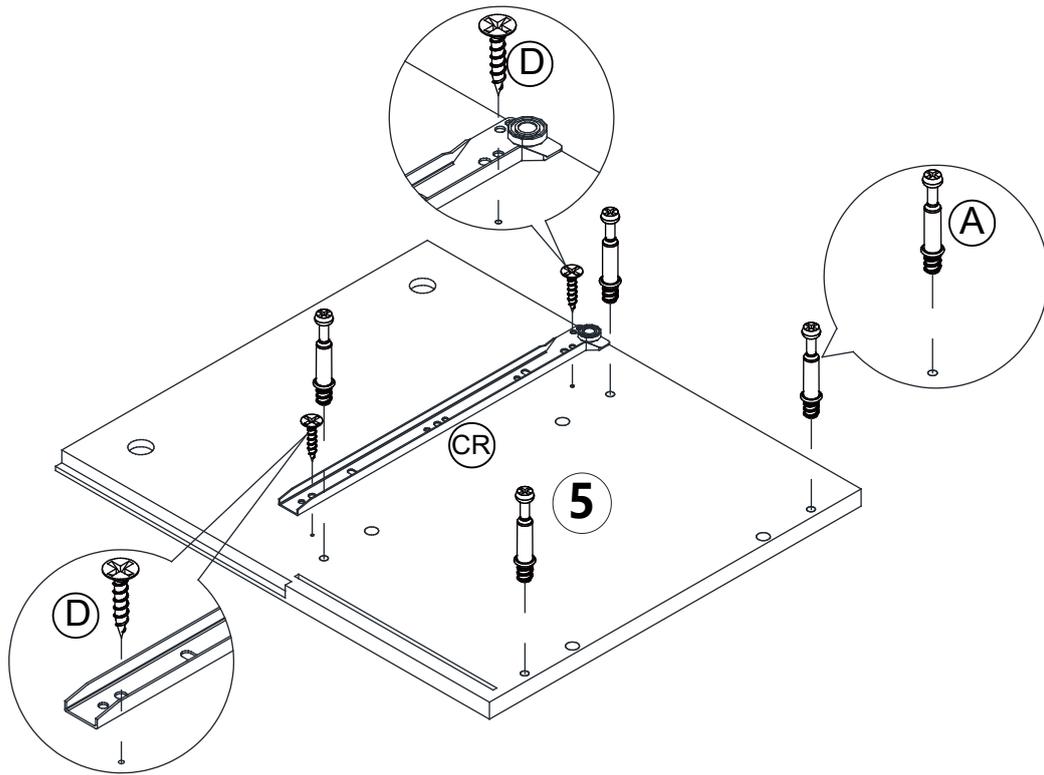


Step 4

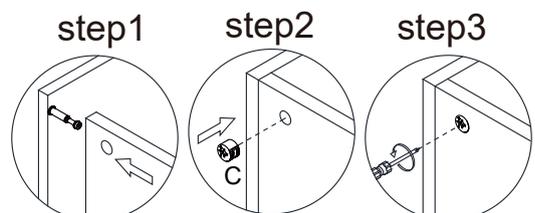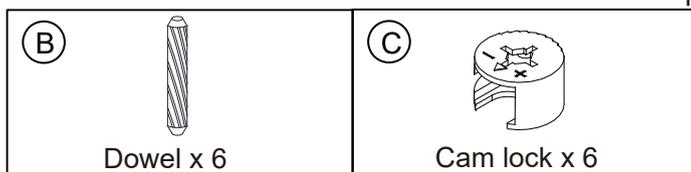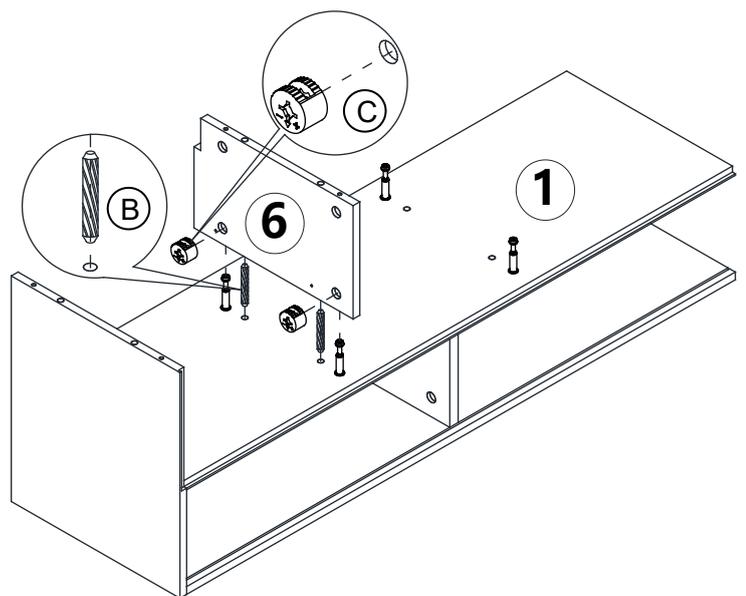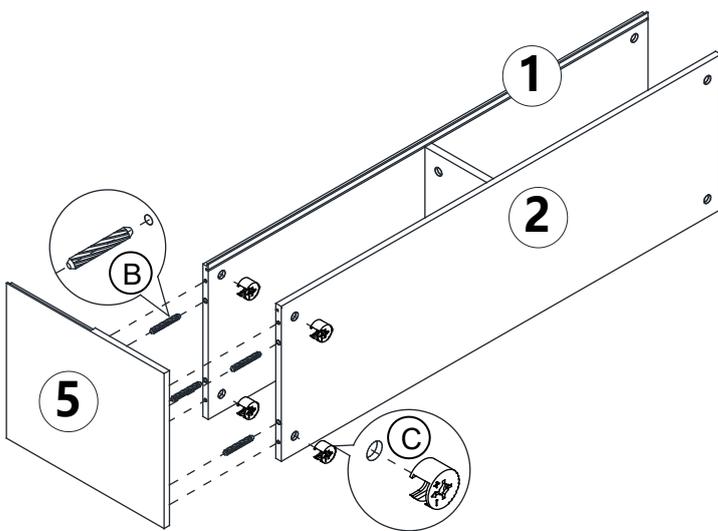

Assembly Instructions

Step 5

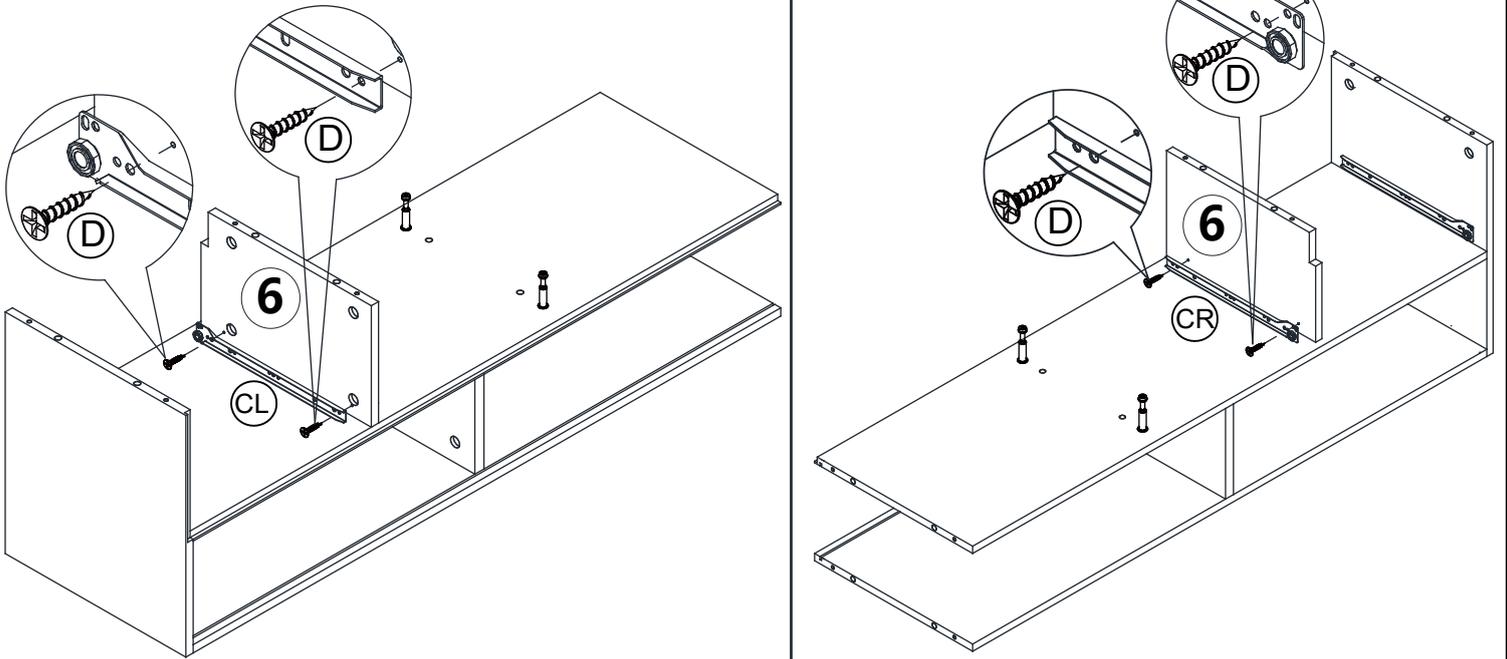

(D)



3.5*12mm Screw x 4

(CL)




250mm runner x 1

(CR)





250mm runner x 1

Step 6


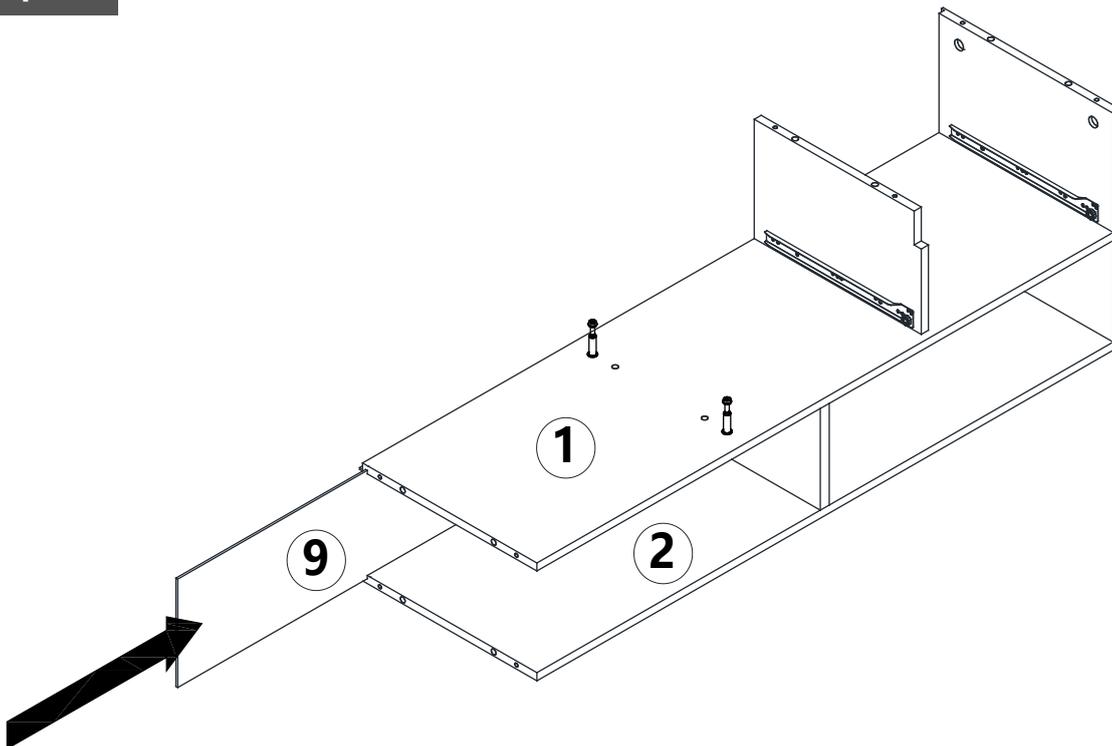


Assembly Instructions

Step 7

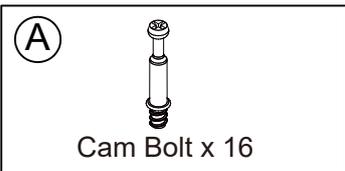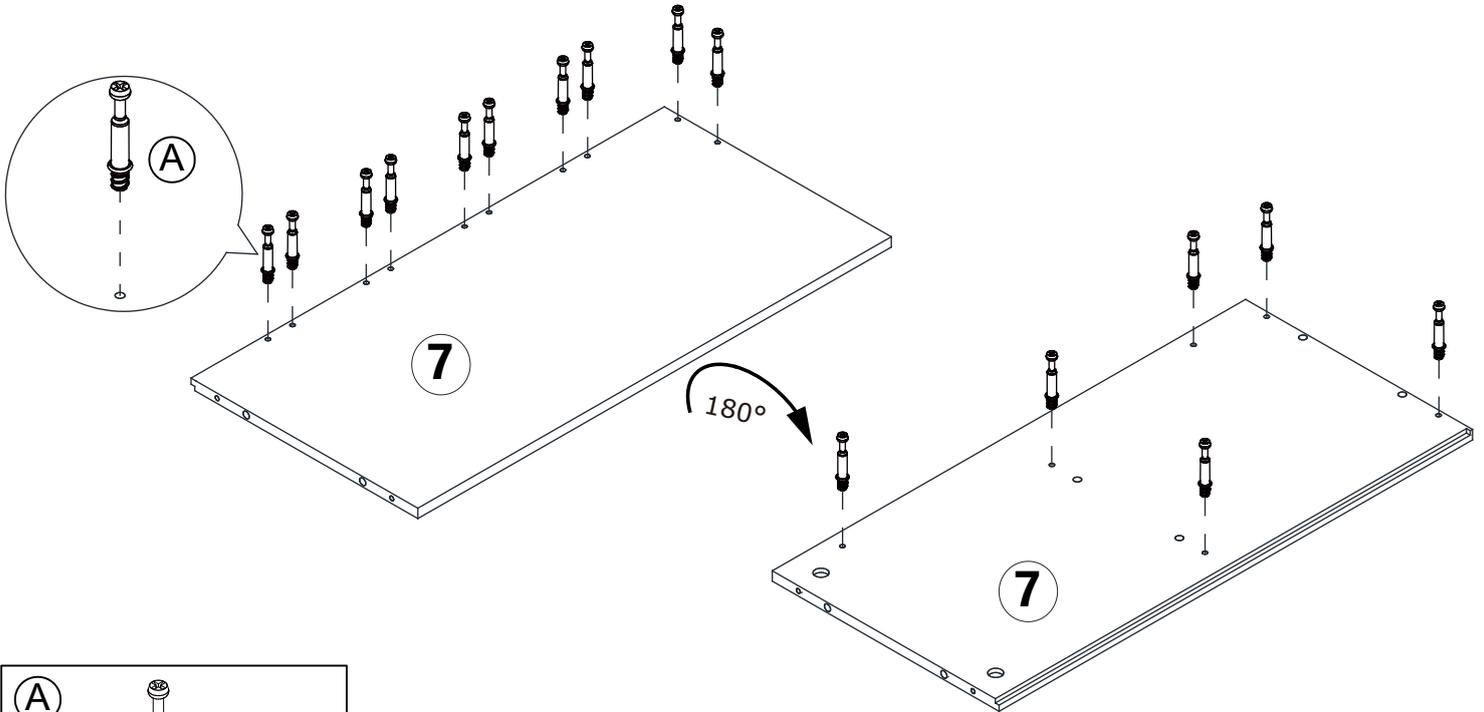


Step 8

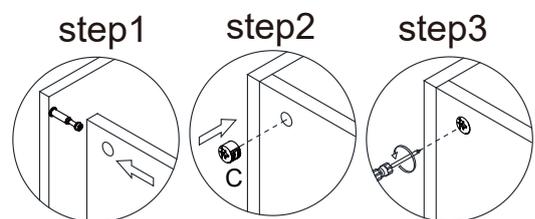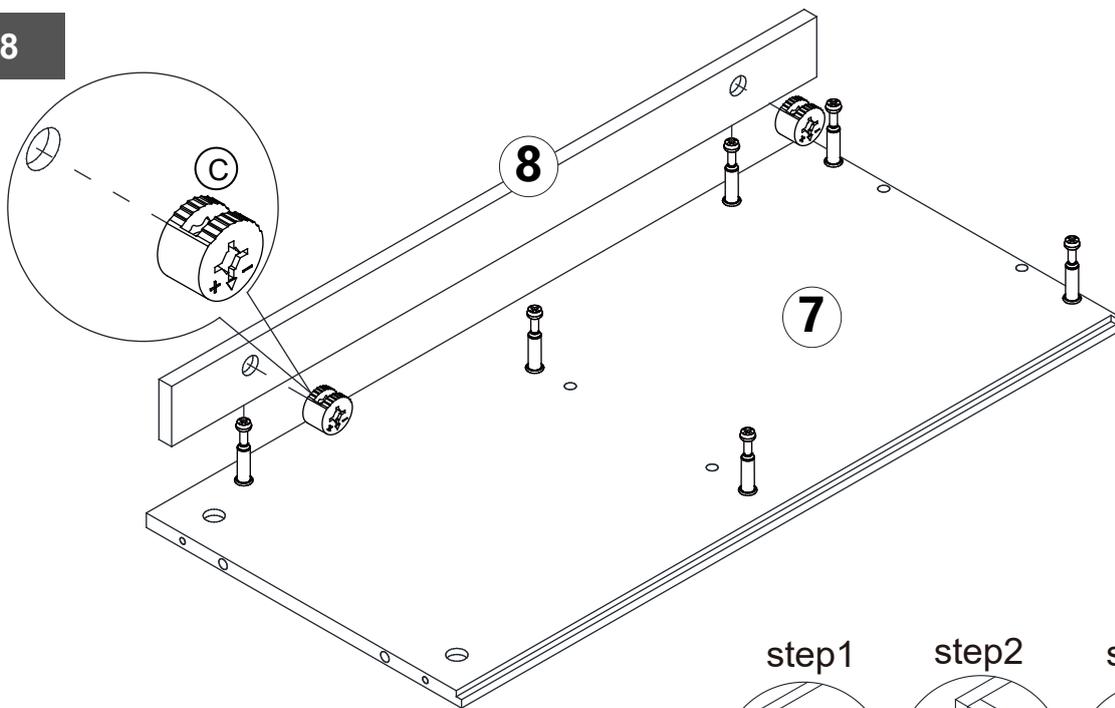

Assembly Instructions

Step 9

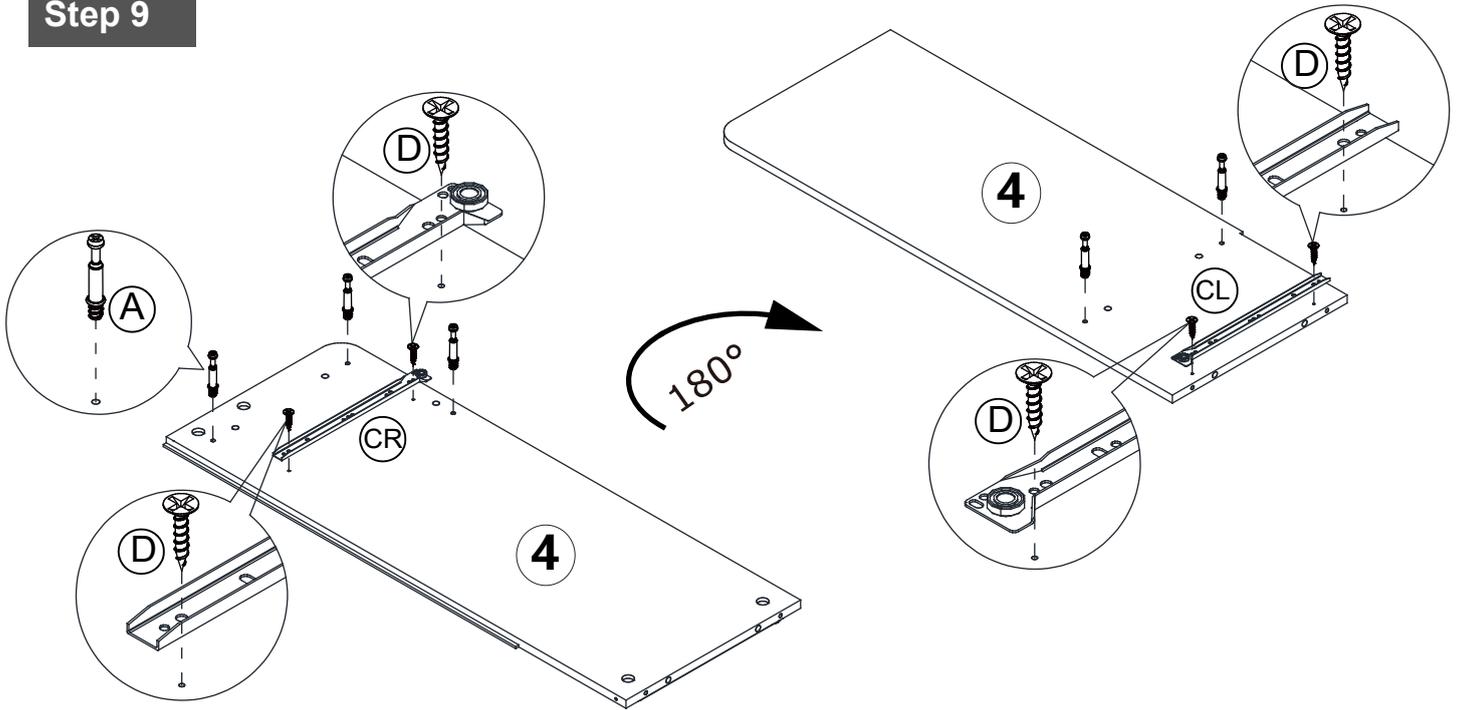

(A)



Cam Bolt x 5

(D)



3.5*12mm Screw x 4

(CL)




250mm runner x 1

(CR)



250mm runner x 1

Step 10

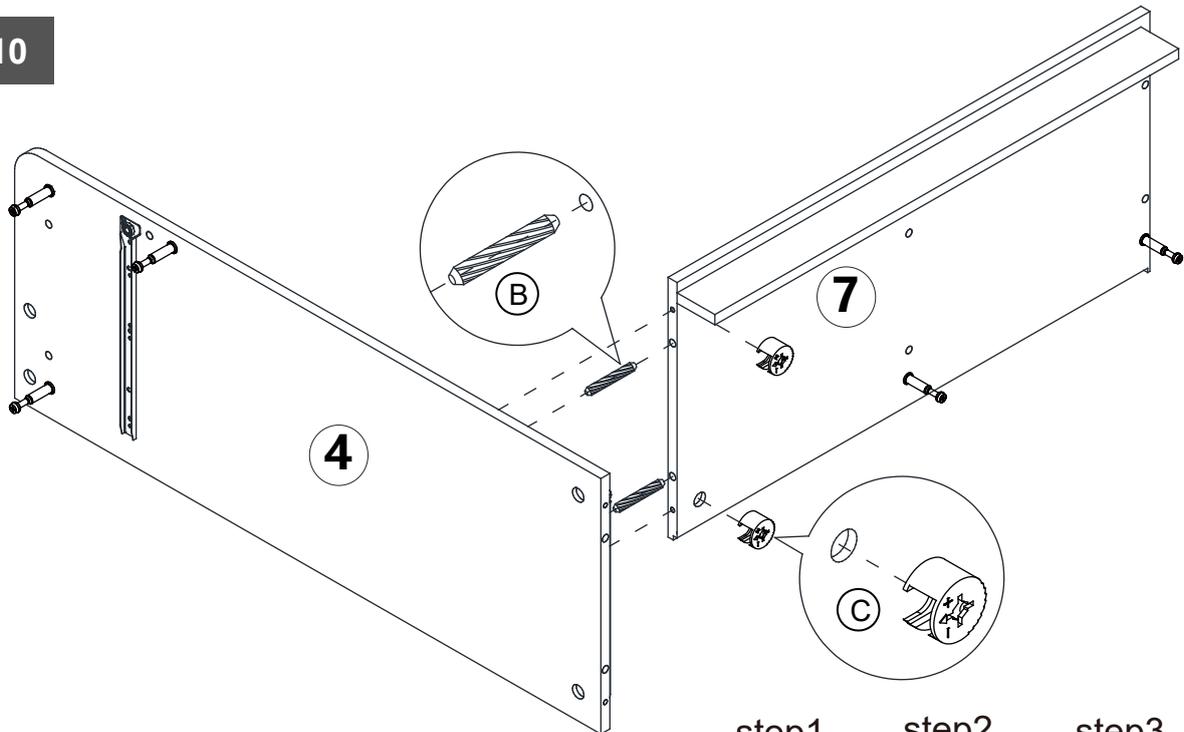

(B)




Dowel x 2

(C)




Cam lock x 2


step1

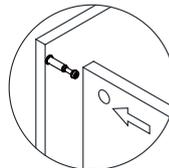

step2



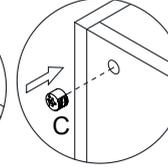


step3

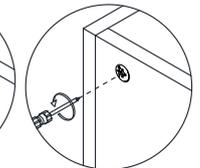


Assembly Instructions

Step 11

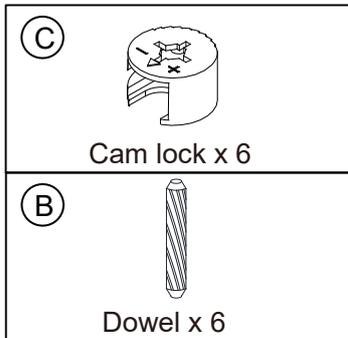
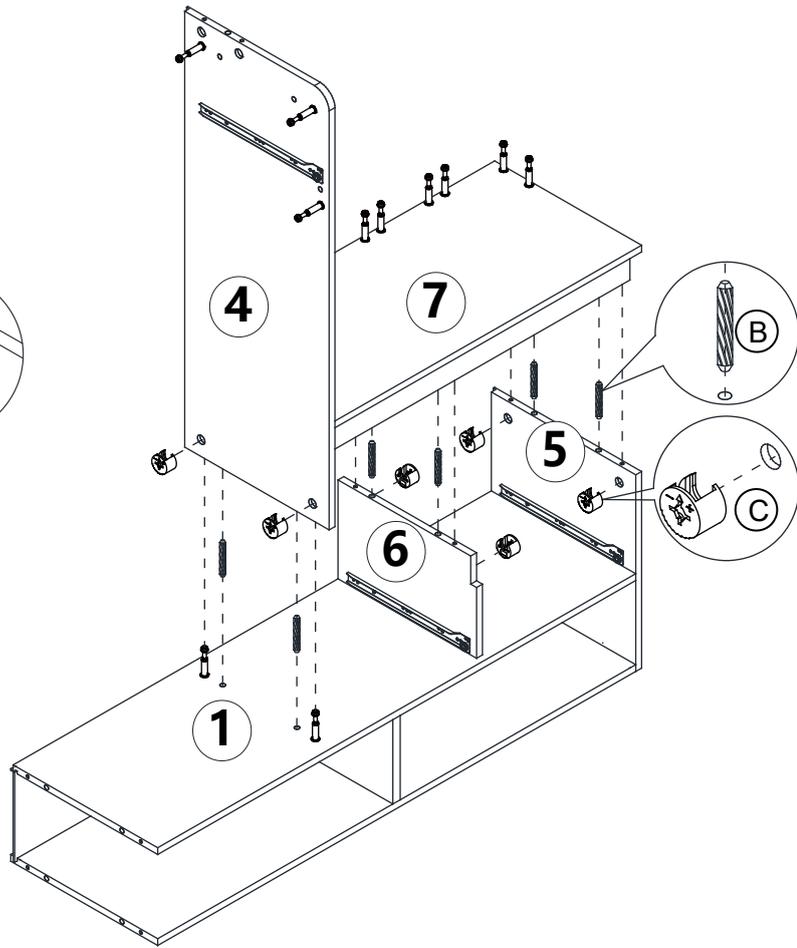
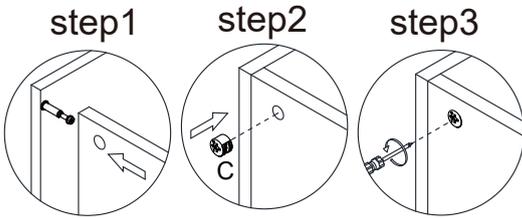


Step 12



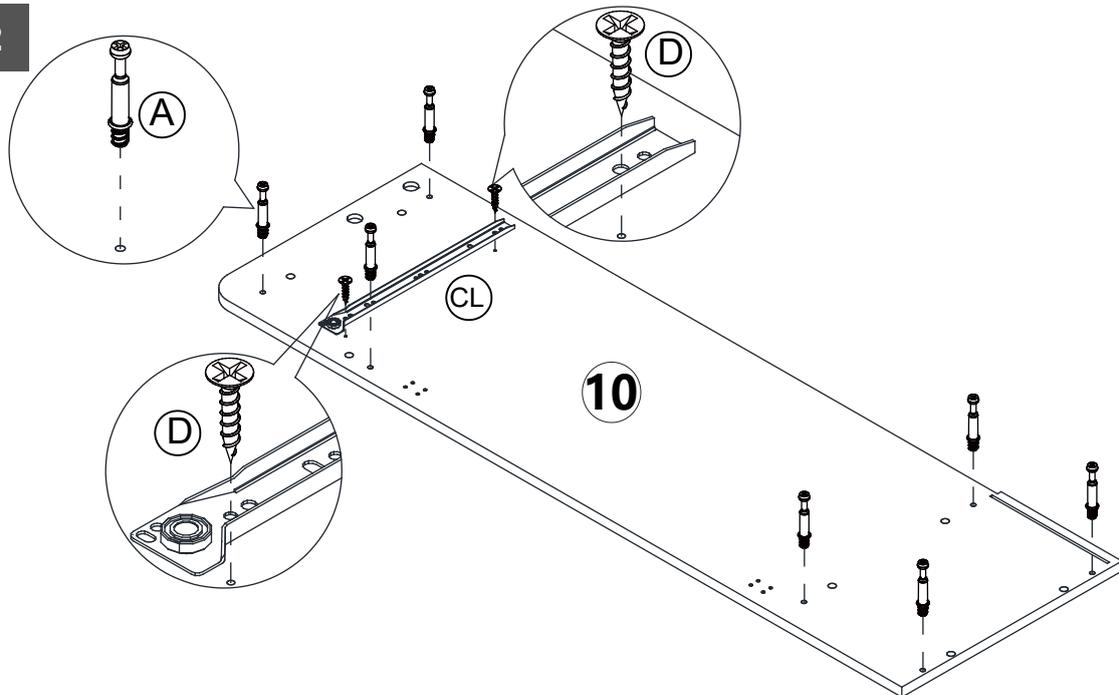


Assembly Instructions

Step 13

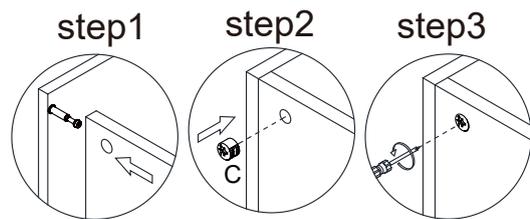
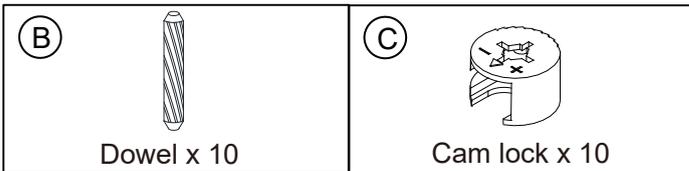
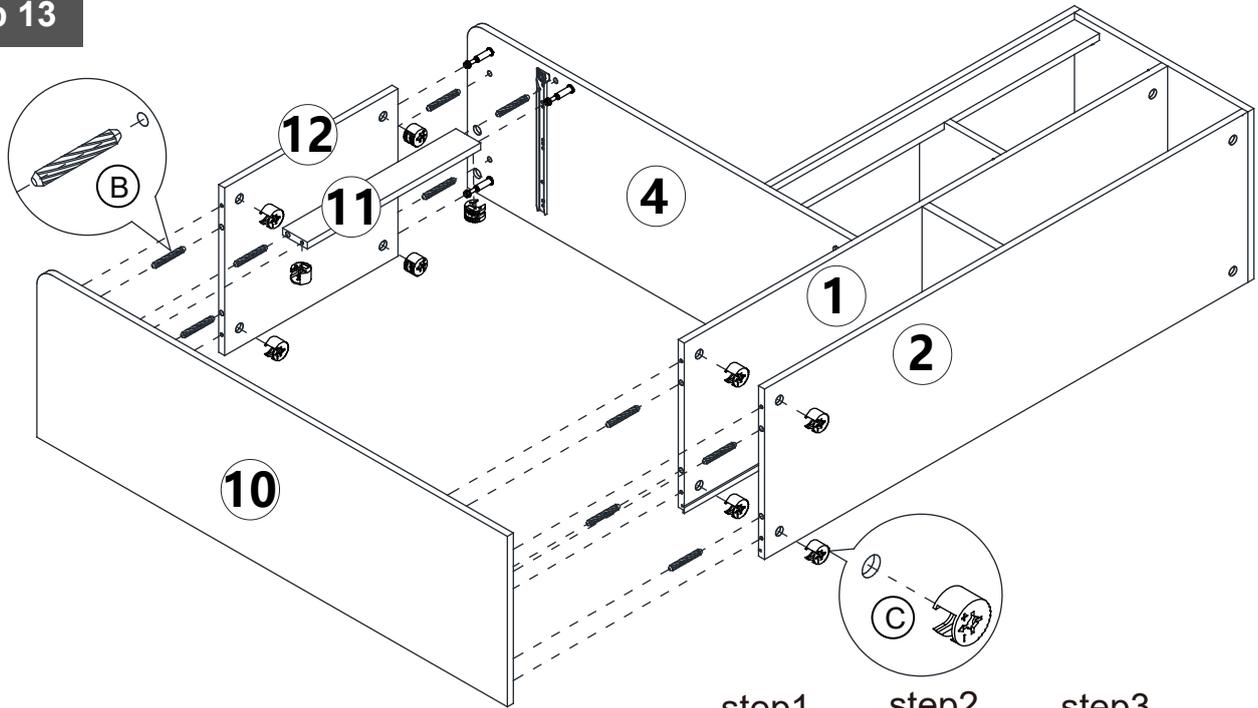


Step 14

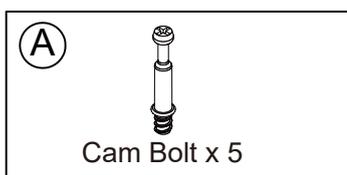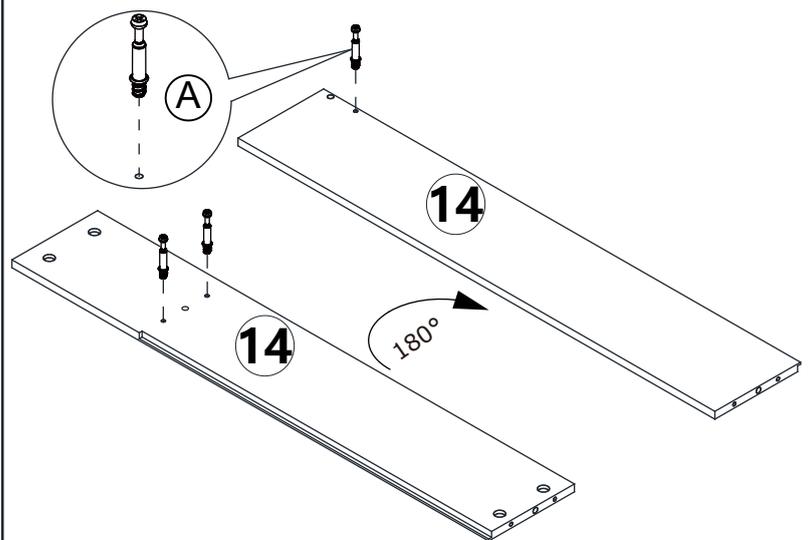
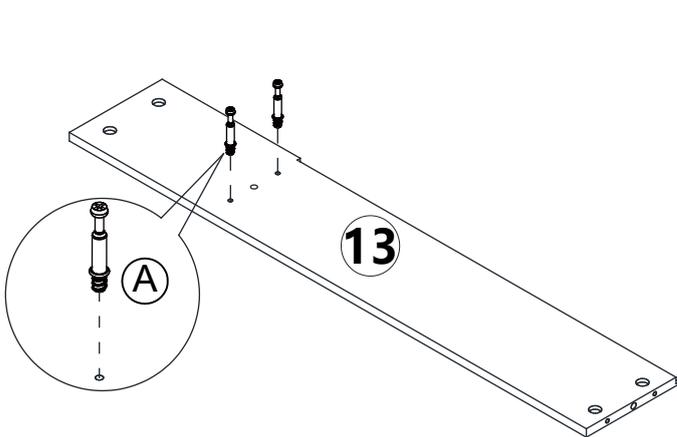


Assembly Instructions

Step 15

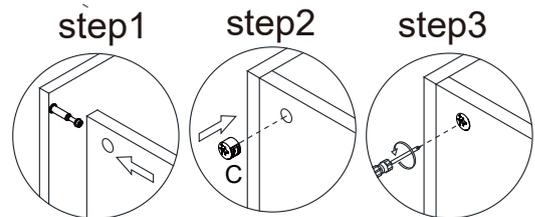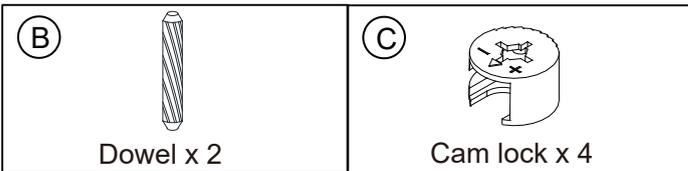
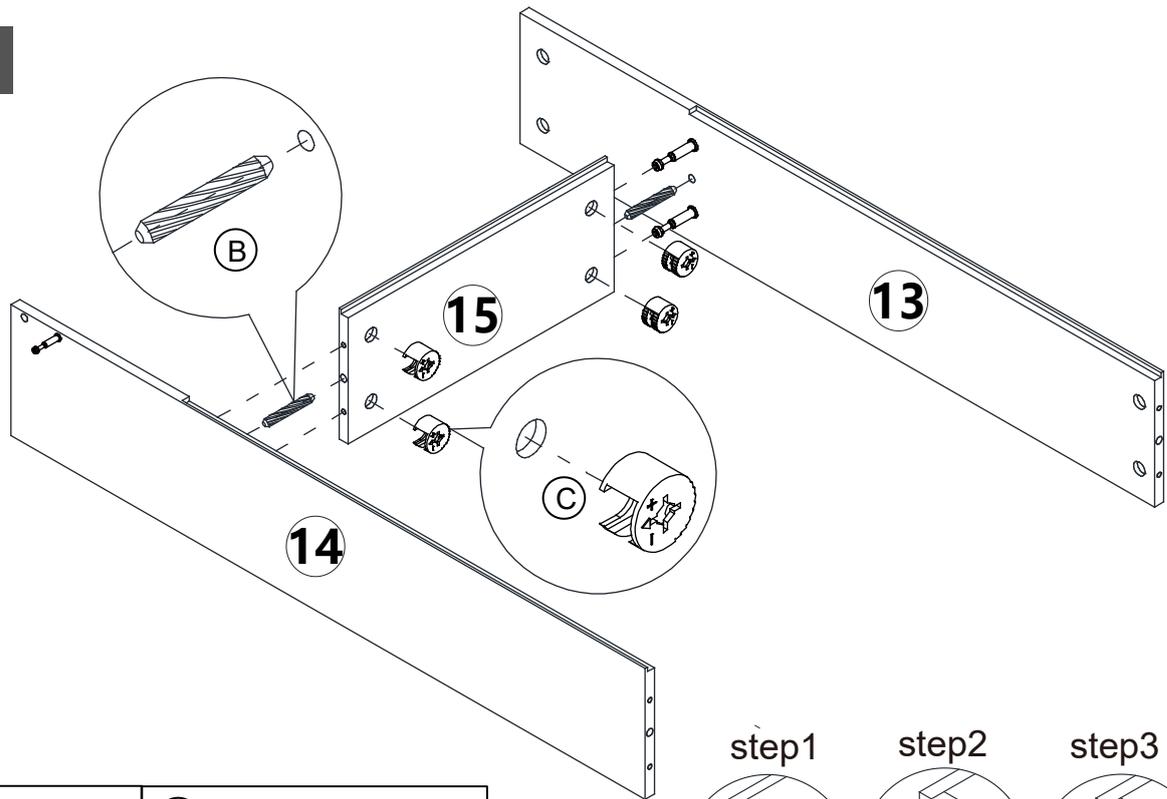


Step 16

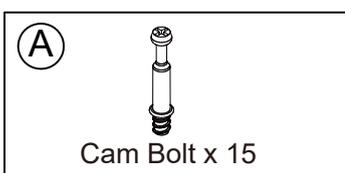
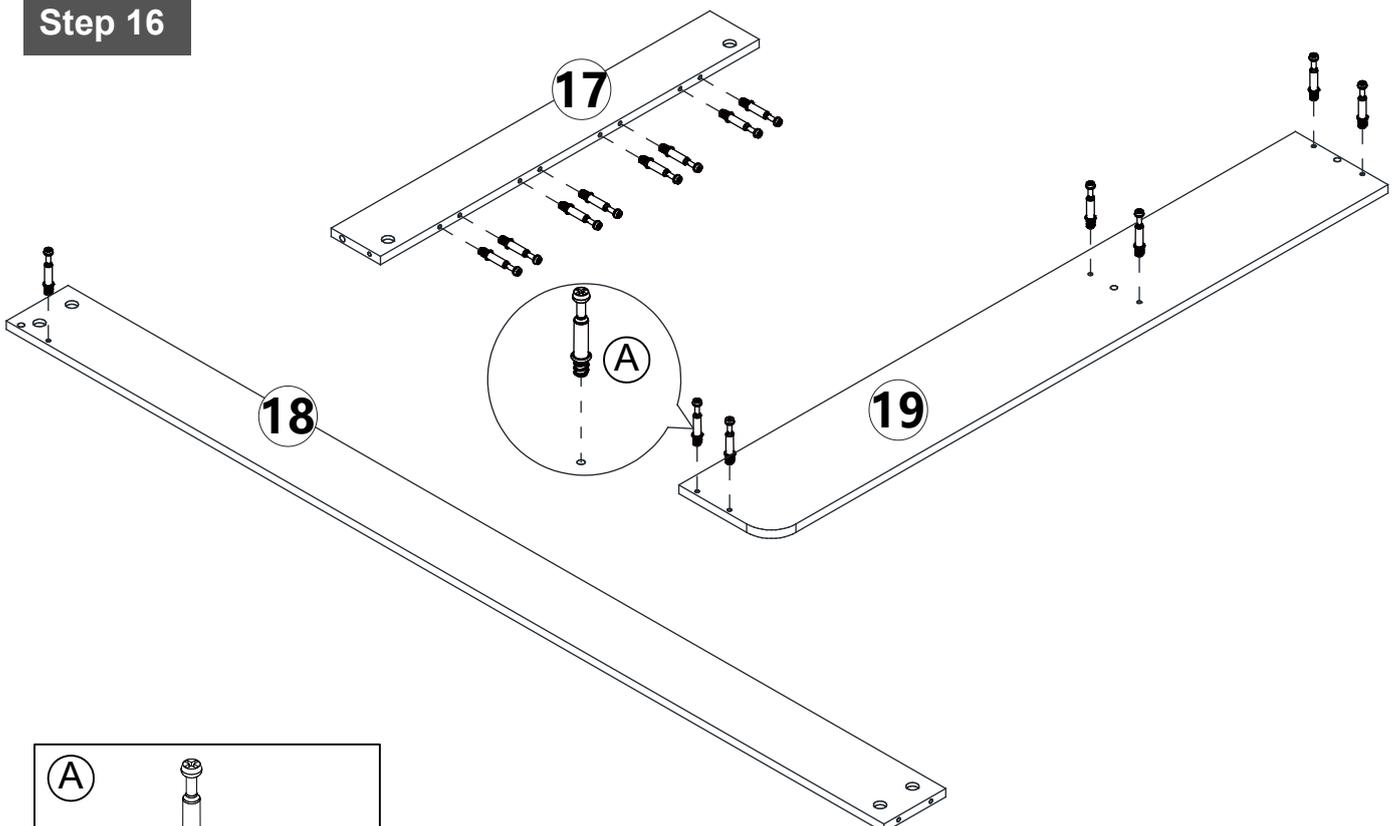


Assembly Instructions

Step 17

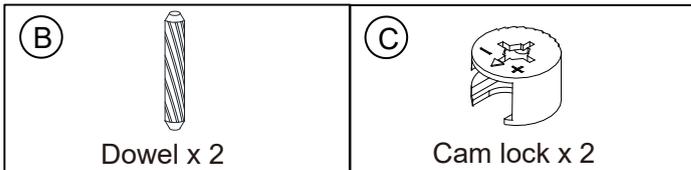
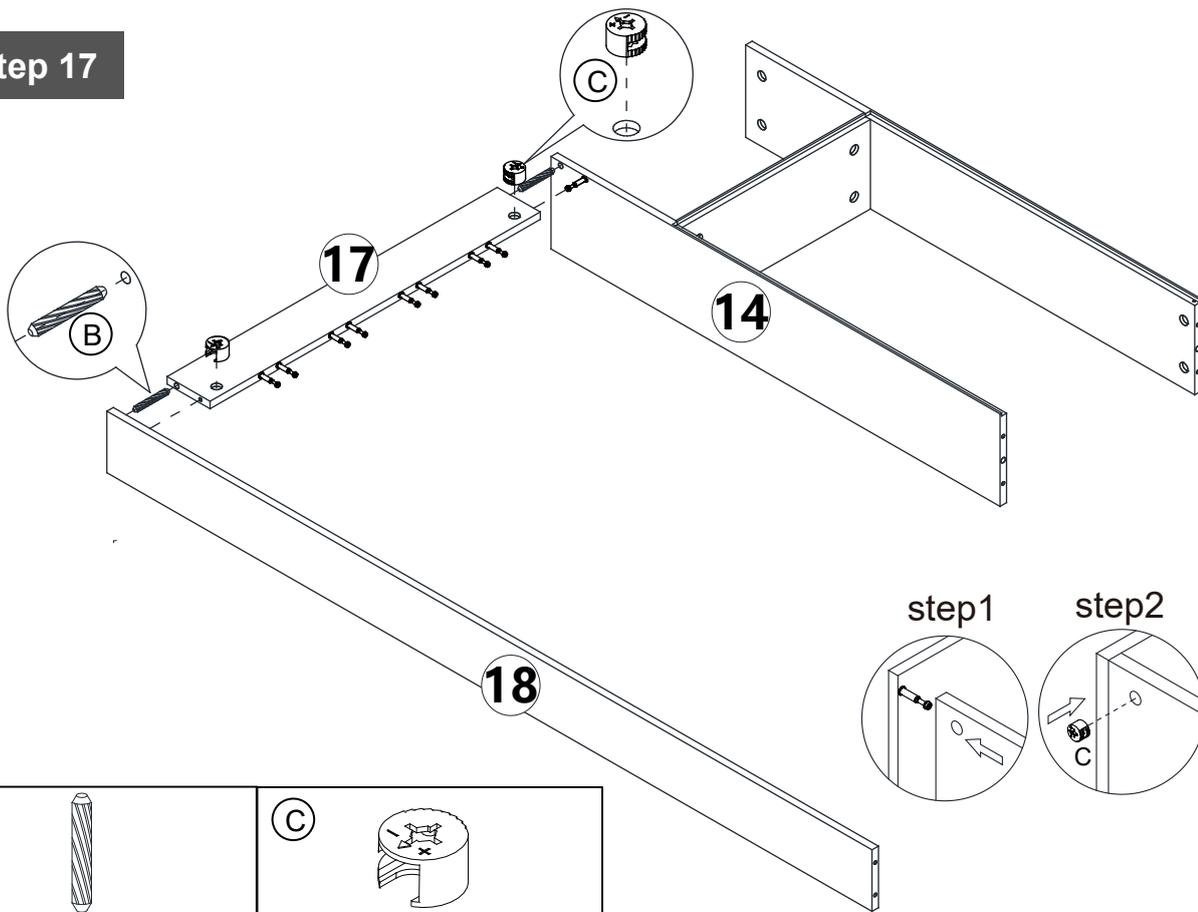



Step 18

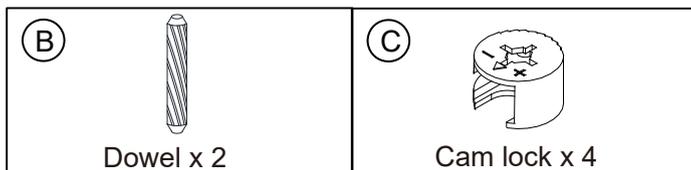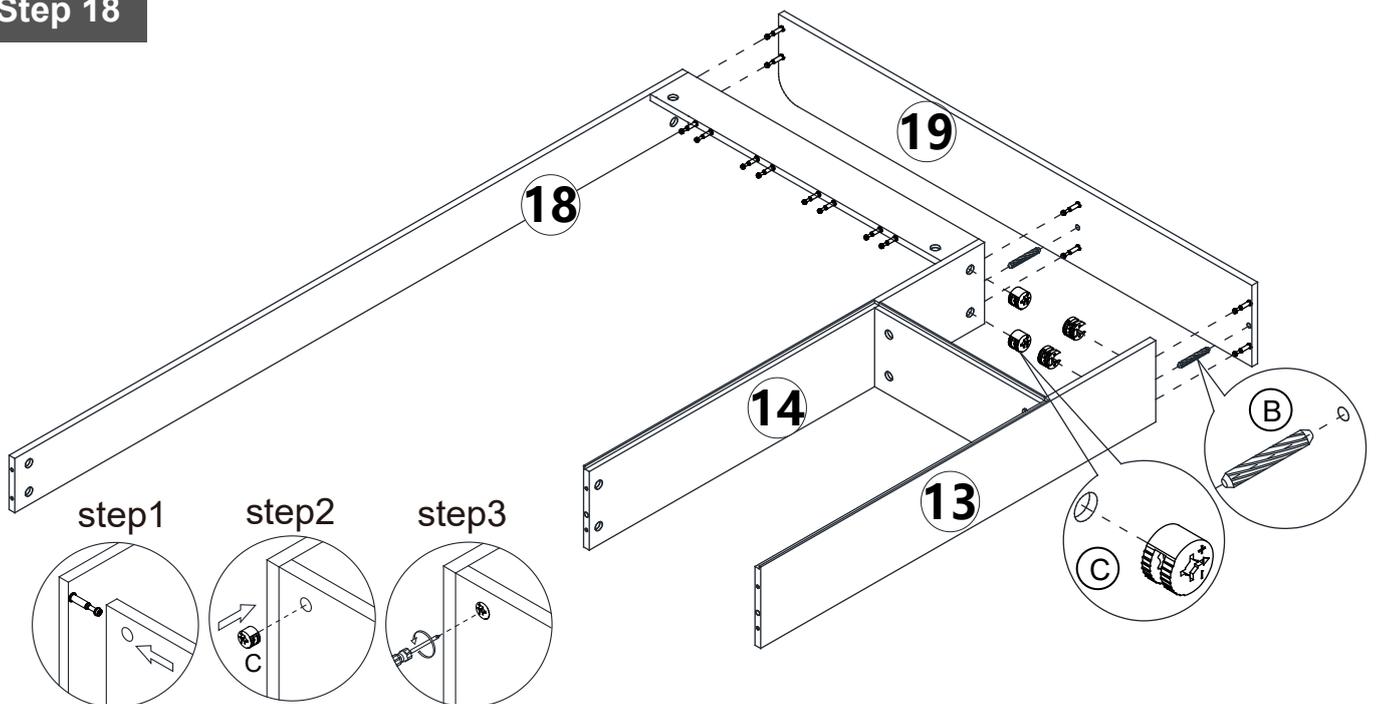

Assembly Instructions

Step 19


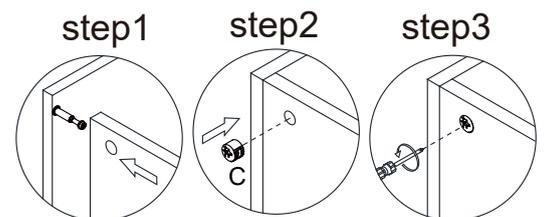
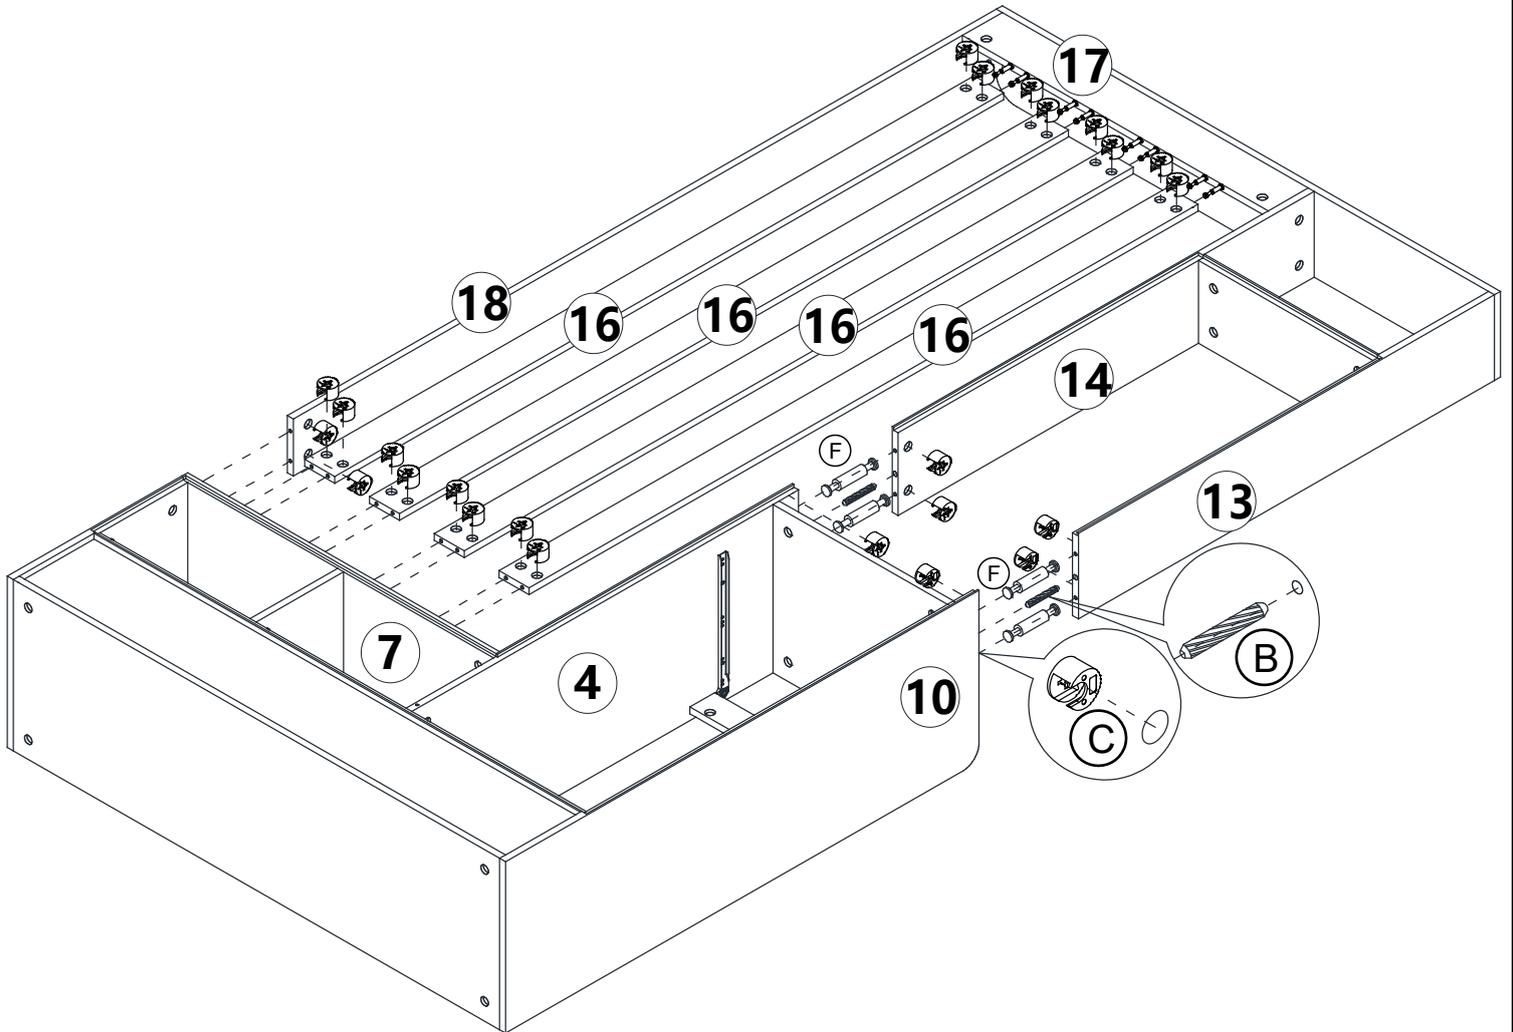


<p>(B)</p>  <p>Dowel x 2</p>	<p>(C)</p>  <p>Cam lock x 26</p>	<p>(F)</p>  <p>Stud Bolt x 4</p>
---	---	--




Assembly Instructions

Step 20

Please stand the product upright carefully!

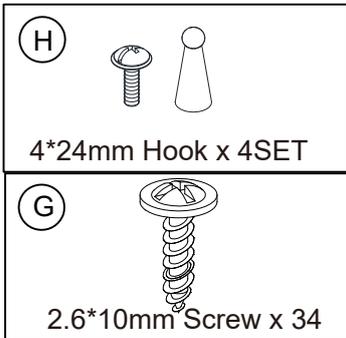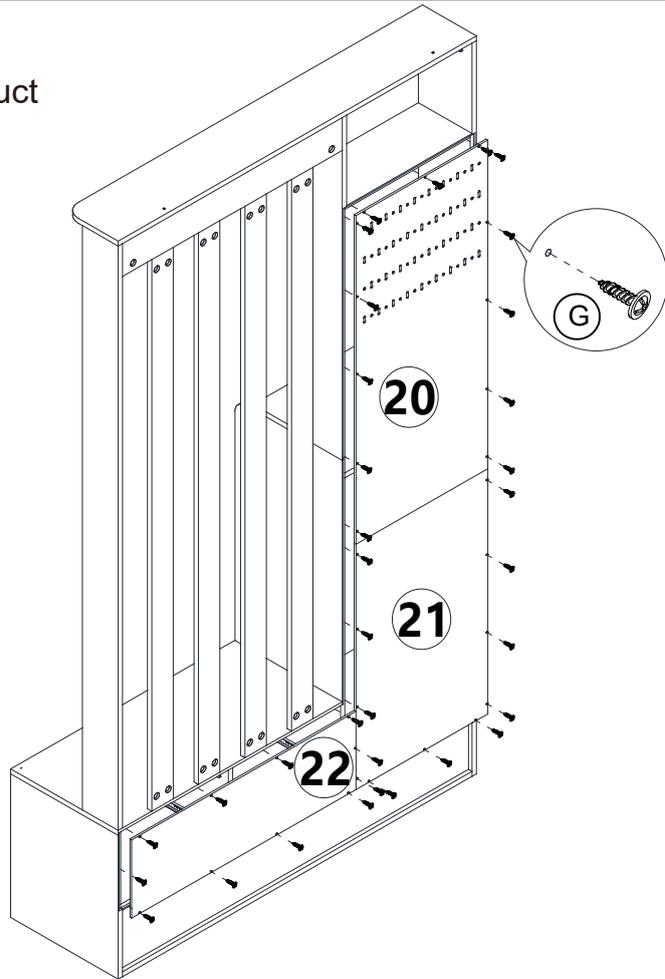
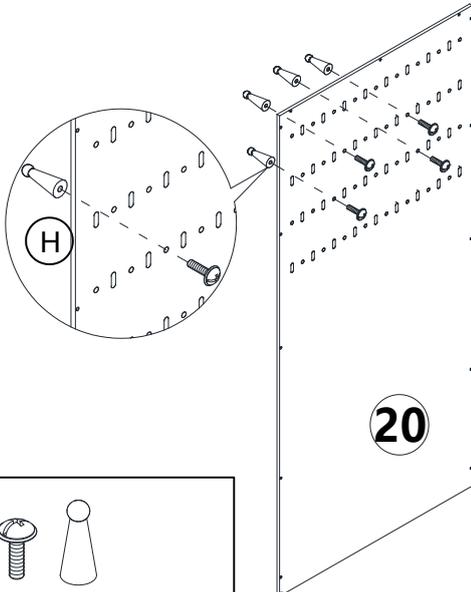


Step 21

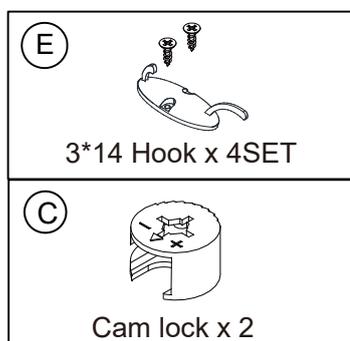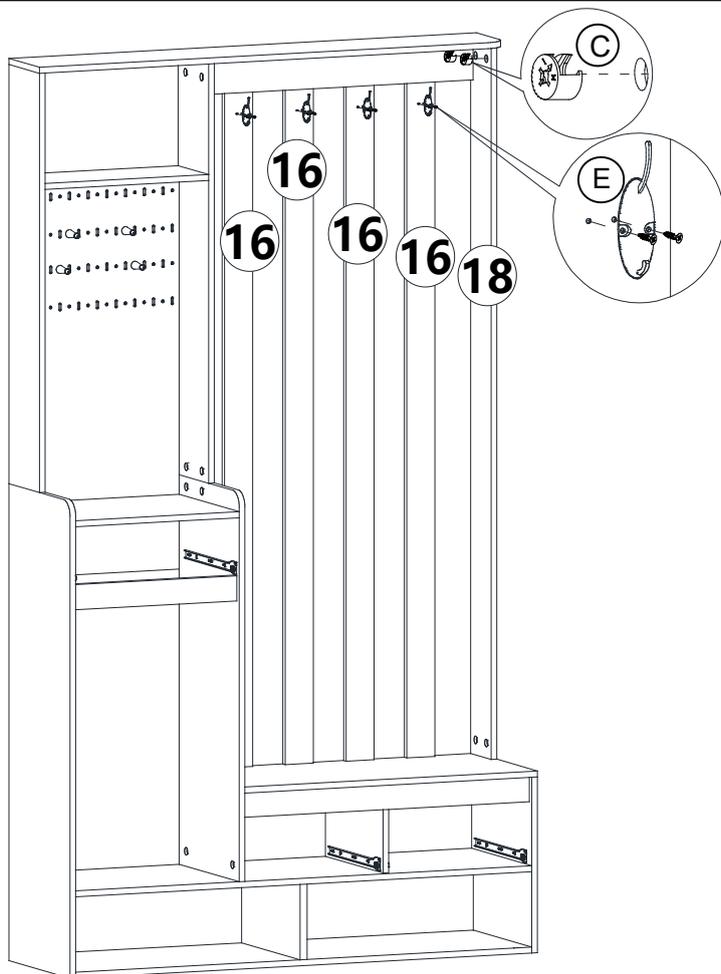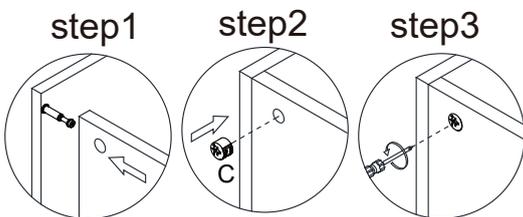


Assembly Instructions




Step 22

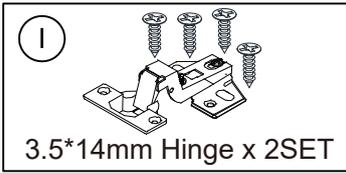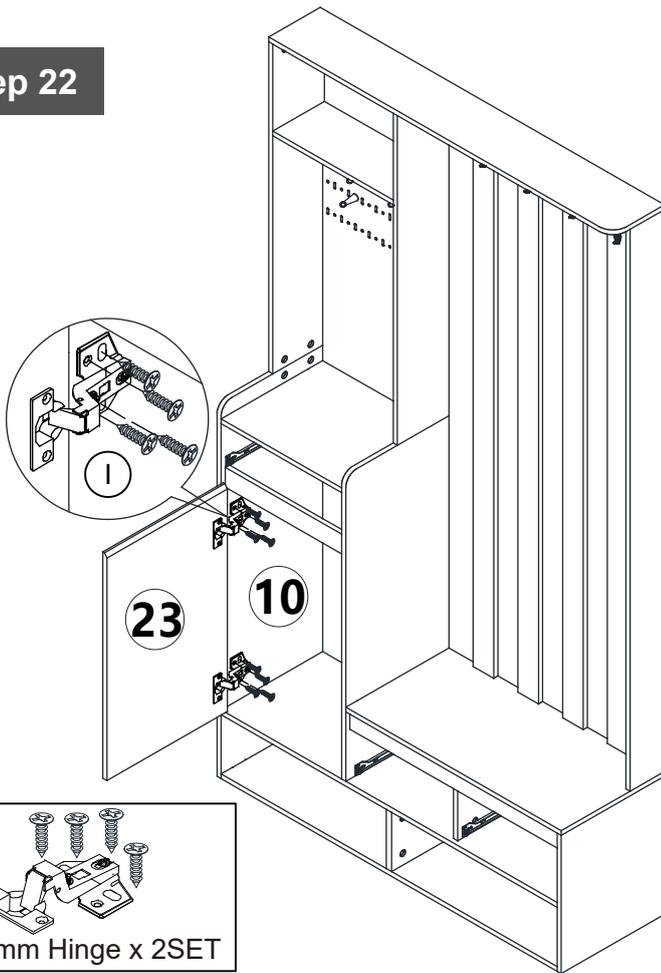

If the door can't close, please adjust the hinges.

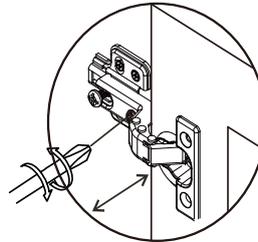


This is used to adjust the door panel in the up and down direction.

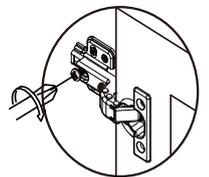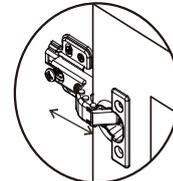
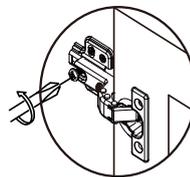


This is used to adjust the door panel in the front and back direction: Loosen the screw first, and then tighten screw after adjusting the door panel to the proper position.



Step 23

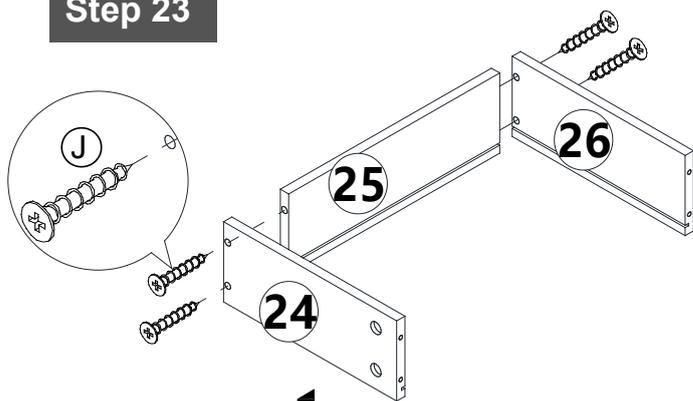

X2

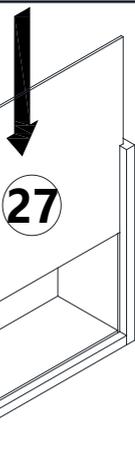
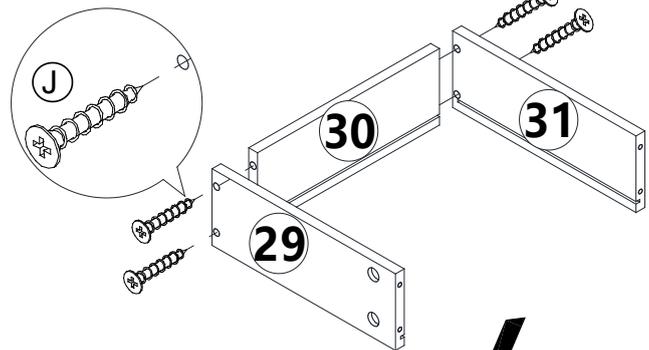


X2

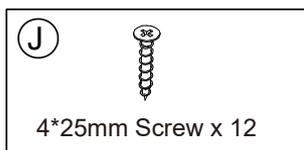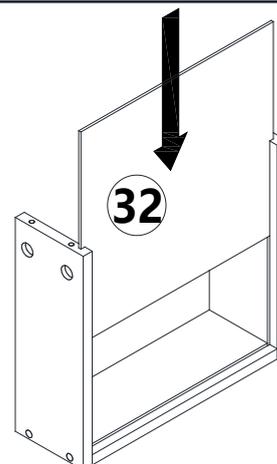


Assembly Instructions

Step 24

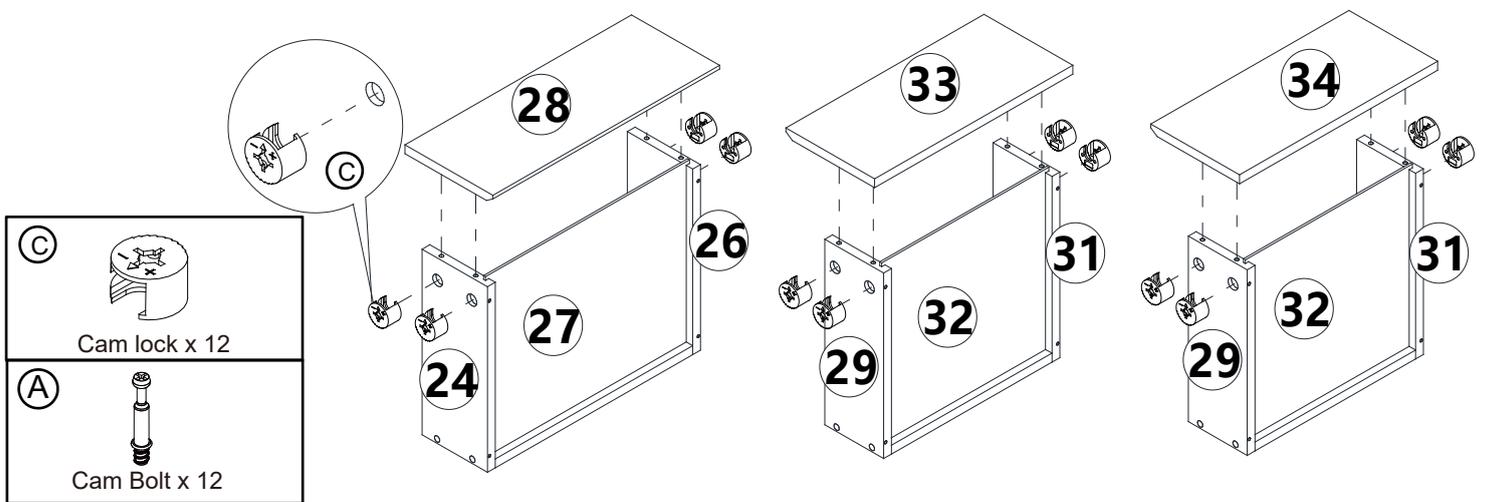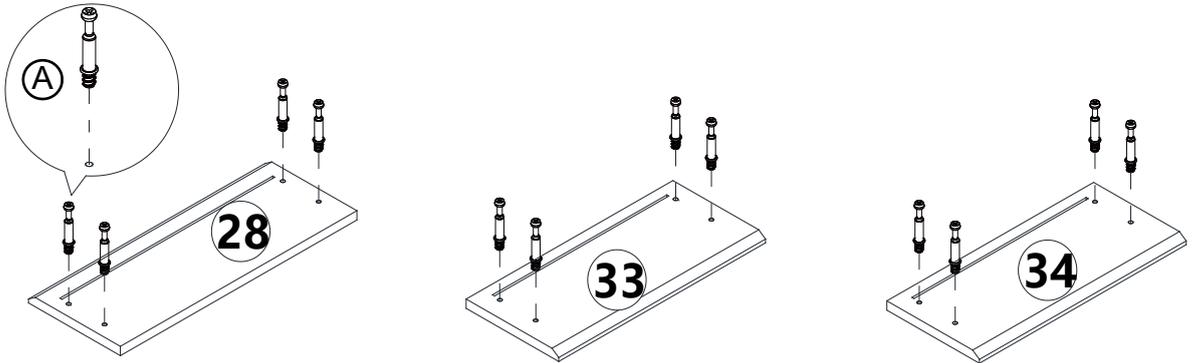



Step 25

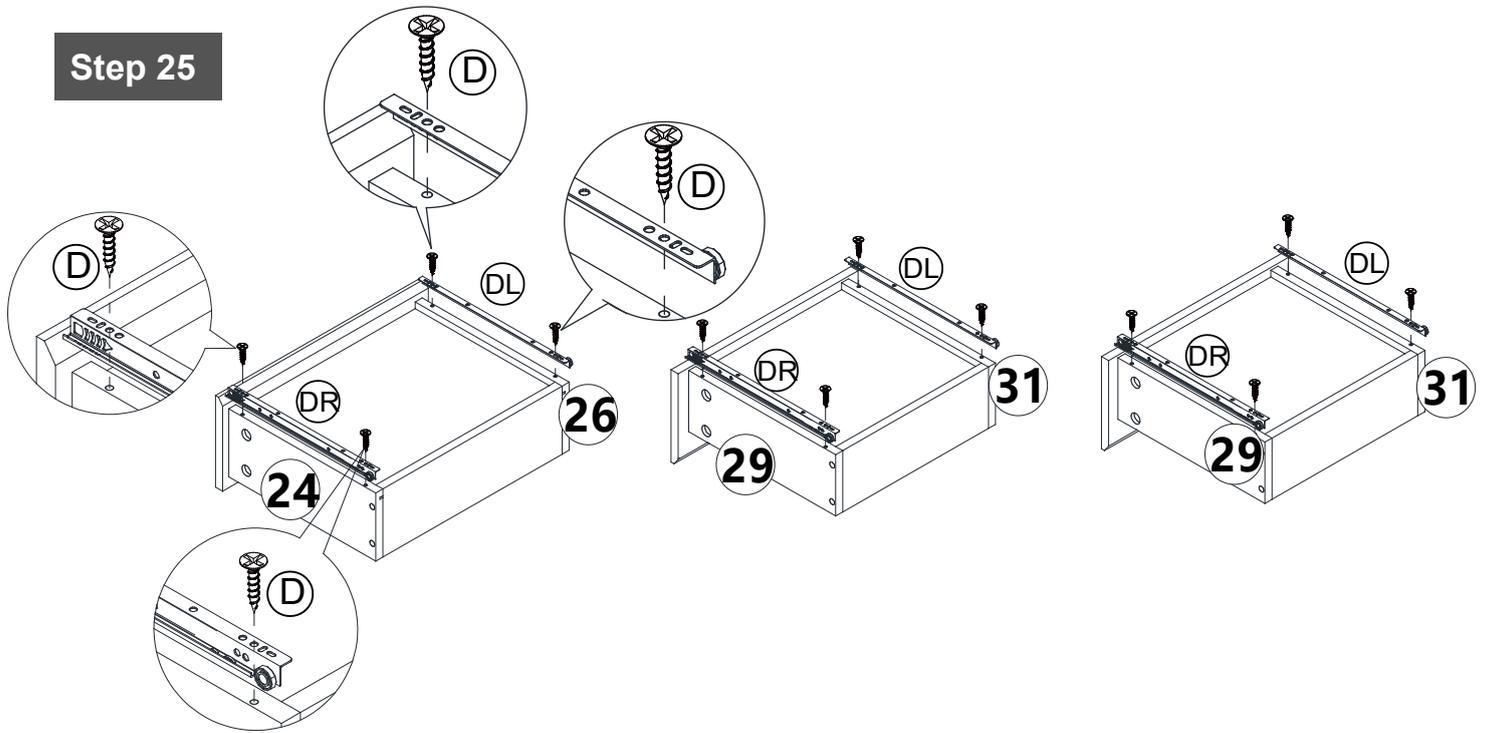






D  3.5*12mm Screw x12	DL  250mm runner x 3	DR  250mm runner x 3
---	--	---

Assembly Instructions

Step 26

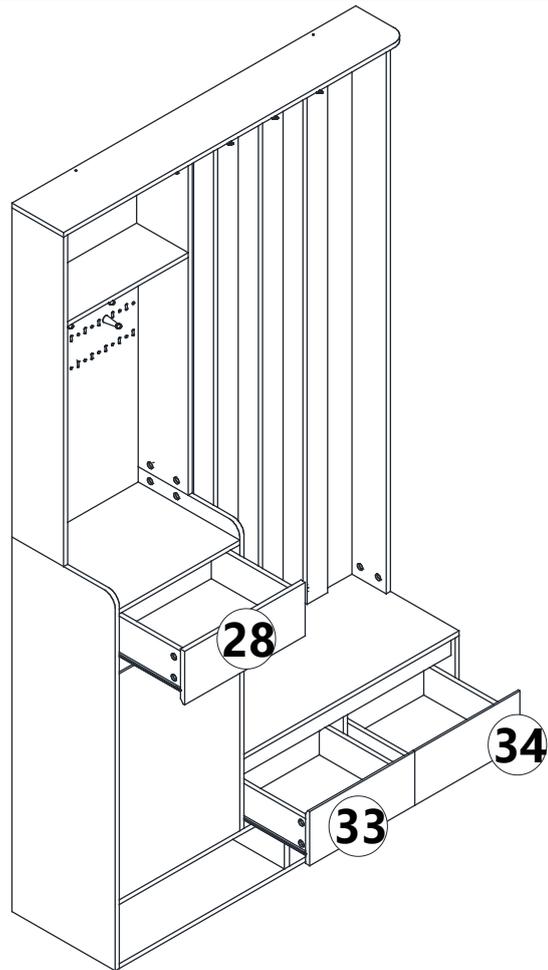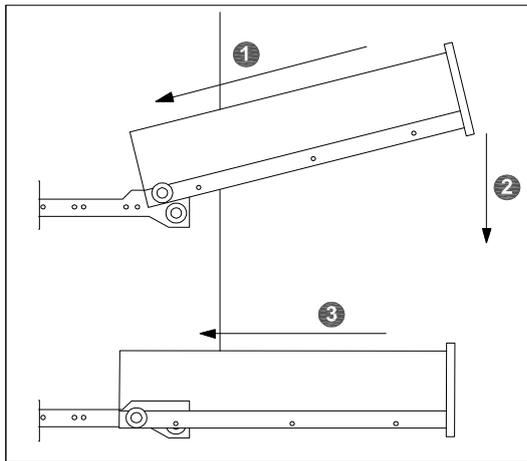

Step 27

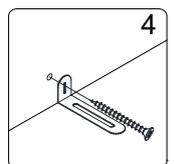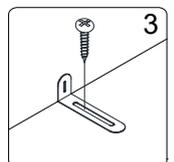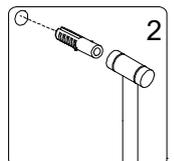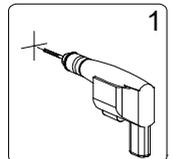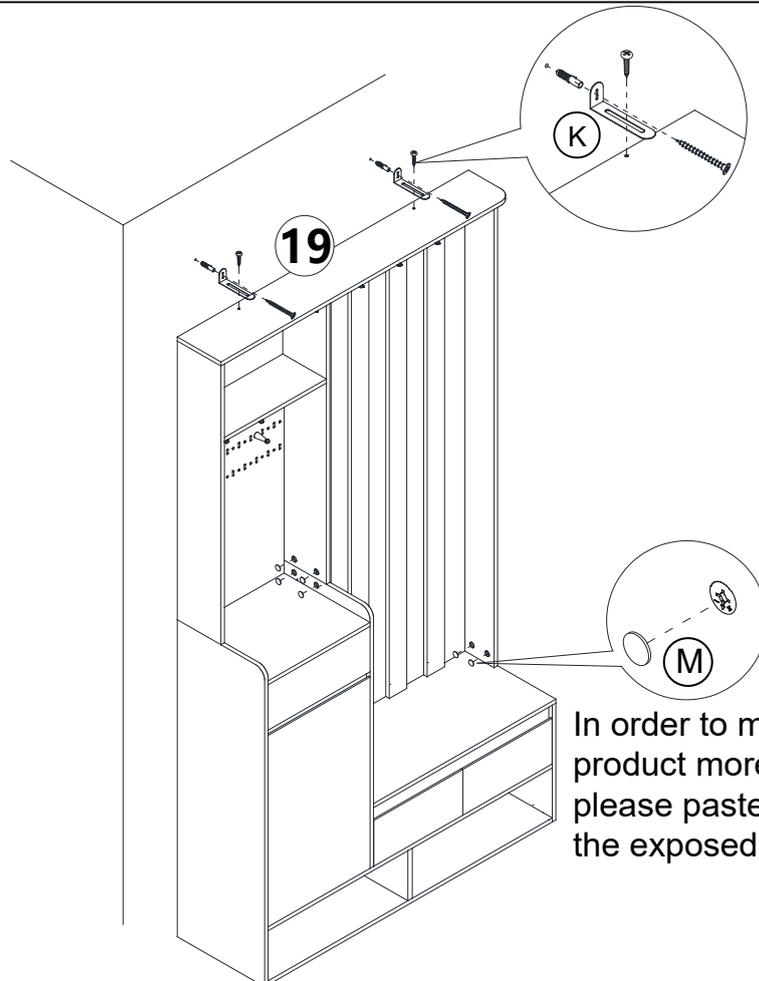

(M)



Hole sticker x 80

(K)




4*35mm Anti falling iron sheetx 2SET

In order to make the product more beautiful, please paste hardware M on the exposed holes.

Assembly Instructions

Step 28

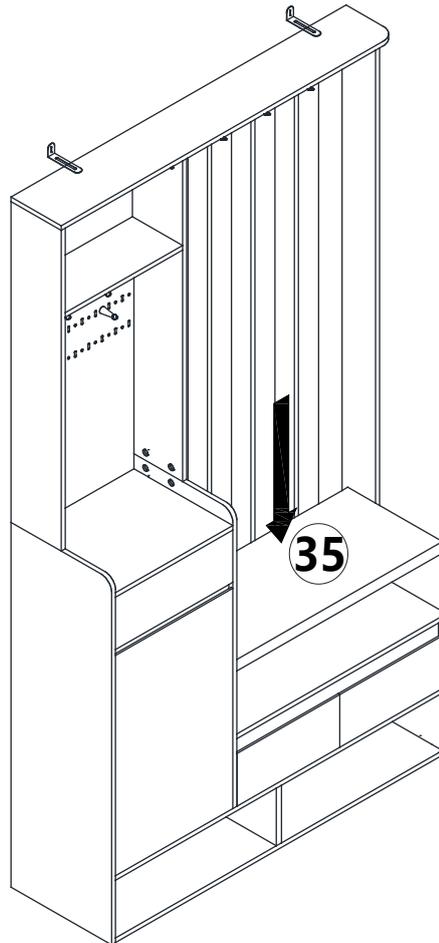

Step 29

