



4

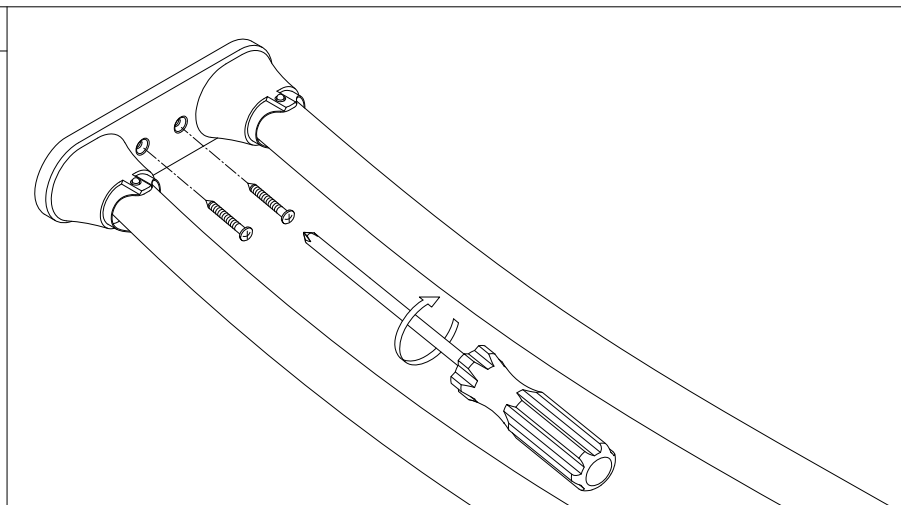

4. Place the shower rod on the mounting location and insert screws through first mounting post into anchors. Tighten screws with screwdriver.


5

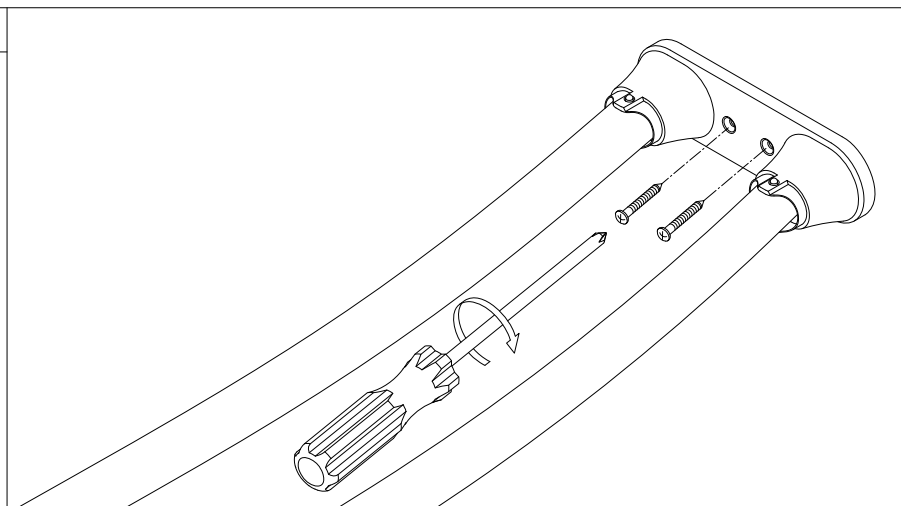

5. Expand the shower rod and install on opposite end. Repeat steps 1 through 4 with the other side.

KINGSTON

KITCHEN & BATH

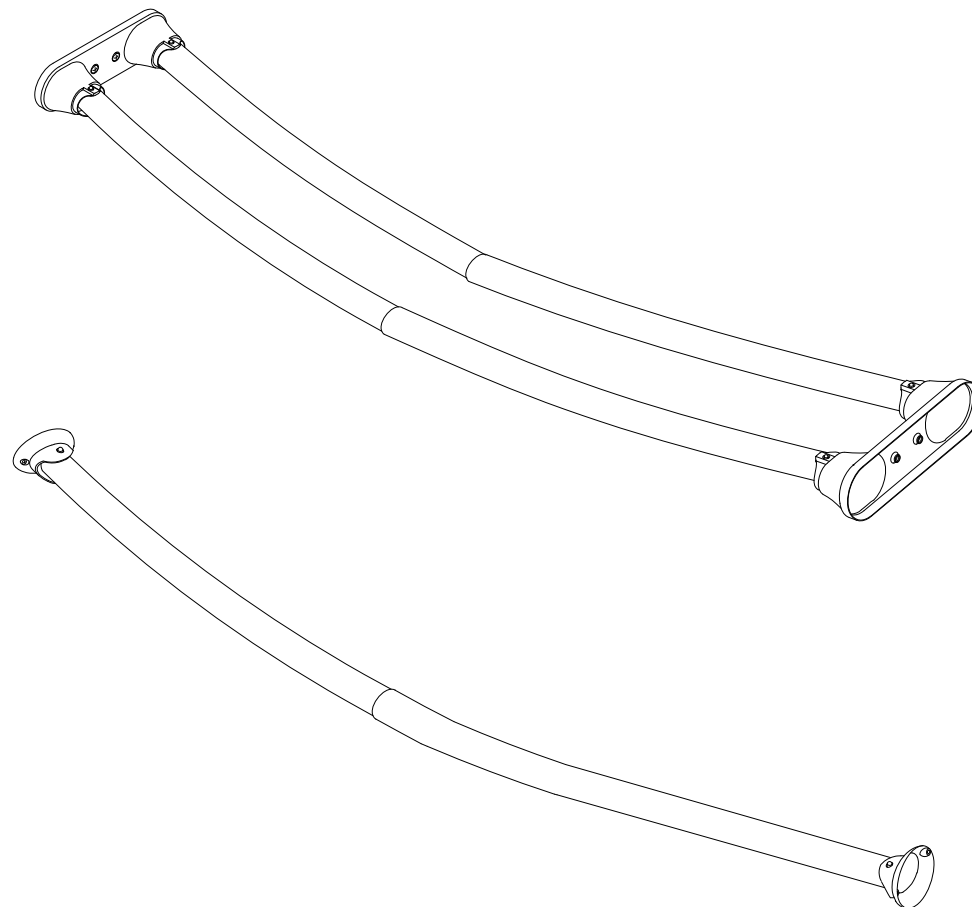

www.kingstonbrass.com
 TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
 TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
 12775 Reservoir Street, Chino, CA 91710



KINGSTON

KITCHEN & BATH


INSTALLATION INSTRUCTIONS

Adjustable Shower Rod

Parts:

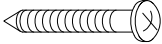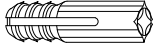Single Shower Rod		1 Pc
Double Shower Rods		2 Pcs
Screw		4 Pcs
Anchor		4 Pcs


Need Tools:

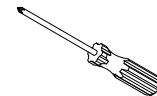


Screwdriver



Pencil




Hammer




Power Drill

2

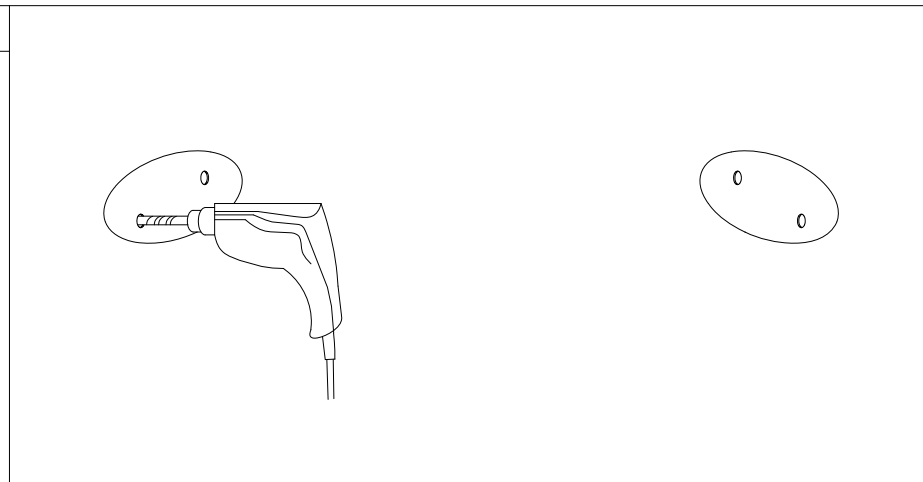


2. Place the mounting plate in the center of the pencil outline you just made and mark the location of the mounting screws. Drill holes at the marked locations.

1

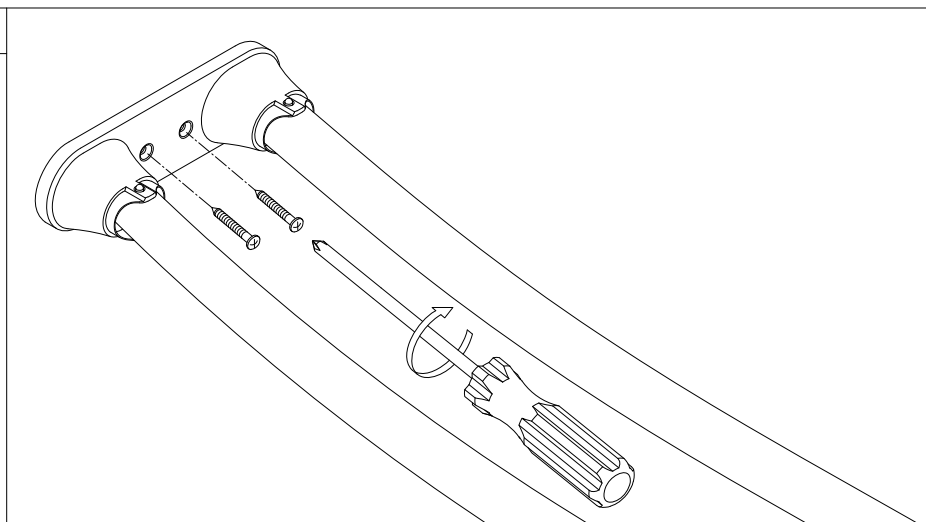

1. Locate where you would like to install the curved shower rod. Place a base onto the wall and trace around it with a pencil.

3

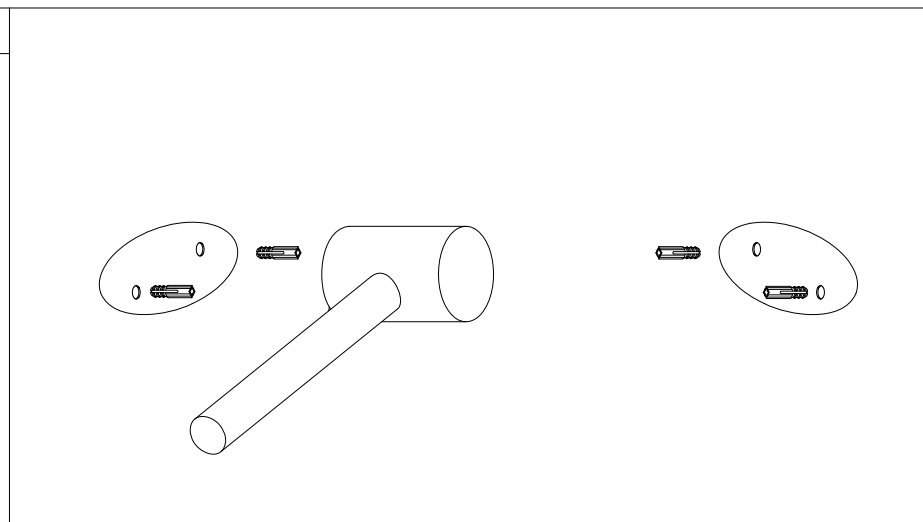

3. Insert anchors into the holes with a hammer until flush with the wall.