


ASSEMBLY INSTRUCTION MODEL ADD-306-CH-SM

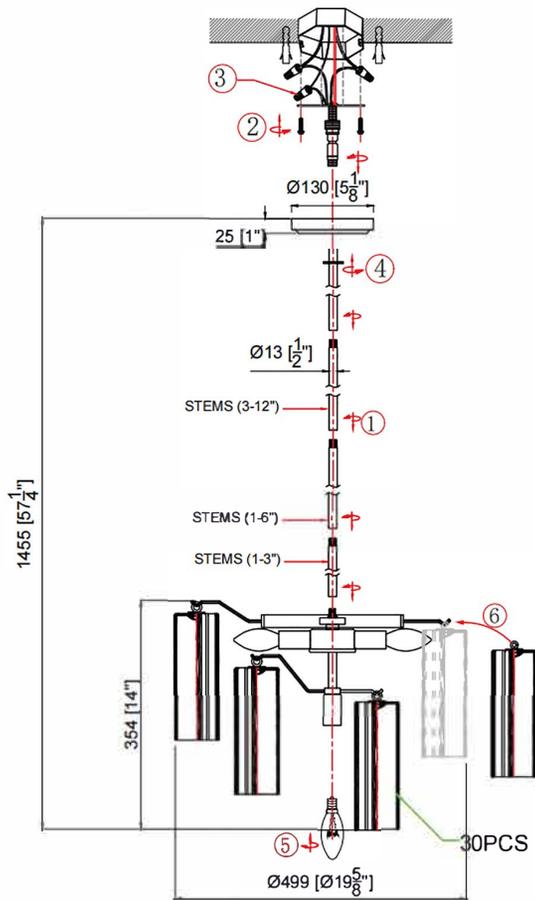


1455 [57 1/4\"]

354 [14\"]

30PCS


Ø499 [Ø19 5/8\"]

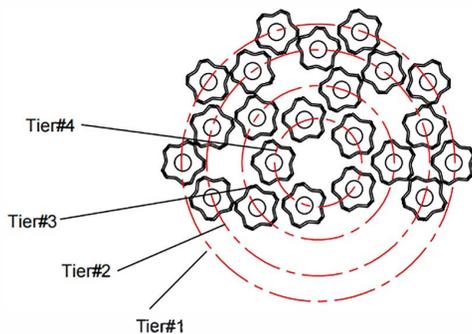

Dress the glass from tier #4.



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 6 Candelabra Base Bulb
40 Watts Recommended 60 Watts Max.
USE LED BULBS FOR EXTENDED USE
(This fixture is dry rated)

How to Install

1. Decide the preferred hanging height and choose the correct length of rods needed.
2. Feed the wires through the rods, screw collar ring and canopy (with a bigger center hole). Screw the rods together. Screw one end of the rod assembly onto the top of frame and the other end onto the swivel on the mounting strap.
3. Attach the mounting strap onto the outlet box.
4. Raise the fixture up to the ceiling and do the wire connections. Slip the canopy up along the rods and over the mounting strap. Secure with the screw collar ring.
5. Install the bulb into the socket.
6. Dress the glass as illustrated.

Glass Sets

1. 30 pcs Smoke glass 2 3/4x7 3/4"

CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS



Crystorama.com

PART NUMBER MODEL **ADD-306-CH-SM**

Part Number

Part Numbers

- A. (1)-Canopy, D 5 1/8XH1"
(XBN300CHCAN5.125IN)
- B. (1)-Collar ring
- C. (1)-Swivel
- D. (1)-6"-D13mm-Rod
(XBN300CHROD6IN)
- E. (3)-12"-D13mm-Rods
(XBN300CHROD12IN)
- F. (1)-Frame
- G. (30)-Smoke glass, D2 3/4xH7 3/4"
(XBN300CHSMGLA7.75IN)

