
MA-2-22




INSTALLATION INSTRUCTIONS

Step 1: Drill holes in Wall for screw anchors

Determine your desired location for installation and make a mark for the location . Make 2 marks where mounting screws will be placed as shown below. Make sure shelf is level when marking for location of installation.Drill hole at each end of the marks.

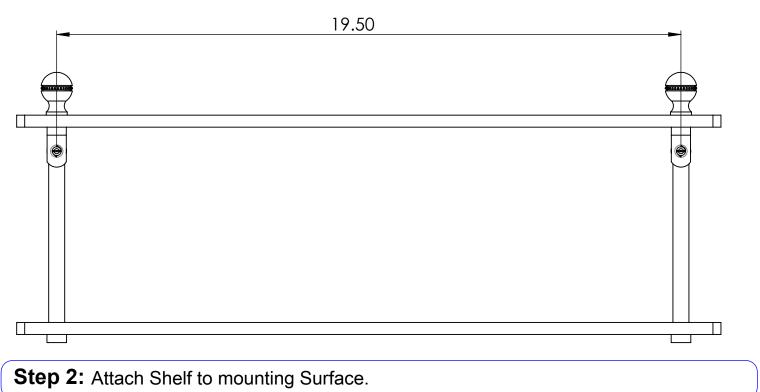

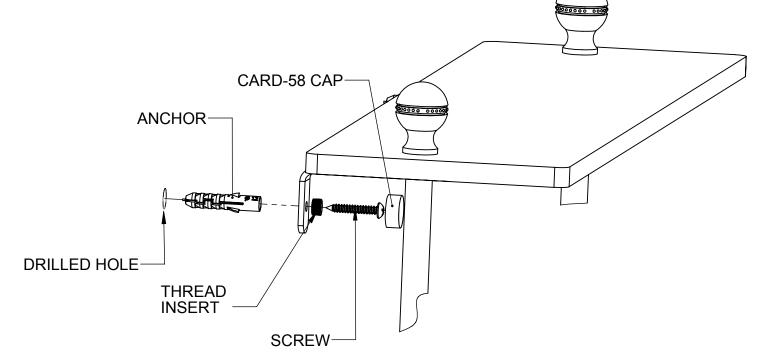

No portion of this document or any artwork contained herein should reproduced in any way without the written conset of ALLIED BRASS INC.