



Hanging Screen Door

Installation Instructions



Step 1:

Clean the door frame to remove any dust or debris. Allow the doorframe to dry before applying the hook & loop tape.



Step 2:

Lay the screen flat on the floor with the hook & loop tape facing up.



Step 3:

Apply the supplied hook & loop tape strips to the existing hook & loop tape portions on the top and sides. Be careful not to remove the white backing.




Step 4:

Peel off the white backing from the top hook & loop tape strip.



Step 5:

Adhere the hook & loop tape portion of the screen to the top of the doorframe. **The screen should be slightly higher in the top center.** This will ensure the screen's magnetic closure works properly. Once the top of the screen is in place, slowly peel off the white backing tape from the two sides. Press the hook & loop tape to the frame moving from top to bottom. Make sure the screen is loose enough to ensure the magnets line up and close easily.

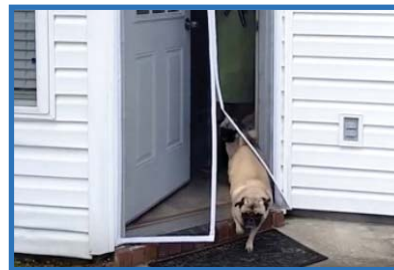

Step 6:

Make sure the screen opens and closes properly. Make adjustments if necessary. Enjoy your new Magnetic Screen Door!

Because of how our screens are packaged, the screen may appear smaller than it should be. If this happens, unfold the screen, let it rest several hours, it should return to its original size. When attaching, ensure the mounting tape is in place and stretch the screen to meet the tape.

For further assistance call:
(888) 223-3050