

## WARNING

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL. ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

## CARE AND MAINTENANCE

Wipe clean with a soft cloth dampened in water and a mild soapy solution. Wipe dry with a clean and dry cloth. This rattan basket requires no maintenance. However, by keeping the furniture clean and storing it properly you can enjoy it year after year.

## NOTICE & IMPORTANT SAFETY INSTRUCTIONS













- \* Please make sure that you have all parts indicated before you begin assembly of this item.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This Item may require periodic tightening.

# JONATHAN Y

Model # : RCK200

Product Dimensions : W23.23" x D39.37" x H37.60"

## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QTY	PIECE	DESCRIPTION	PICTURE	QTY
A	Chair Side		2	G	Allen Bolt (70 mm)		6
B	Chair Back Top		1	H	Allen Bolt (40 mm)		10
C	Chair Front Down		1	I	Allen Key		1
D	Chair Back Down		1	J	Wood Plug		12
E	Seating Base		1	K	Cushion		1
F	Rocking Legs		2	L	Screw (40 mm)		4




## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware content list. If any parts is missing or damaged, do not attempt to assemble the product.


Estimated assembly time  $\pm$  20 minutes.

1.

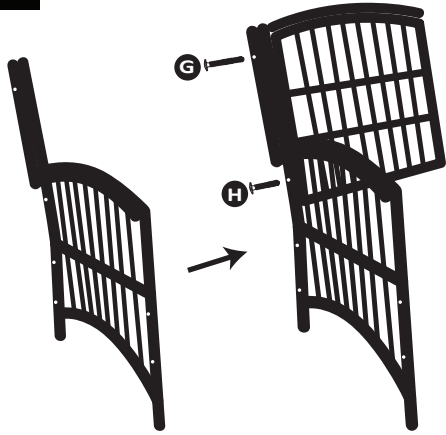

**STEP 1 :** MOUNT 1 SIDE PART TO BACK TOP PART USING 2 BOLTS (TOP BOLT 70x6 MM, DOWN BOLT 40x6 MM).

2.

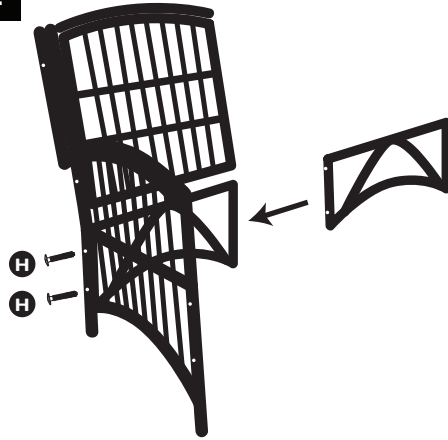

**STEP 2 :** MOUNT BACK DOWN PART TO 1 SIDE PART USING 2 BOLTS (40X6 MM).

3.



**STEP 3 :** MOUNT FRONT DOWN PART TO 1 SIDE PART USING 2 BOLTS (40X6 MM).

4.



**STEP 4 :** MOUNT 2nd SIDE PART TO BACK TOP (TOP BOLT 70x6 MM, DOWN BOLT 40x6 MM), BACK DOWN (BOLT 40X6 MM) & FRONT DOWN (BOLT 40X6 MM).

5.



**STEP 4 :** PUT SEATING FRAME DOWN ON THE CHAIR. FIX THE SEAT BASE WITH WOODEN SCREW 40 MM FROM THE BOTTOM ON EACH 4 CORNER.

6.



**STEP 6 :** MOUNT ROCKING LEGS FOR EACH SIDE USING 4 BOLTS (70X6 MM).

7.



**STEP 7 :** PUT IN WOOD PLUG TO COVER THE HOLE RATTAN.

8.



**STEP 8 :** PUT THE CUSHION ON TOP OF THE SEAT PART. THE CHAIR IS READY.