




MANHATTAN
COMFORT

Duane Side Table NS-10GLF

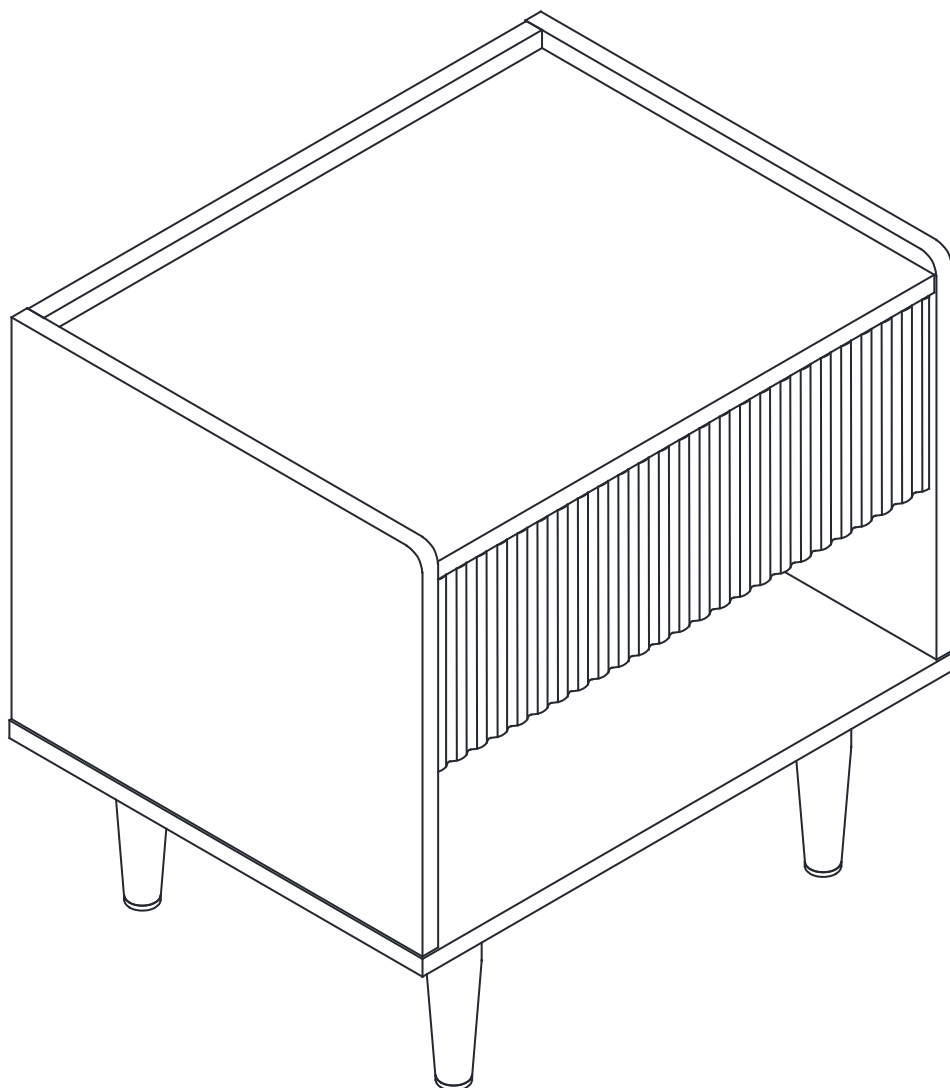







STOP!


Before beginning the assembly process, ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

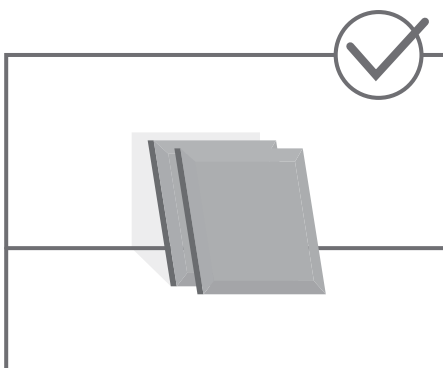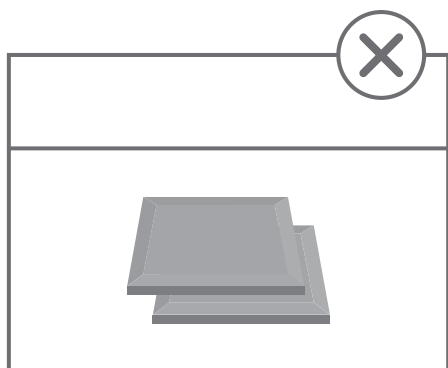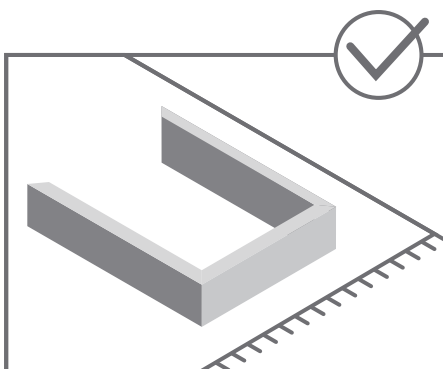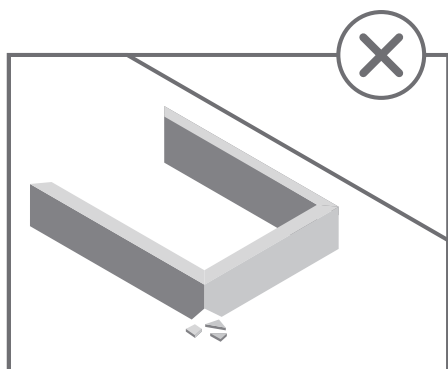

TOOLS REQUIRED

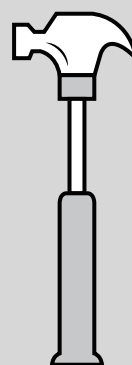


View our assembly video online:
WWW.MANHATTANCOMFORT.COM



Stuck? Question? We are here to help.
tel: 908-888-0818
e-mail: help@manhattancomfort.com

Included in this package:

- A. TOP (1)
- B. BOTTOM (1)
- C. LEFT END (1)
- D. RIGHT END (1)
- E. BACK (1)
- F. LEG (2)
- G. BRACE (2)
- J. DRAWER FRONT (1)
- K. DRAWER LEFT SIDE (1)
- L. DRAWER RIGHT SIDE (1)
- H. DRAWER BACK (1)
- N. DRAWER BOTTOM (1)

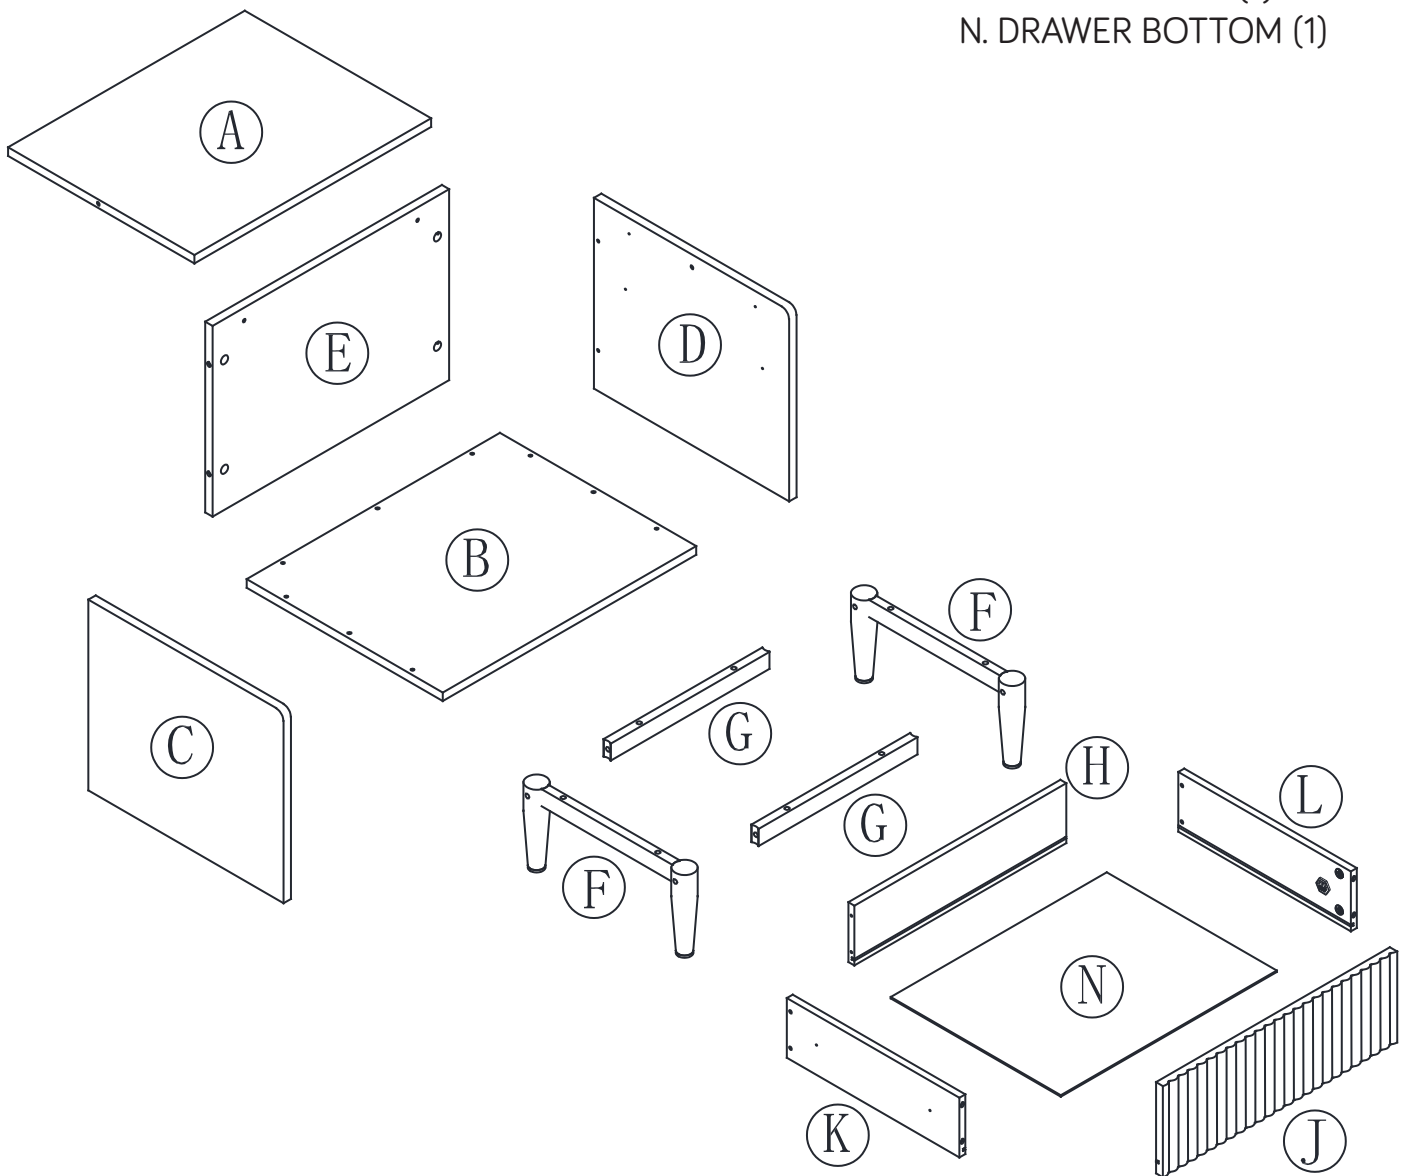

Hardware Identification


① EXTENSION RAIL - 2pcs



② EXTENSION SLIDE - 2pcs




③ CAM SCREW - 8pcs

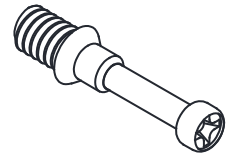


④ HIDDEN CAM - 8pcs



⑤ APPLIQUE CARD - 2pcs

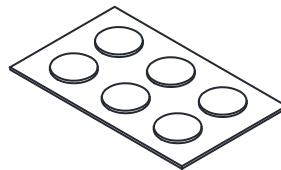


⑥ WOOD DOWEL - 5pcs

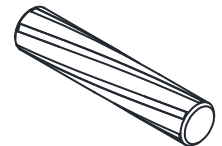

⑦ L-WRENCH - 1pc



⑧ BRACKET - 4pcs

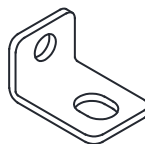


⑨ HEX HEAD SCREW
M6*55mm - 4pcs




⑩ HEX HEAD SCREW
M6*40mm - 8pcs



⑪ FLAT HEAD SCREW
M5*35mm - 8pcs



⑫ PAN HEAD SCREW
M5*30MM - 4pcs



⑬ PAN HEAD SCREW
M4*12MM - 8pcs



⑭ FLAT HEAD SCREW
M4*12mm - 8pcs





MANHATTAN COMFORT

WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.


Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.




319 Ridge Rd. Dayton, NJ 08810
908-888-0818

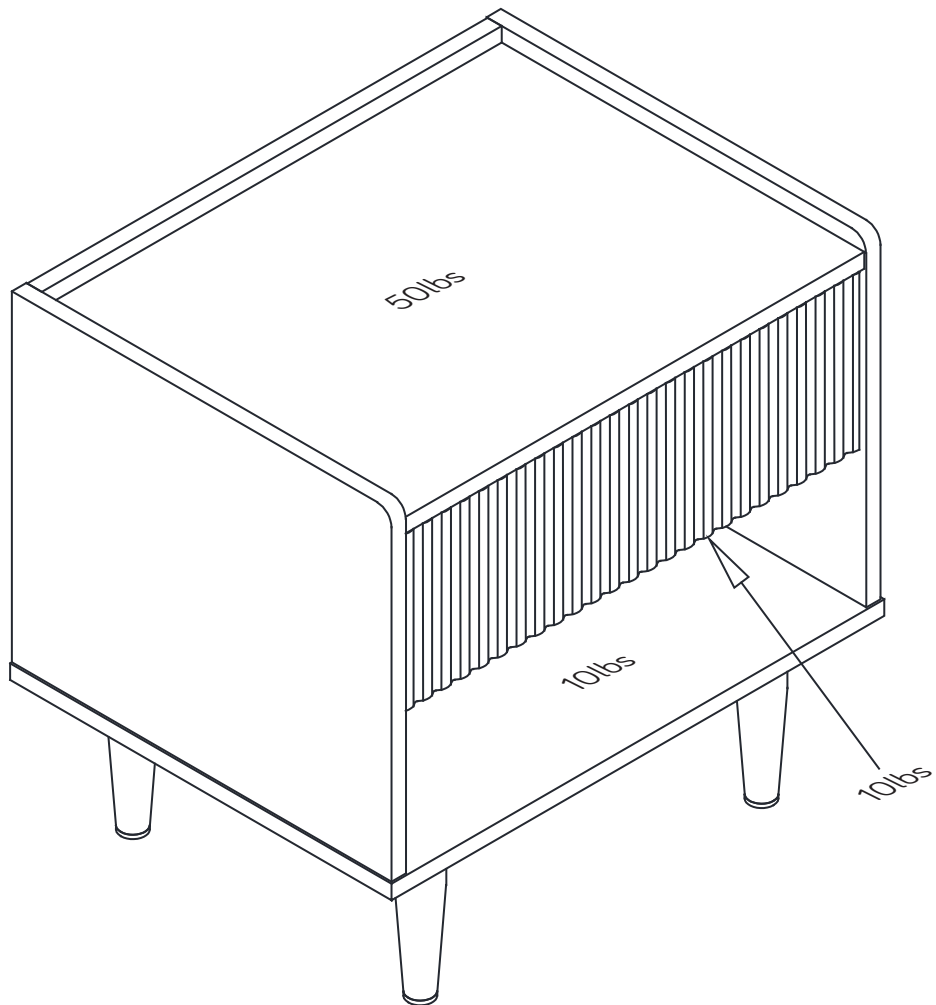



Step 1

- ◆ Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- ◆ Turn eight CAM SCREWS (3) into the ENDS (C and D) and the DRAWER FRONT (J).
- ◆ Fasten four L BRACKETS (8) to the ENDS (C and D). Use four PAN HEAD SCREWS (13).

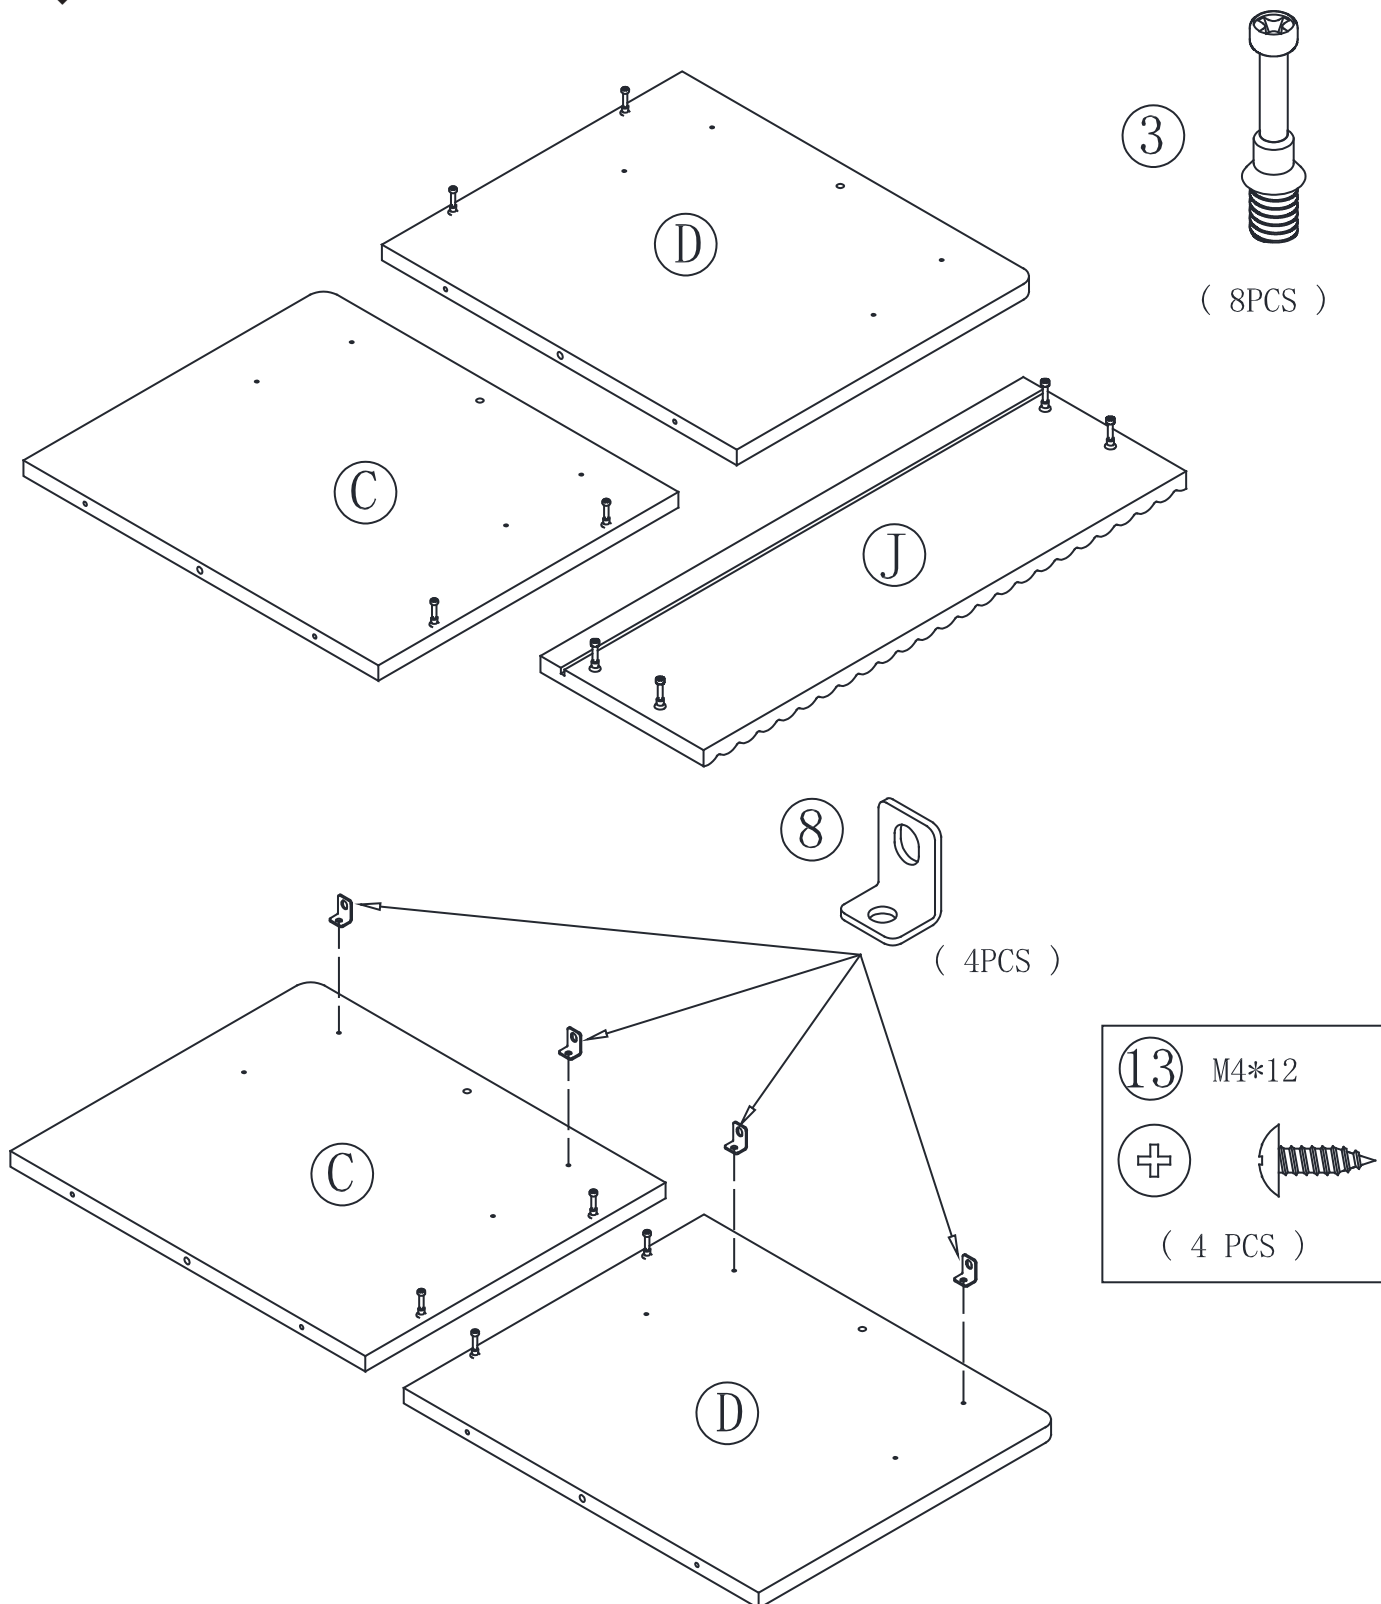



Step 2

- ◆ Push eight HIDDEN CAMS (4) into the BACK (E) and the DRAWER SIDES (L and K).

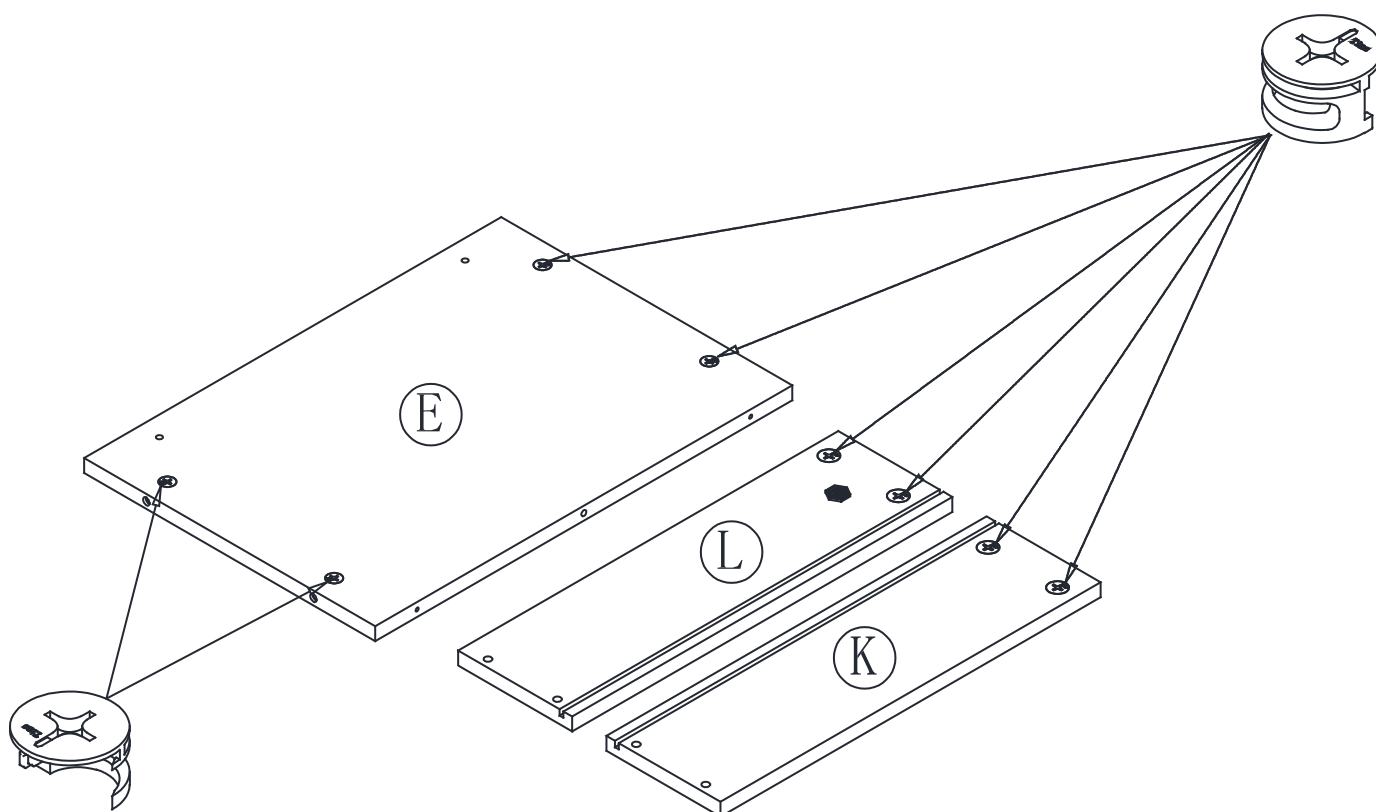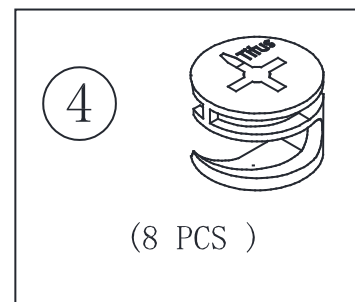

Step 3

- ◆ Separate the EXTENSION SLIDES (2) from the EXTENSION RAILS (1) as shown in the upper diagram below. Be prepared, the parts are greasy.
- ◆ Fasten four EXTENSION RAILS (1) to the ENDS (C and D). Use four FLAT HEAD SCREWS (14) through the exact holes shown.

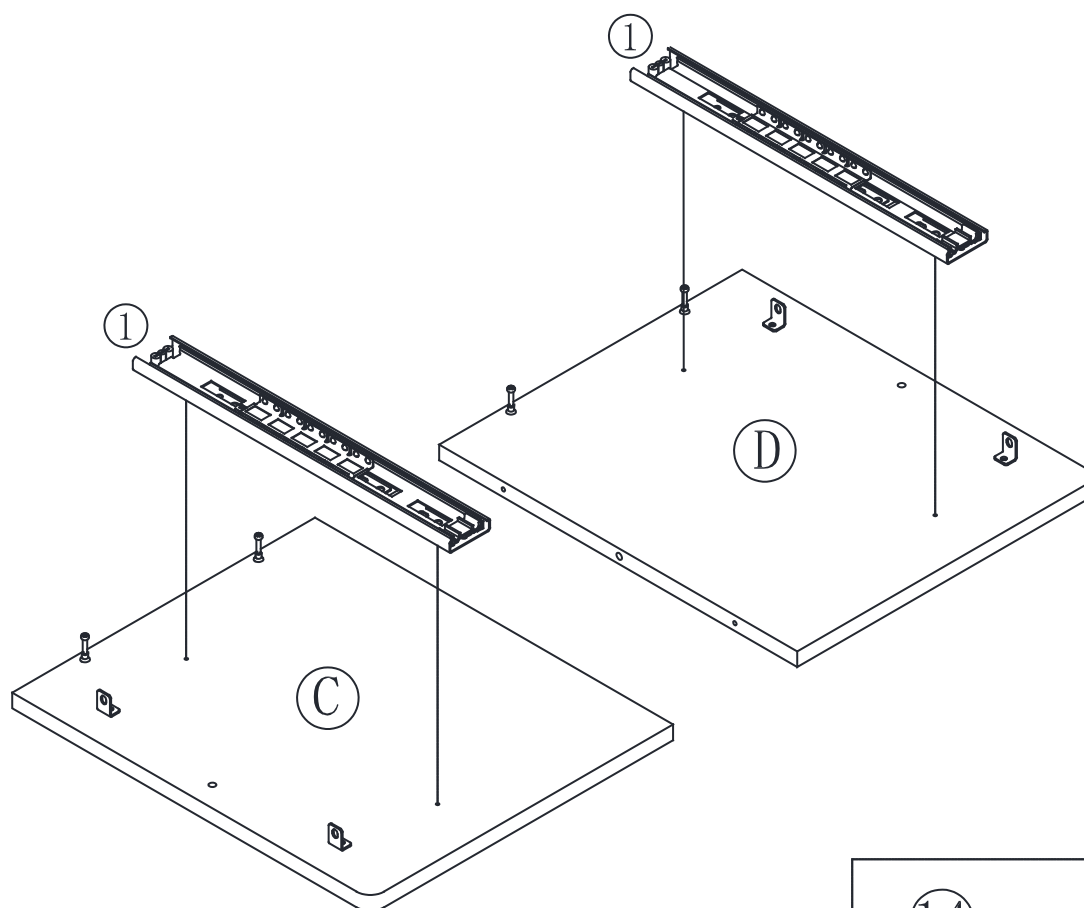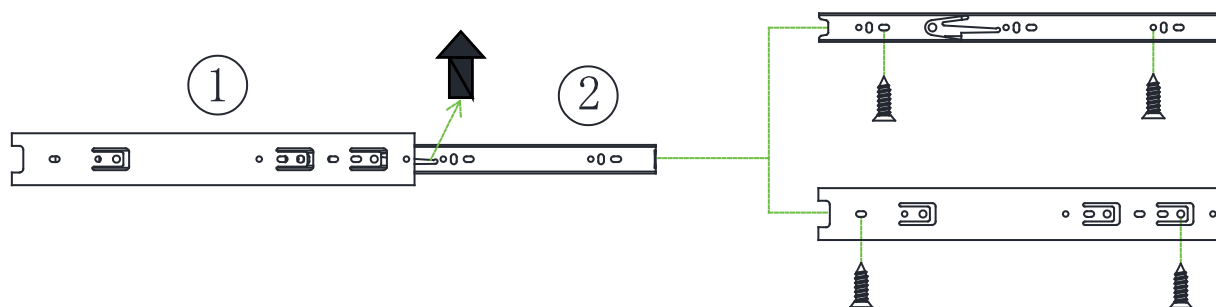





⑭ M4*12



(4 PCS)




Step 4

- ◆ Fasten the LEFT END (C) to the BACK (E). Tighten two HIDDEN CAMS.

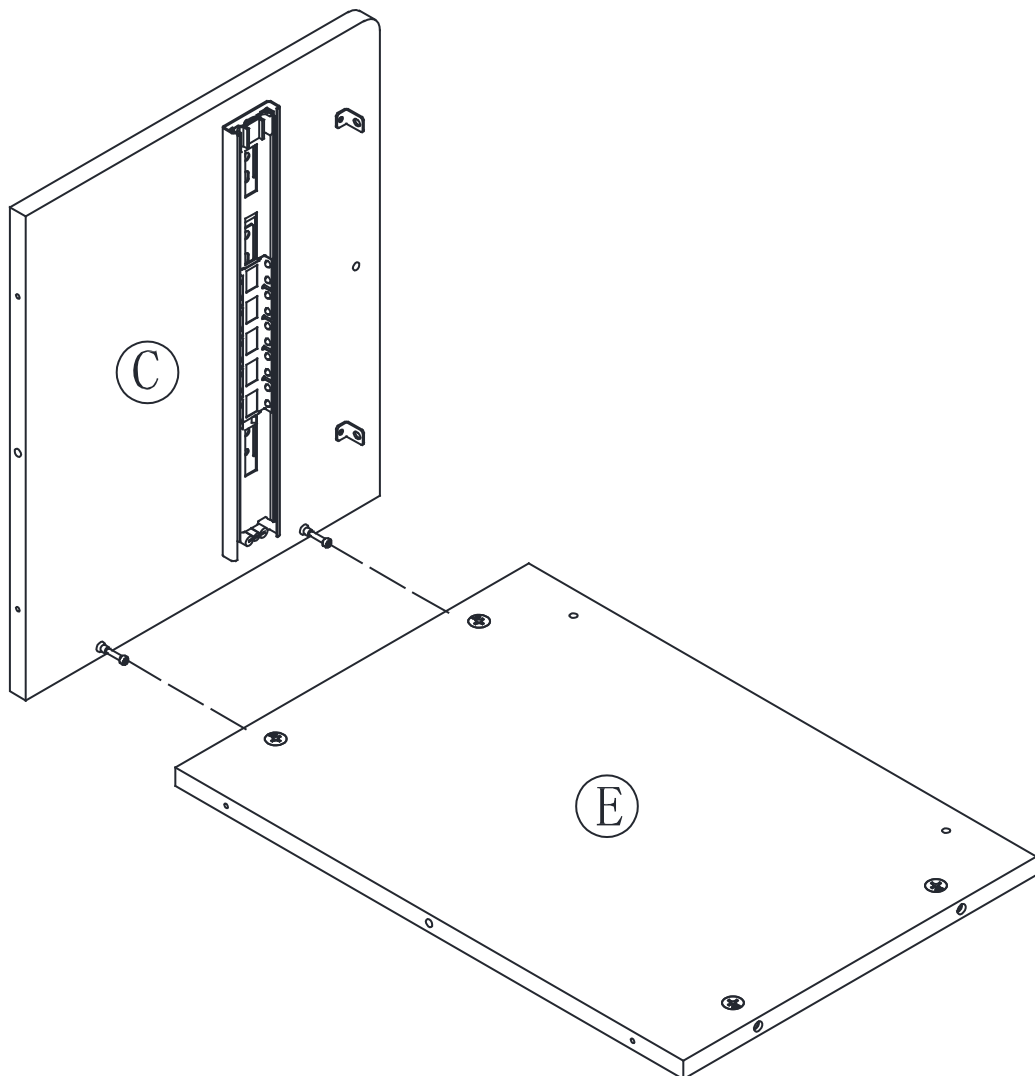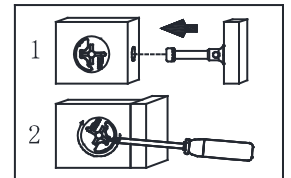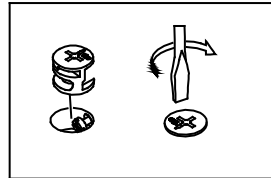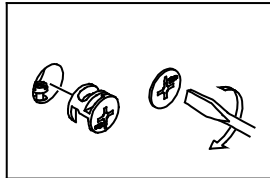







Step 5

- ◆ Insert one WOOD DOWEL (6) into the LEFT END (C).
- ◆ Fasten the TOP (A) to the LEFT END (C). Use two PAN HEAD SCREWS (13).

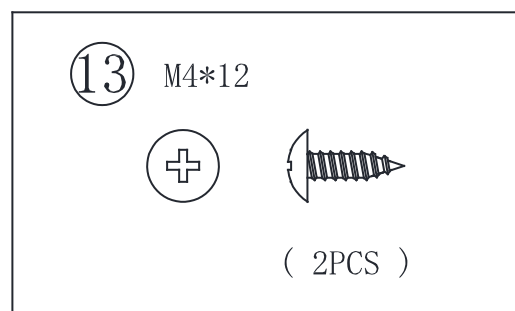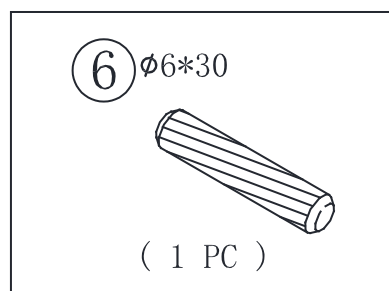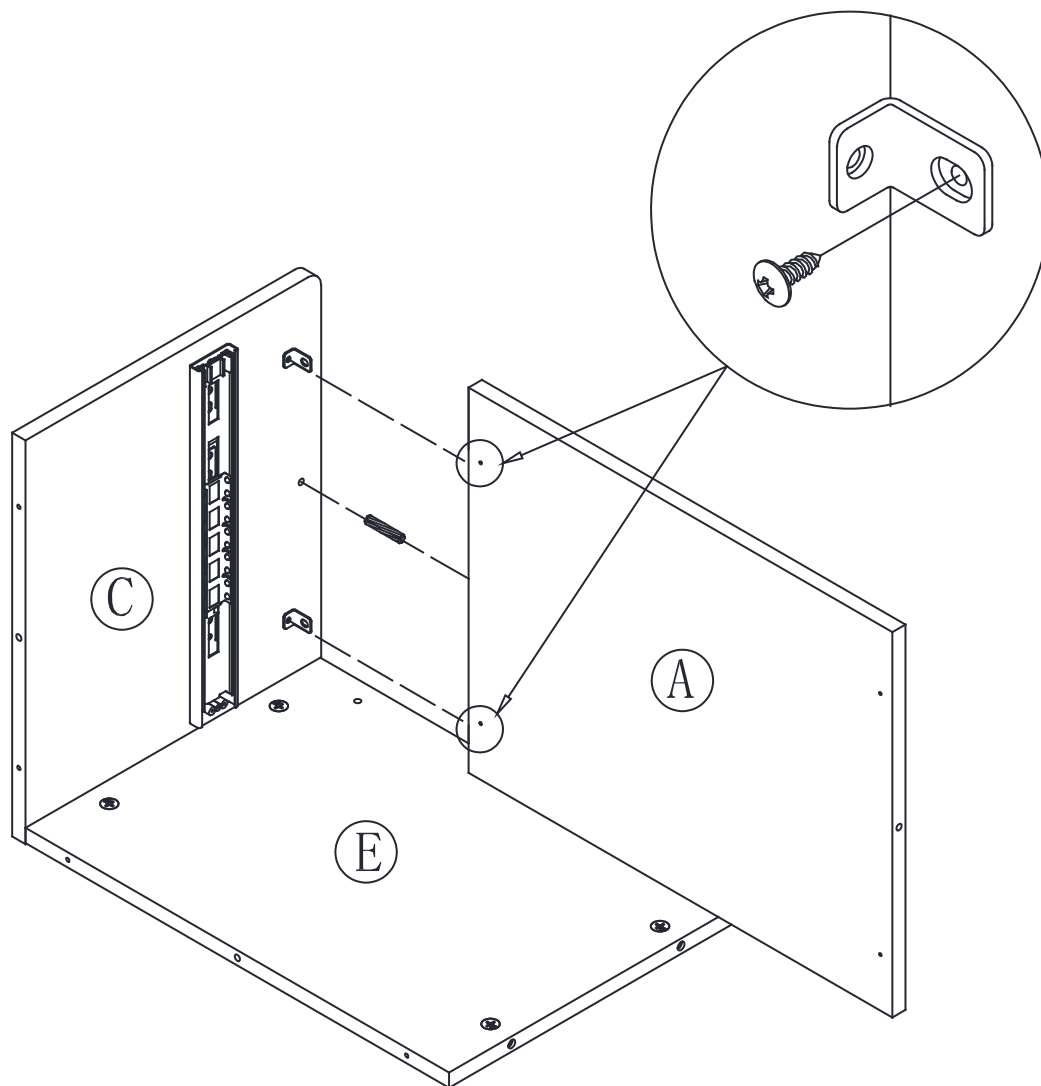




Step 6

- ◆ Insert one WOOD DOWEL into the TOP (A).
- ◆ Fasten the RIGHT END (D) to the TOP (A) and the BACK (E).
Use two PAN HEAD SCREWS (13) and tighten two HIDDEN CAMS.

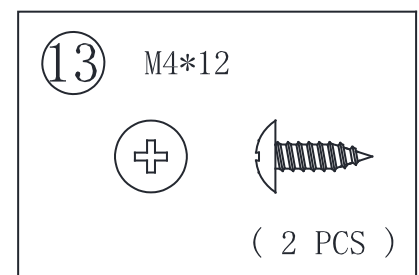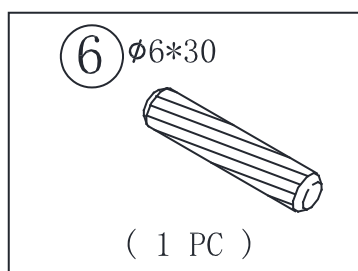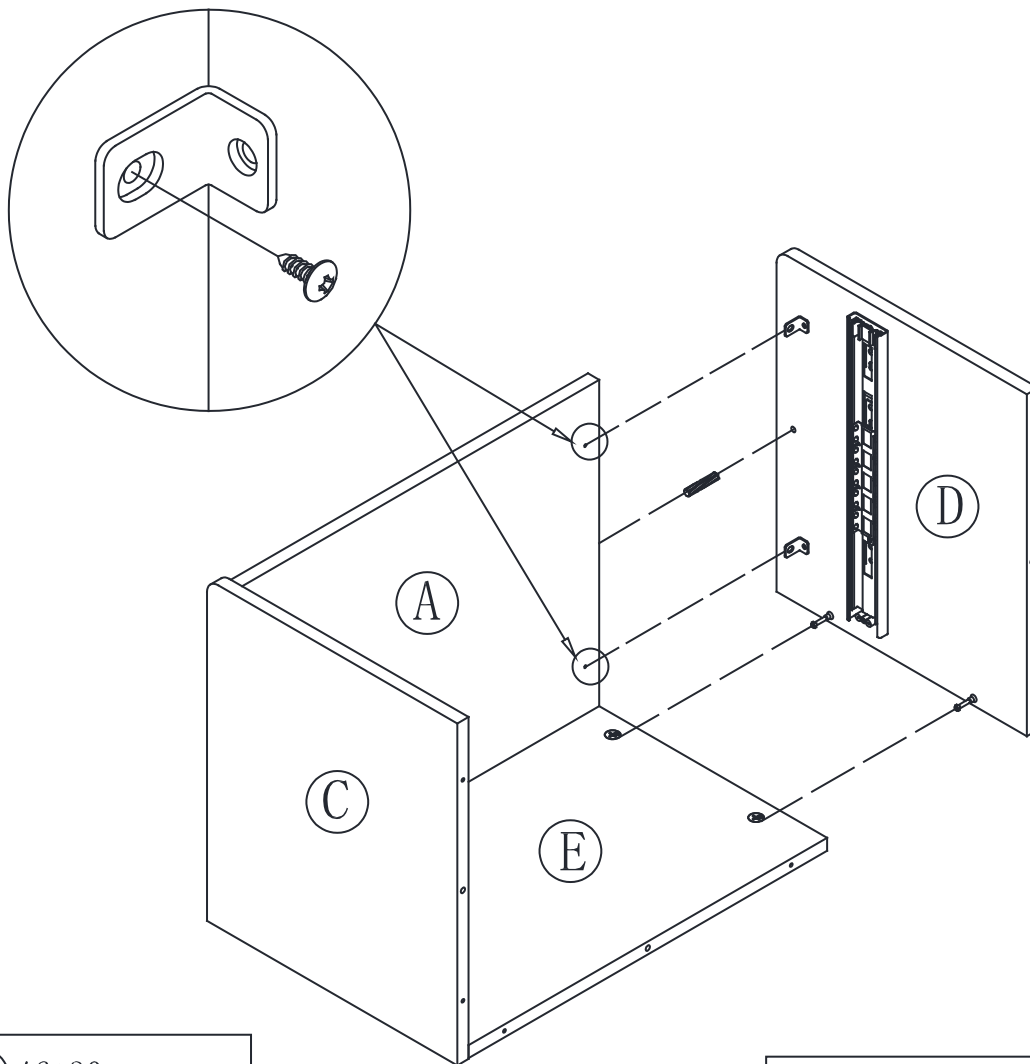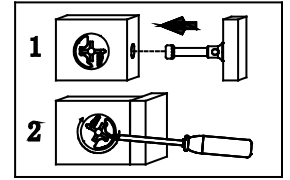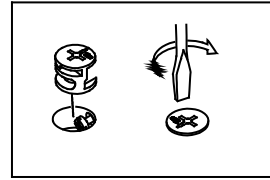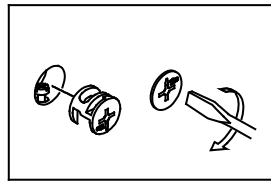




Step 7

- ◆ Insert three WOOD DOWELS into the ENDS (C and D) and the BACK (E).
- ◆ Fasten the BOTTOM (B) to the ENDS (C and D) and the BACK (E).
Use eight FLAT HEAD SCREWS (11)

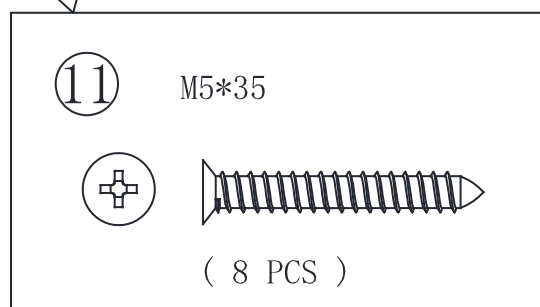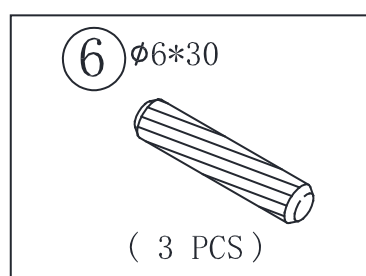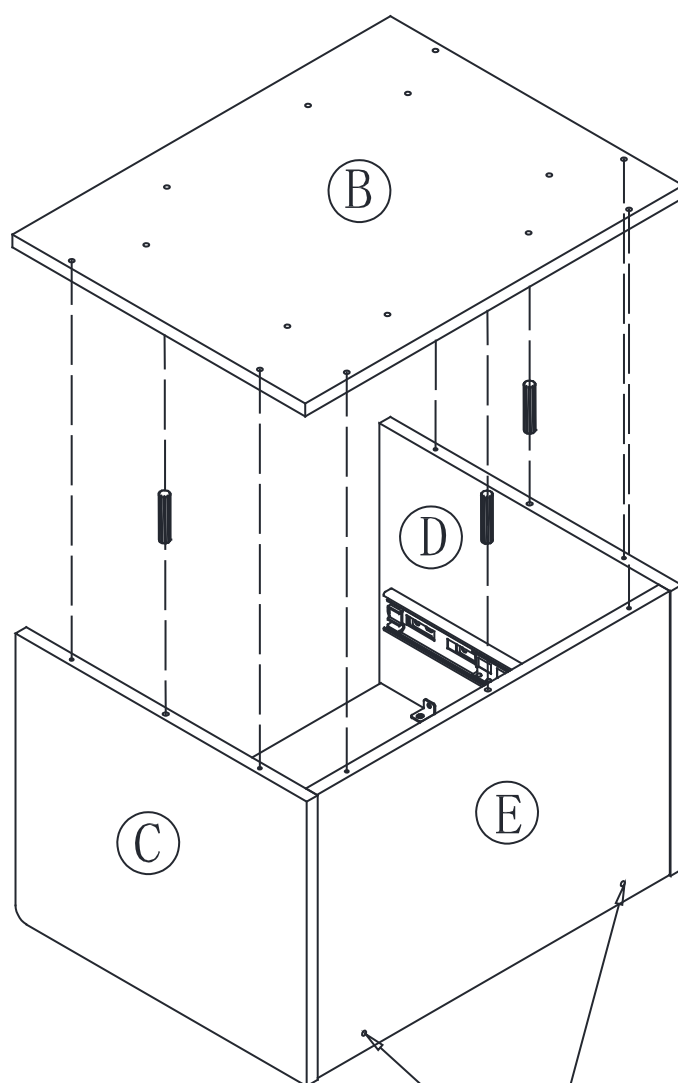




Step 8

- ◆ Fasten the BRACES (G) to the LEGS (F). Tighten four HEX HEAD SCREWS (9) using the L-WRENCH (7).
- ◆ NOTE: You should start each SCREW a few turns before completely tightening any of them Surface

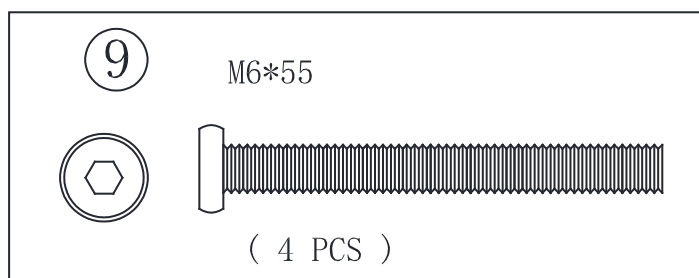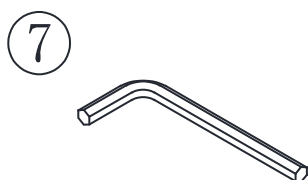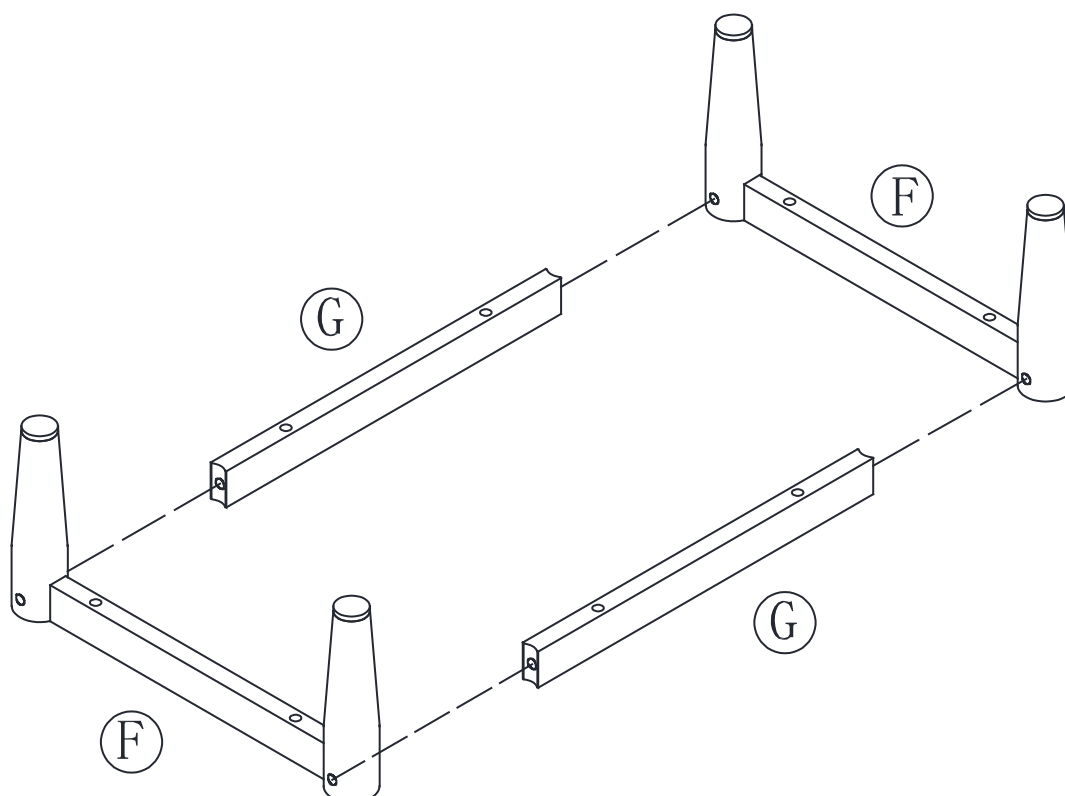


Step 9

- ◆ Fasten the LEGS (F) to the BOTTOM (B). Tighten eight HEX HEAD SCREWS (10) using the L-WRENCH (7).
- ◆ NOTE: You should start each SCREW a few turns before completely tightening any of them.

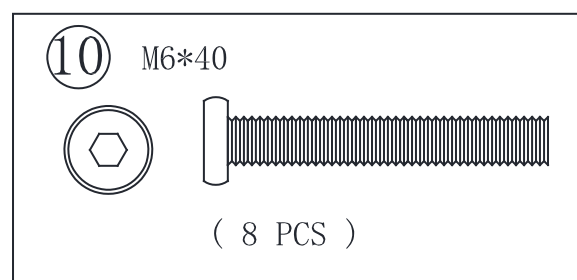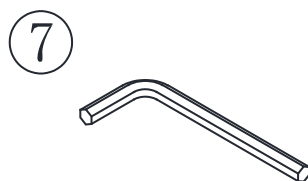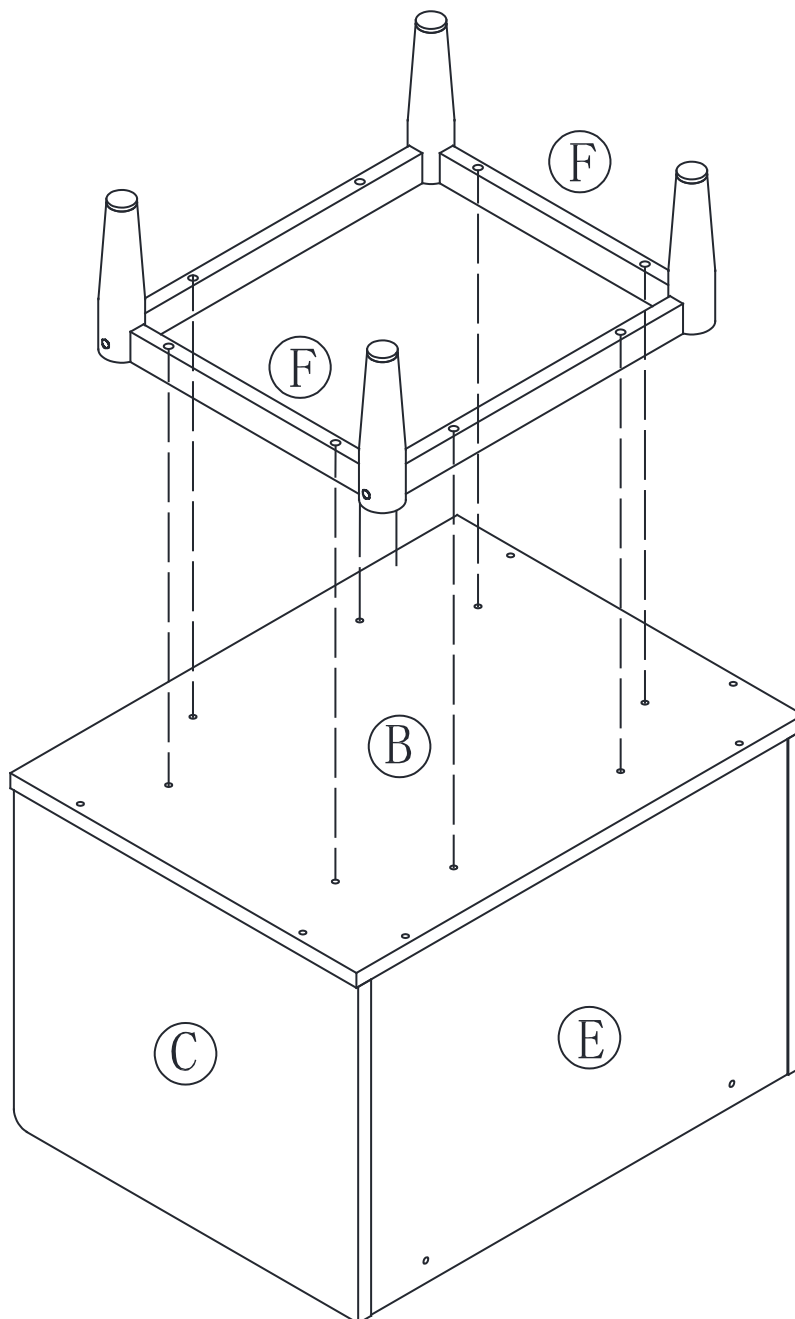


Step 10

- ◆ Fasten the DRAWER SIDES (L and K) to the DRAWER BACK (H). Use four PAN HEAD SCREWS (12).
- ◆ NOTE: You should start each SCREW a few turns before completely tightening any of them.




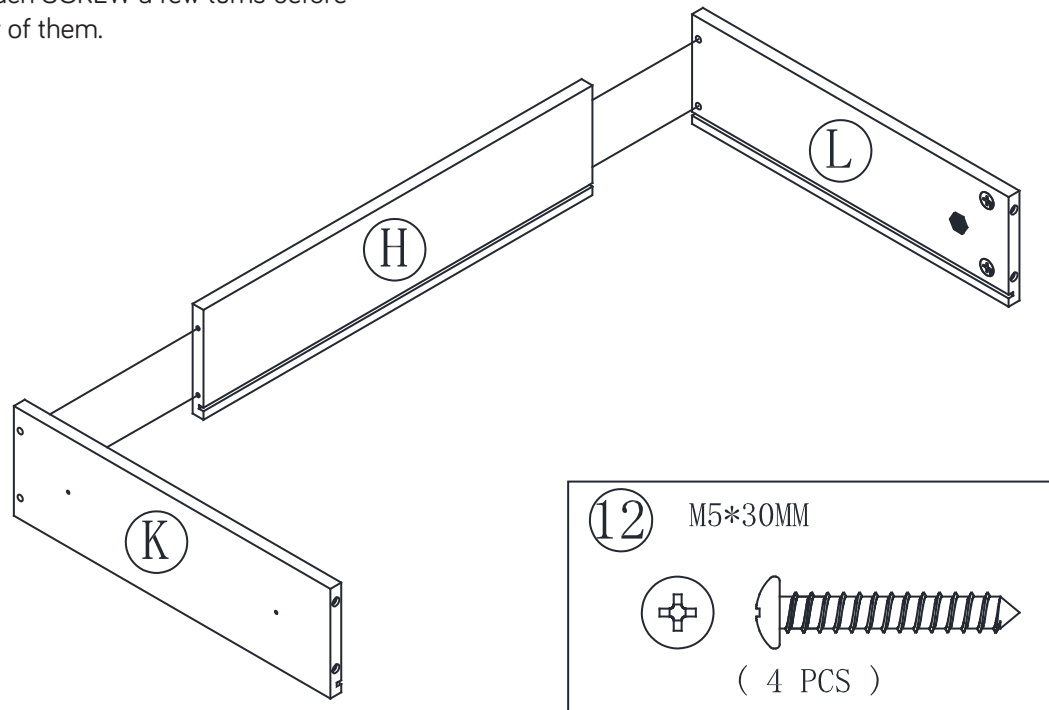


- ◆ Slide the DRAWER BOTTOM (N) into the grooves in the DRAWER SIDES (K and L) and DRAWER BACK (H).



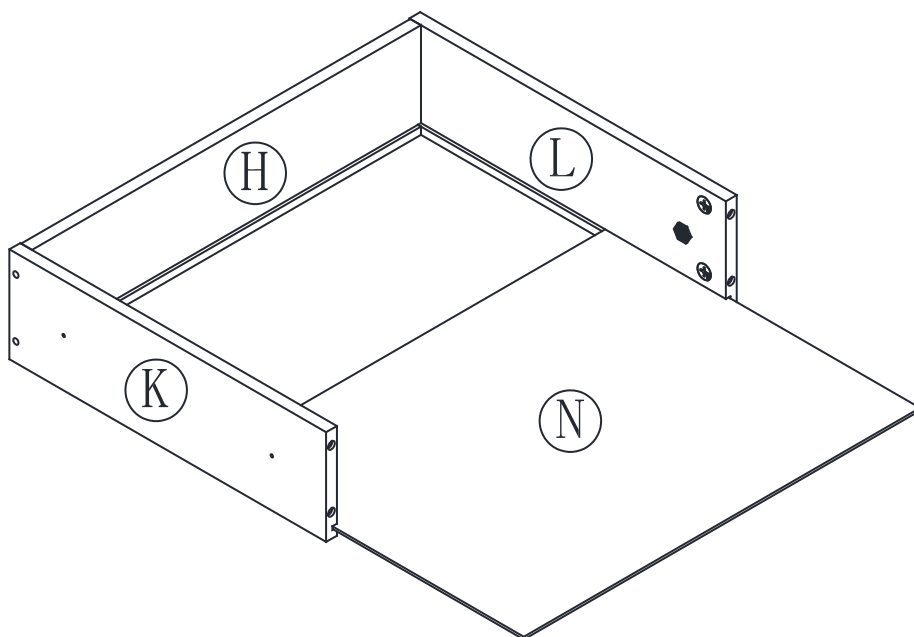


Step 11

- ◆ Fasten the DRAWER FRONT (J) to the SMALL DRAWER SIDES (K and L). Tighten four HIDDEN CAMS.
- ◆ Note : Be sure the DRAWER BOTTOM inserts into the DRAWER FRONT groove.

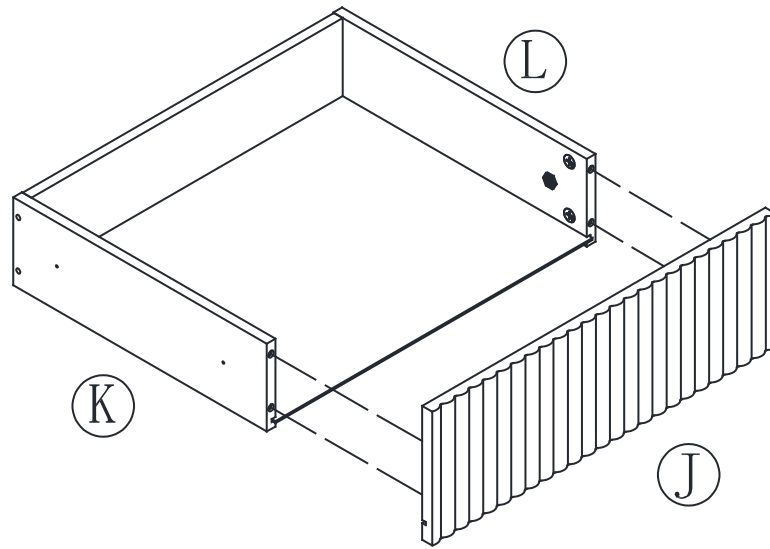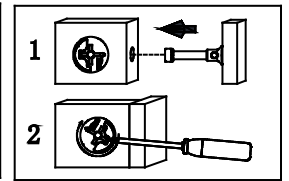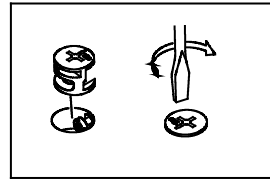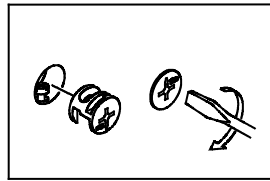



- ◆ Fasten two EXTENSION SLIDES (2) to the DRAWER SIDES (L and K). Use four FLAT HEAD SCREWS (14) through the exact holes shown.

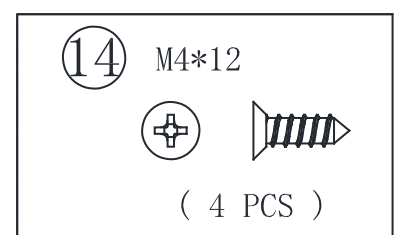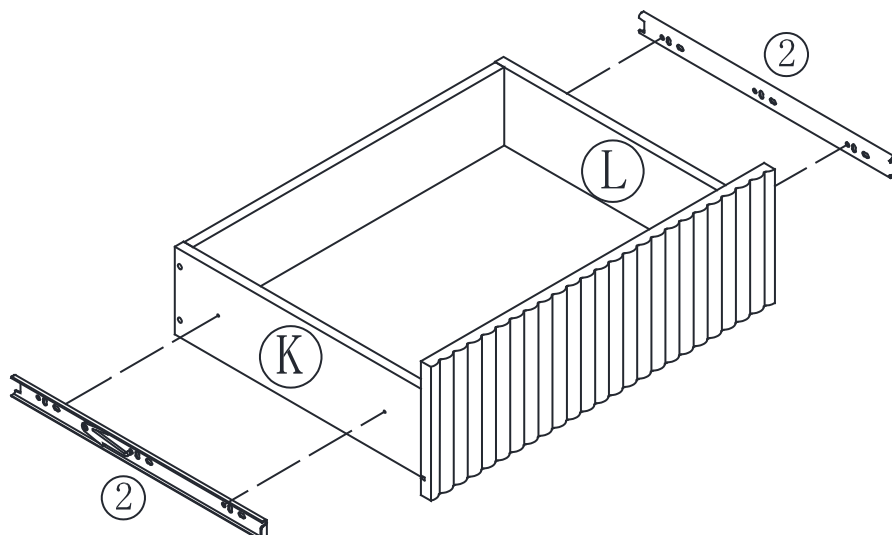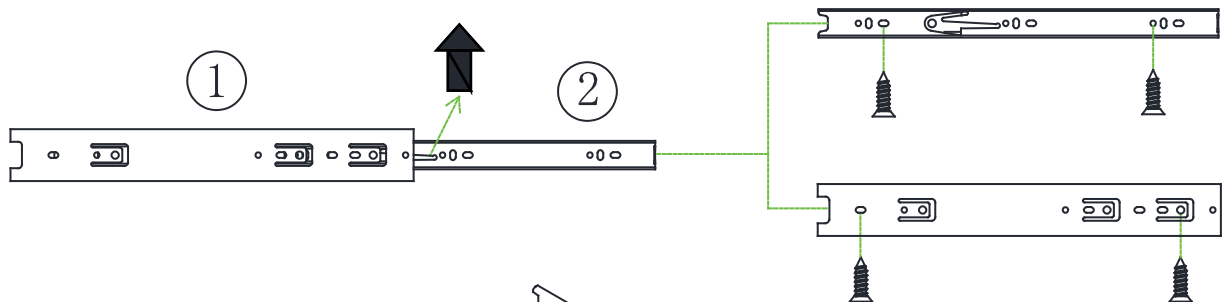

Step 12

To insert a drawer into your unit, line up the EXTENSION SLIDES on the drawer with the EXTENSION RAILS on the

- ◆ unit and push the drawer into the unit until the drawer is fully inserted. The drawer will push in hard until it is all the way in, then it will slide in and out easier.

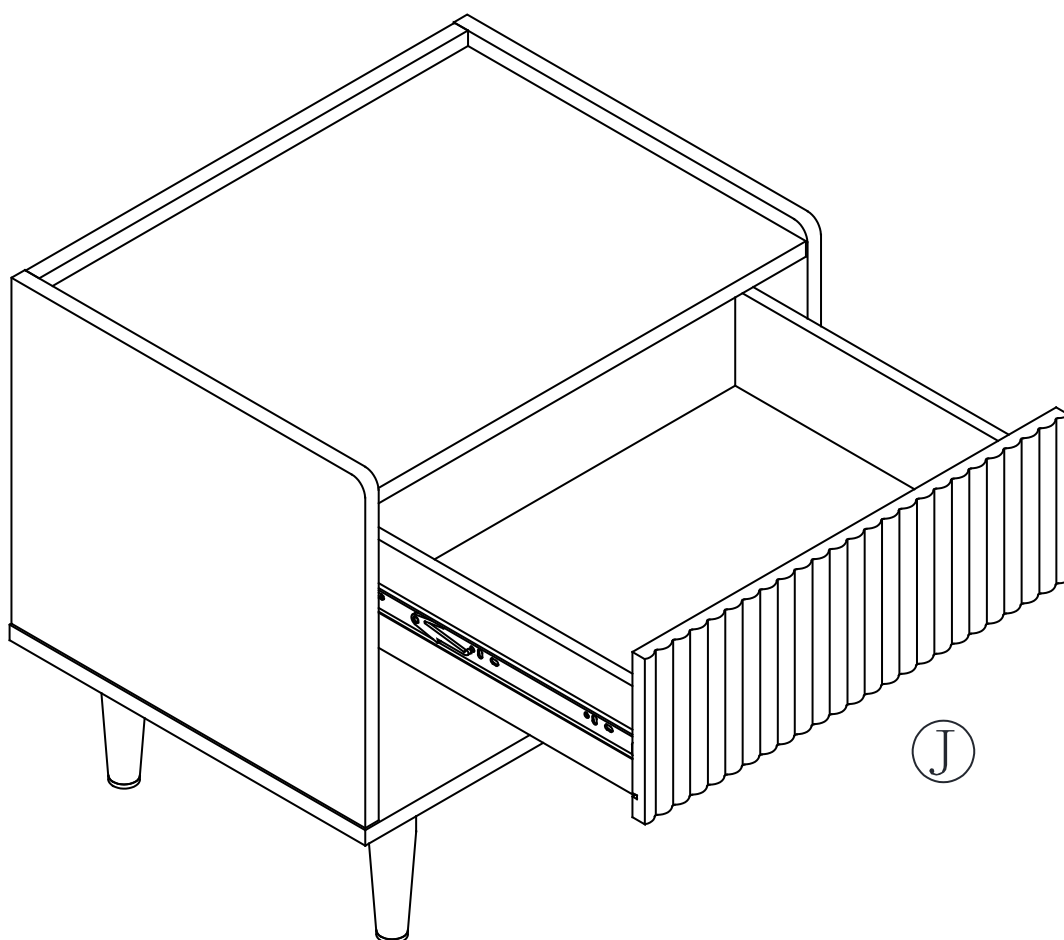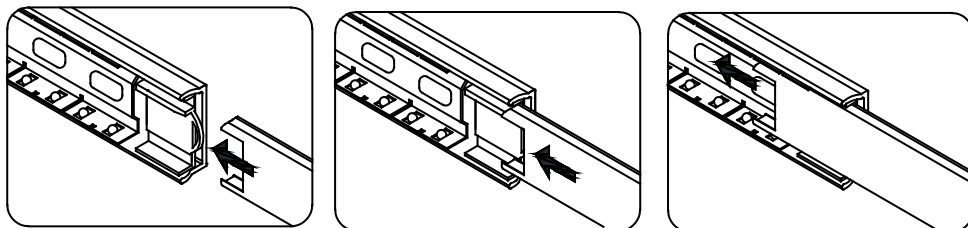

Step 13

- ◆ Peel APPLIQUES from the APPLIQUE CARDS (5) and stick them onto each visible HIDDEN CAM.

