

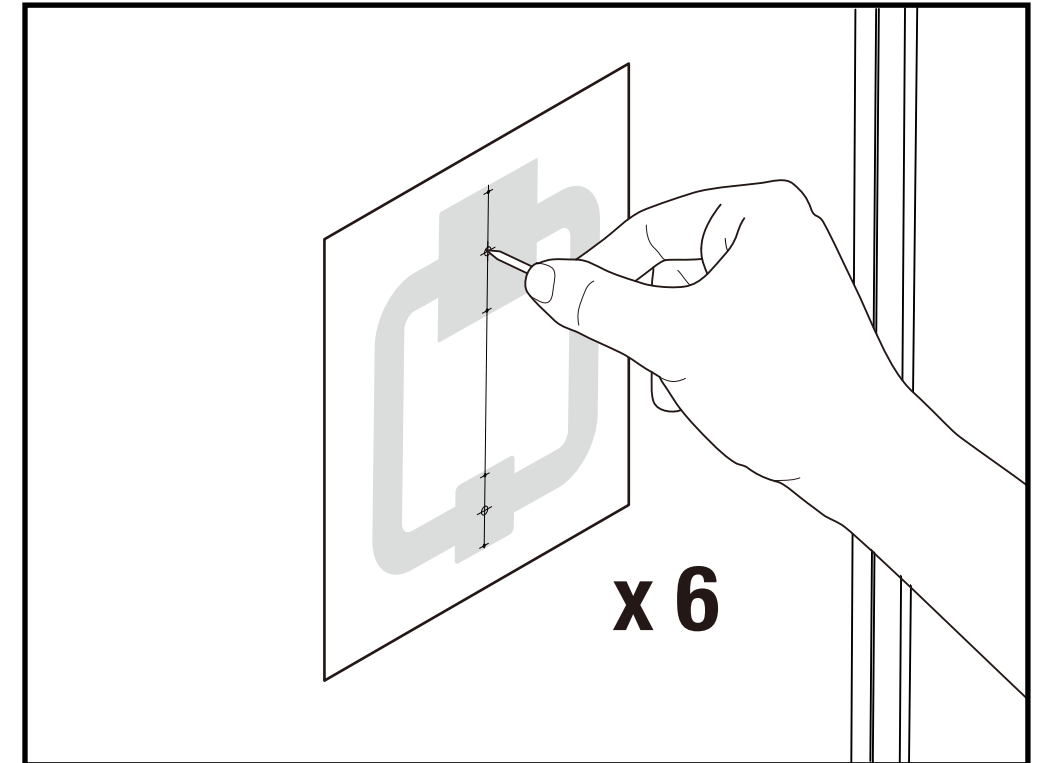
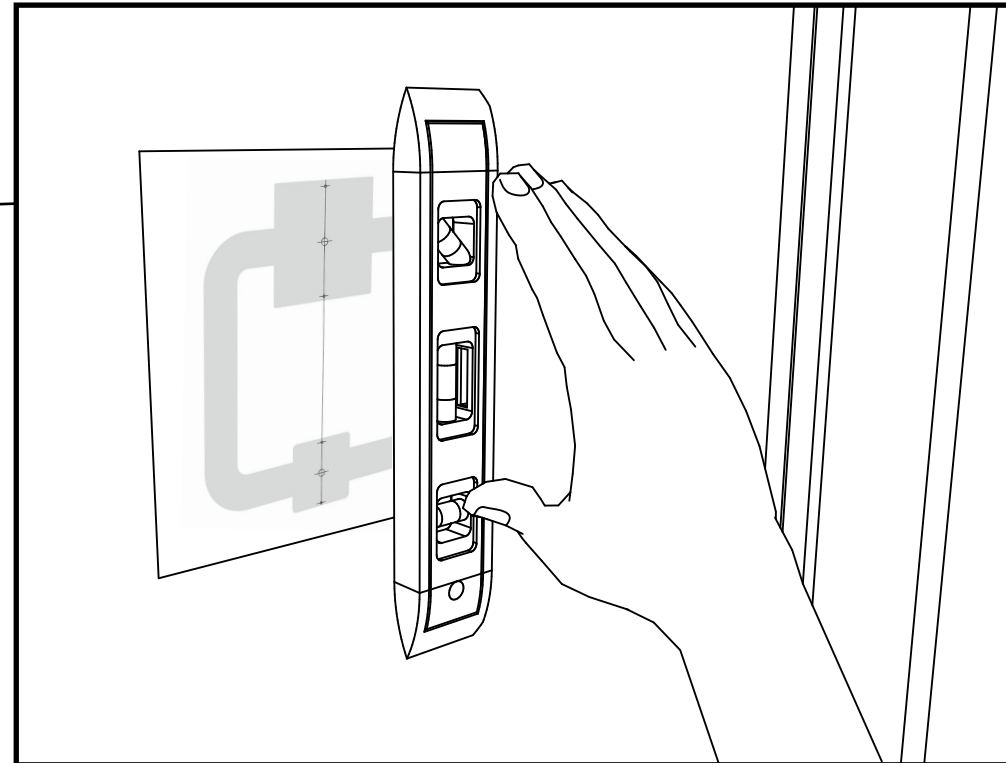
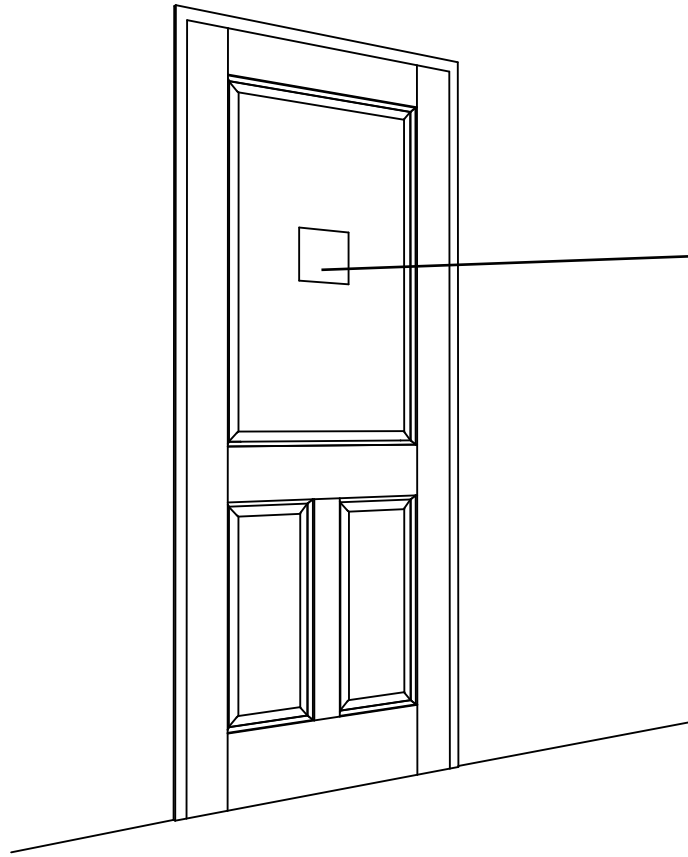
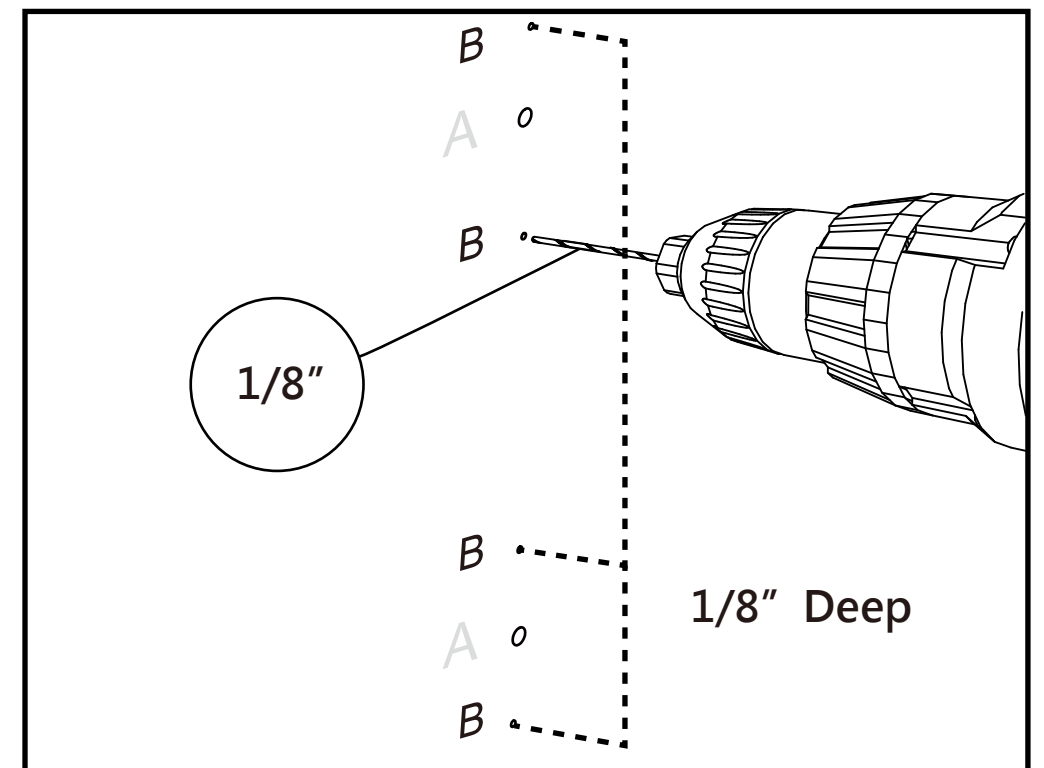


1 Center template on Exterior side of door. Ensure template is level, and mark 6 holes (A and B).

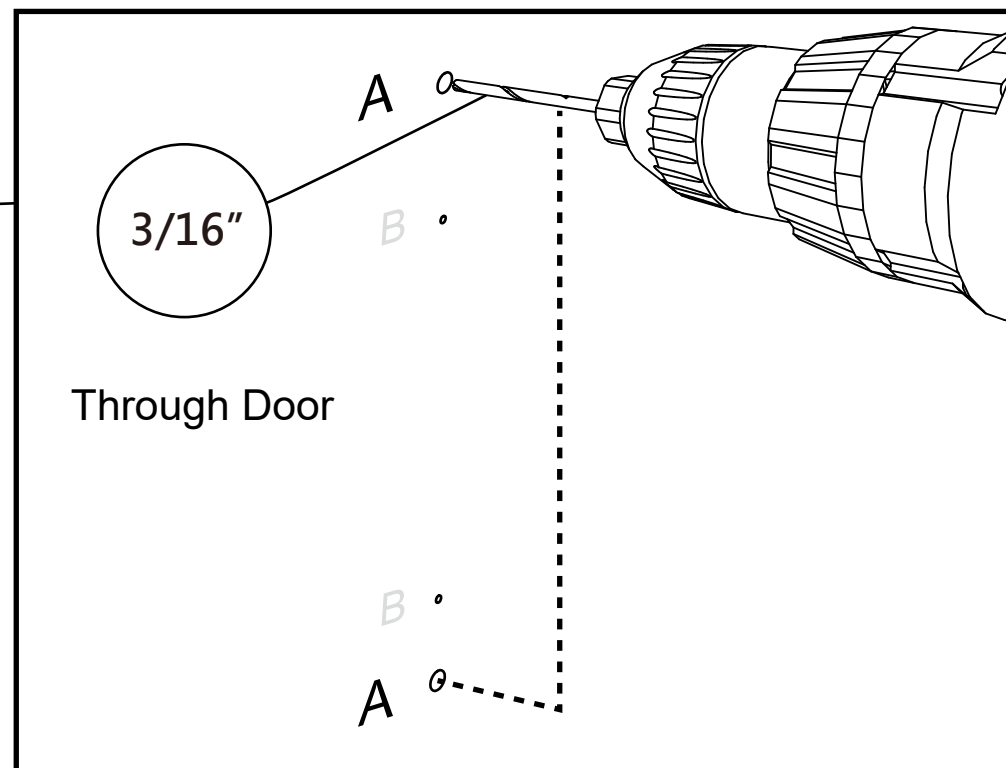

2 Drill 3/16" holes in A through door and deep 1/8" deep in B.

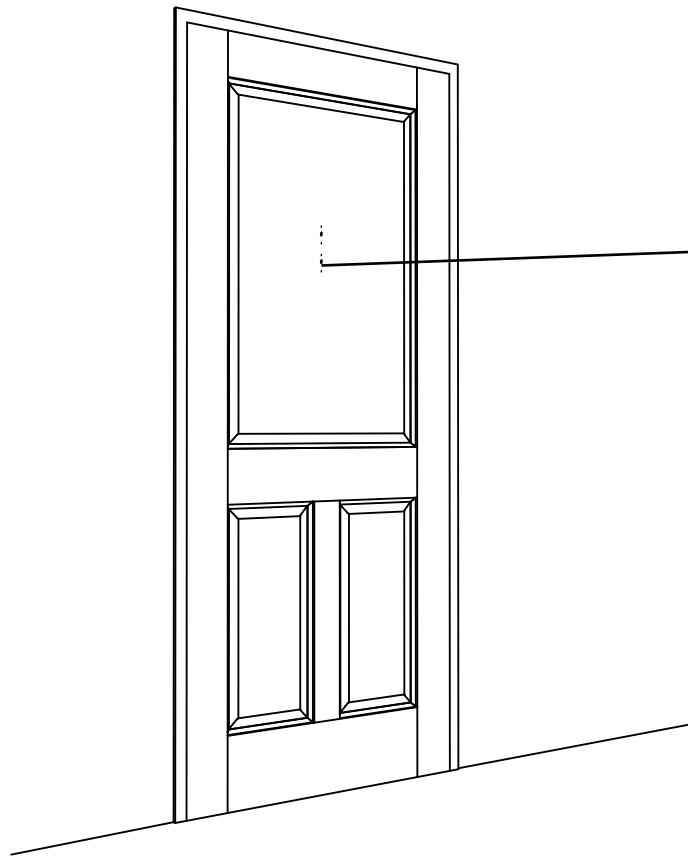

3 Install strike plate and door knocker.

