


Installation

Fitting Palmair

- Fitting Palmair Strip Hardware:
 - Require a minimum frame depth of 1-9/16"
 - Take proper measurement of window opening
 - MUST be square & plumb
 - Window opening should not exceed 36" per Hawaii Building Code, for new renovations/window opening

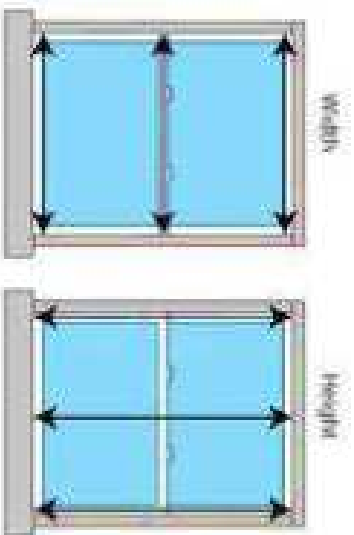

Blade Length

- Total Width minus 1-7/8" = Width of Blade
- Blades should be able to move 1/4" back & forth

